



C133
C45
C135
C53
C138
C35
C56
C36
C24
C23
C97
C37
C38
C20
C34
C96
C129
C132
* 3:C42 and C43 are Interchangeable.
C42
(*3)
C44
C43
(*3)
C50
C13
C122
C139
C136
C134
C22
C131
C55
C8
C61
C60
C137
C130
C121
C4
C126
C59
C103
C101
C3
C168
C114
C18
C99
C100
C102
C30
C125

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 8 Ignition Coil Assembly No.5
C 13 Ignition Coil Assembly No.4
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 50 Mass Air Flow Meter
C 53 Ignition Coil Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 96 Electronically Controlled Transmission Solenoid
C 97 Transfer Shift Actuator Assembly
C 99 Camshaft Position Sensor
C 100 VVT Sensor (Bank 1 Intake Side)
C 101 VVT Sensor (Bank 2 Intake Side)
C 102 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 103 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 114 Crankshaft Position Sensor
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 129 VSV (ACIS)
C 130 Ignition Coil Assembly No.3
C 131 Ignition Coil Assembly No.7
C 132 Noise Filter (Ignition Bank 1)
C 133 Ignition Coil Assembly No.6
C 134 Ignition Coil Assembly No.2
C 135 Noise Filter (Ignition Bank 2)
C 136 Air Pump Assembly
C 137 Air Switching Valve (Bank 1)
C 138 Air Switching Valve (Bank 2)
C 139 Air Pump Assembly
C 168 E.F.I. Vacuum Sensor Assembly


C 3
Black

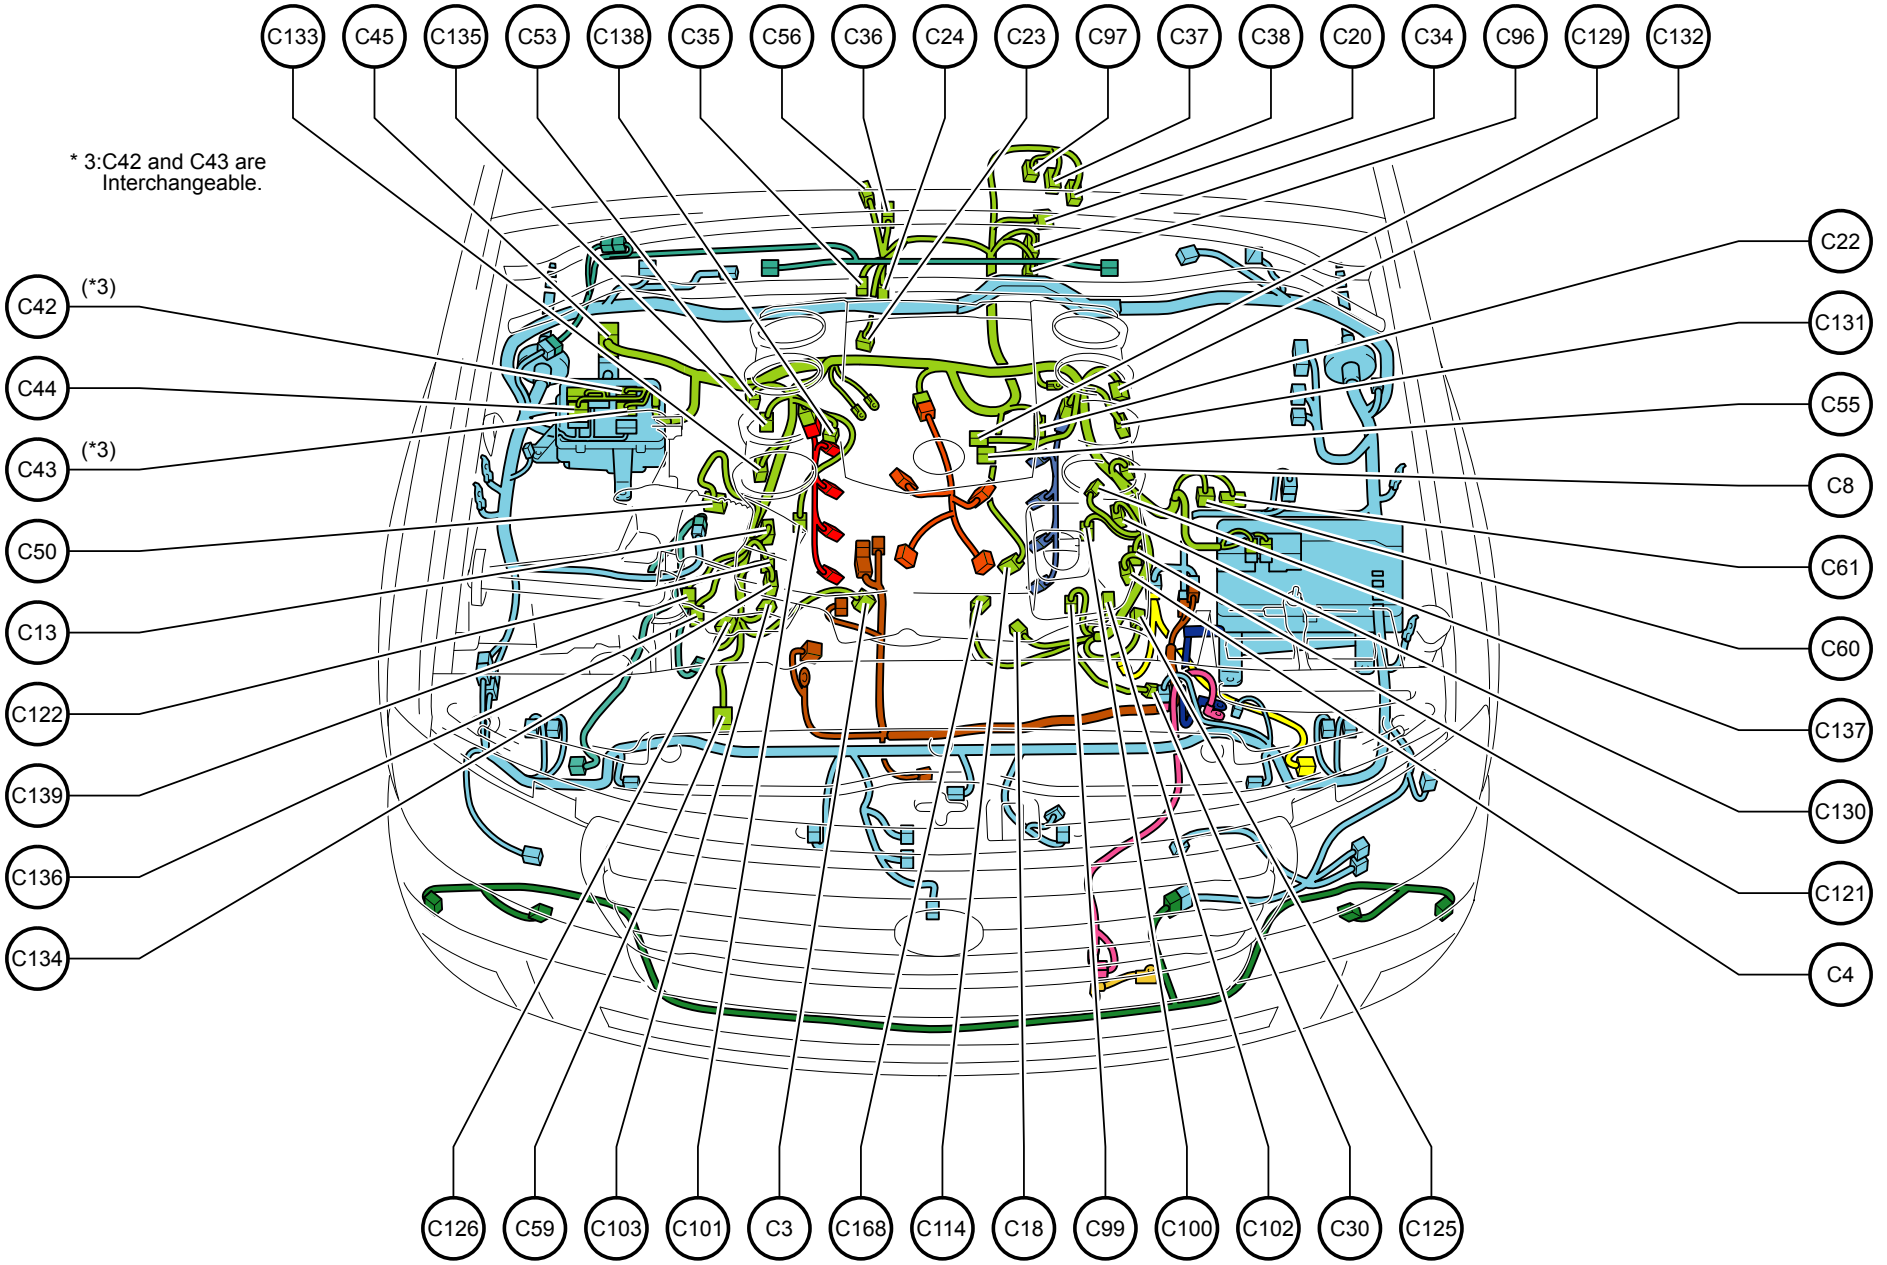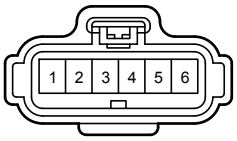


C 4
Black



C 8
Black



C 13
Black



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray




C 24
Gray

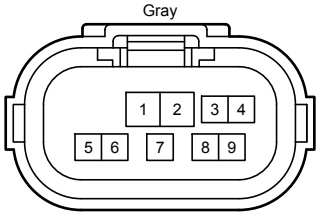


C 30
Gray




C 34
Gray

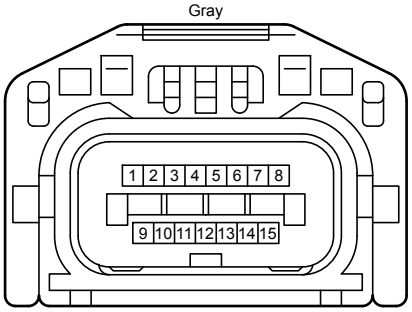


C 35
Black

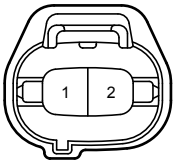


C 36
Black

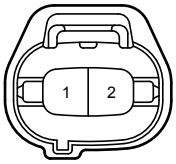


C 37
Black

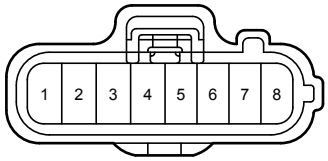


C 38
Dark Gray

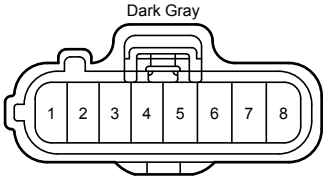


C 42
White

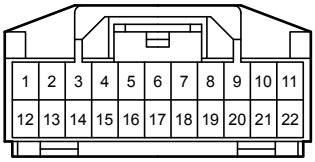


C 43
White

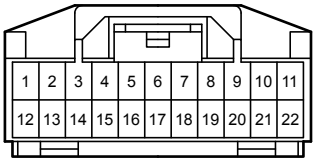


C 44
Blue

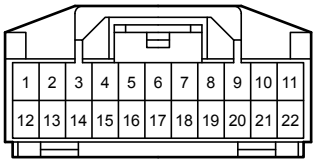


C 45
Black

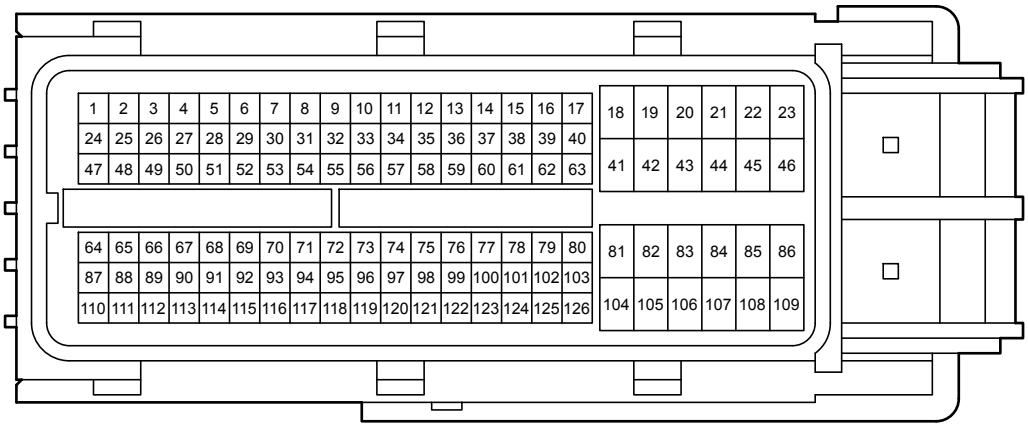


C 50
Black

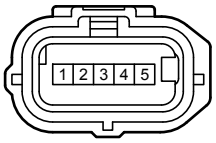

C 53
Black




C 55
Black

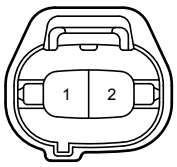


C 56
Dark Gray




C 59
Gray

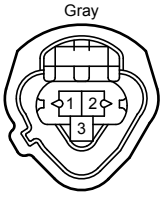


C 60
Black

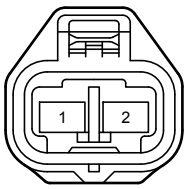


C 61
Black

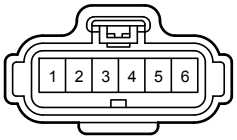


C 96
Gray

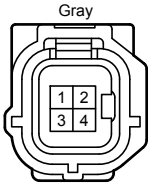


C 97
Black

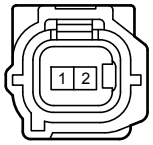


C 99
Black

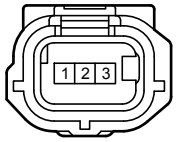

C100
Black

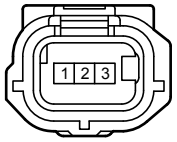

C101
Black

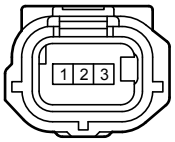


C102
Black




C103
Black




C114
Black

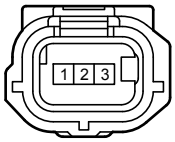

C121
Black

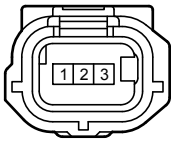

C122
Black

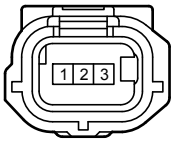


C125
Black



(Before Jun. 2020 Production)

C125
Gray

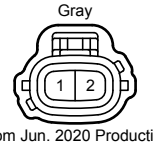

(From Jun. 2020 Production)

C126
Black




(Before Jun. 2020 Production)

C126
Gray




(From Jun. 2020 Production)


C129
Black

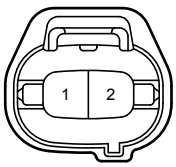


C130
Gray

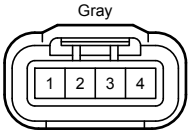


C131
Gray

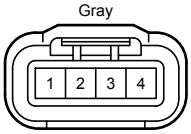


C132
Gray

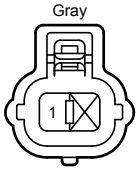


C133
Gray

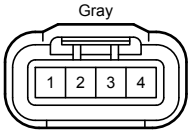


C134
Gray

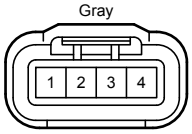


C135
Gray

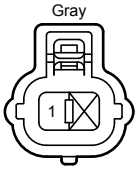


C136
Gray

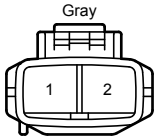


C137
Black

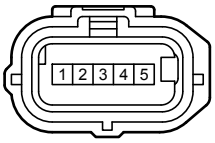

C138
Black

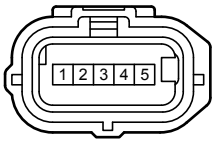

C139
Black

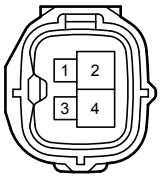

C168
Black

