


z69
U6
U5
z70
a8
a4
a7
a3
a6
a2
a5
a1
z35
z34
z29
z17
z18
U4
U3
z31
z33
z32
z30

U 3 Knock Control Sensor (Bank 1 Sensor 1)
U 4 Knock Control Sensor (Bank 2 Sensor 1)
U 5 Knock Control Sensor (Bank 1 Sensor 2)
U 6 Knock Control Sensor (Bank 2 Sensor 2)


a 1 Fuel Injector Assembly No.2
a 2 Fuel Injector Assembly No.4
a 3 Fuel Injector Assembly No.6
a 4 Fuel Injector Assembly No.8
a 5 Fuel Injector Assembly No.1
a 6 Fuel Injector Assembly No.3
a 7 Fuel Injector Assembly No.5
a 8 Fuel Injector Assembly No.7

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH
z 69 Washer Nozzle Sub-Assembly RH
z 70 Washer Nozzle Sub-Assembly LH


U 3
Gray

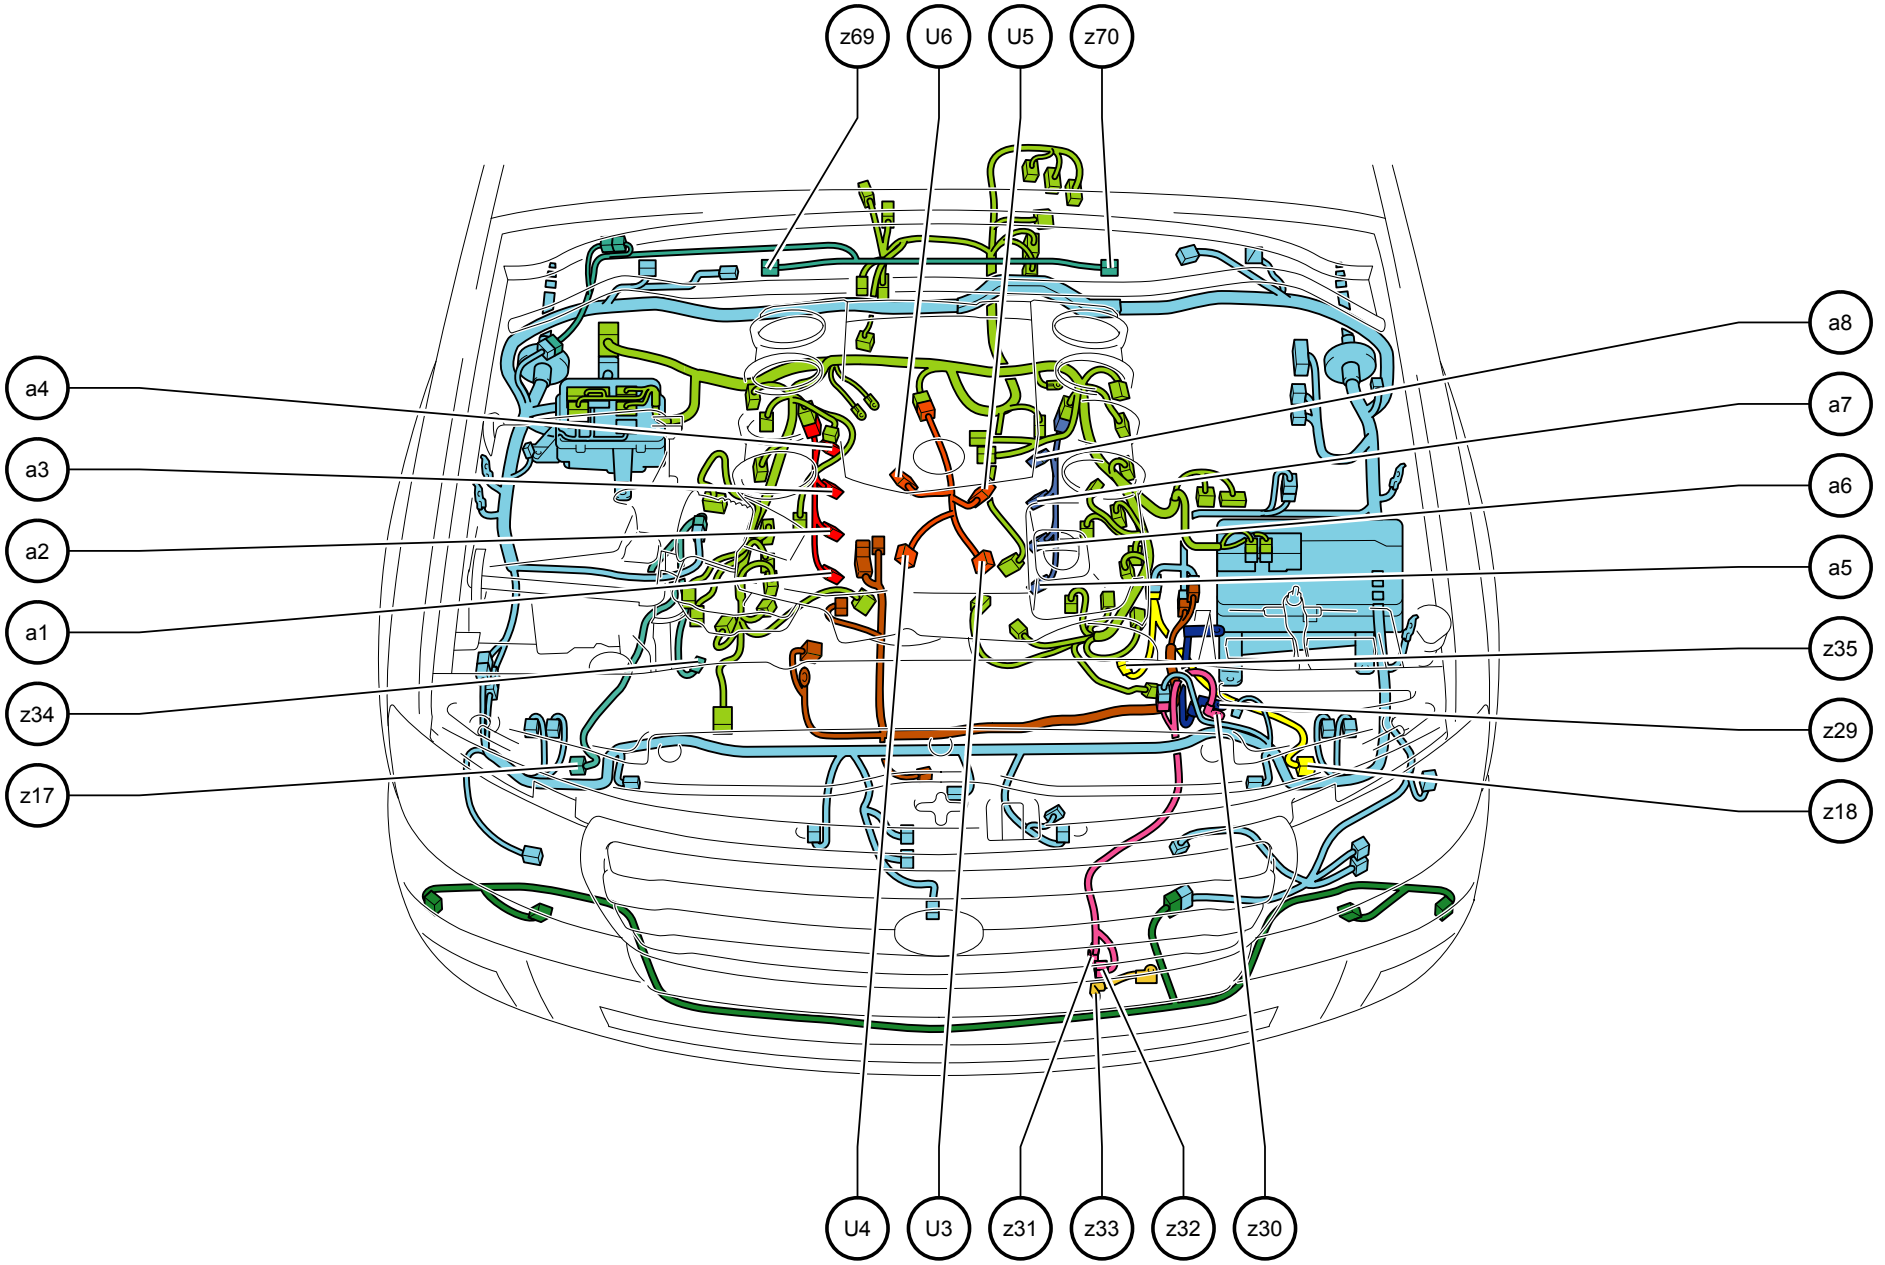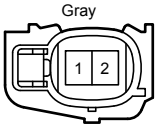


U 4
Black




U 5
Gray

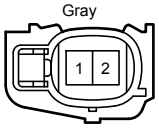


U 6
Black




a 1
Black

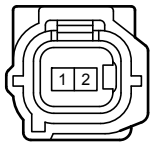


a 2
Black

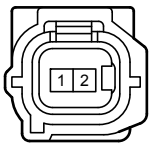


a 3
Black

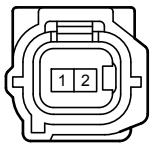


a 4
Black

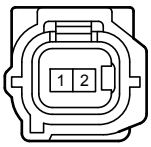


a 5
Black

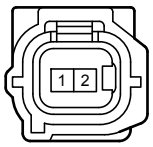


a 6
Black

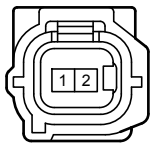

a 7
Black

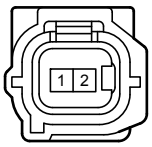

a 8
Black

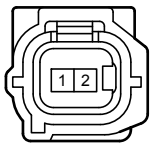


z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

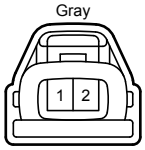


z 33




z 34
Black

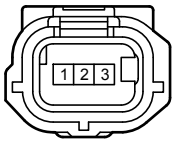

z 35
Black

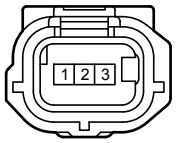

z 69
Gray

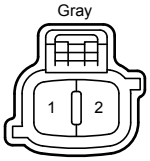

z 70
Gray

