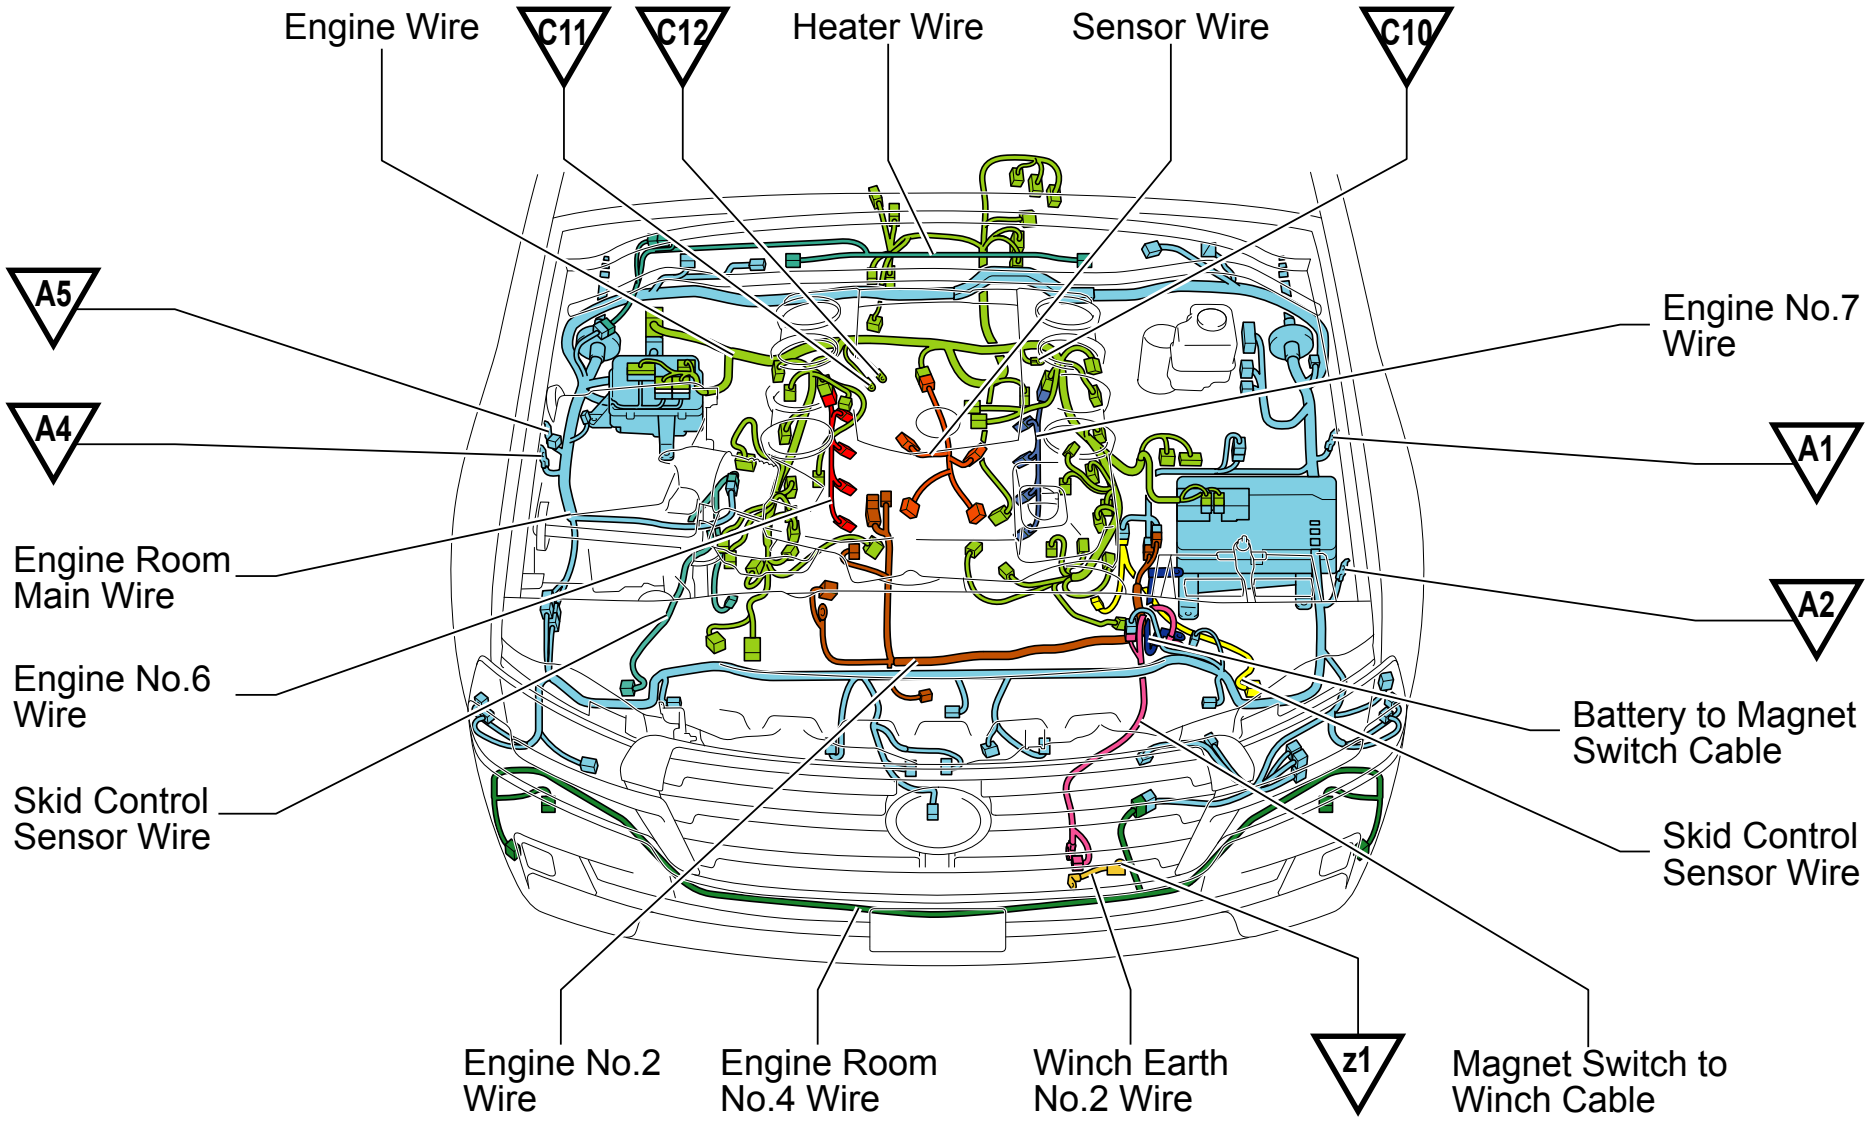

Engine Wire
C11
C12
Heater Wire
Sensor Wire
C10
A5
A4
Engine Room Main Wire
Engine No.6 Wire
Skid Control Sensor Wire
Engine No.7 Wire
A1
A2
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine No.2 Wire
Engine Room No.4 Wire
Winch Earth No.2 Wire
Z1
Magnet Switch to Winch Cable