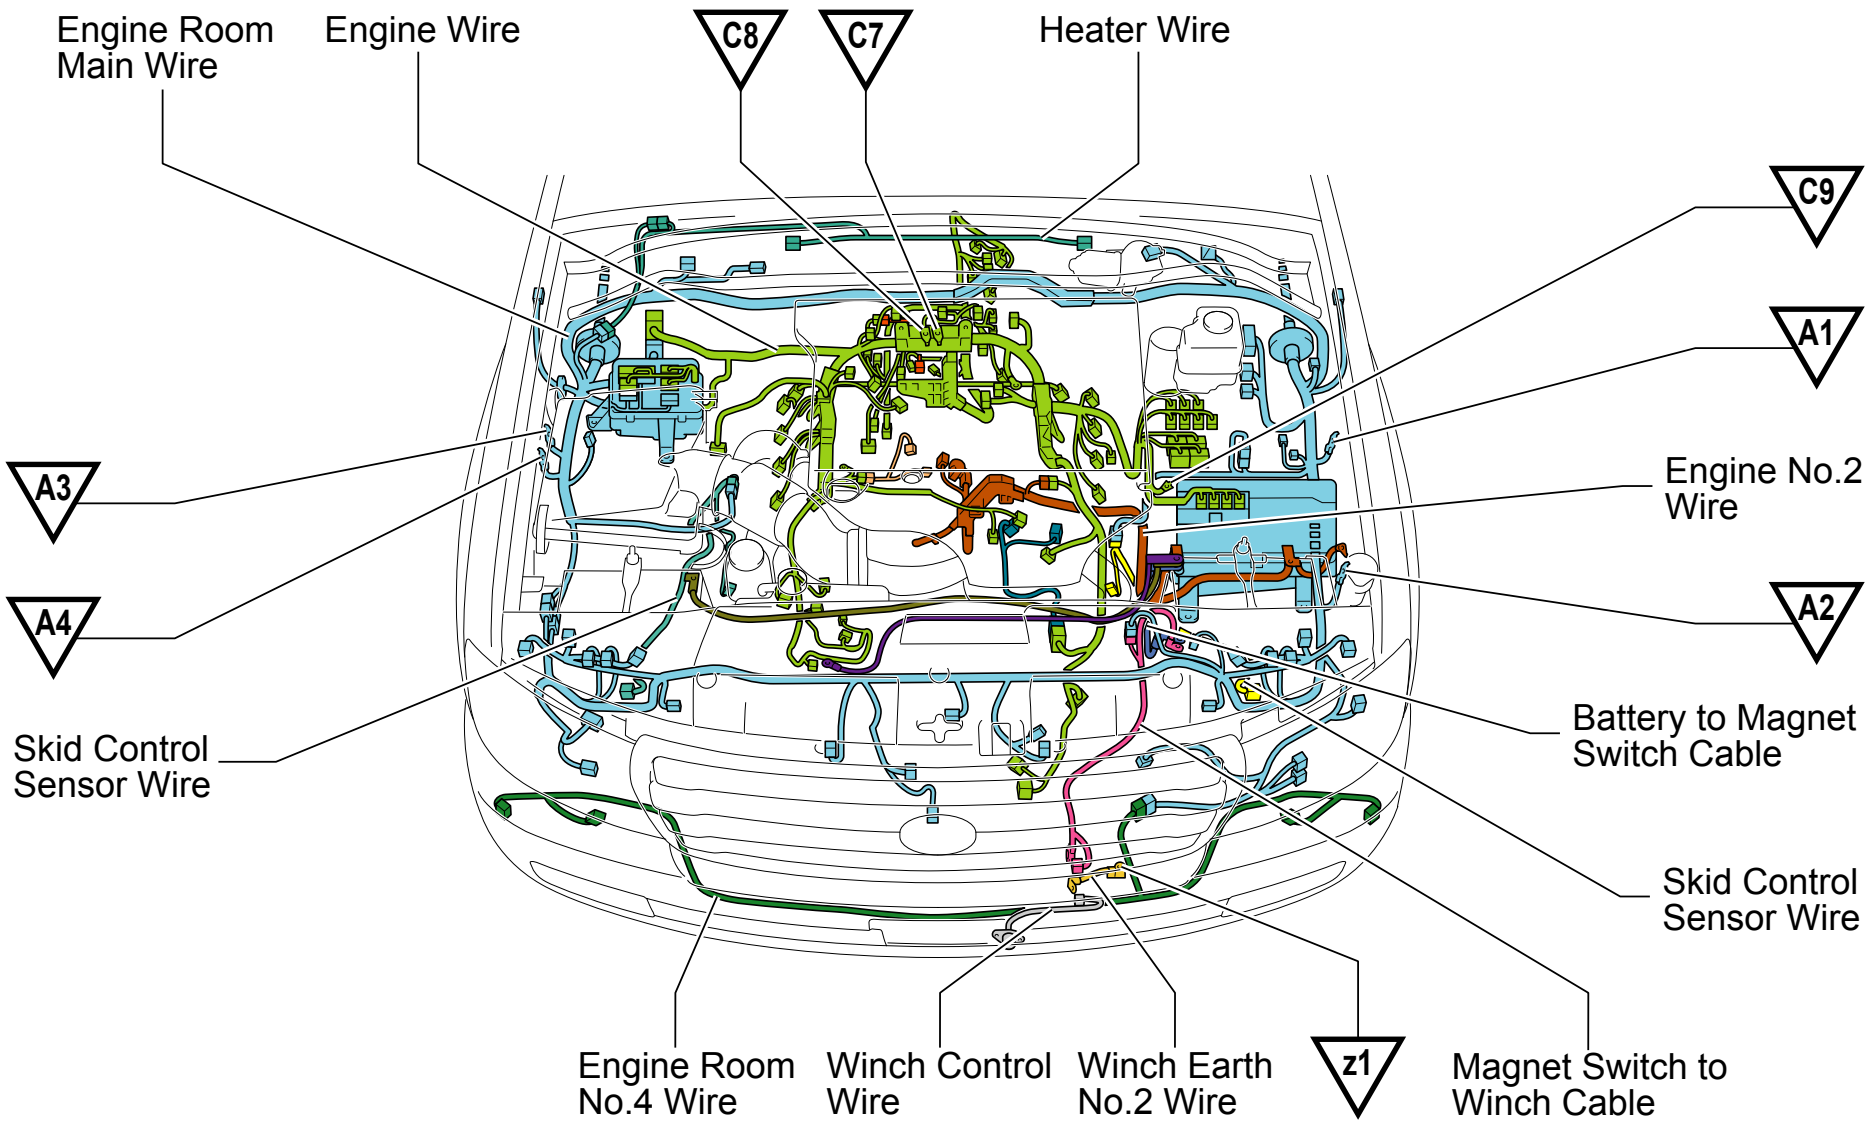

Engine Room Main Wire
Engine Wire
C8
C7
Heater Wire
C9
A1
A3
Engine No.2 Wire
A4
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
Z1
Magnet Switch to Winch Cable