



C160
C159
C157
C158
C167
C164
C165
(*6)
C145
(*6)
C146
(*6)
C156
(*6)
C155
* 6:w/ DPF
C144
(*6)
C143
(*6)
C142
(*6)
C141
(*6)
C149
(*6)
C154
(*6)
C153
(*6)
C152
(*6)
C151
(*6)
C150
(*6)
C147
C163
C162
C161
C148
(*6)

C 141 Fuel Injector Assembly No.1
C 142 Fuel Injector Assembly No.3
C 143 Fuel Injector Assembly No.5
C 144 Fuel Injector Assembly No.7
C 145 Fuel Injector Assembly No.8
C 146 Fuel Injector Assembly No.6
C 147 Fuel Injector Assembly No.4
C 148 Fuel Injector Assembly No.2
C 149 Vane Pump Assembly
C 150 Injector Driver (No.1)
C 151 Injector Driver (No.1)
C 152 Injector Driver (No.1)
C 153 Injector Driver (No.1)
C 154 Injector Driver (No.2)
C 155 Injector Driver (No.2)
C 156 Injector Driver (No.2)
C 157 Differential Pressure Sensor LH
C 158 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 159 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 160 Exhaust Fuel Addition Injector Assembly RH
C 161 Exhaust Fuel Addition Injector Assembly LH
C 162 Exhaust Gas Temperature Sensor
C 163 No.2 Exhaust Gas Temperature Sensor
C 164 No.3 Exhaust Gas Temperature Sensor
C 165 No.4 Exhaust Gas Temperature Sensor
C 167 DPF Temperature Sensor LH (Exhaust Gas Temperature Sensor)


C141
Gray

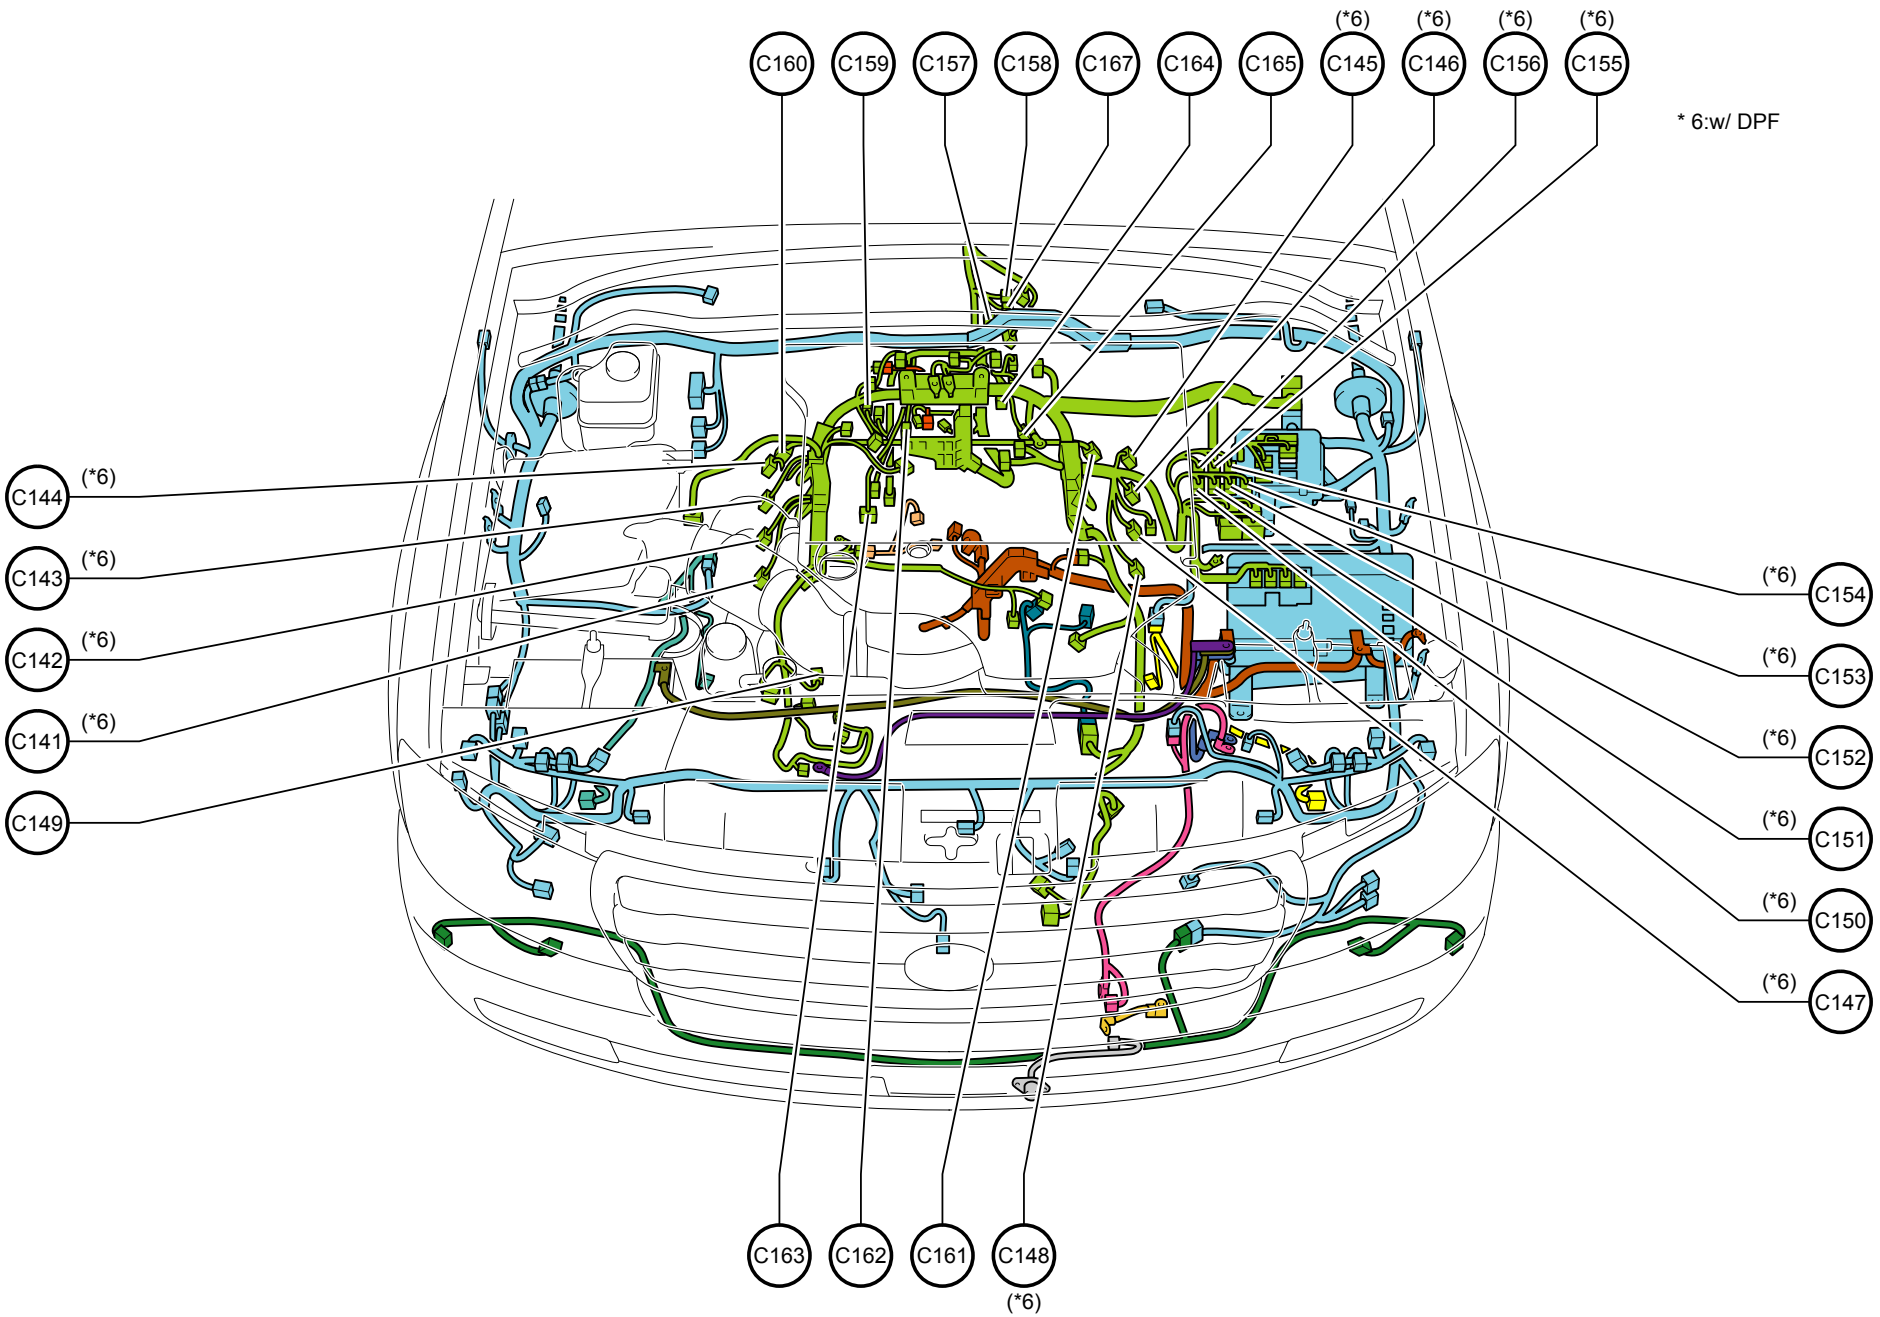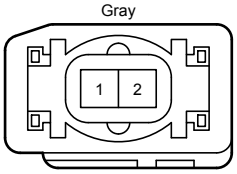


C142
Black

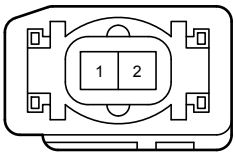


C143
Gray

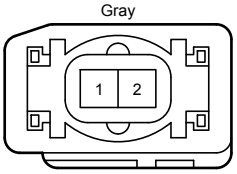


C144
Black

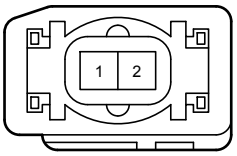


C145
Gray

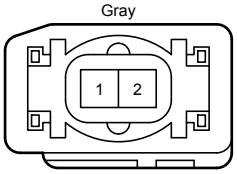


C146
Black

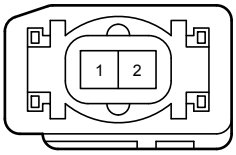


C147
Gray

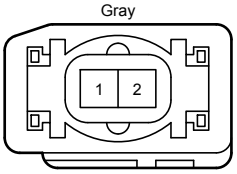

C148
Black

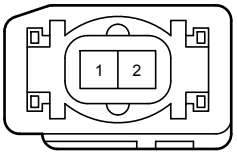


C149
Black

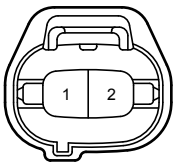


C150
Black



C151
Black

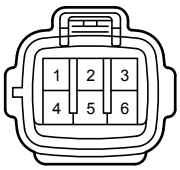

C152
Black

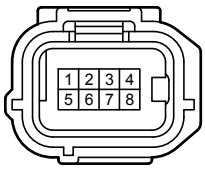


C153
Black




C154
Black




C155
Black

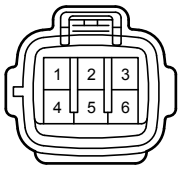

C156
Black

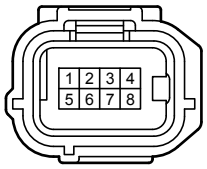

C157
Black

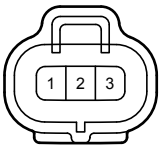

C158
Dark Gray



C159
Dark Gray



C160
Black



C161
Black



C162
Gray



C163
Gray



C164
Gray



C165
Gray



C167
Gray

