


D8
D2
D9
D10
D5
D7
D6
D11
D4
D1

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 5 Starter Assembly
D 6 Knock Control Sensor (Bank 2)
D 7 Knock Control Sensor (Bank 1)
D 8 Air Pump Assembly
D 9 Air Pressure Sensor
D 10 Air Switching Valve
D 11 Engine Oil Level Sensor

D 1

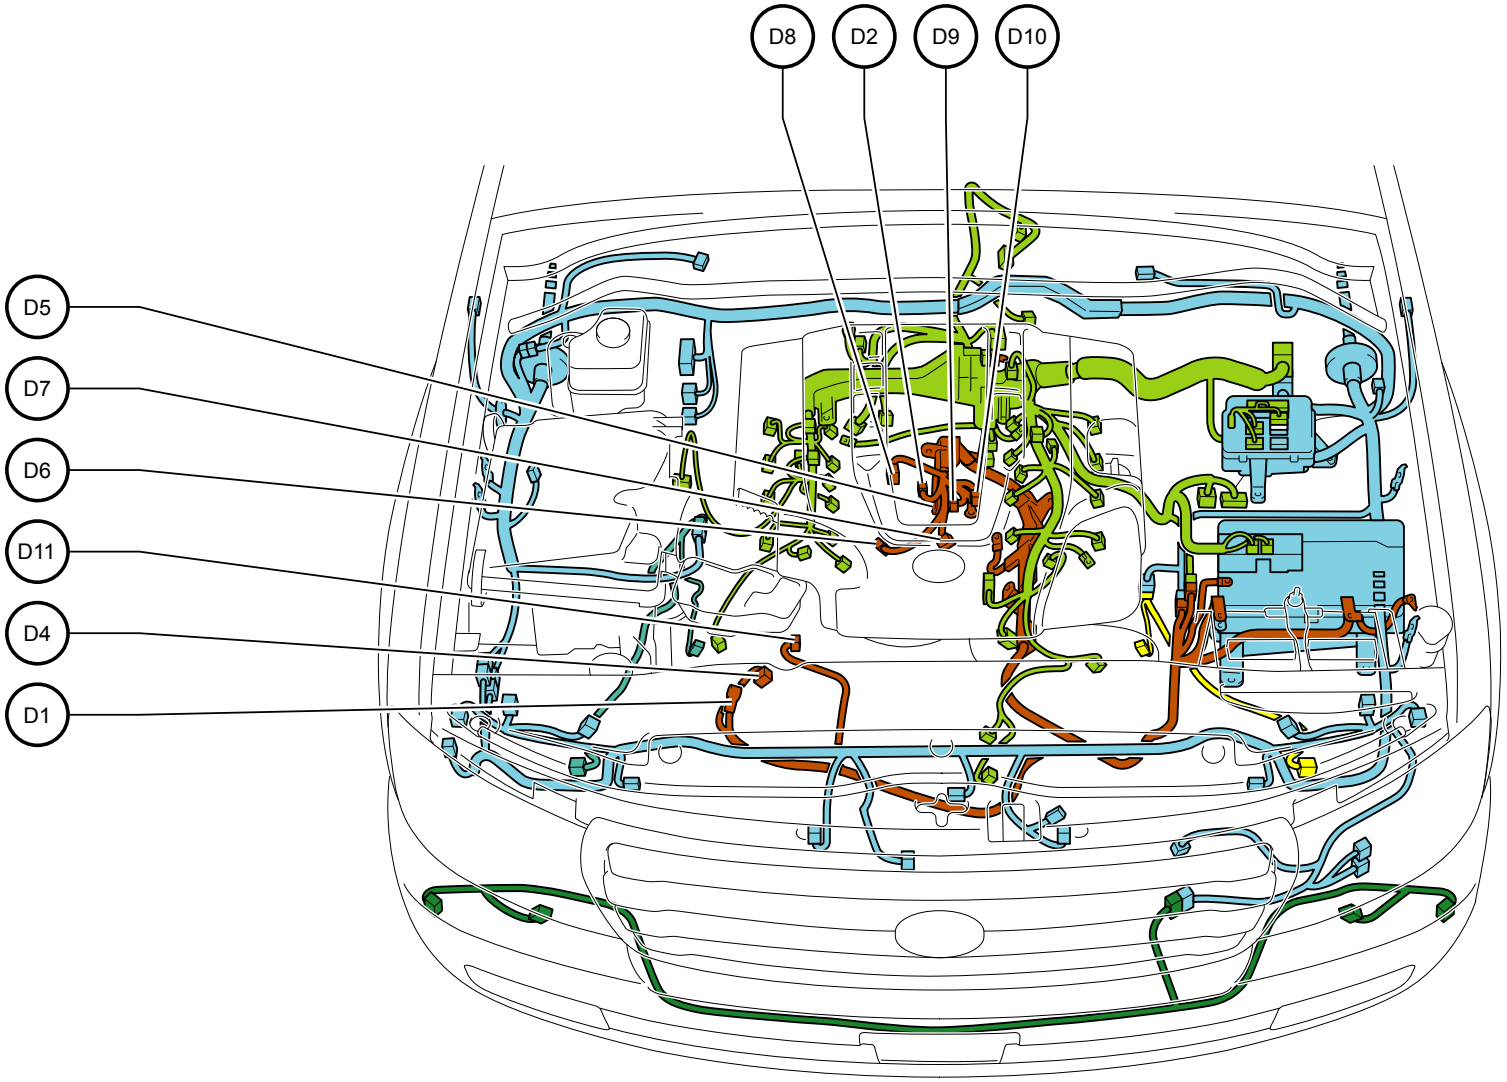

D 2

Black




D 4

Black




D 5




D 6

Gray

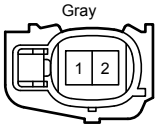


D 7

Black




D 8

Gray

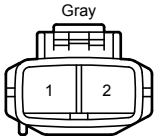


D 9

Black

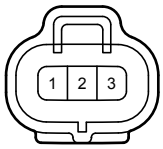

D 10

Black

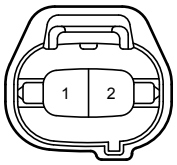

D 11

Gray

