


* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory
* 3:Except Lumbar Support Only
* 4:Lumbar Support Only
z57
c13
c22
(*4)
c17
K10
c34
c19
c15
(*1)
c25
(*2)
c2
z58
c5
c12
c6
c31
c14
c16
(*3)
c23
c16
(*4)
c20
c36
c18
c35
c22
(*3)
c21
(*4)
c21
(*3)
c3
c1
c7
c4
c24
c32
c33

K 10 Front Seat Inner Belt Assembly LH


c 1 Front Seat Heater Assembly RH
c 2 Front Power Seat Switch Assembly RH
c 3 Front Power Seat Slide Position Motor Assembly RH
c 4 Front Power Seat Lift Position Motor Assembly RH
c 5 Front Power Seat Vertical Position Motor Assembly RH
c 6 Front Power Seat Reclining Position Motor Assembly RH
c 7 Front Seat Inner Belt Assembly RH
c 12 Junction Connector
c 13 Front Seat Heater Assembly LH
c 14 Front Position Control ECU and Switch Assembly LH
c 15 Front Position Control ECU and Switch Assembly LH
c 16 Front Power Seat Switch Assembly LH
c 17 Front Power Seat Slide Position Motor Assembly LH
c 18 Front Power Seat Lift Position Motor Assembly LH
c 19 Front Power Seat Vertical Position Motor Assembly LH
c 20 Front Power Seat Reclining Position Motor Assembly LH
c 21 Front Lumbar Support Forward and Back Motor Assembly LH
c 22 Front Seat Inner Belt Assembly LH
c 23 Junction Connector
c 24 Front Seat Inner Belt Assembly RH
c 25 Front Power Seat Switch Assembly LH
c 31 Seat Climate Control Blower RH
c 32 Seat Climate Control ECU RH
c 33 Front Seat Cushion Heater Assembly RH
c 34 Seat Climate Control Blower LH
c 35 Seat Climate Control ECU LH
c 36 Front Seat Cushion Heater Assembly LH

z 57 Front Side Airbag Squib Circuit LH
z 58 Front Side Airbag Squib Circuit RH


K 10
Gray

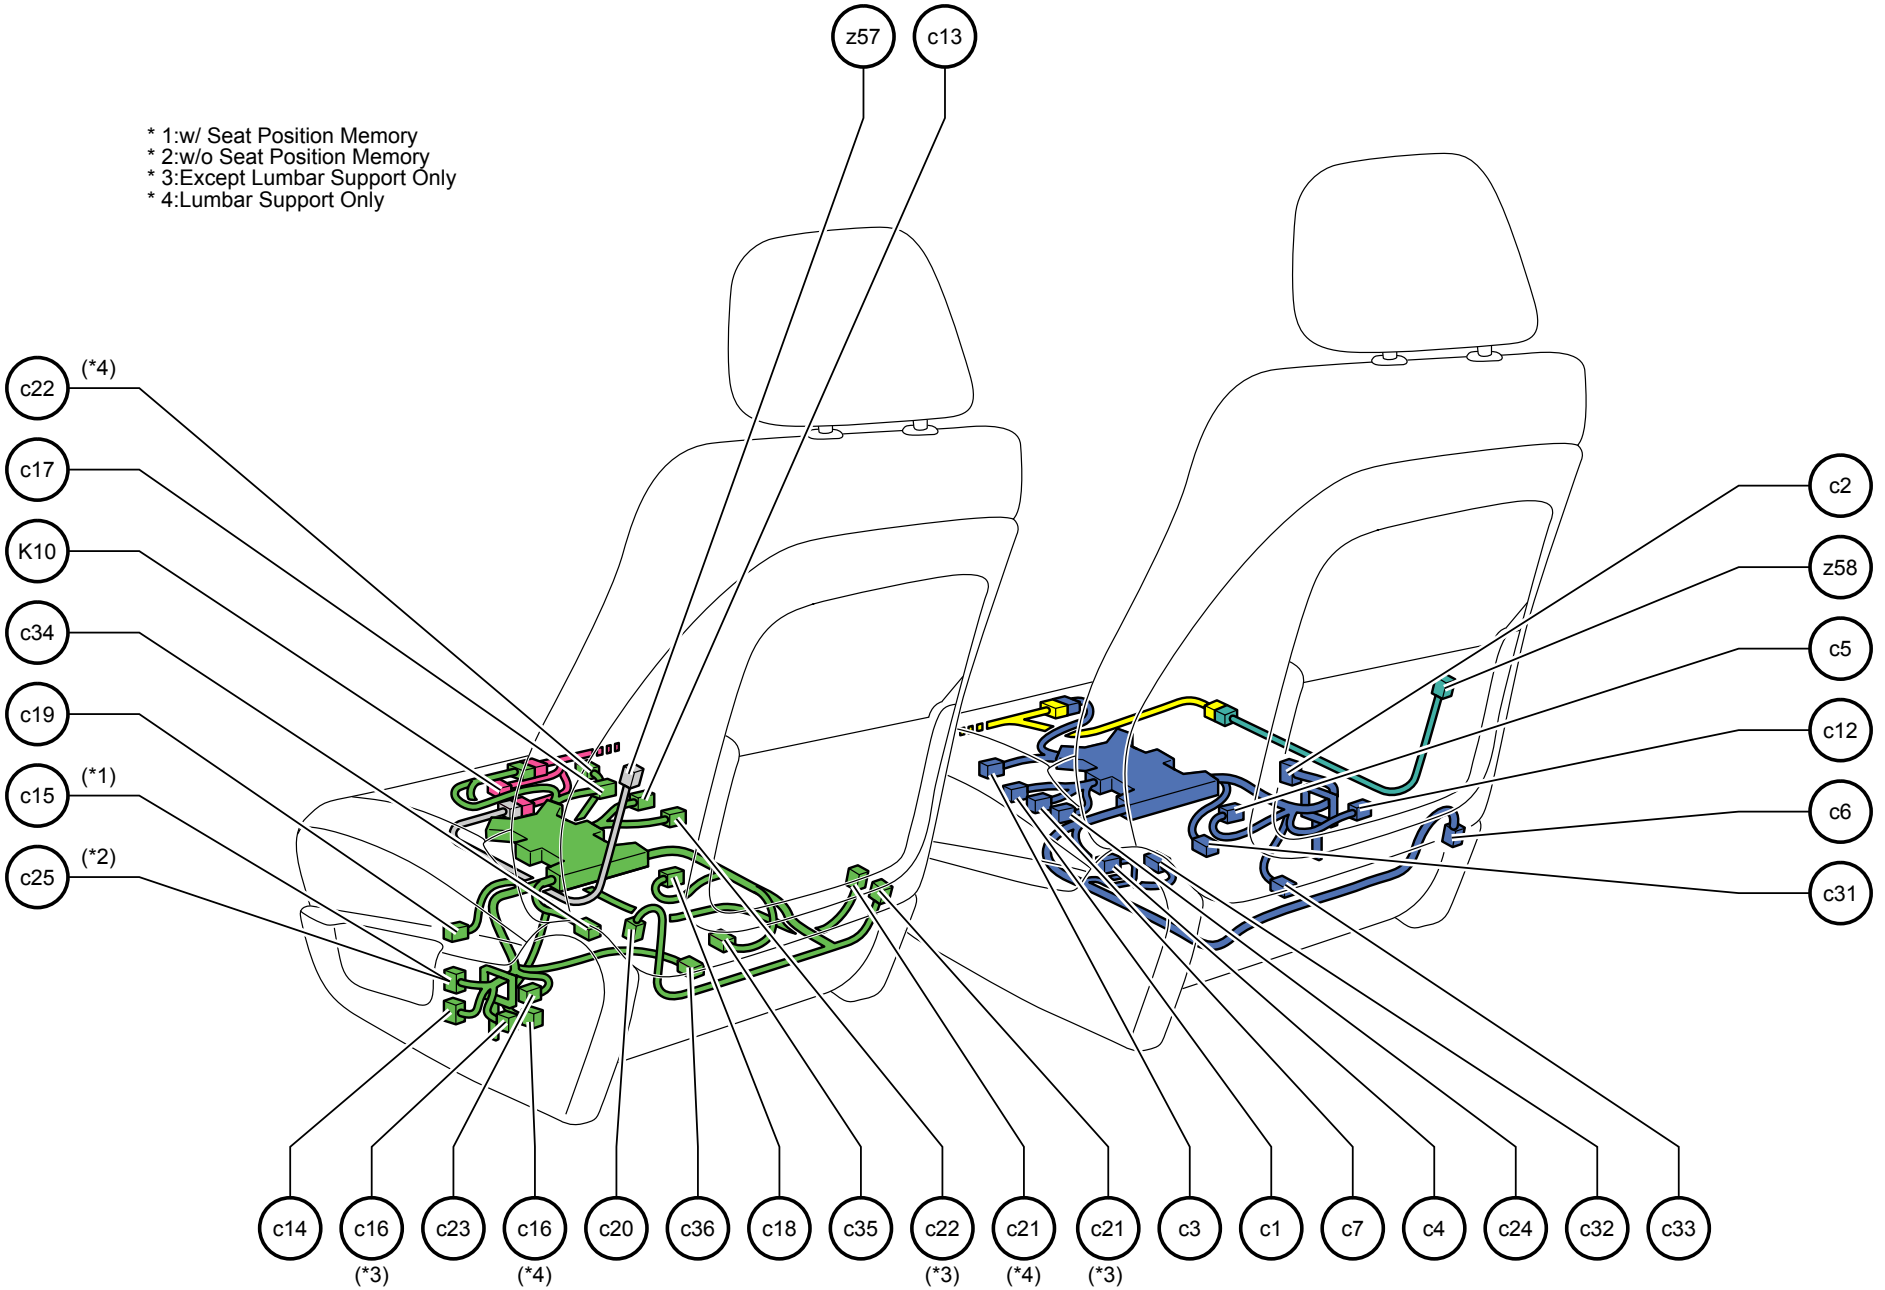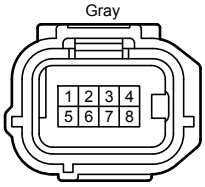


c 1
White

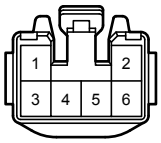


c 2
Black

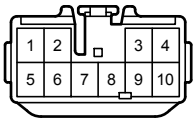


c 3
White




c 4
White




c 5
White




c 6
White




c 7
White

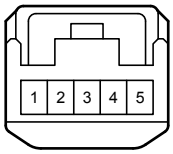


c 12
White




c 13
White

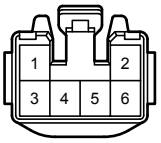


c 14
Gray

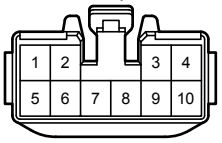


c 15
White

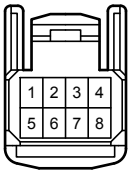


c 16
White

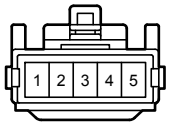


c 17
White




c 18
White




c 19
White




c 20
White




c 21
White




c 22
White

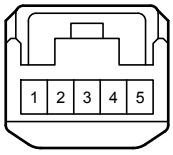


c 23
White




c 24
Gray

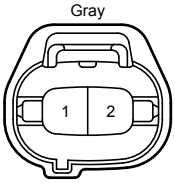


c 25
Black

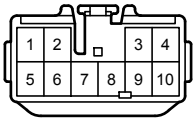


c 31
White

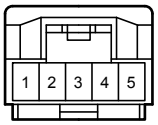


c 32
White

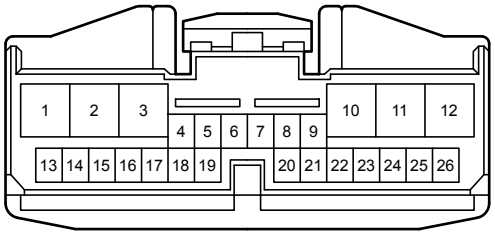


c 33
White




c 34
White

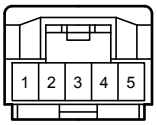


c 35
White

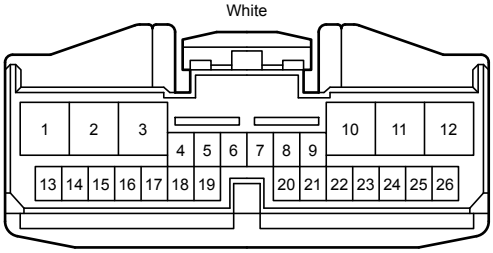

c 36
White



z 57
White



z 58
White

