
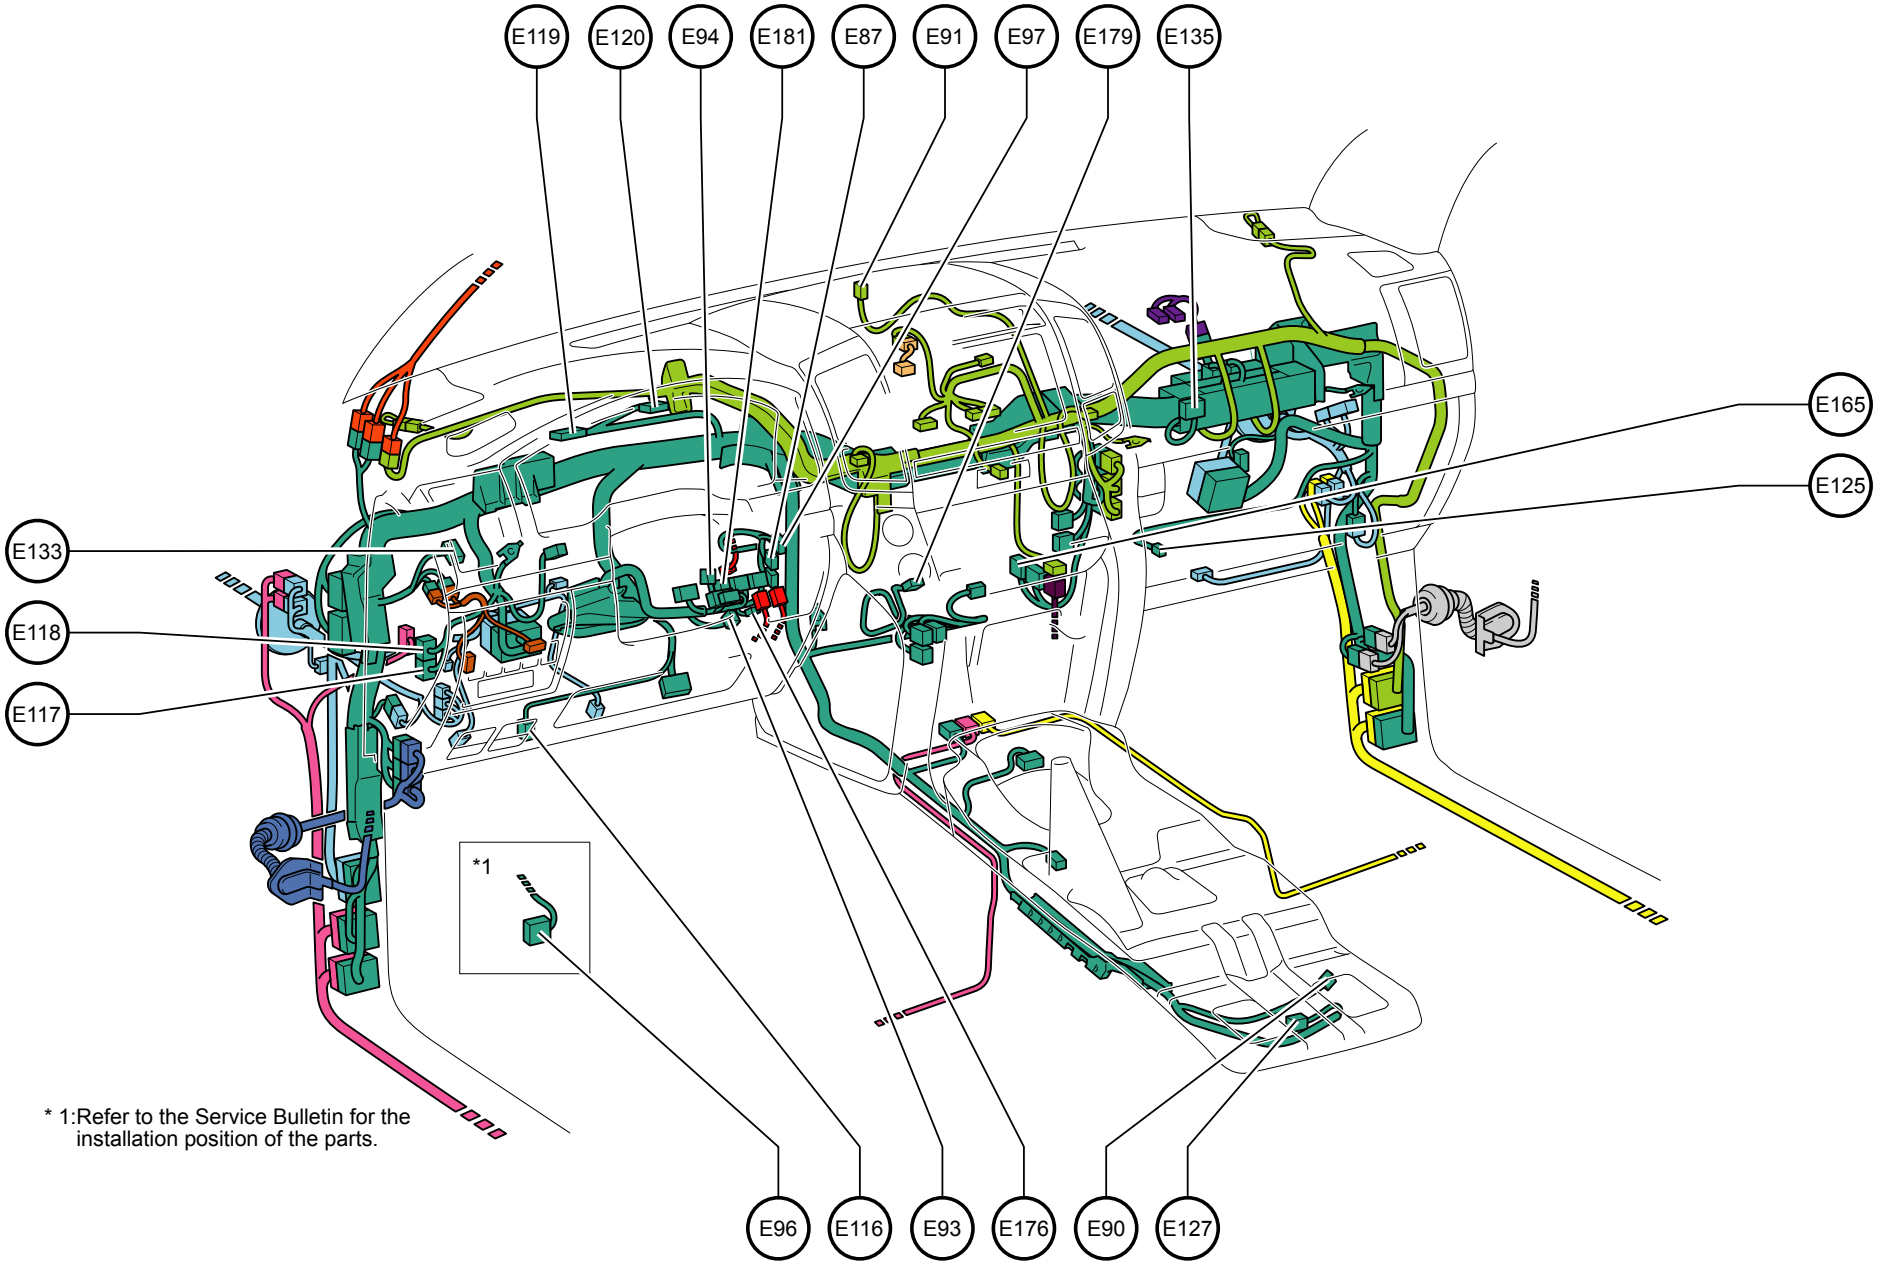



* 1:Refer to the Service Bulletin for the installation position of the parts.

E 87 Differential Lock Switch
E 90 Cooling Box Assembly
E 91 Option Connector (Parking Assist-Sensor)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 116 Tire Pressure Warning Reset Switch
E 117 Main Body ECU
E 118 Main Body ECU
E 119 Combination Meter Assembly
E 120 Combination Meter Assembly
E 125 Glove Box Light Assembly
E 127 Rear Power Outlet Socket Assembly
E 133 Junction Connector
E 135 Junction Connector
E 165 A/C Amplifier Assembly
E 176 Transponder Key Coil
E 179 Transfer Position Switch
E 181 Steering Sensor


E 87
White




E 90
White




E 91
White

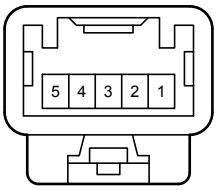


E 93
White

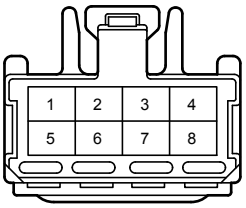


E 94
White




E 96
Black

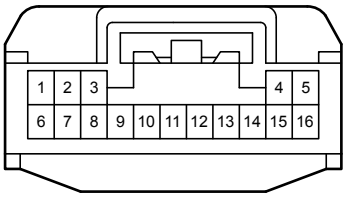


E 97
Black

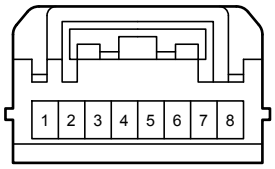


E116
Black




E117
White

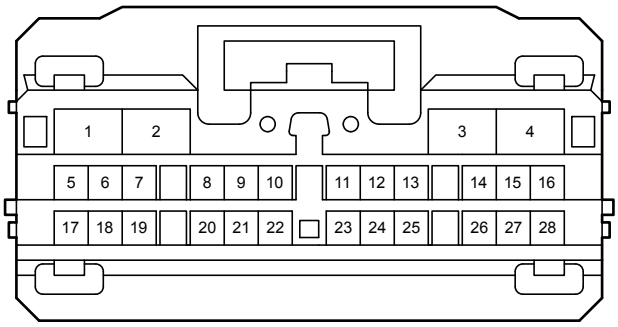


E118
White

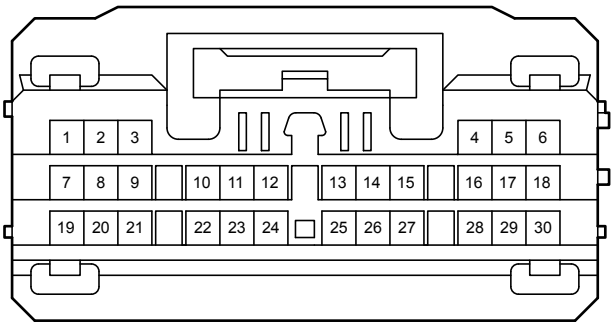


E119
Black

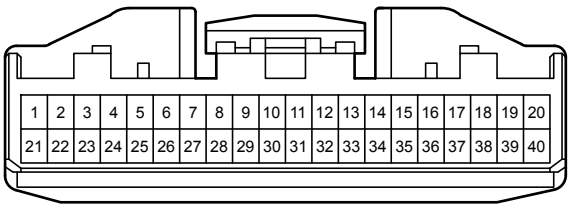


E120
Black

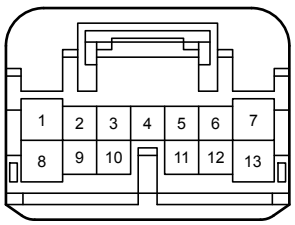


E125
White




E127
White




E133
White

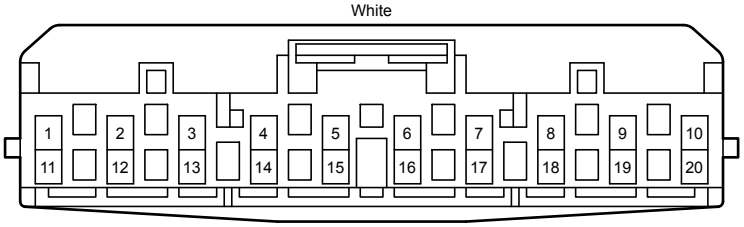


E135
White

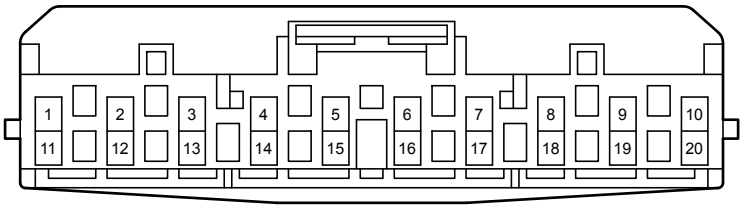


E165
White

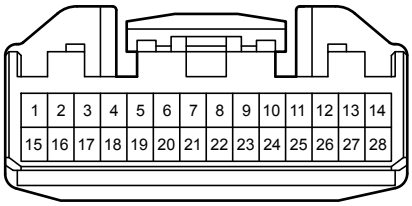

E176
Black

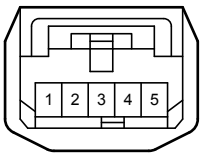

E179
White

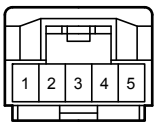

E181
Black

