

* 1:Refer to the Service Bulletin for the installation position of the parts.

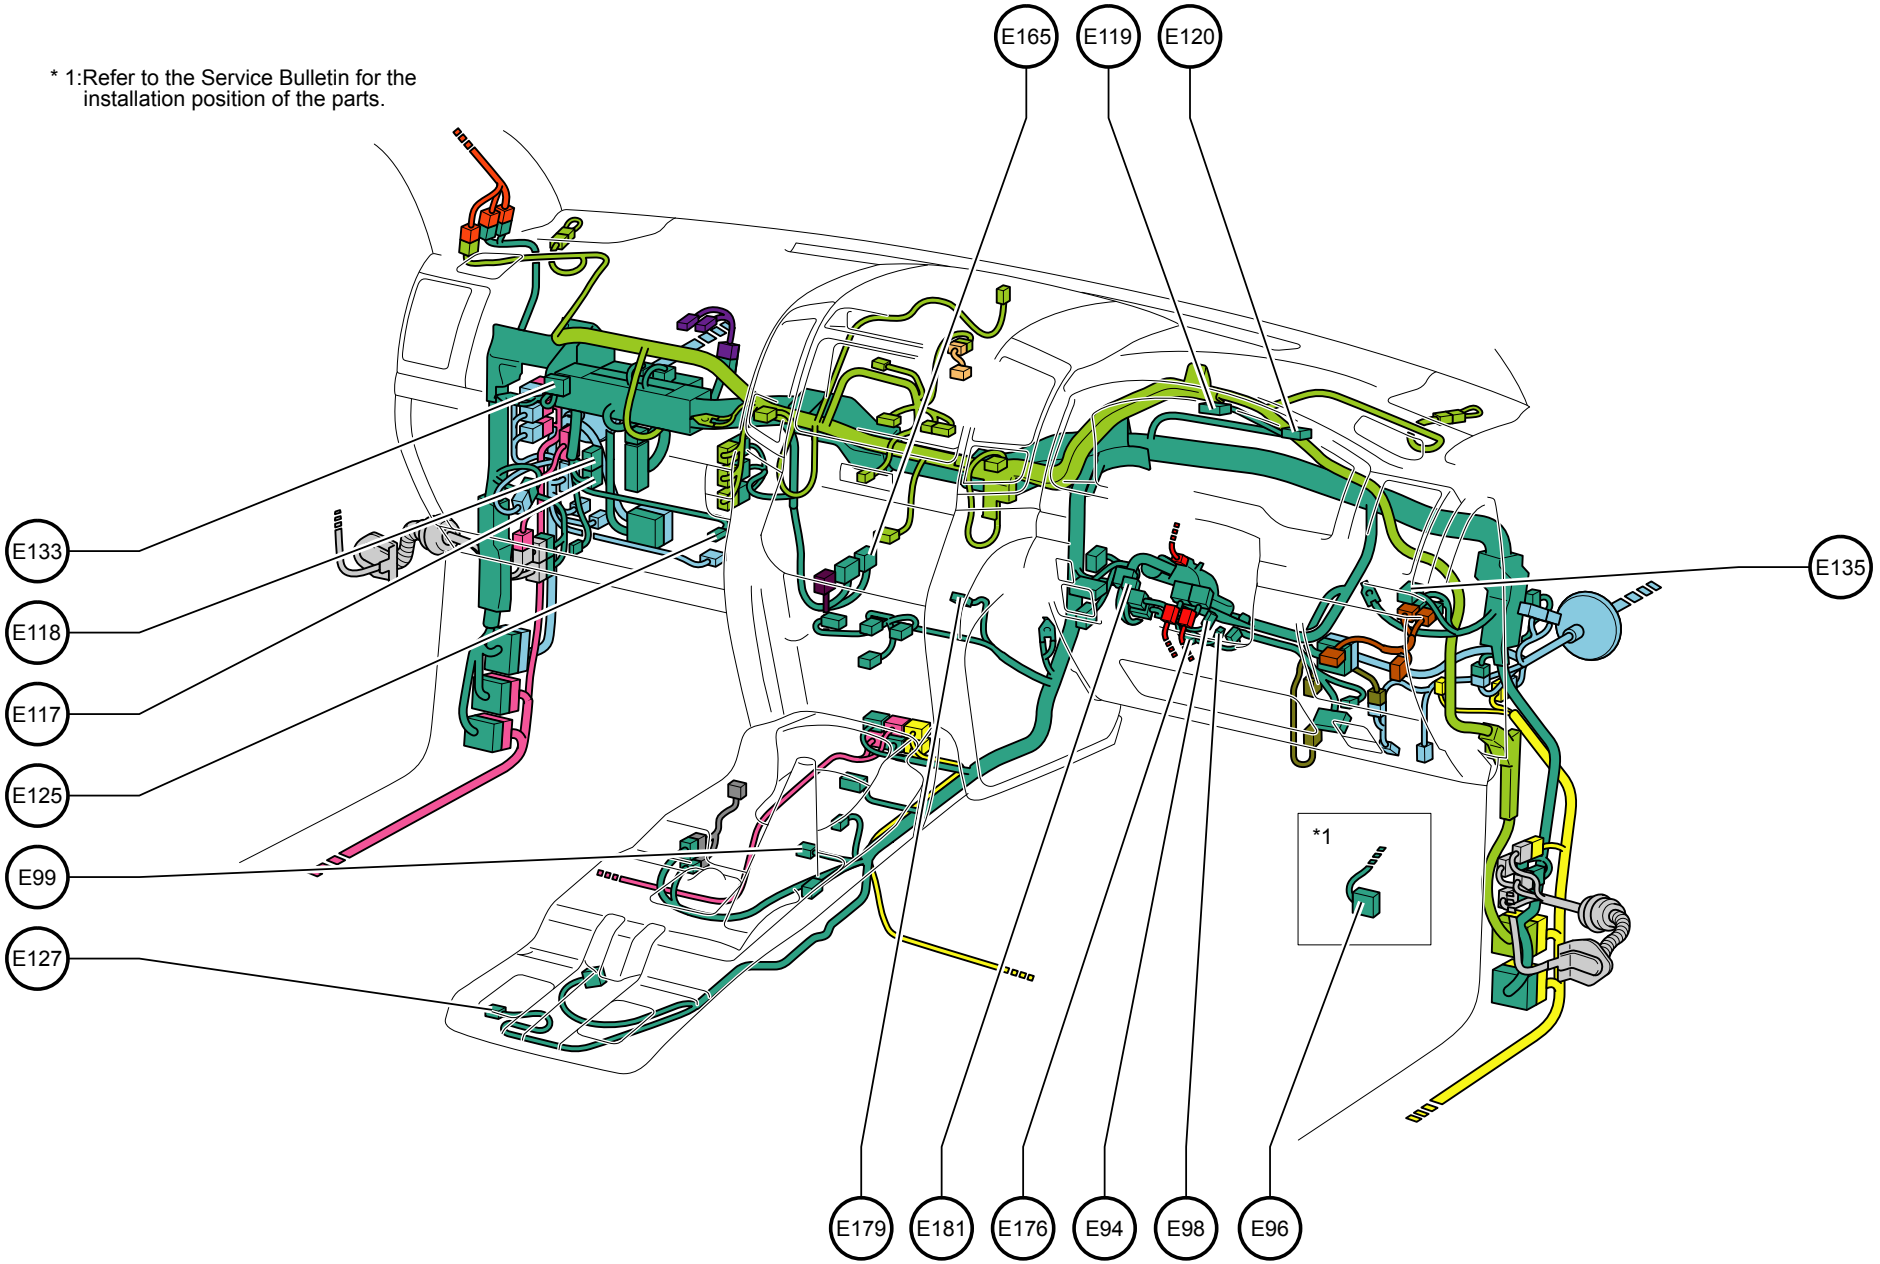


E 94 Un-Lock Warning Switch Assembly
E 96 Transponder Key ECU Assembly
E 98 Key Inter Lock Solenoid
E 99 Shift Lock Control ECU Sub-Assembly
E 117 Main Body ECU
E 118 Main Body ECU
E 119 Combination Meter Assembly
E 120 Combination Meter Assembly
E 125 Glove Box Light Assembly
E 127 Rear Power Outlet Socket Assembly
E 133 Junction Connector
E 135 Junction Connector
E 165 A/C Amplifier Assembly
E 176 Transponder Key Coil
E 179 Transfer Position Switch
E 181 Steering Sensor


E 94
White




E 96
Black

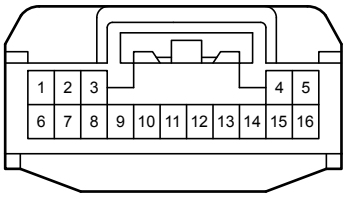


E 98
Black




E 99
White

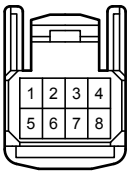


E117
White

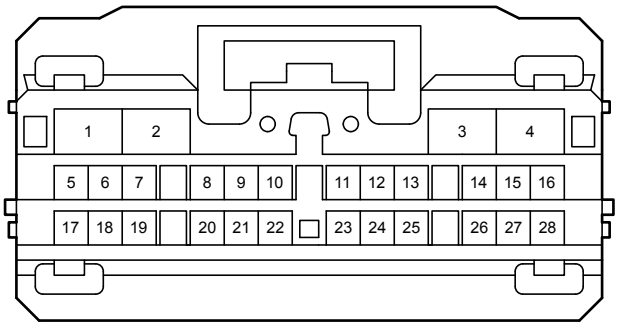


E118
White

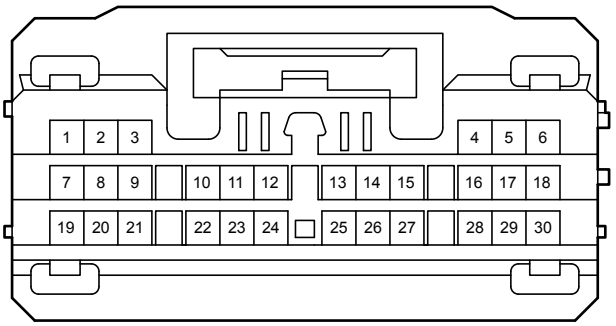


E119
Black

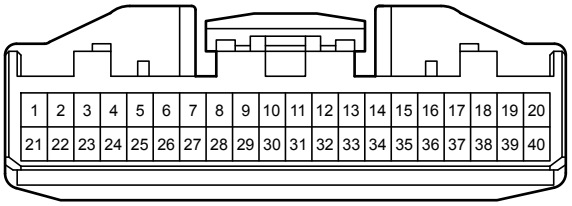


E120
Black

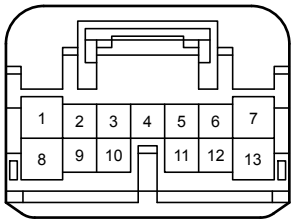


E125
White




E127
White




E133
White

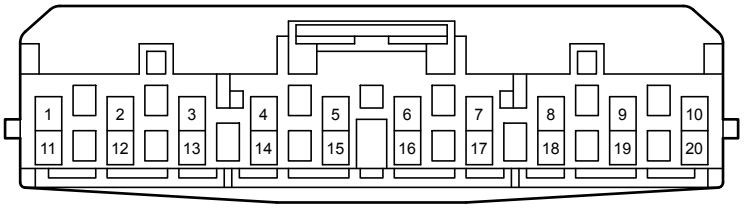


E135
White

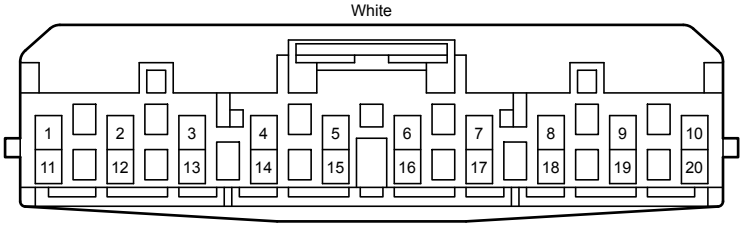


E165
White

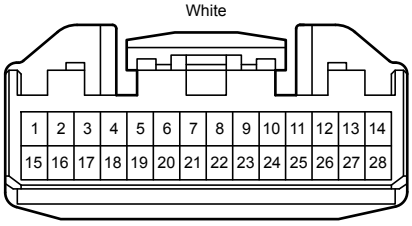

E176
Black

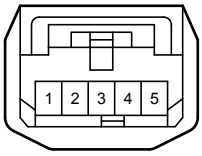

E179
White

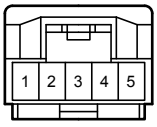

E181
Black

