



* 1:Headlight Dimmer Switch Assembly LH Side Type
* 2:Headlight Dimmer Switch Assembly RH Side Type
* 5:w/ Curtain Shield Airbag
* 6:w/o Curtain Shield Airbag
* 7:Refer to the Service Bulletin for the installation position of the parts.
* 8:w/o VGRS
* 10:Static Type
* 11:Dynamic Type
* 12:Auto A/C
E118
E81
E36
E123
E34
E33
E87
E105
E97
(*2)
E15
(*2)
E16
E119
(*8)
E121
E120
E17
(*2)
E14
E9
E80
E5
E10
E26
E102
(*1)
E15
E116
E24
E22
E146
E117
(*11)
E101
(*10)
E109
E40
E180
E143
E35
E46
(*12)
E55
E89
(*6)
E47
*7
E127
E88
E90
E50
E51
E126
E53
E52
E47
(*5)
E32
E14
(*1)
E13
E122
E16
(*1)
E124
E128
E129
E130

E 5 Skid Control Buzzer Assembly
E 9 Light Control Rheostat
E 10 No.1 Clearance Warning Buzzer
E 13 Spiral Cable Sub-Assembly
E 14 Headlight Dimmer Switch Assembly
E 15 Windshield Wiper Switch Assembly
E 16 Windshield Wiper Switch Assembly
E 17 Power Tilt Motor
E 22 DLC3
E 24 Lower No.1 Instrument Panel Airbag Assembly
E 26 Steering Lock Actuator Assembly
E 32 Room Temperature Sensor
E 33 Quick Heater Assembly
E 34 Quick Heater Assembly
E 35 A/C Amplifier Assembly
E 36 A/C Amplifier Assembly
E 40 Lower No.2 Instrument Panel Airbag Assembly
E 46 Front Power Outlet Socket Assembly
E 47 Center Airbag Sensor Assembly
E 50 Yaw Rate Sensor Assembly
E 51 Shift Lock Control ECU Sub-Assembly
E 52 Transmission Control Switch
E 53 Parking Brake Switch Assembly
E 55 No.2 A/C Control Assembly
E 80 Steering Actuator Assembly
E 81 A/C Amplifier Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 89 Heater Blower Switch
E 90 Cooling Box Assembly
E 97 Idle Up Switch
E 101 Headlight Leveling ECU Assembly
E 102 Power Steering ECU Assembly
E 105 Power Back Door Main Switch
E 109 Headlight Leveling ECU Assembly
E 116 Tire Pressure Warning Reset Switch
E 117 Main Body ECU
E 118 Main Body ECU
E 119 Combination Meter Assembly
E 120 Combination Meter Assembly
E 121 Steering Sensor
E 122 Spiral Cable Sub-Assembly
E 123 Engine Switch
E 124 ID Code Box
E 126 No.1 Indoor Electrical Key Antenna Assembly
E 127 Rear Power Outlet Socket Assembly
E 128 Certification ECU Assembly
E 129 Certification ECU Assembly
E 130 Certification ECU Assembly
E 143 Front Foot Illumination LH (No.1 Interior Illumination Light Assembly LH)
E 146 Front Foot Illumination RH (No.1 Interior Illumination Light Assembly RH)
E 180 Option Connector (Daytime Running Light)


E 5
Blue

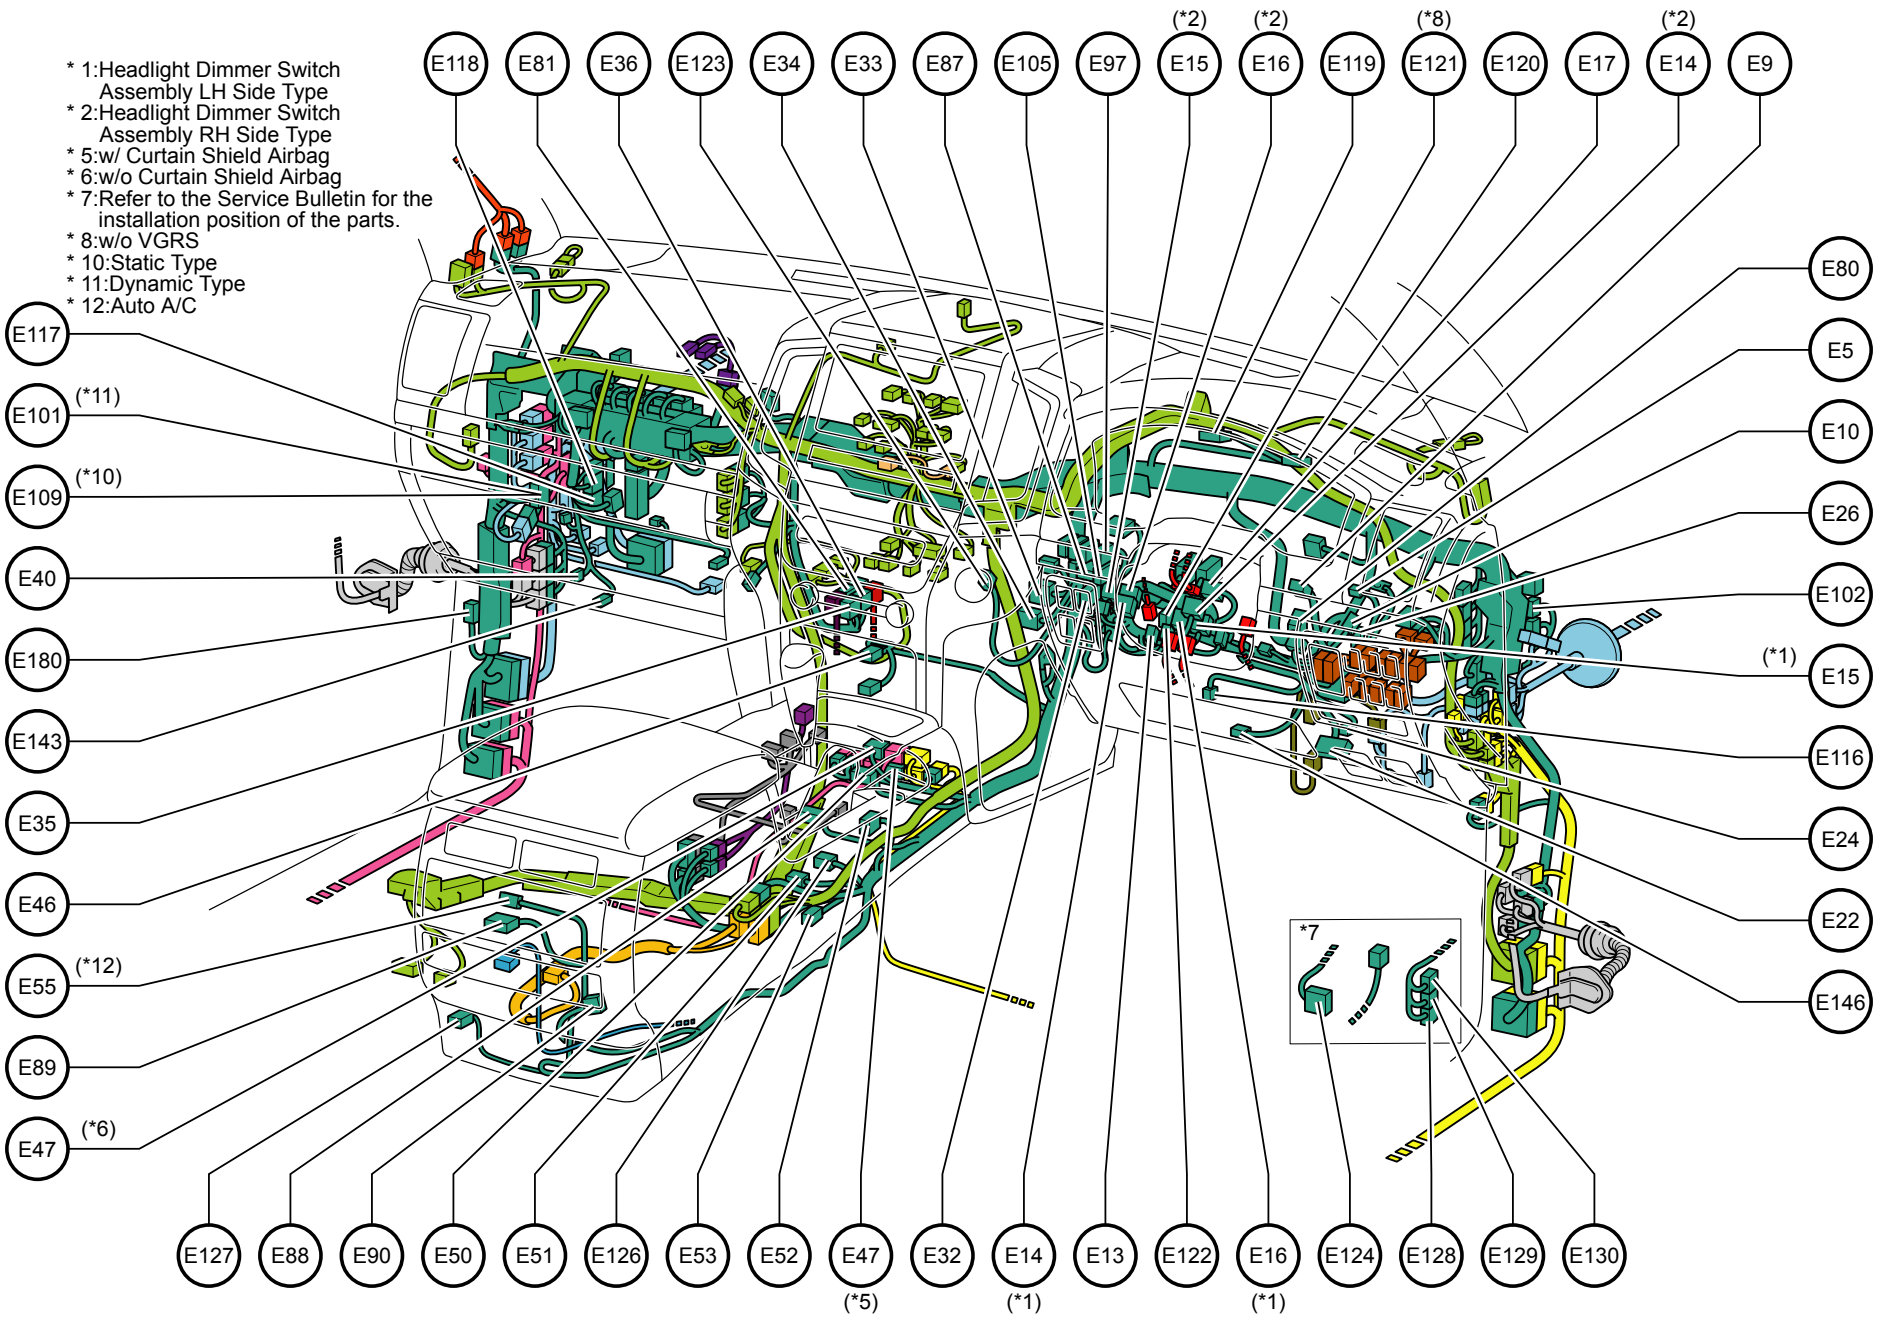


E 9
White

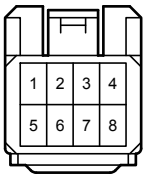


E 10
Black




E 13
Yellow

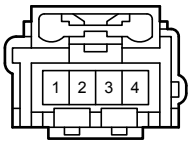


E 14
White

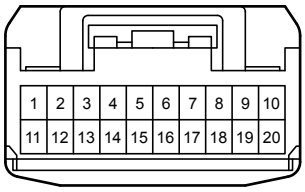


E 15
White

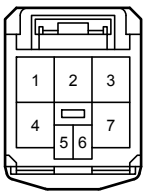


E 16
White

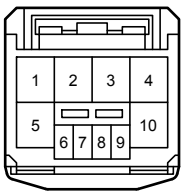


E 17
White

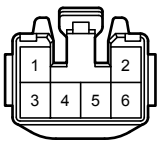


E 22
White

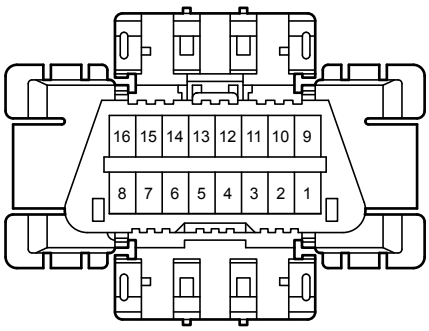


E 24
Black




E 26
Black

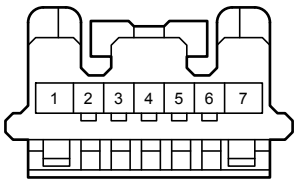


E 32
Black




E 33
White

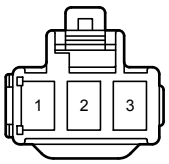


E 34
White

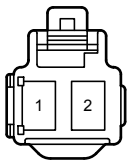


E 35
White

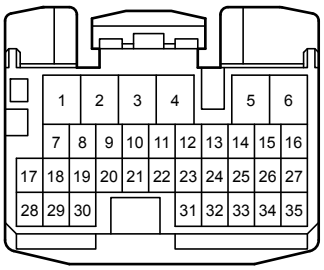


E 36
White

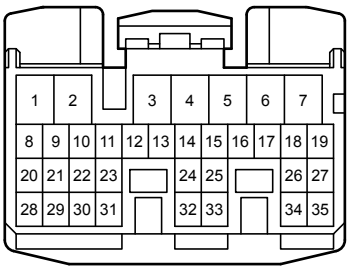


E 40
Black




E 46
White




E 47
Yellow

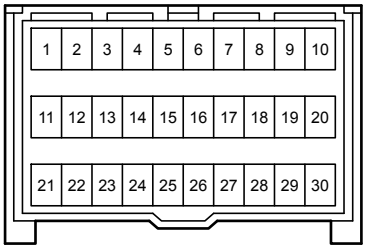


E 50
Black

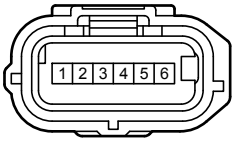

E 51
White

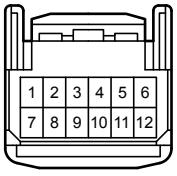

E 52
White

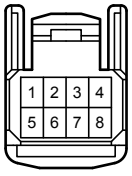


E 53
White




E 55
White




E 80
White

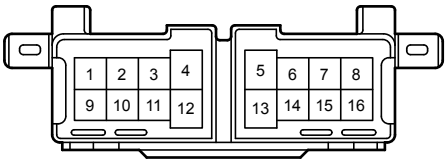


E 81
White

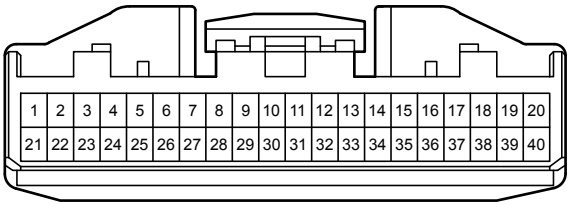


E 87
White




E 88
Black

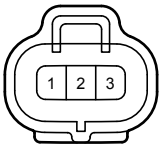


E 89
Black

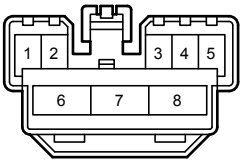


E 90
White




E 97
Black

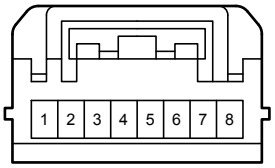


E101
White

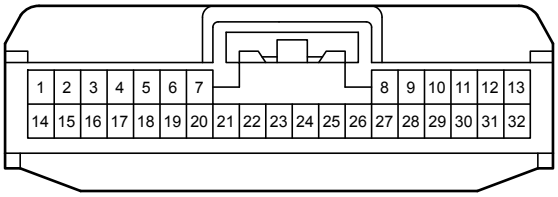


E102
White

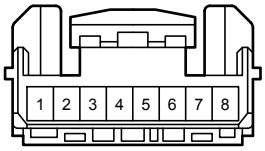


E105
Black

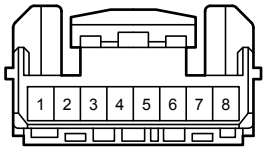


E109
White

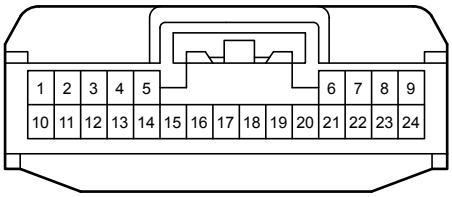


E116
Black




E117
White

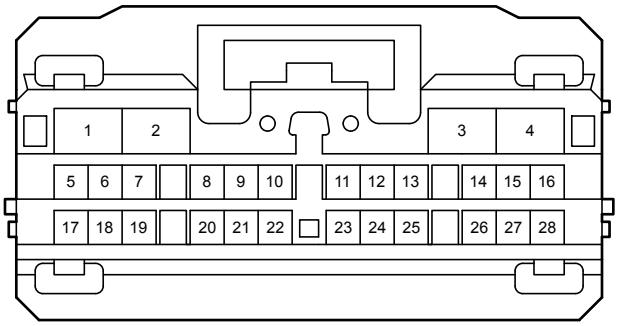


E118
White

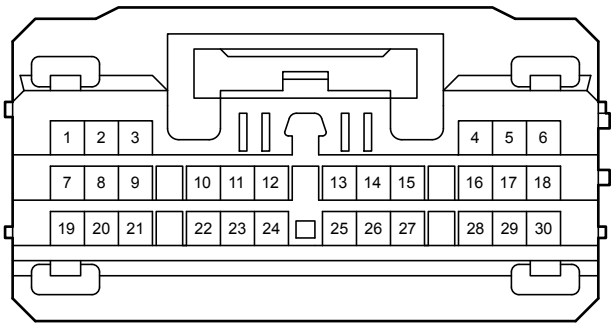


E119
Black

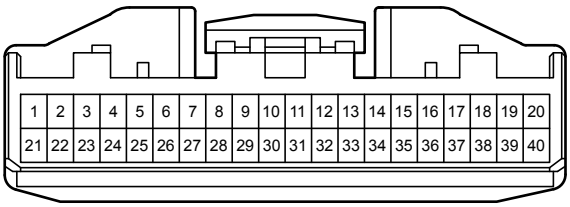


E120
Black

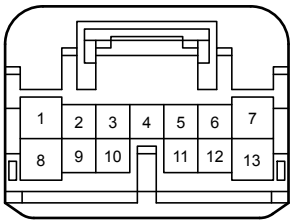


E121
White

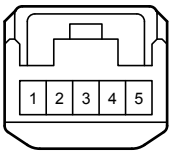


E122
Black

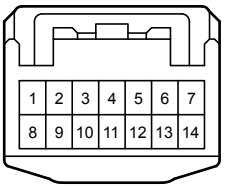


E123
Black

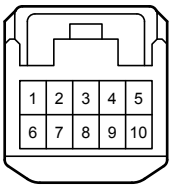


E124
White

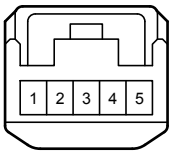


E126
White

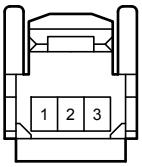


E127
White




E128
White

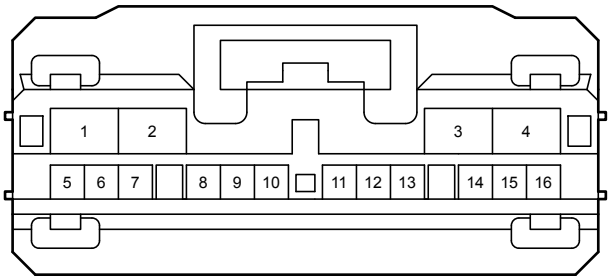


E129
Black

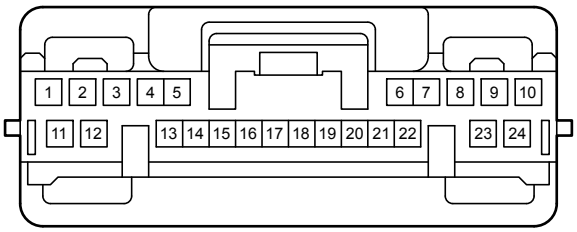


E130
Black

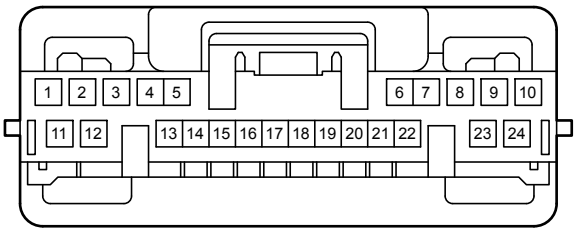

E143
White



E146
White



E180
White

