
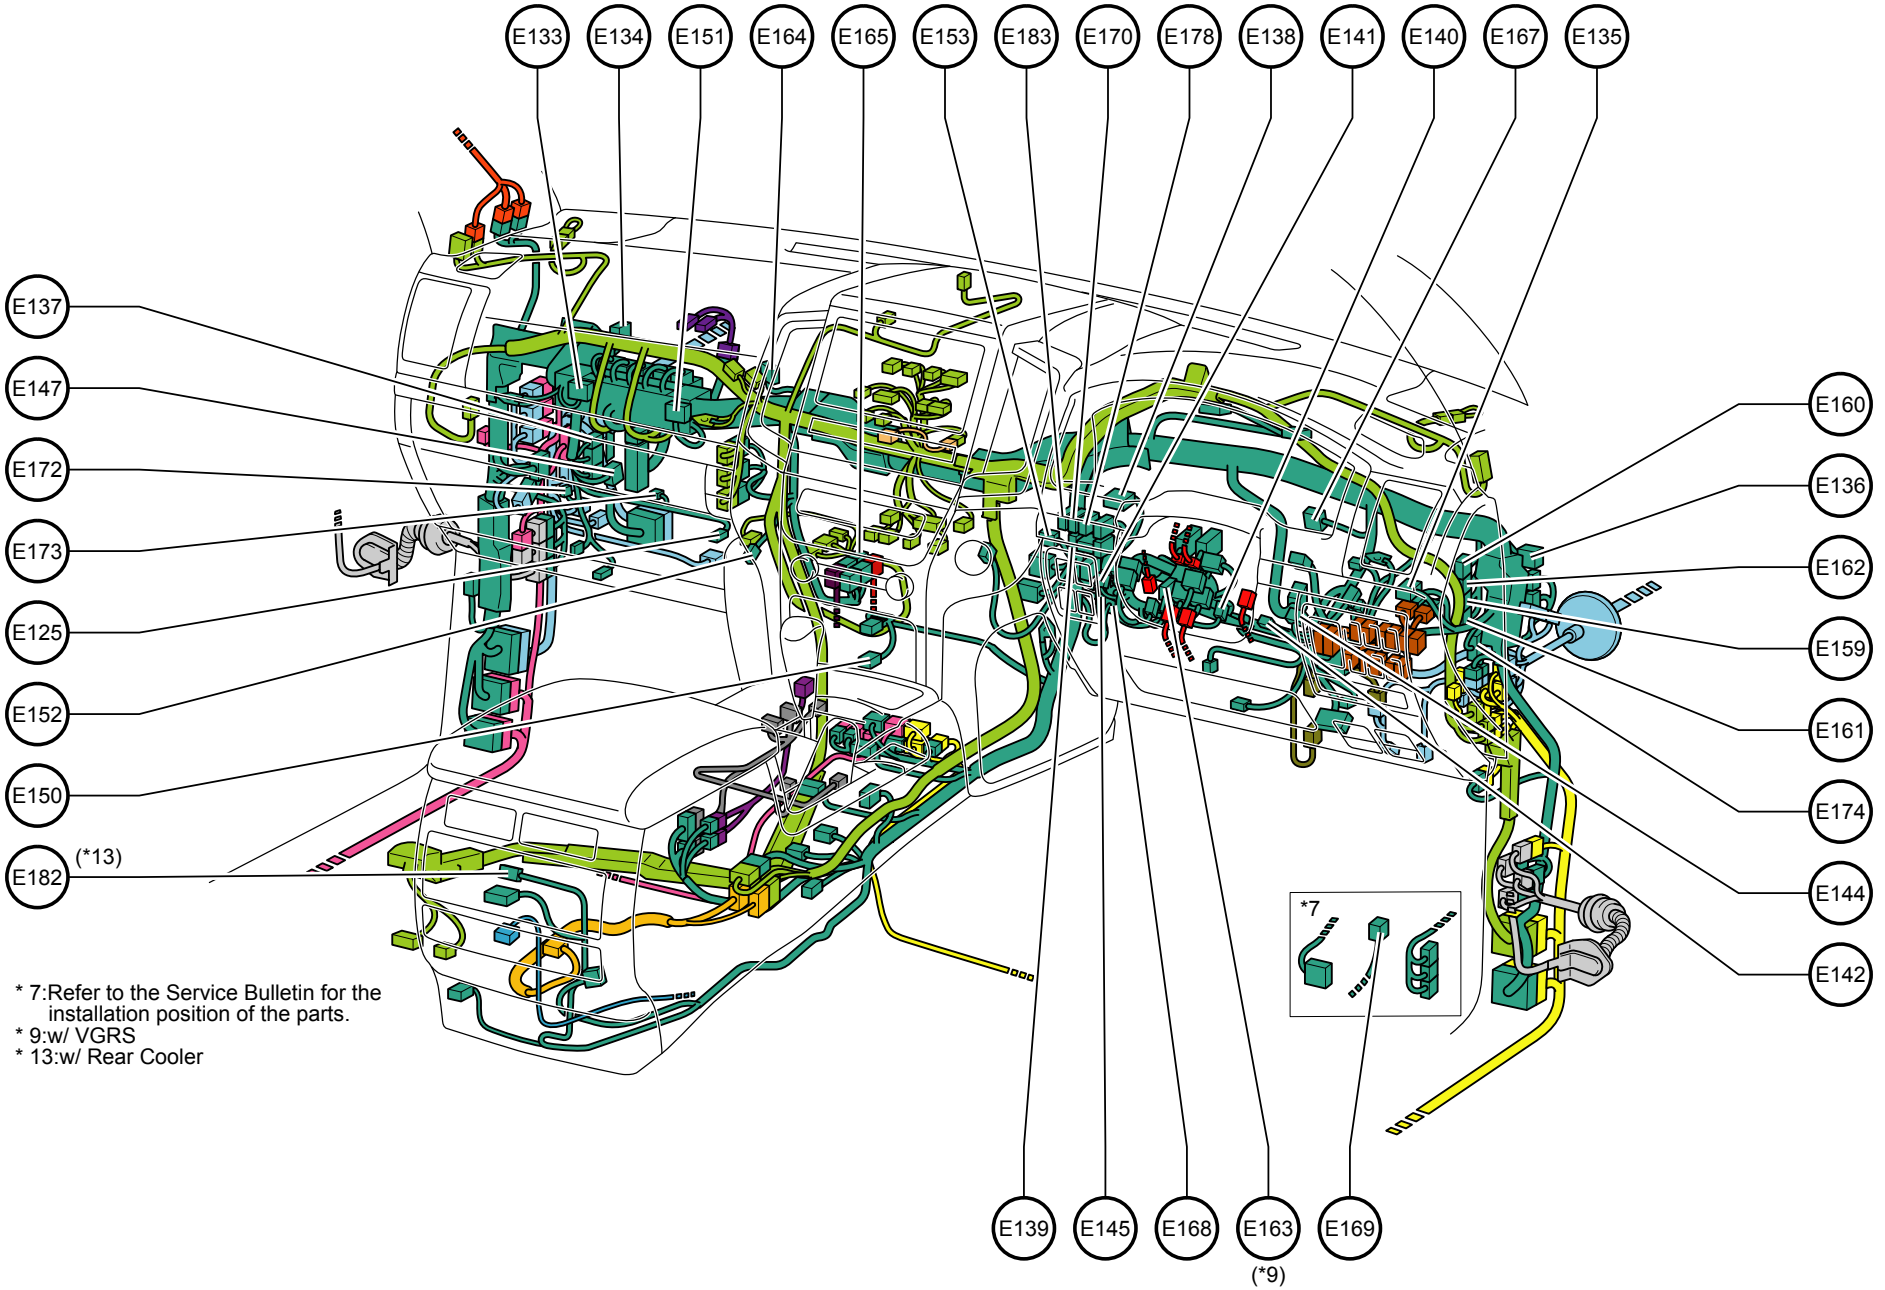



* 7:Refer to the Service Bulletin for the installation position of the parts.
* 9:w/ VGRS
* 13:w/ Rear Cooler

E 125 Glove Box Light Assembly
E 133 Junction Connector
E 134 Junction Connector
E 135 Junction Connector
E 136 Junction Connector
E 137 Main Body ECU
E 138 Main Switch Assembly
E 139 Back Door Control Switch
E 140 Spiral Cable Sub-Assembly
E 141 Windshield Wiper Switch Assembly
E 142 Telescopic Motor and Sensor (Steering Column Assembly)
E 144 Multiplex Tilt and Telescopic ECU
E 145 Network Gateway ECU
E 147 Windshield Wiper ECU
E 150 Mobile Wireless Charger Cradle Assembly
E 151 Junction Connector
E 152 Junction Connector
E 153 Junction Connector
E 159 Steering Control ECU
E 160 Steering Control ECU
E 161 Steering Control ECU
E 162 Steering Control ECU
E 163 Steering Sensor
E 164 Driving Support ECU Assembly
E 165 A/C Amplifier Assembly
E 167 Double Lock Door Control Relay Assembly
E 168 Door Control Battery
E 169 Theft Warning Siren Assembly
E 170 Pre-Crash System Cancel Switch Assembly
E 172 Option Connector (Clearance Warning ECU Assembly)
E 173 Option Connector (Remote Engine Starter)
E 174 Junction Connector
E 178 Center Differential Lock Switch
E 182 Heater Blower Switch
E 183 Center Differential Lock Switch


E125
White




E133
White

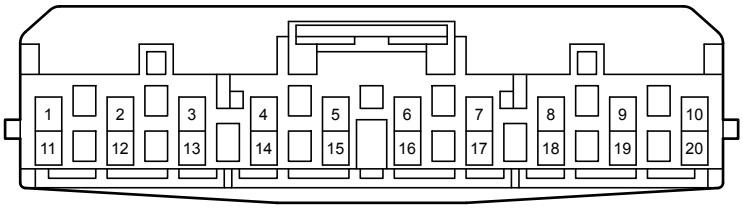


E134
Black

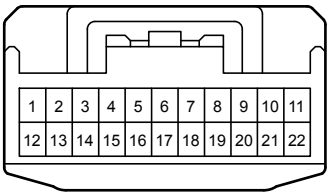


E135
White

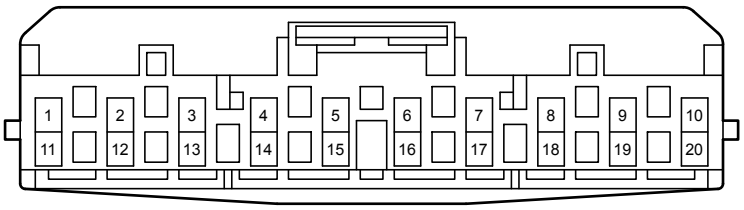


E136
Black

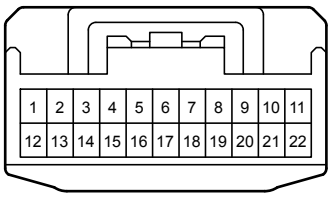


E137
White

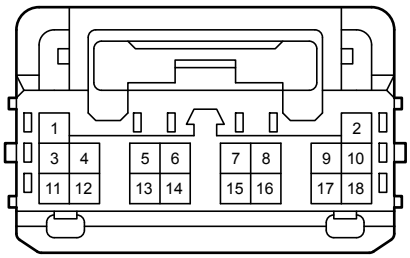


E138
White

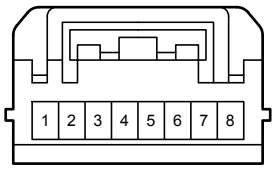


E139
Black

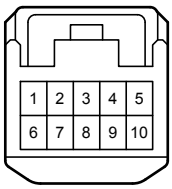

E140
Black




E141
Black

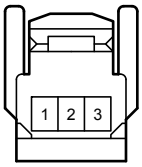


E142
Black




E144
Black

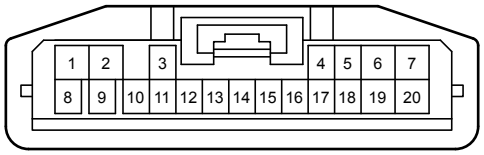


E145
Black

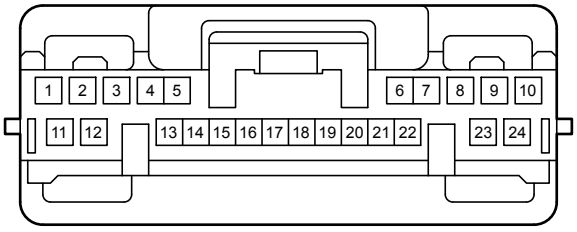


E147
White

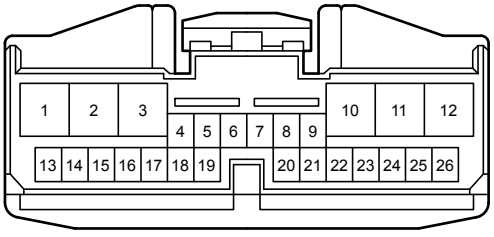


E150
White

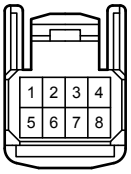


E151
White

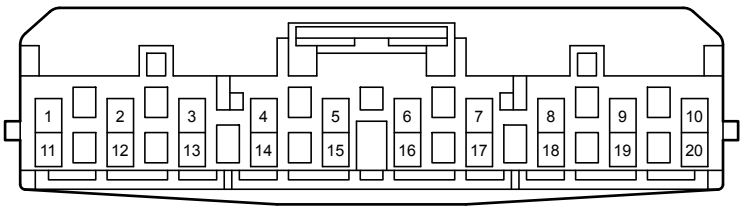


E152
Black

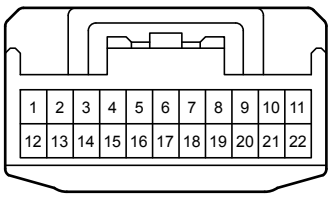


E153
White

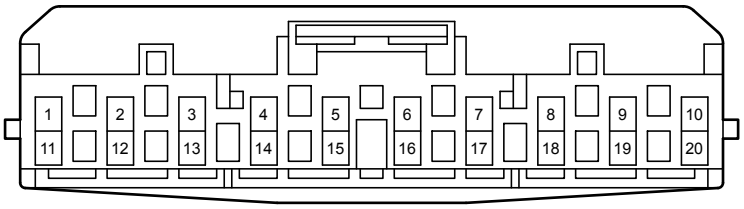


E159
White

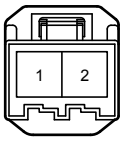


E160
White

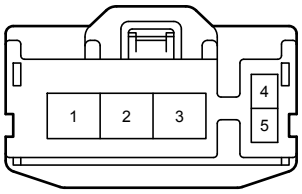


E161
White

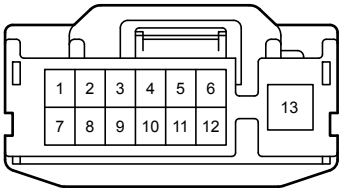


E162
White

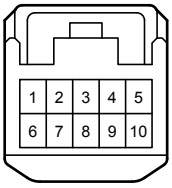


E163
White

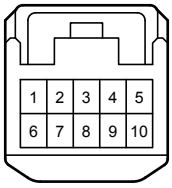


E164
White

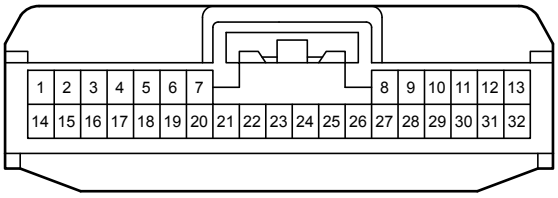


E165
White

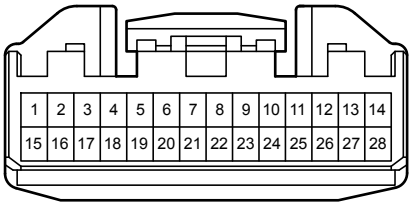


E167
White

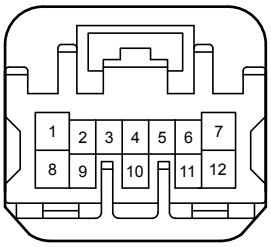


E168
Gray

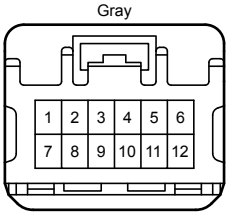


E169
Black

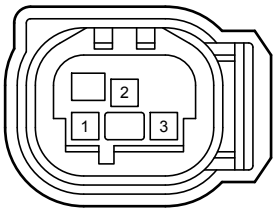


E170
Black

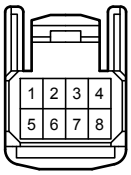


E172
White

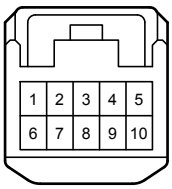


E173
White

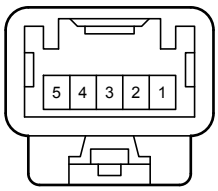


E174
White

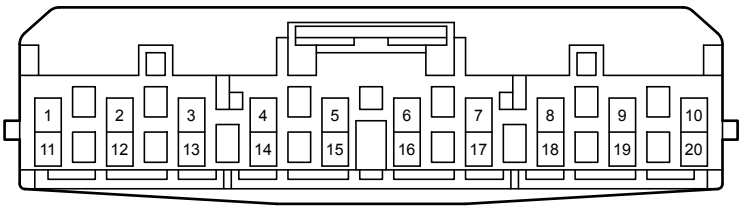

E178
Black

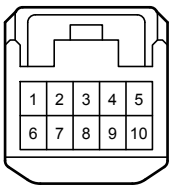

E182
White

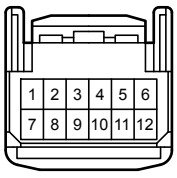

E183
Black

