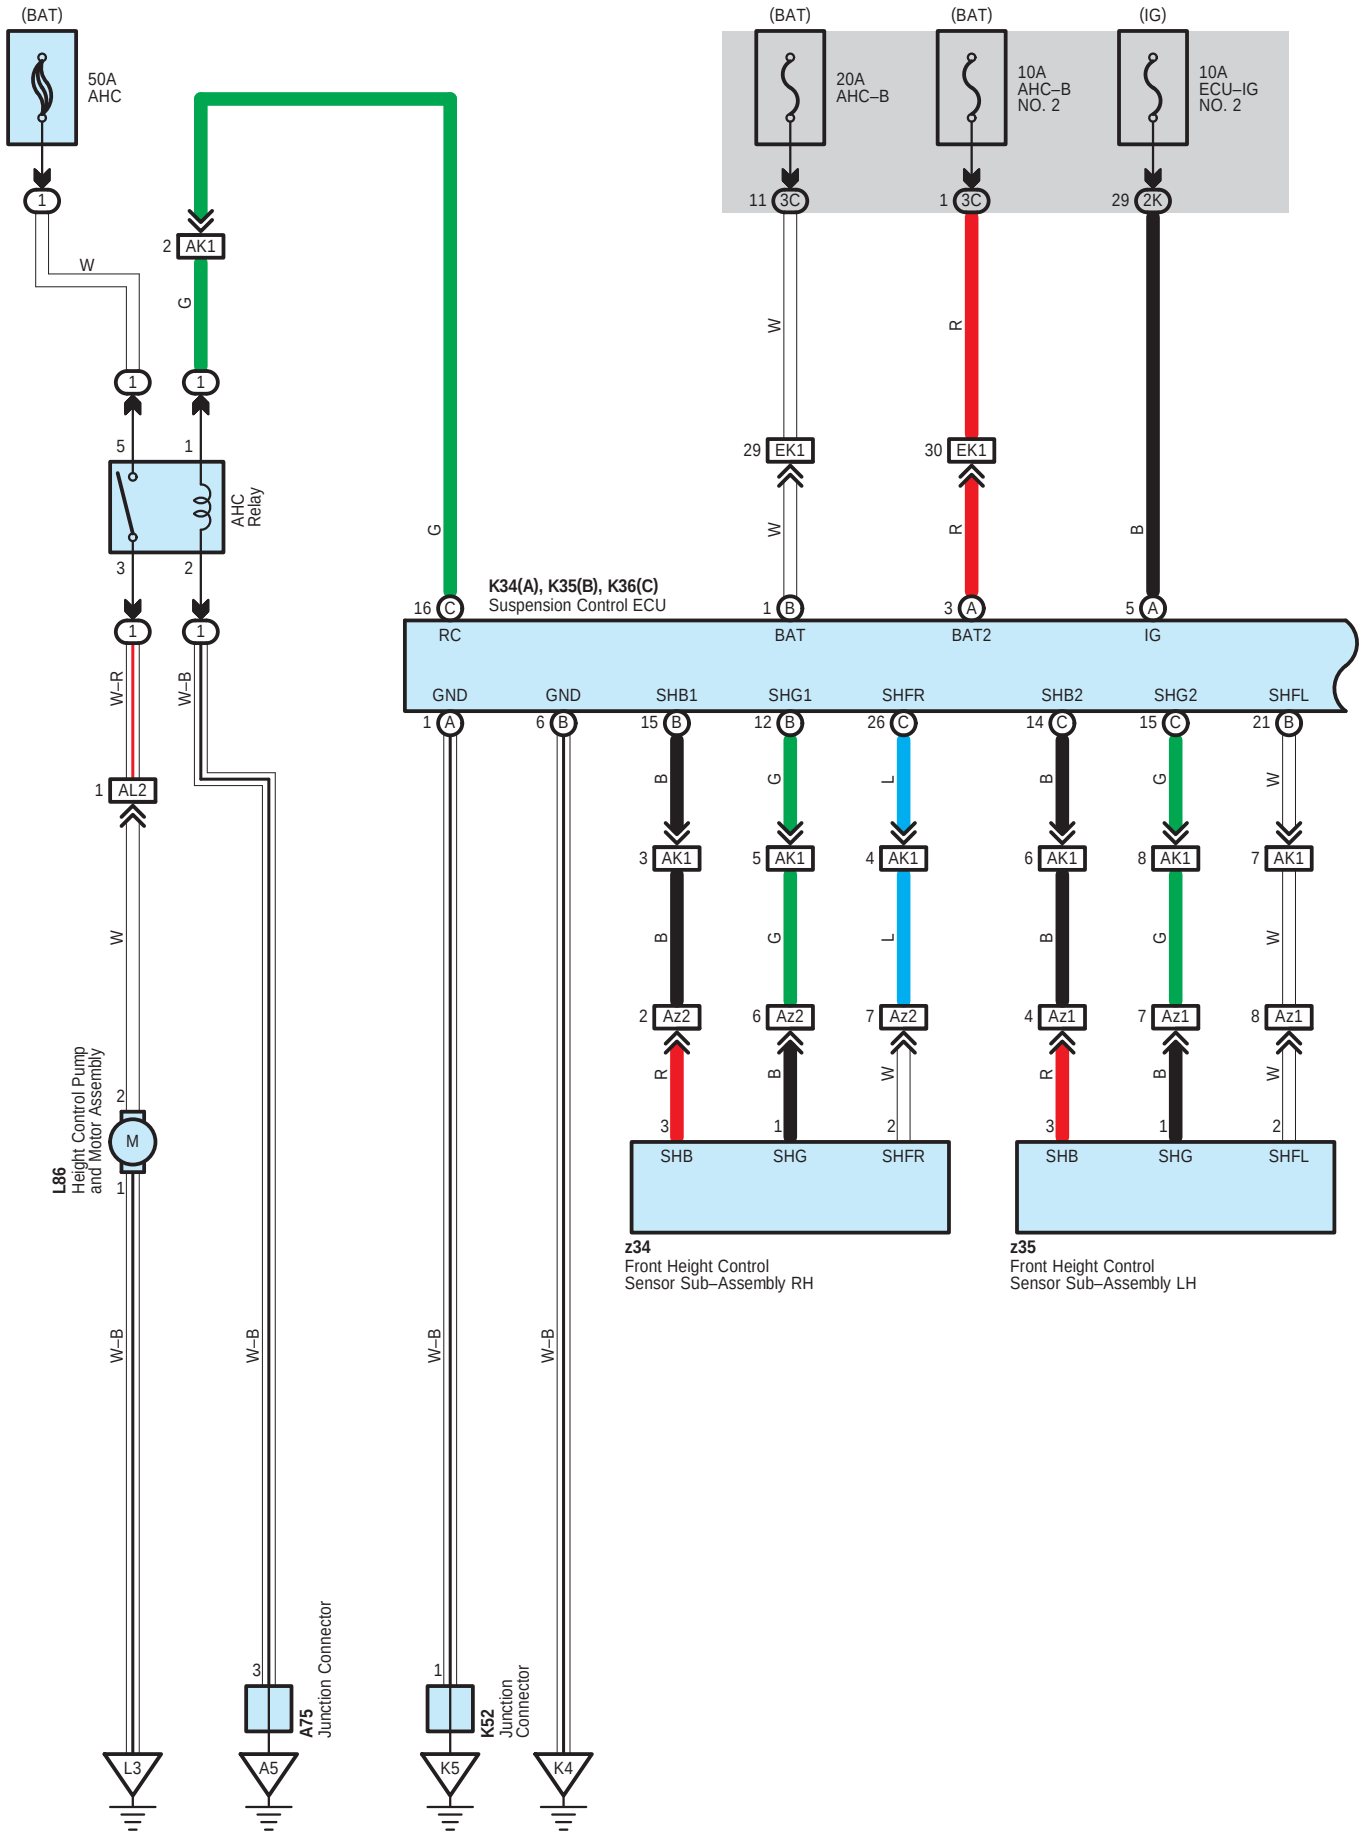
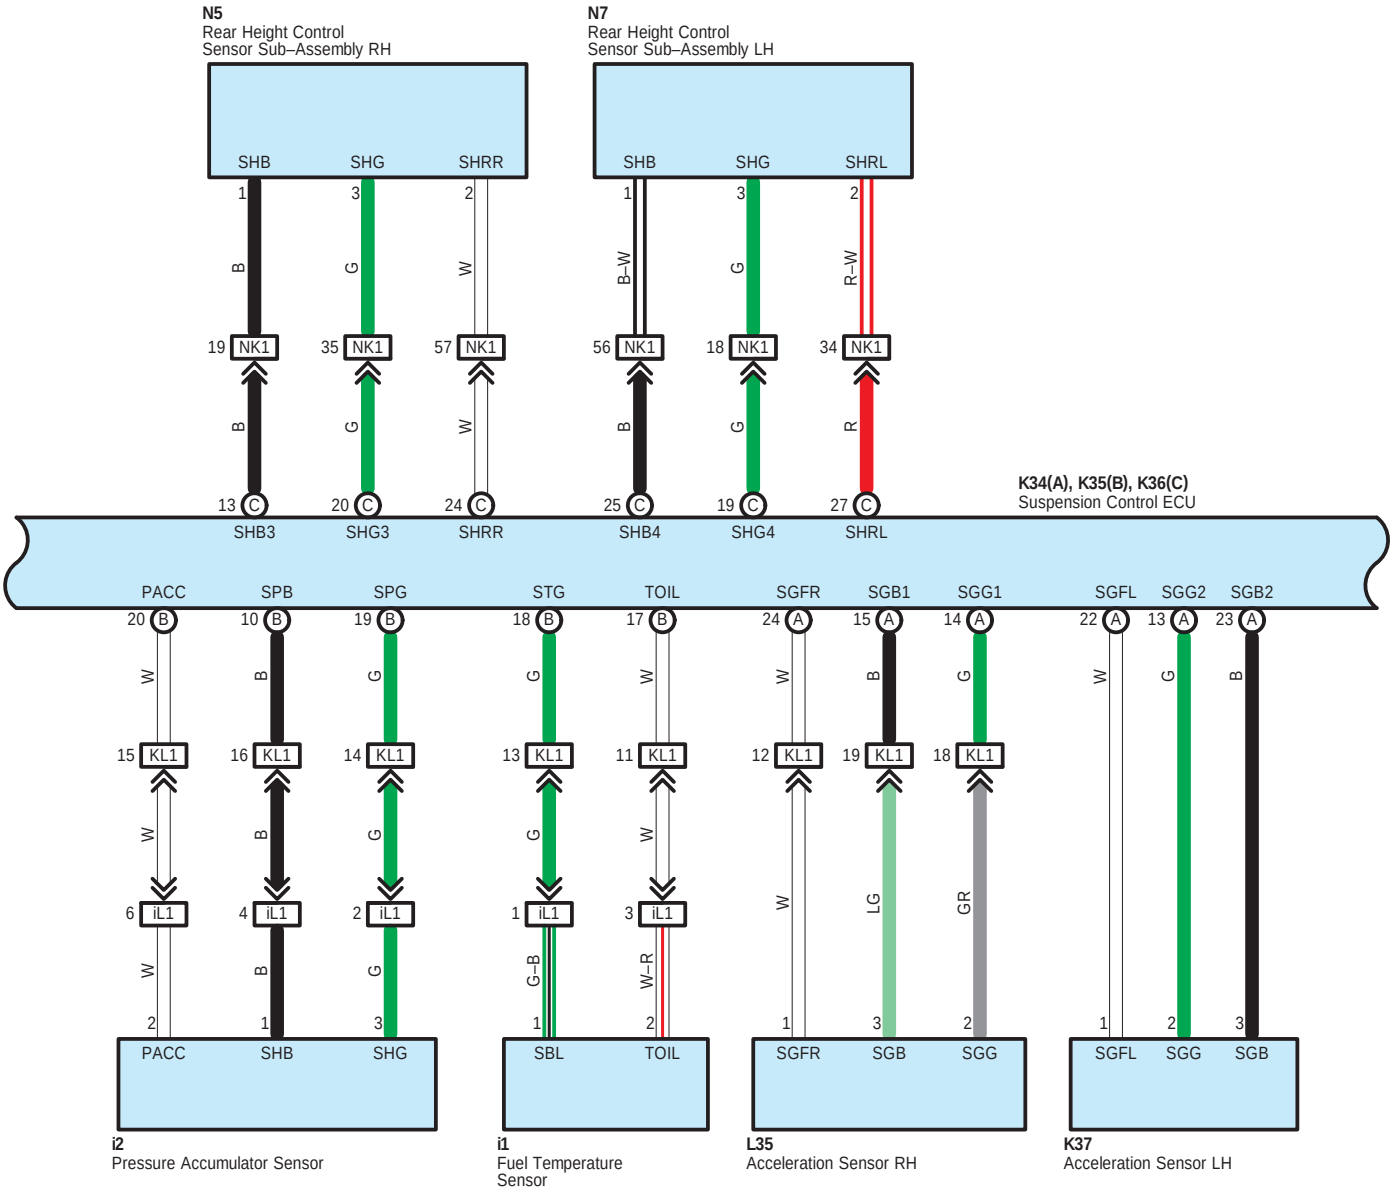
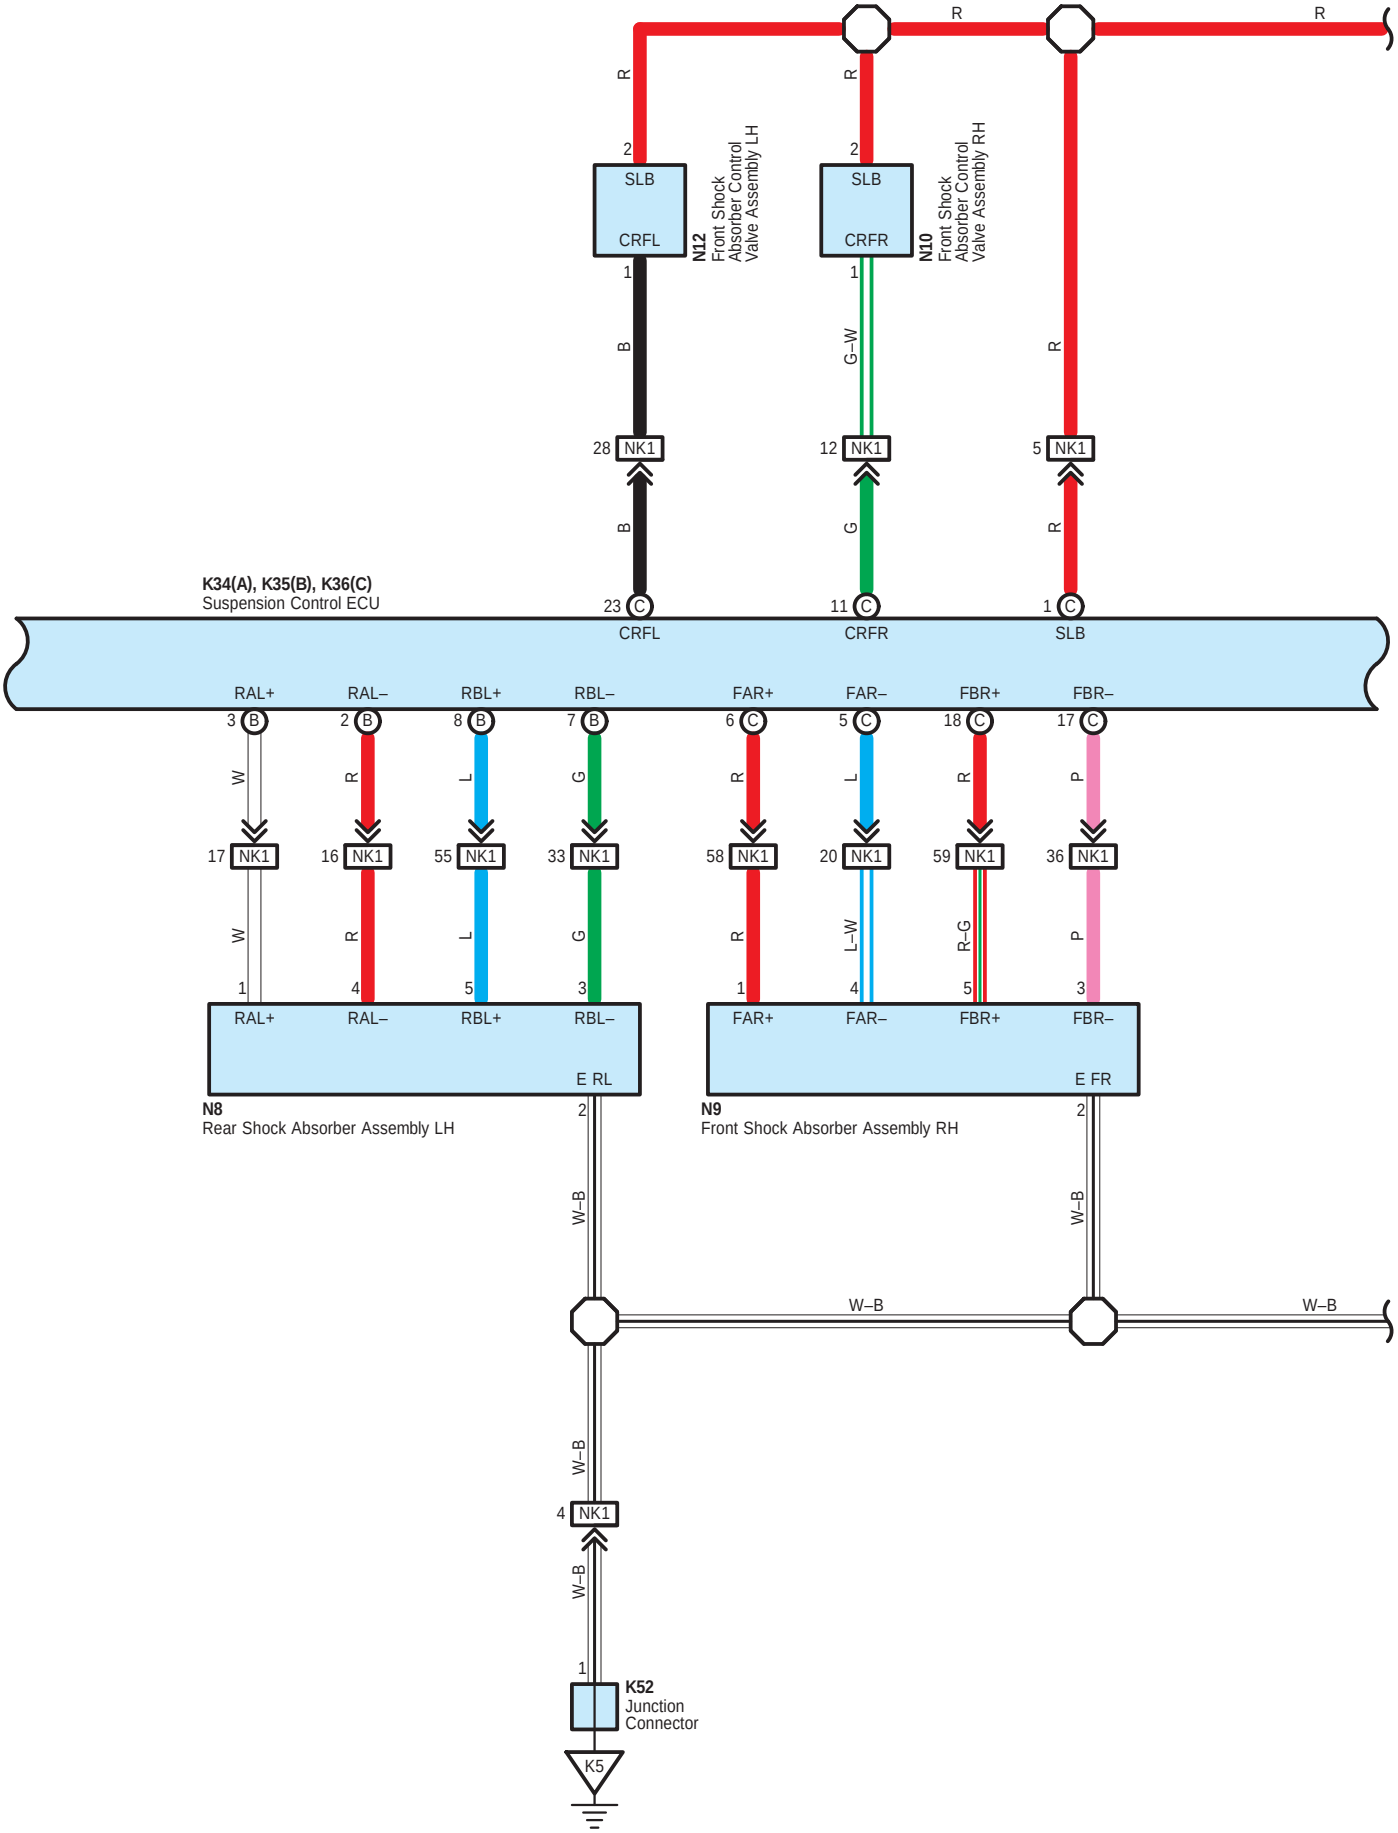
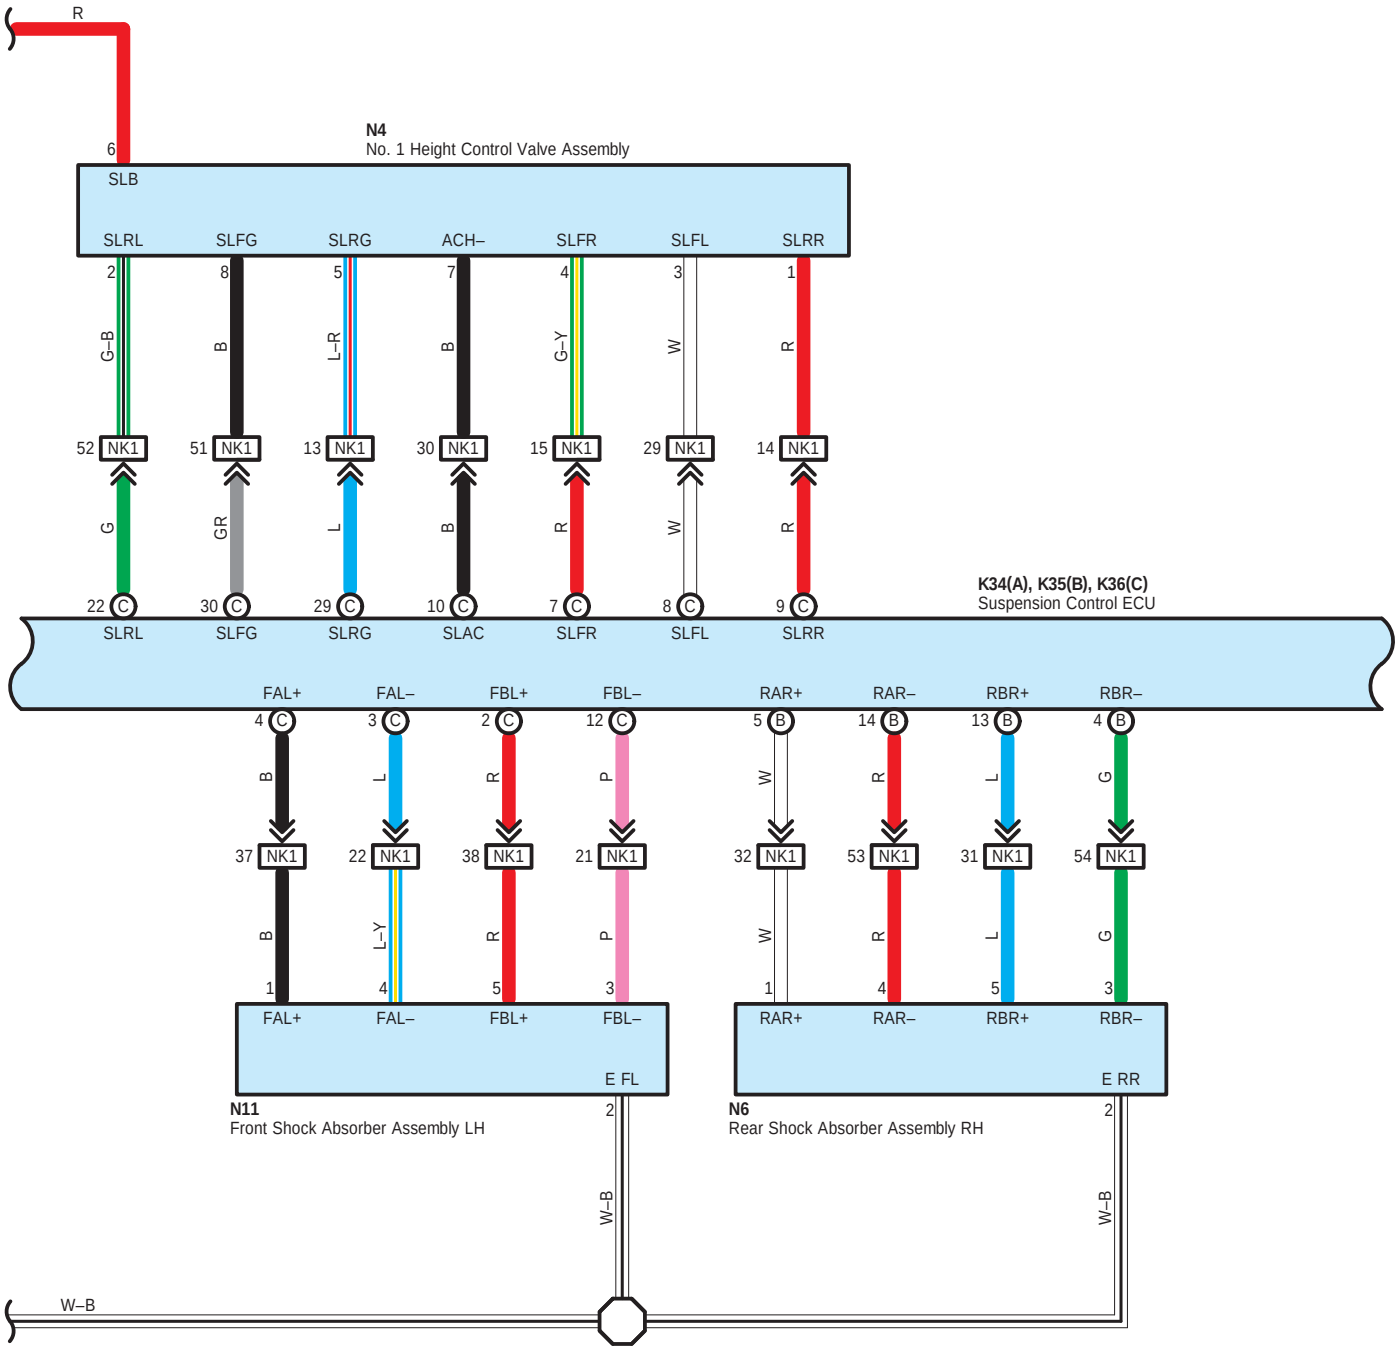
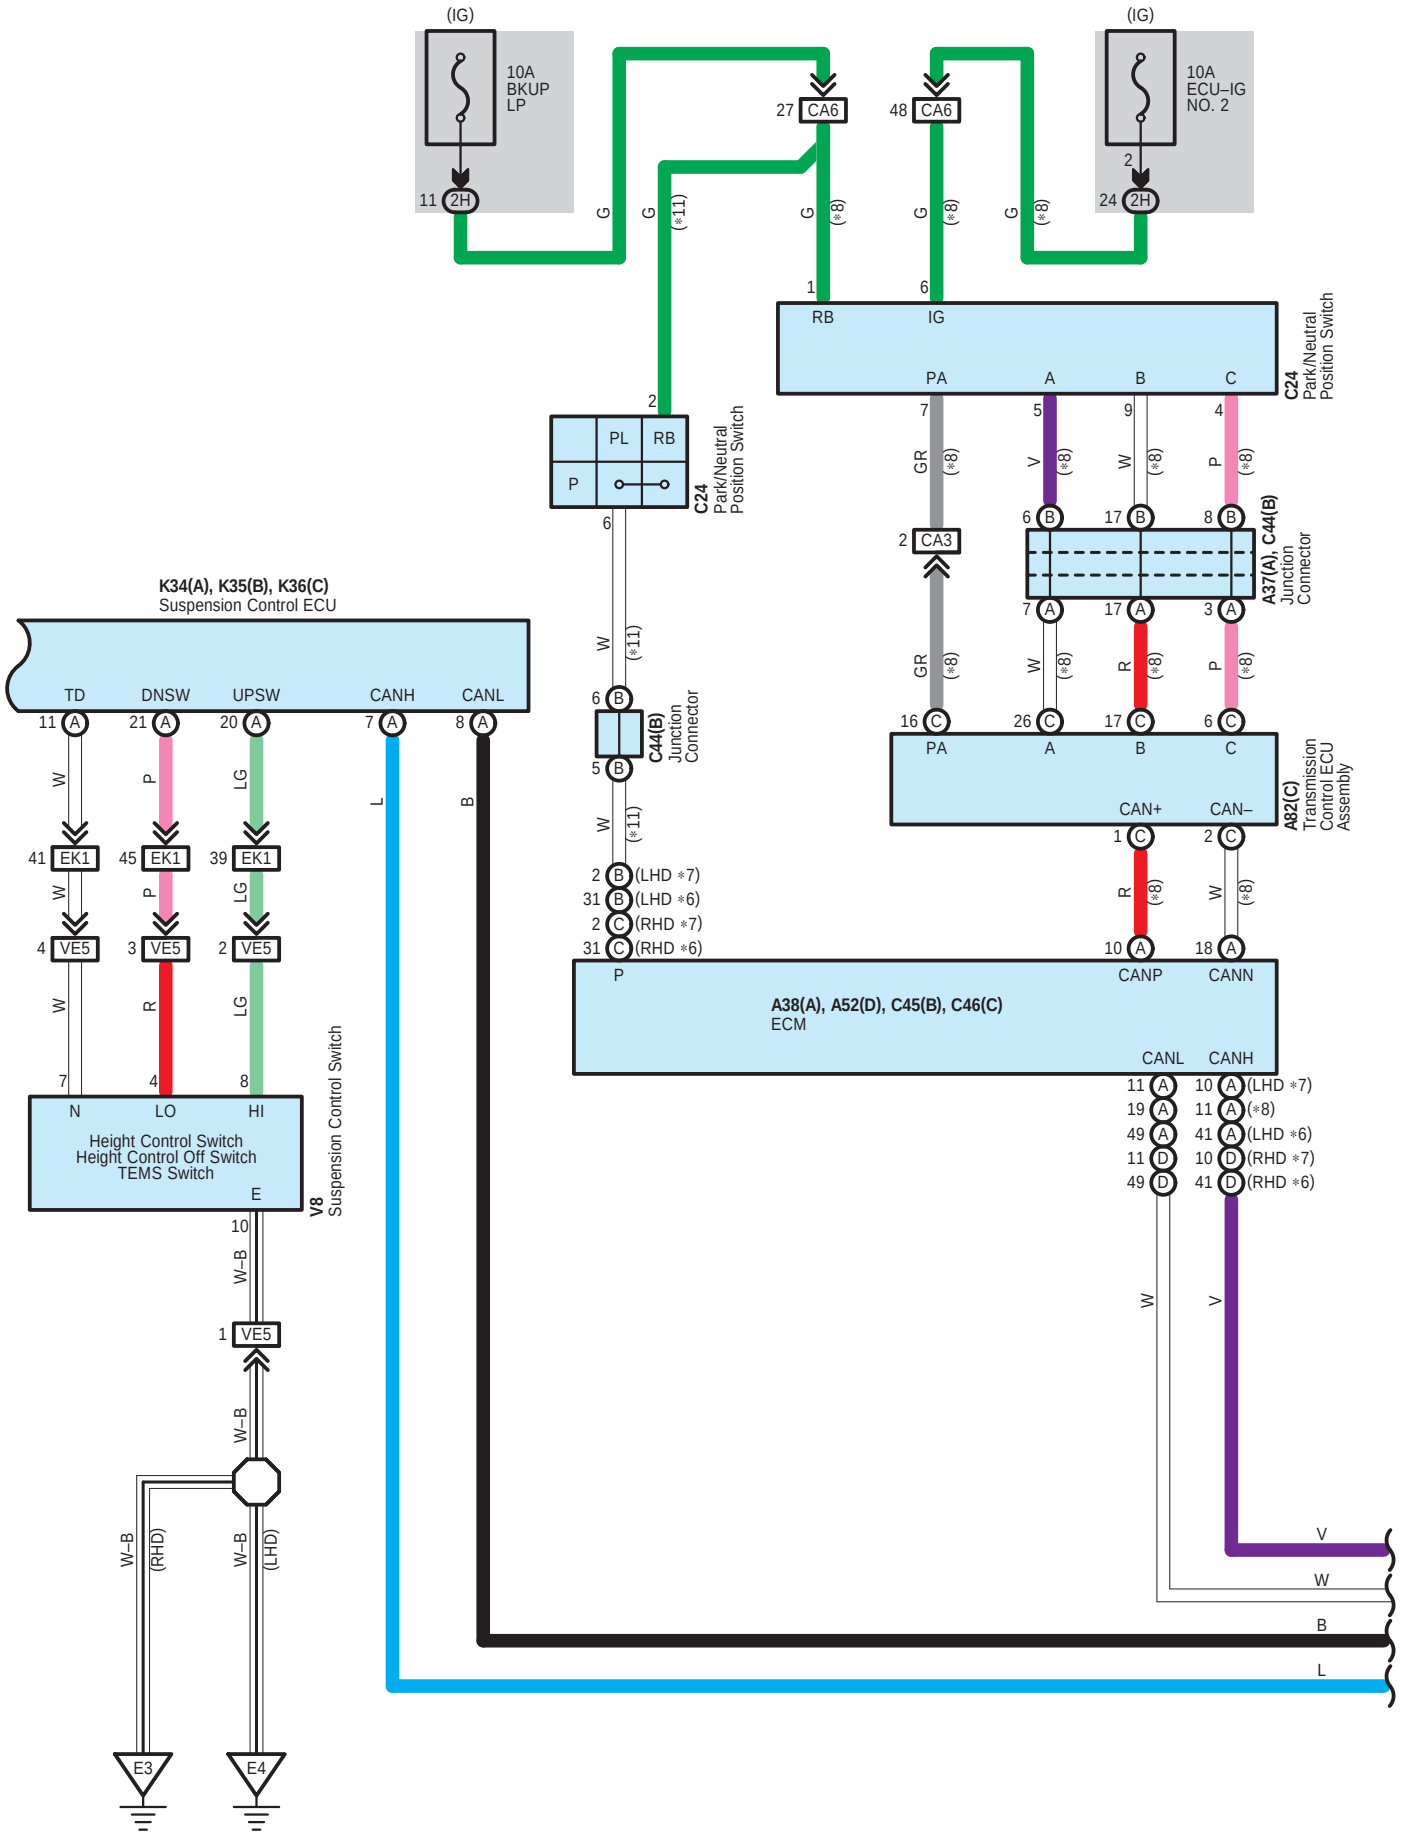

(BAT)
50A
AHC
(BAT)
20A
AHC–B
(BAT)
10A
AHC–B
NO. 2
(IG)
10A
ECU–IG
NO. 2
AHC
Relay
K34(A), K35(B), K36(C)
Suspension Control ECU
RC
BAT
BAT2
IG
GND
GND
SHB1
SHG1
SHFR
SHB2
SHG2
SHFL
L86
Height Control Pump
and Motor Assembly
A75
Junction Connector
K52
Junction
Connector
z34
Front Height Control
Sensor Sub–Assembly RH
z35
Front Height Control
Sensor Sub–Assembly LH



N5
Rear Height Control
Sensor Sub–Assembly RH
SHB
SHG
SHRR
1
3
2
B
G
W
19 NK1
35 NK1
57 NK1
B
G
W
13 C
20 C
24 C
SHB3
SHG3
SHRR
N7
Rear Height Control
Sensor Sub–Assembly LH
SHB
SHG
SHRL
1
3
2
B–W
G
R–W
56 NK1
18 NK1
34 NK1
B
G
R
25 C
19 C
27 C
SHB4
SHG4
SHRL
K34(A), K35(B), K36(C)
Suspension Control ECU
PACC
SPB
SPG
STG
TOIL
SGFR
SGB1
SGG1
SGFL
SGG2
SGB2
20 B
10 B
19 B
18 B
17 B
24 A
15 A
14 A
22 A
13 A
23 A
W
B
G
G
W
W
B
G
W
G
B
15 KL1
16 KL1
14 KL1
13 KL1
11 KL1
12 KL1
19 KL1
18 KL1
W
B
G
G
W
W
LG
GR
6 iL1
4 iL1
2 iL1
1 iL1
3 iL1
W
B
G
G–B
W–R
2
1
3
1
2
1
3
2
PACC
SHB
SHG
SBL
TOIL
SGFR
SGB
SGG
1
2
3
SGFL
SGG
SGB
i2
Pressure Accumulator Sensor
i1
Fuel Temperature
Sensor
L35
Acceleration Sensor RH
K37
Acceleration Sensor LH



R
R
R
R
2
SLB
CRFL
N12
Front Shock Absorber Control Valve Assembly LH
2
SLB
CRFR
N10
Front Shock Absorber Control Valve Assembly RH
1
B
28 NK1
B
23 C
CRFL
1
G–W
12 NK1
G
11 C
CRFR
R
5 NK1
R
1 C
SLB
K34(A), K35(B), K36(C)
Suspension Control ECU
RAL+
RAL–
RBL+
RBL–
FAR+
FAR–
FBR+
FBR–
3 B
2 B
8 B
7 B
6 C
5 C
18 C
17 C
W
R
L
G
R
L
R
P
17 NK1
16 NK1
55 NK1
33 NK1
58 NK1
20 NK1
59 NK1
36 NK1
W
R
L
G
R
L–W
R–G
P
1
4
5
3
1
4
5
3
RAL+
RAL–
RBL+
RBL–
E RL
FAR+
FAR–
FBR+
FBR–
E FR
N8
Rear Shock Absorber Assembly LH
N9
Front Shock Absorber Assembly RH
2
2
W–B
W–B
W–B
W–B
W–B
4 NK1
W–B
1
K52
Junction Connector
K5



R
6
N4
No. 1 Height Control Valve Assembly
SLB
SLRL
SLFG
SLRG
ACH–
SLFR
SLFL
SLRR
2
8
5
7
4
3
1
G–B
B
L–R
B
G–Y
W
R
52 NK1
51 NK1
13 NK1
30 NK1
15 NK1
29 NK1
14 NK1
G
GR
L
B
R
W
R
22 C
30 C
29 C
10 C
7 C
8 C
9 C
SLRL
SLFG
SLRG
SLAC
SLFR
SLFL
SLRR
K34(A), K35(B), K36(C)
Suspension Control ECU
FAL+
FAL–
FBL+
FBL–
RAR+
RAR–
RBR+
RBR–
4 C
3 C
2 C
12 C
5 B
14 B
13 B
4 B
B
L
R
P
W
R
L
G
37 NK1
22 NK1
38 NK1
21 NK1
32 NK1
53 NK1
31 NK1
54 NK1
B
L–Y
R
P
W
R
L
G
1
4
5
3
1
4
5
3
FAL+
FAL–
FBL+
FBL–
RAR+
RAR–
RBR+
RBR–
E FL
E RR
N11
Front Shock Absorber Assembly LH
N6
Rear Shock Absorber Assembly RH
2
2
W–B
W–B
W–B


(IG)
10A
BKUP
LP
11 2H
27 CA6
48 CA6
(IG)
10A
ECU–IG
NO. 2
2
24 2H
G
(*11)
(*8)
1
RB
6
IG
C24
Park/Neutral
Position Switch
PA
A
B
C
7
5
9
4
GR
V
W
P
(*8)
2 CA3
6 B
17 B
8 B
A37(A), C44(B)
Junction
Connector
7 A
17 A
3 A
16 C
26 C
17 C
6 C
A82(C)
Transmission
Control ECU
Assembly
CAN+
CAN–
1 C
2 C
R
W
10 A
18 A
CANP
CANN
2
PL
RB
P
6
W
(*11)
6 B
C44(B)
Junction
Connector
5 B
2 B (LHD *7)
31 B (LHD *6)
2 C (RHD *7)
31 C (RHD *6)
P
A38(A), A52(D), C45(B), C46(C)
ECM
CANL
CANH
11 A
10 A (LHD *7)
19 A
11 A (*8)
49 A
41 A (LHD *6)
11 D
10 D (RHD *7)
49 D
41 D (RHD *6)
K34(A), K35(B), K36(C)
Suspension Control ECU
TD
DNSW
UPSW
CANH
CANL
11 A
21 A
20 A
7 A
8 A
L
B
41 EK1
45 EK1
39 EK1
LG
4 VE5
3 VE5
2 VE5
7
4
8
N
LO
HI
Height Control Switch
Height Control Off Switch
TEMS Switch
E
V8
Suspension Control Switch
10
W–B
1 VE5
(RHD)
(LHD)
E3
E4
V
W
B
L


∗ 6 : 1VD–FTV
∗ 7 : 1UR–FE
∗ 8 : 3UR–FE
∗11 : Except 3UR–FE

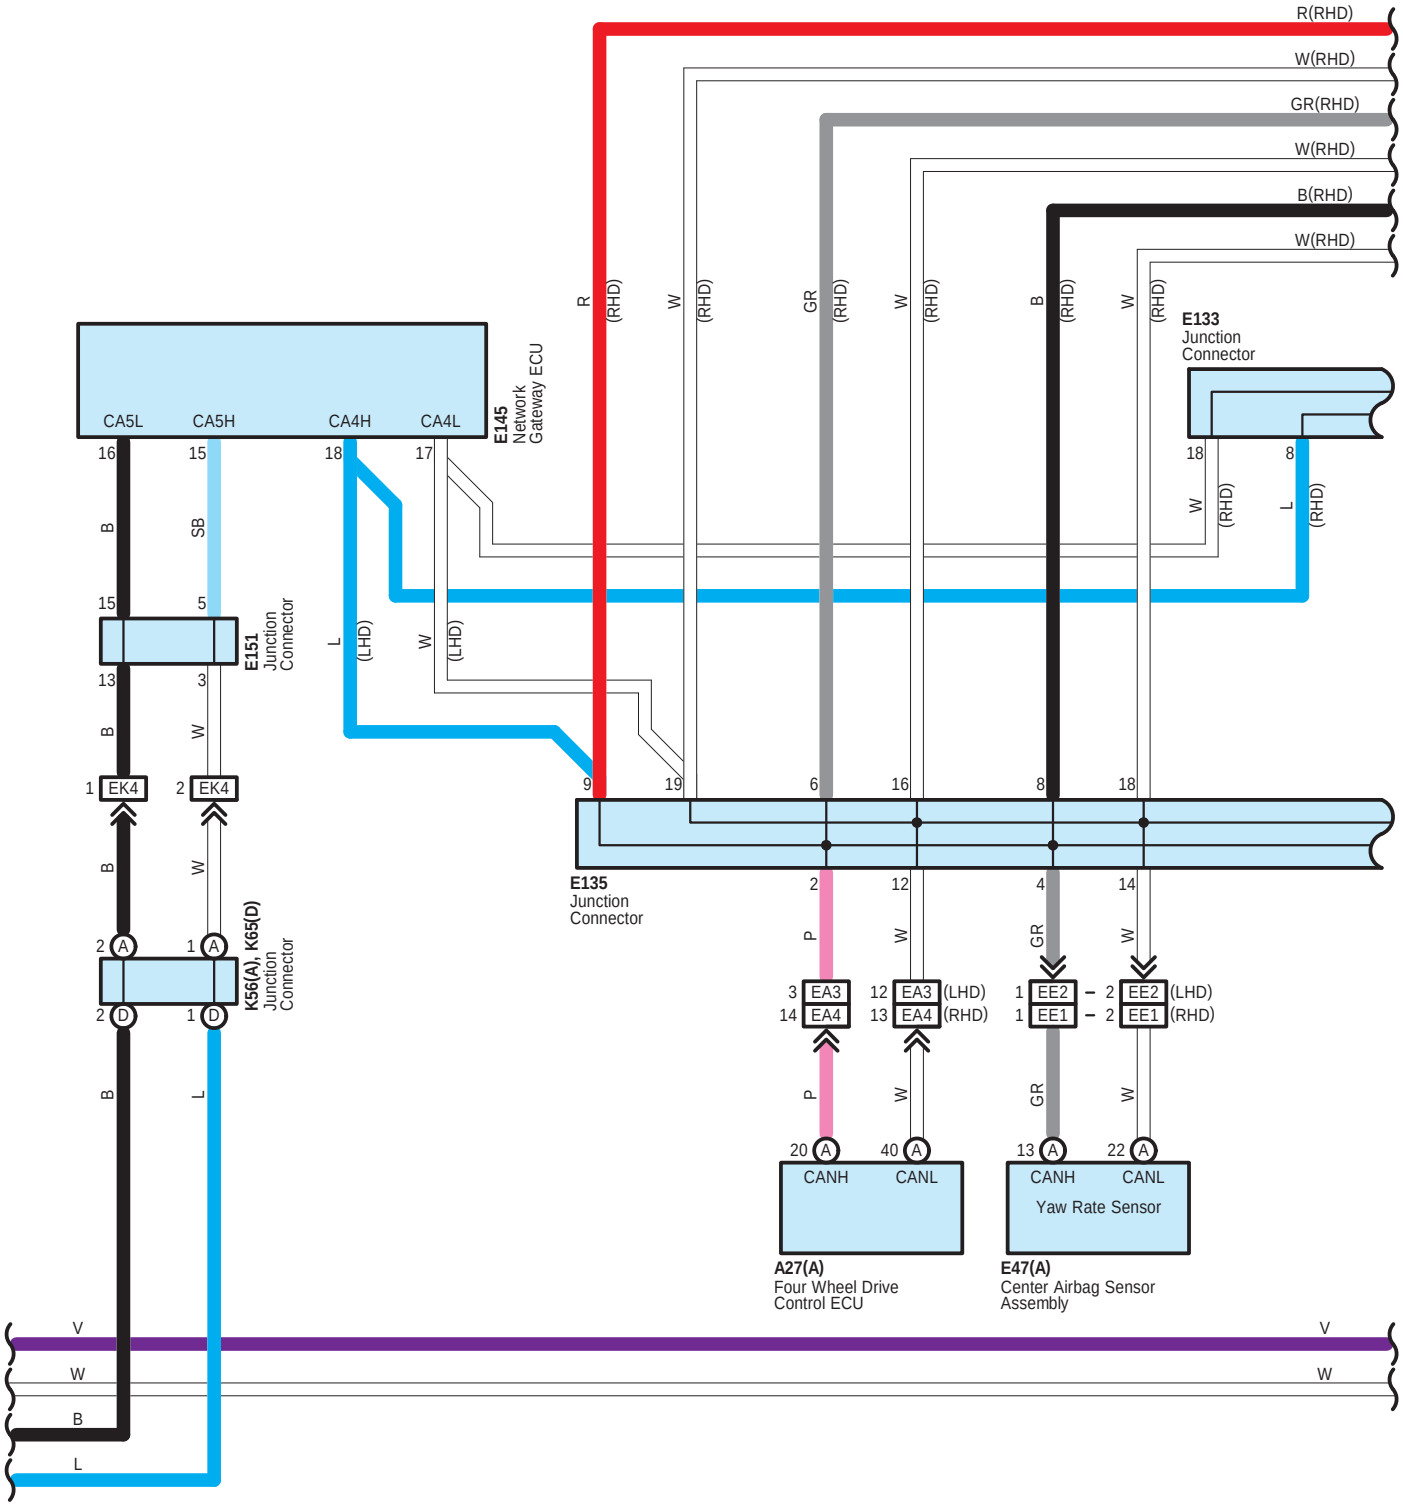

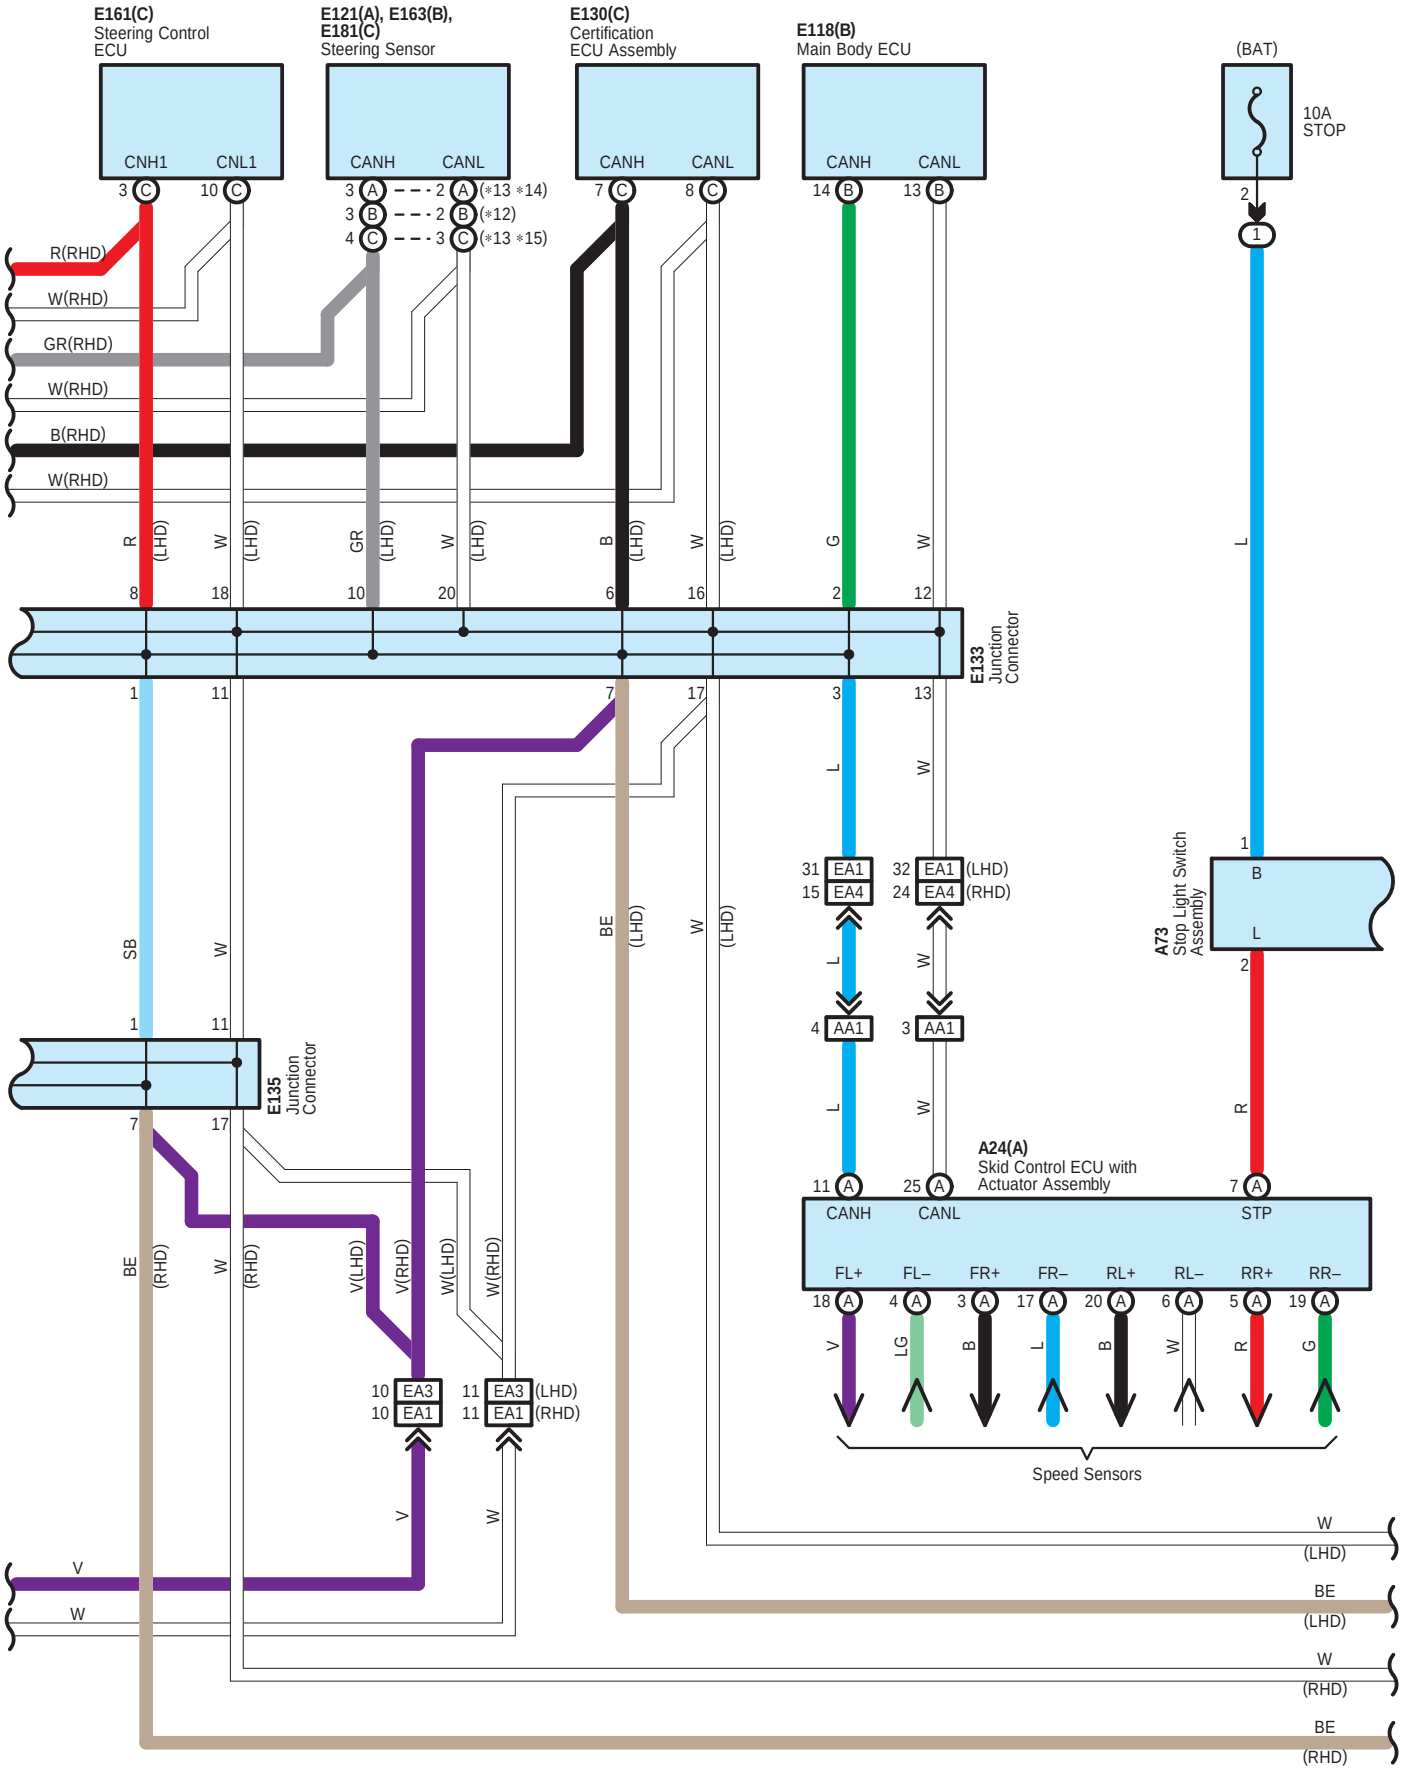

E161(C)
Steering Control ECU
CNH1
CNL1
E121(A), E163(B), E181(C)
Steering Sensor
CANH
CANL
E130(C)
Certification ECU Assembly
CANH
CANL
E118(B)
Main Body ECU
CANH
CANL
(BAT)
10A
STOP
R(RHD)
W(RHD)
GR(RHD)
W(RHD)
B(RHD)
W(RHD)
E133
Junction Connector
E135
Junction Connector
A73
Stop Light Switch Assembly
A24(A)
Skid Control ECU with Actuator Assembly
CANH
CANL
STP
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Speed Sensors
V
W
(LHD)
BE
(LHD)
W
(RHD)
BE
(RHD)

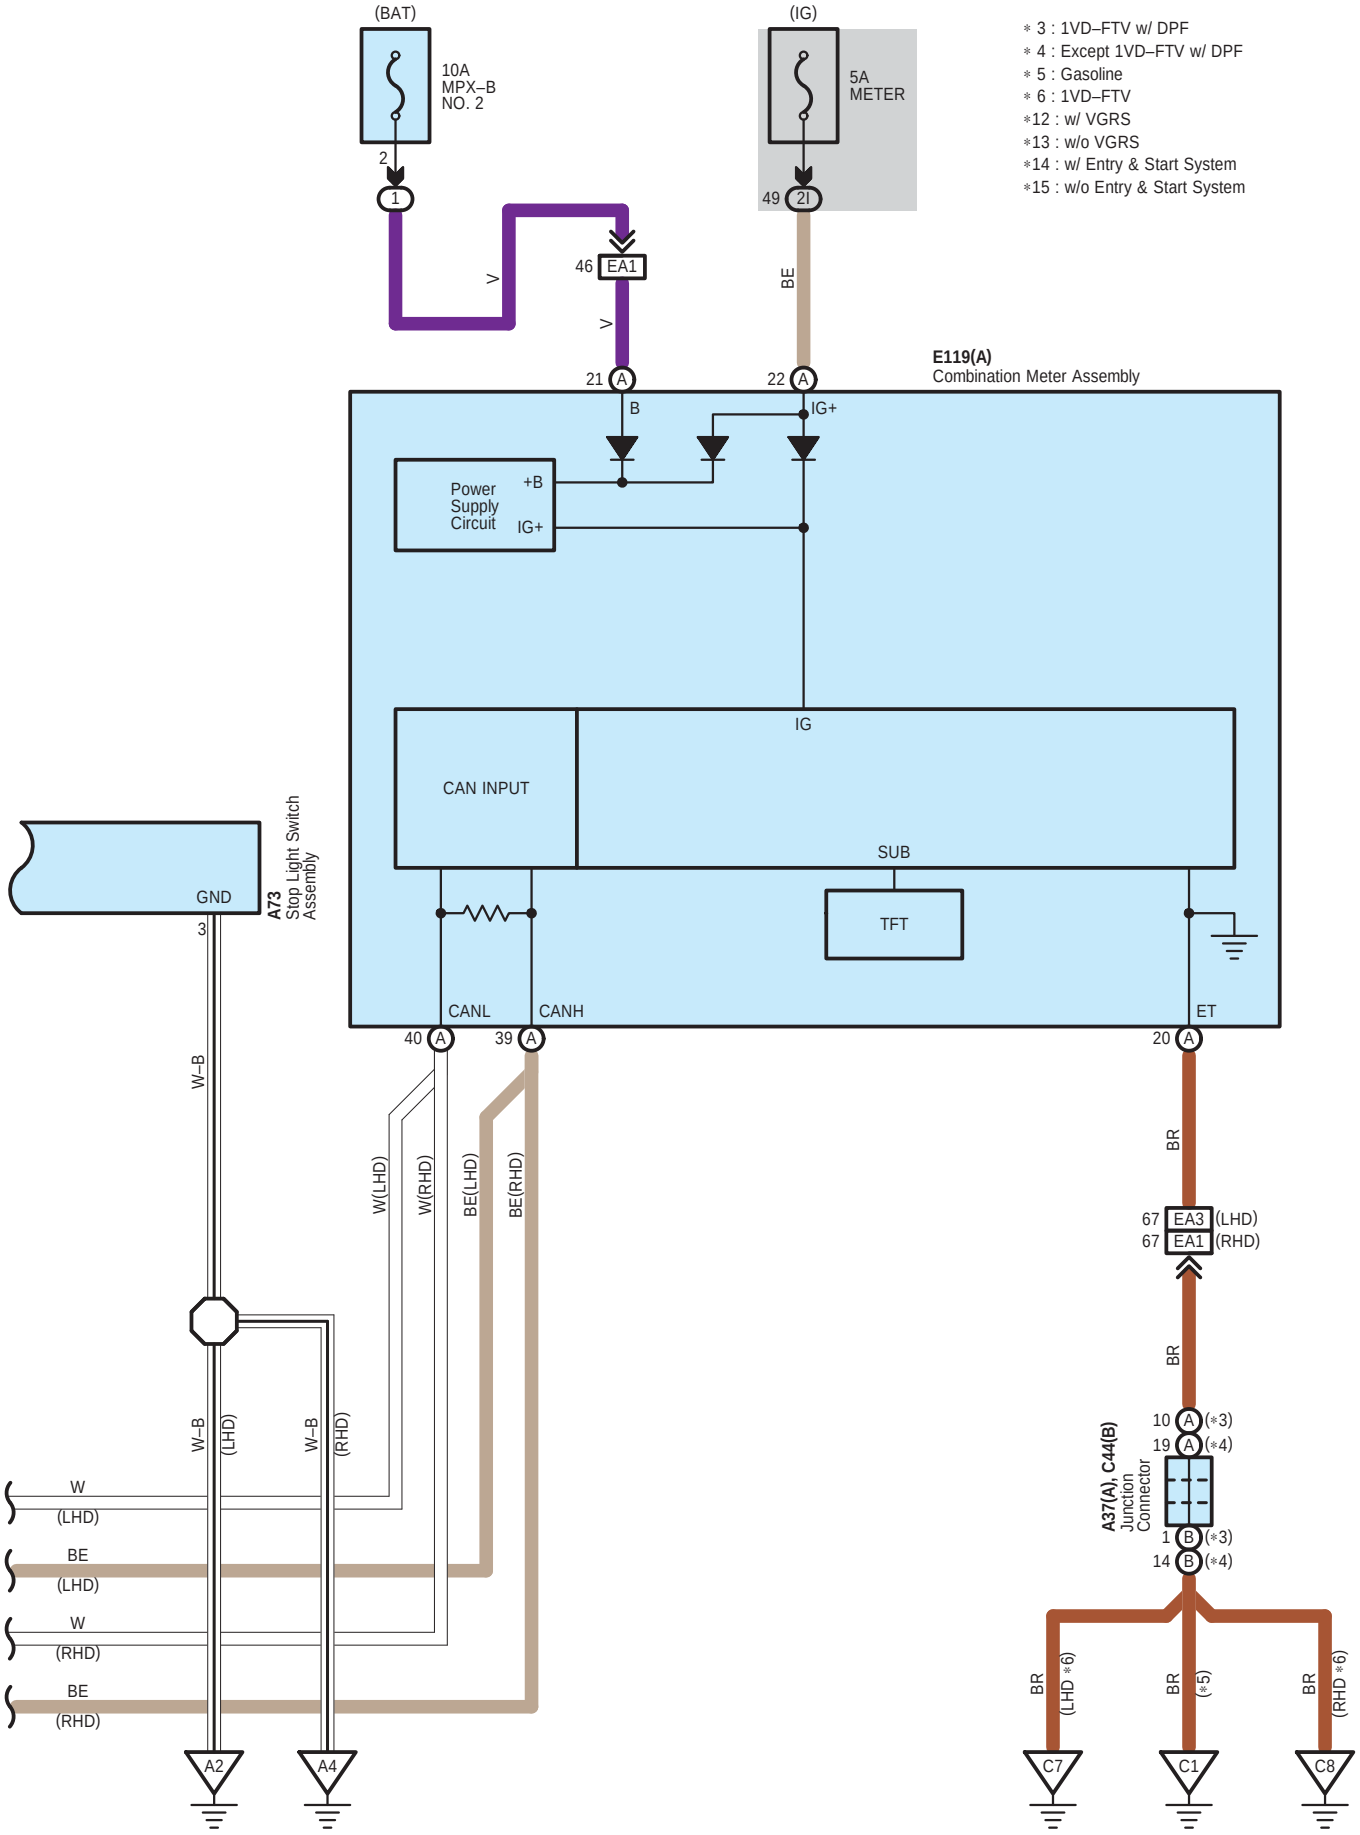
(BAT)
10A
MPX–B
NO. 2
2
1
(IG)
5A
METER
49
2I
∗ 3 : 1VD–FTV w/ DPF
∗ 4 : Except 1VD–FTV w/ DPF
∗ 5 : Gasoline
∗ 6 : 1VD–FTV
∗12 : w/ VGRS
∗13 : w/o VGRS
∗14 : w/ Entry & Start System
∗15 : w/o Entry & Start System
46 EA1
V
V
BE
21 A
22 A
E119(A)
Combination Meter Assembly
B
IG+
Power
Supply
Circuit
+B
IG+
IG
CAN INPUT
SUB
TFT
GND
3
A73
Stop Light Switch
Assembly
CANL
CANH
ET
40 A
39 A
20 A
W–B
W(LHD)
W(RHD)
BE(LHD)
BE(RHD)
BR
67 EA3 (LHD)
67 EA1 (RHD)
BR
10 A (∗3)
19 A (∗4)
A37(A), C44(B)
Junction
Connector
1 B (∗3)
14 B (∗4)
W–B
(LHD)
W–B
(RHD)
W
(LHD)
BE
(LHD)
W
(RHD)
BE
(RHD)
BR
(LHD ∗6)
BR
(∗5)
BR
(RHD ∗6)
A2
A4
C7
C1
C8


A 24
Black

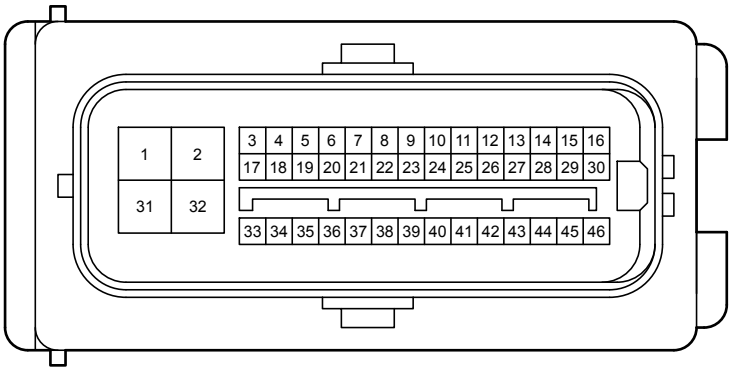


A 27
Black

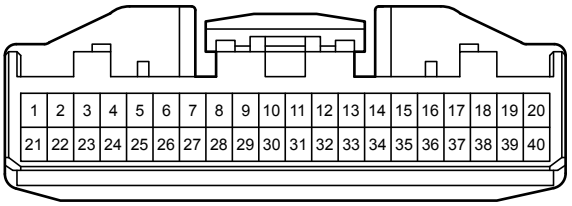


A 37
Blue

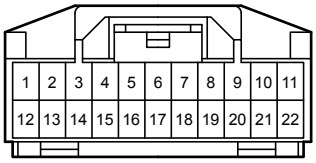


A 38
Black

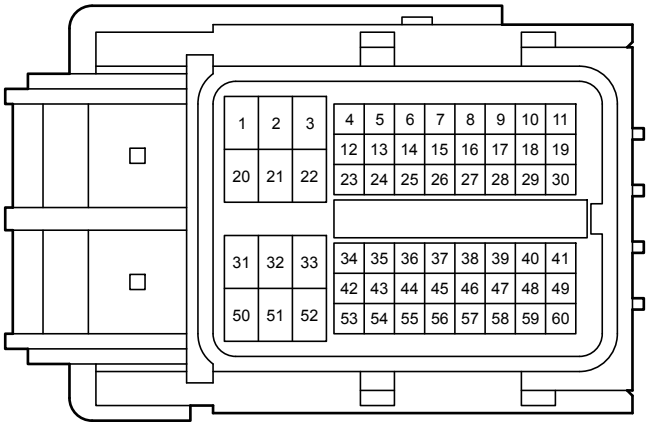


A 52
Black

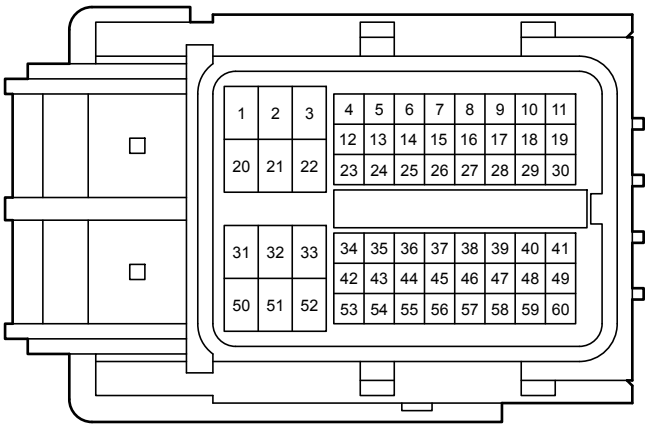


A 73
Gray

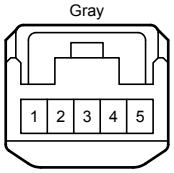


A 75
Black

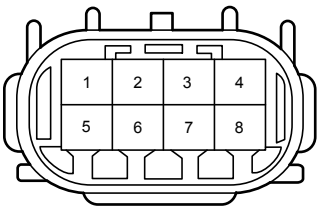


A 82
White

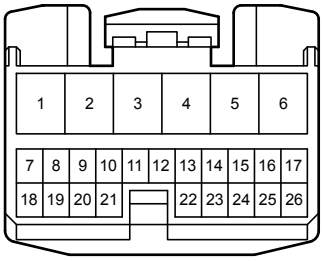


C 24
Gray

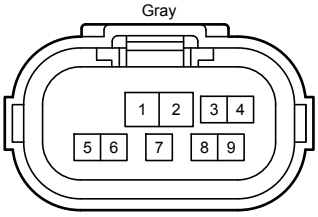


C 44
Blue

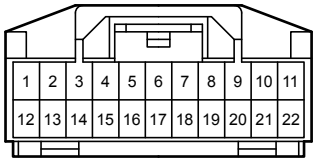


C 45
Black

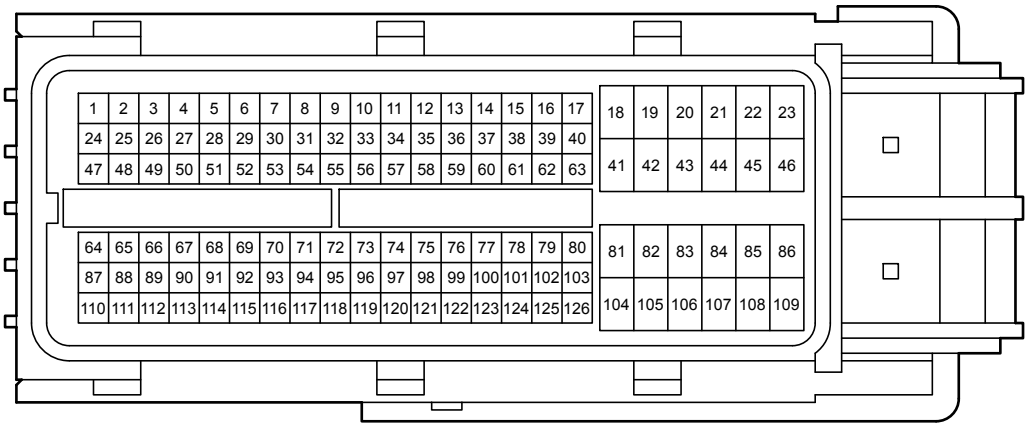


C 46
Black

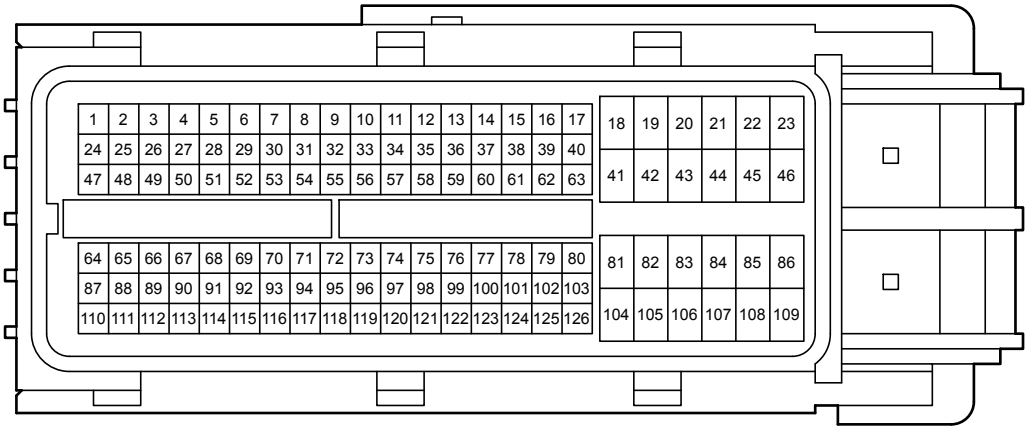


E 47
Yellow

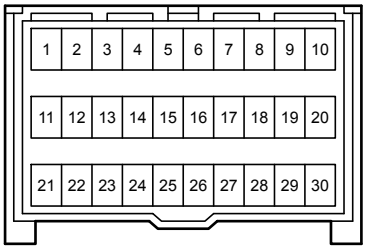


E118
White

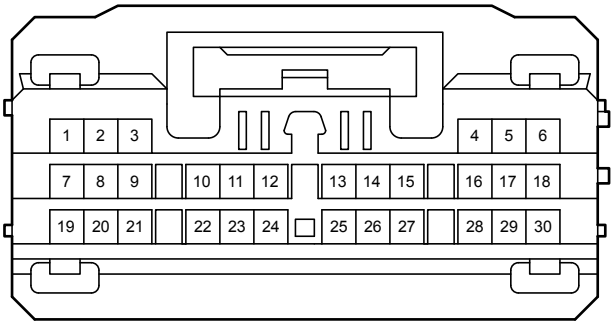


E119
Black

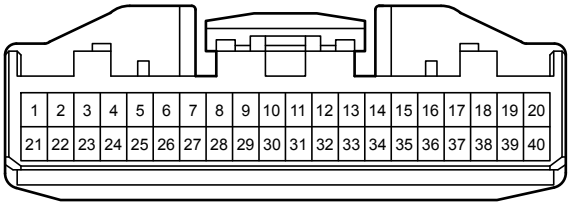


E121
White

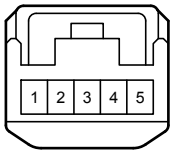


E130
Black

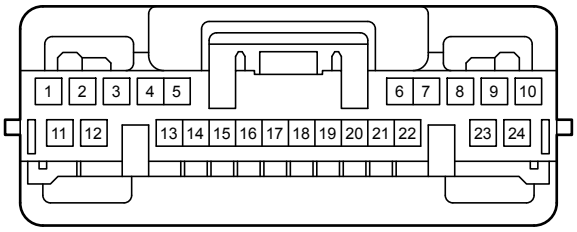


E133
White

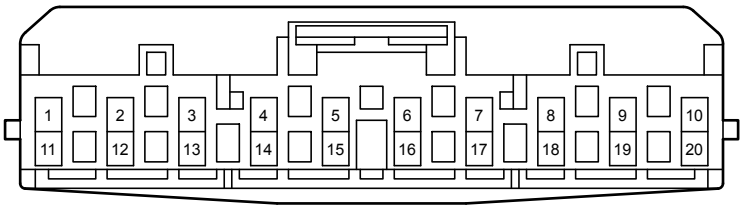


E135
White

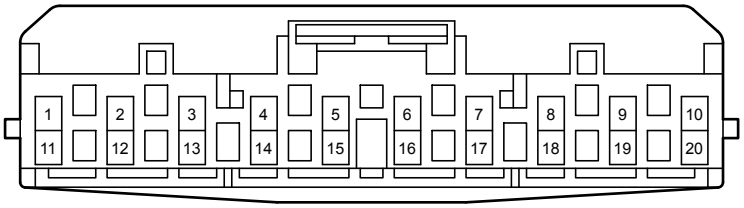


E145
Black

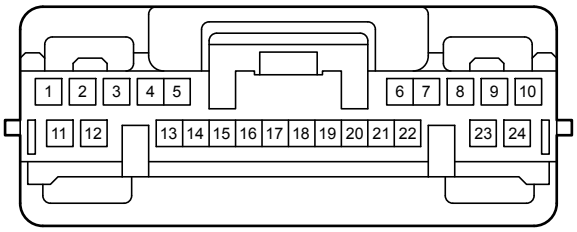


E151
White

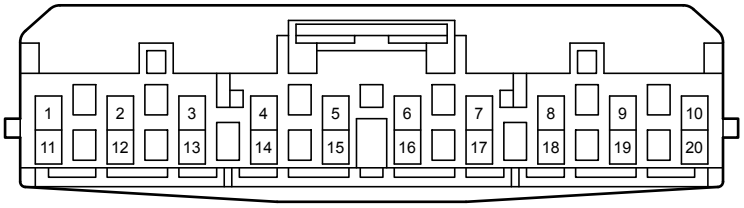


E161
White

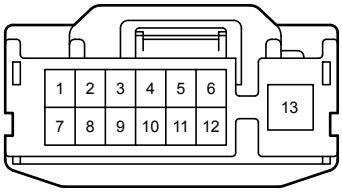


E163
White

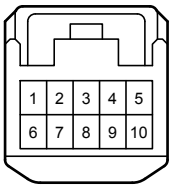


E181
Black

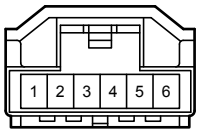


K 34
Black

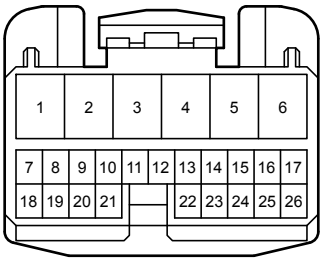


K 35
Black

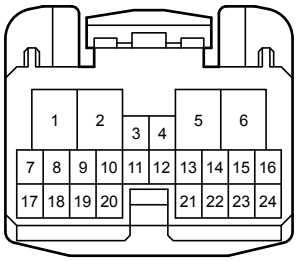


K 36
Black

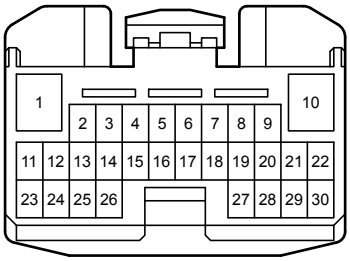


K 37
Black

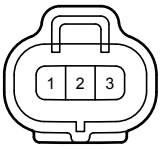


K 52
Black

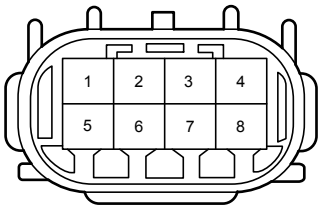


K 56
White




K 65
White




L 35
Black

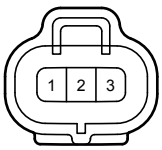


L 86
Gray

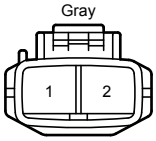


N 4
Black

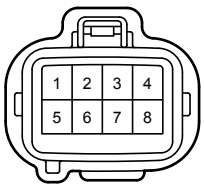


N 5
Black

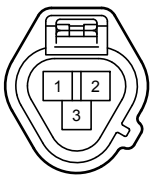


N 6
Gray

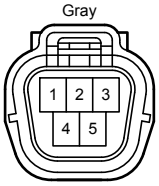


N 7
Black

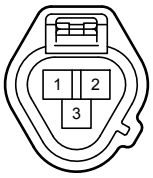

N 8
Gray

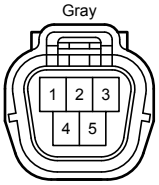


N 9
Gray

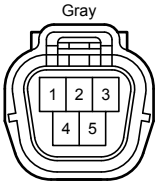

N 10
Gray




N 11
Gray

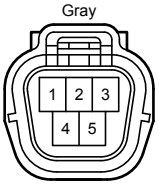

N 12
Gray




V 8
White

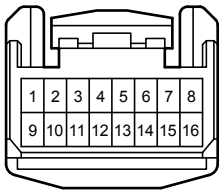


i 1
Gray




i 2
Black

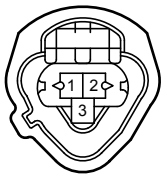


z 34
Black

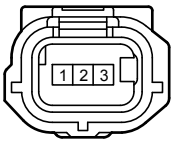


z 35
Black

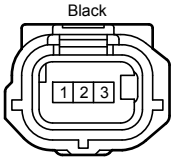


2H
White

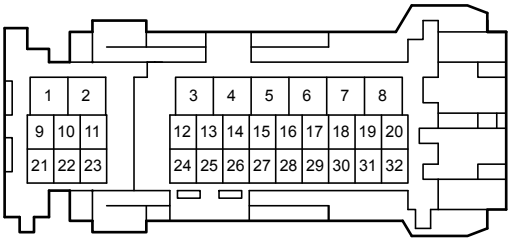


2I
White

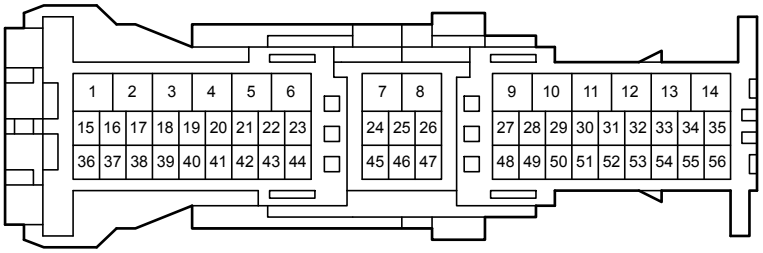


2K
White

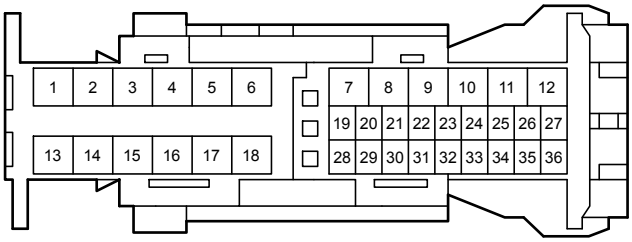


3C
White

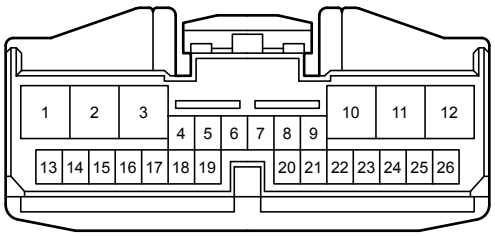


AA1
Gray

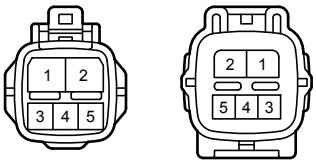


AK1
Blue

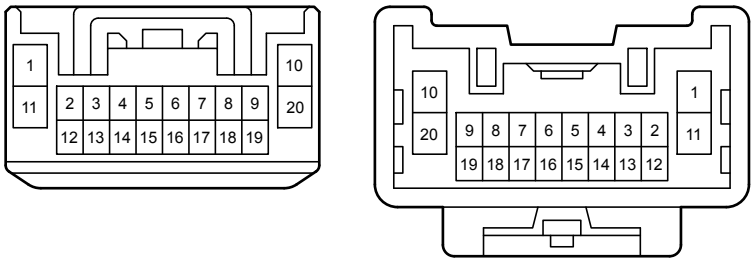



AL2
White

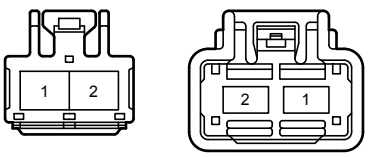


Az1
Gray

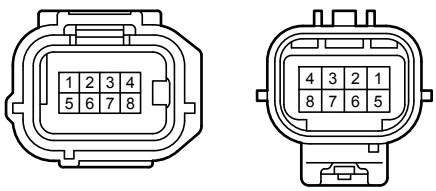


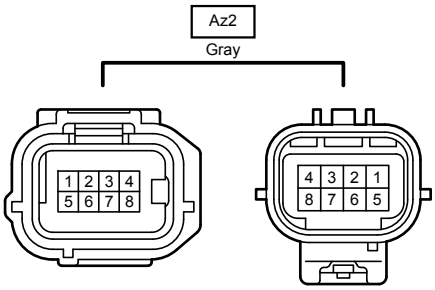
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

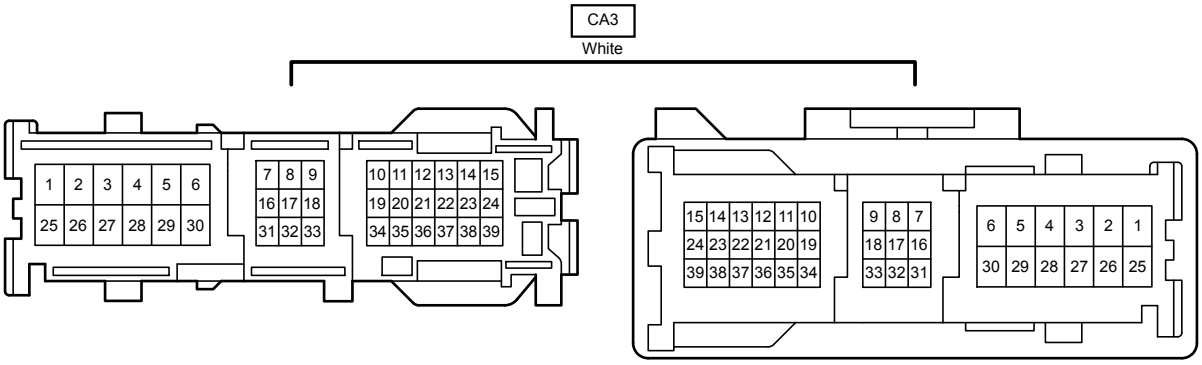

CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

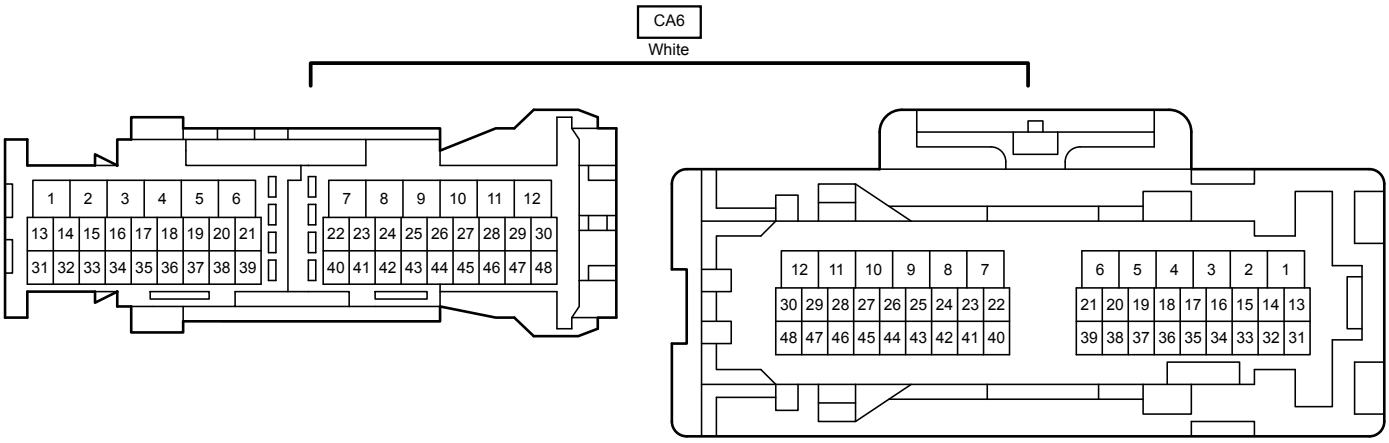
CA6
White
1 2 3 4 5 6
13 14 15 16 17 18 19 20 21
31 32 33 34 35 36 37 38 39
7 8 9 10 11 12
22 23 24 25 26 27 28 29 30
40 41 42 43 44 45 46 47 48
12 11 10 9 8 7
30 29 28 27 26 25 24 23 22
48 47 46 45 44 43 42 41 40
6 5 4 3 2 1
21 20 19 18 17 16 15 14 13
39 38 37 36 35 34 33 32 31

EA1
White

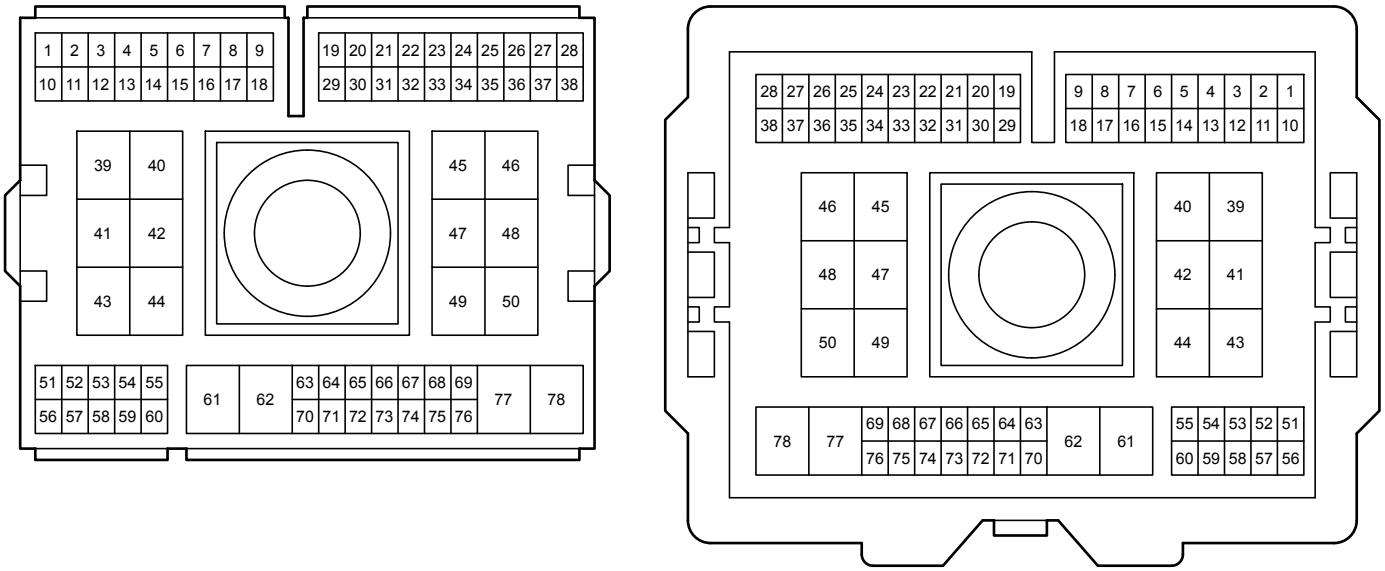


EA3
White

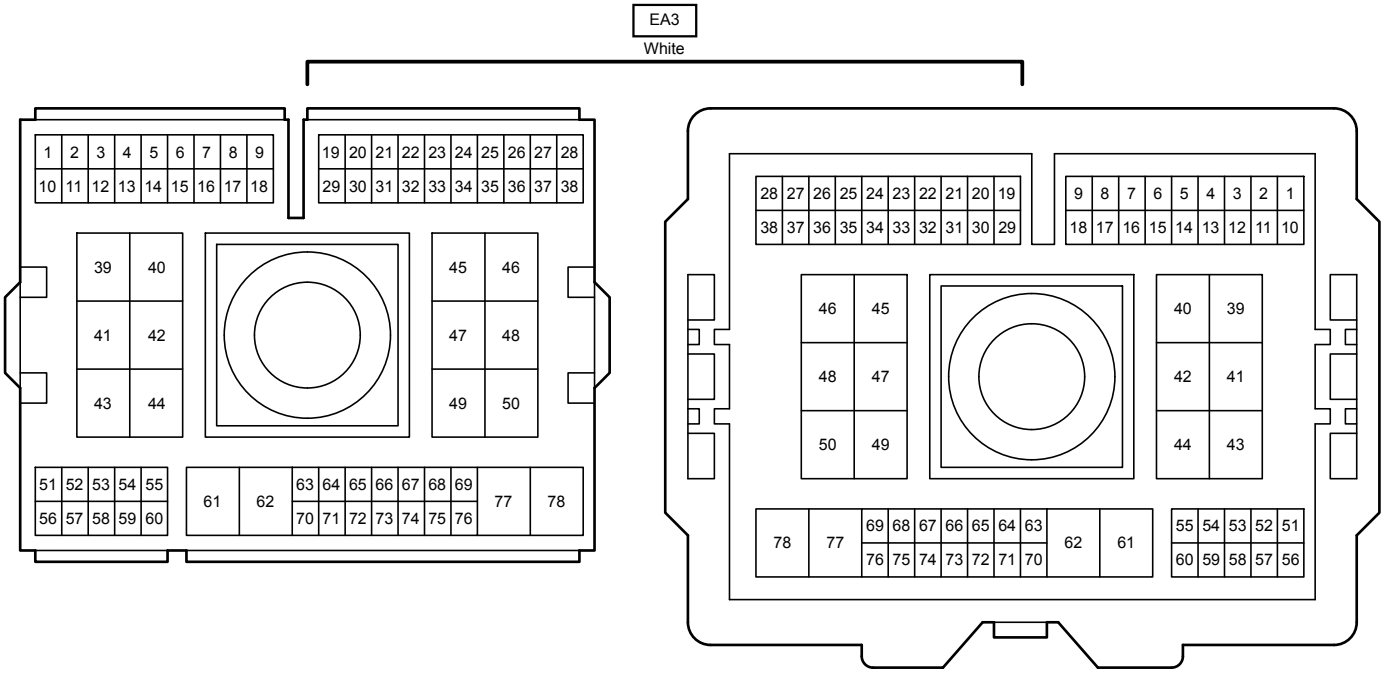


EA4

White

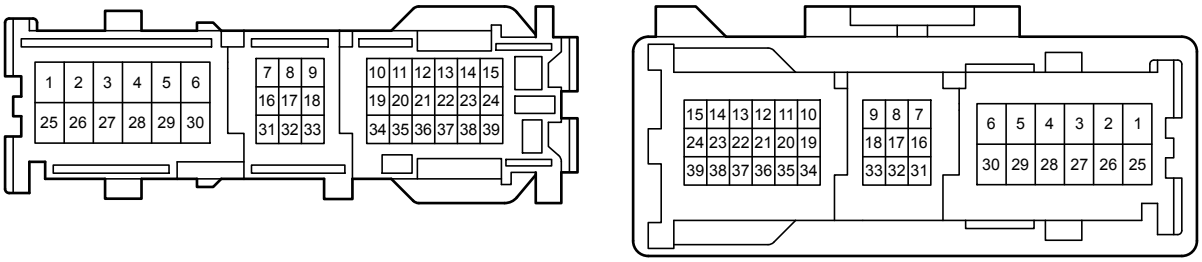


EE1

White

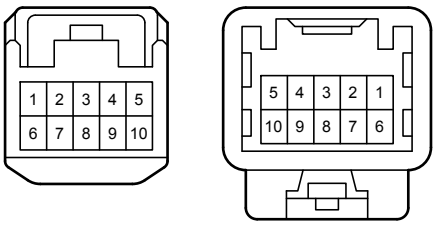

EE2


White

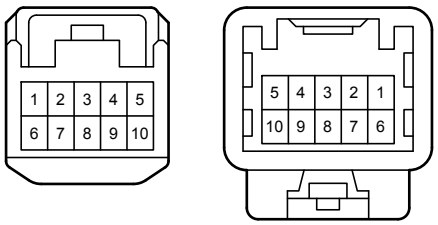


EK1

White


Blue

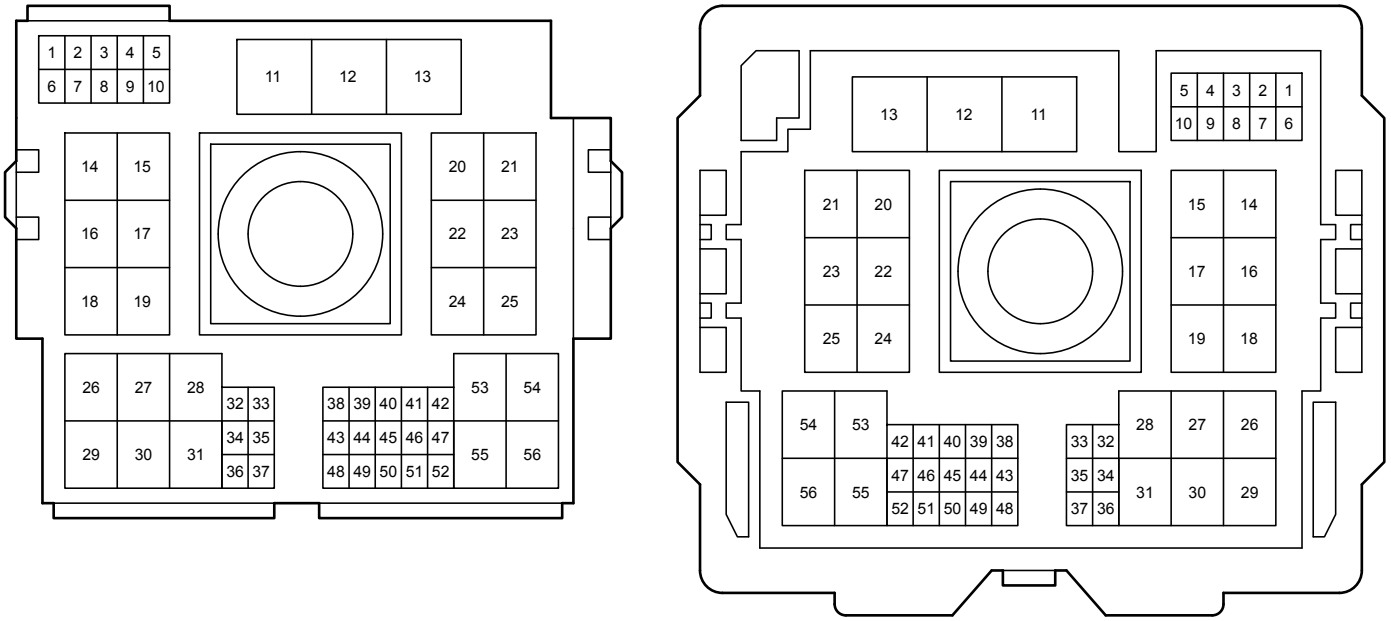


EK4
White

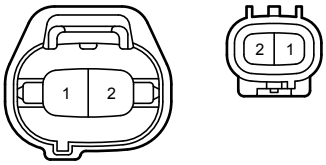


KL1
White

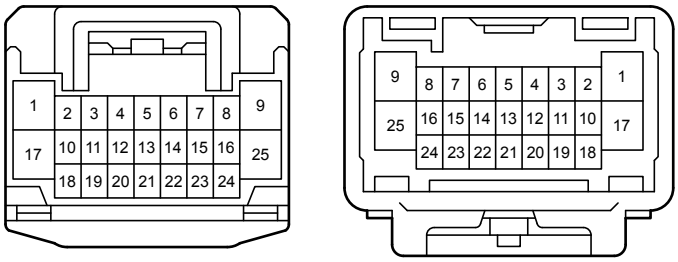

NK1
White

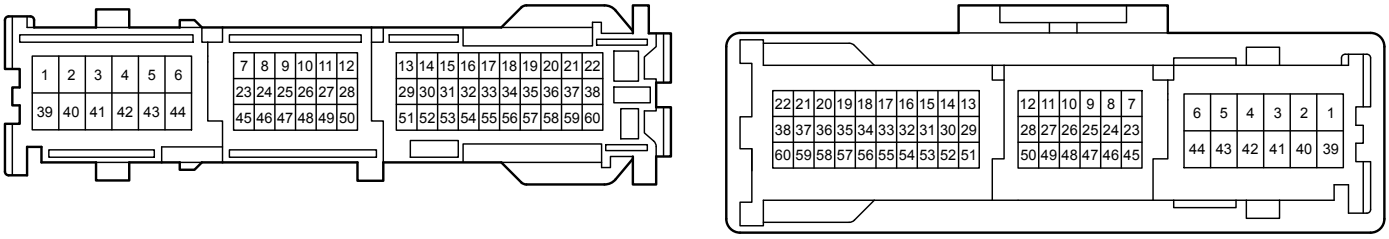

VE5
White

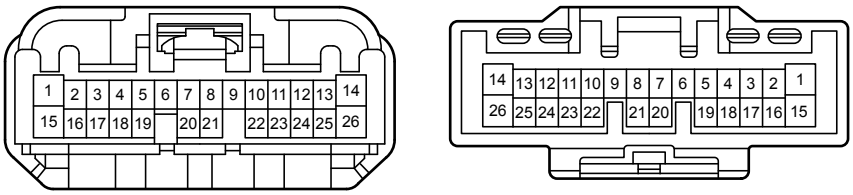

iL1
White

