




∗ 3 : HID Type
∗ 4 : Except HID Type
∗45 : w/ Heated Windshield Defroster
∗46 : w/o Heated Windshield Defroster
∗51 : Headlight (Low) HID Type
∗52 : Headlight (Low) Halogen Type
∗53 : Headlight (Low) LED Type
A61
Heated Windshield Defroster (Windshield Glass)
(R1E)
(R2E)
HWD1 Relay
HWD2 Relay
HWD3 Relay
HWD4 Relay
(–S)
(E)
A42
Winch Main Relay (No. 1 Magnet Switch Assembly)
A40
Headlight Assembly LH
A2
Headlight Assembly LH
RR A/C Relay
DEFOG Relay
A32
Noise Filter
(GND)
A9
Condenser Blower Motor Assembly
DOME CUT Relay
W–B
A2
A54
Headlight Assembly LH
A3
Headlight Assembly LH
A16
Windshield Washer Motor and Pump Assembly
A17
Headlight Cleaner Control Relay and Motor
A1
Headlight Assembly LH
(LH E)
A25
Skid Control ECU with Actuator Assembly
(GND3)



c32
Seat Climate
Control ECU RH
(GND)
W–B
4
3
W–B
9
Lc1
W–B
c12
Junction
Connector
4
AL1
W–B
(Shielded)
W–B
(Shielded)
W–B
(Shielded)
W–B
W–B
(GND)
A26
Brake Fluid Level
Warning Switch
(Brake Master
Cylinder Reservoir
Assembly)
W–B
(E)
A22
Windshield Wiper
Motor Assembly
W–B
W–B
W–B
(GND)
A39
Stop Light Control
Relay Assembly
W–B
(E)
A23
Front Wiper
Deicer
(Windshield
Glass)
(*46)
W–B
W–B
W–B
(E)
A63
Heated
Windshield
Defroster
(Windshield
Glass)
(*45)
W–B
W–B
W–B
W–B
(E)
A45
Side Turn Signal
Light Assembly LH
W–B
W–B
(GND)
A29
Front Blower
with Fan Motor
Sub–Assembly
W–B
W–B
A24
Skid Control
ECU with Actuator
Assembly
(GND1)
W–B
1
AA1
W–B
W–B
W–B
W–B
W–B
W–B
(L1E)
(L2E)
A62
Heated
Windshield
Defroster
(Windshield
Glass)
W–B
W–B
A1
W–B
W–B



AHC Relay
(–S)
ST CUT Relay
(–ST)
ST Relay
(–S)
GLOW 1 Relay
(–S)
GLOW 2 Relay
(–S)
EFI NO. 2 Relay
(E)
VSCS HTR Relay
(–S)
A51
Clogging Switch
(Fuel Filter Assembly)
(E)
A43
Level Warning Switch
(Fuel Filter Assembly)
(E)
A34
Junction Connector
A20
Wireless Door Lock Buzzer
(E)
A47
Side Turn Signal Light Assembly RH
(E)
zA1
AD2
(∗31)
D11
Engine Oil Level Sensor
IG1 NO. 5 Relay
EFI Relay
IG2 Relay
A/F Relay (∗1)
EFI MAIN2 Relay (∗2)
P/W MAIN Relay
NOISE FILTER
NOISE FILTER
PTC HTR1 Relay
PTC HTR2 Relay
PTC HTR3 Relay
z69
Washer Nozzle Sub–Assembly RH
z70
Washer Nozzle Sub–Assembly LH
W–B


∗ 1 : Gasoline
∗ 2 : Diesel
∗ 3 : HID Type
∗ 4 : Except HID Type
∗15 : Before Jul. 2009 Production
∗16 : From Jul. 2009 Production
∗26 : From Jan. 2012 Production
∗31 : 1UR–FE
∗51 : Headlight (Low) HID Type
∗52 : Headlight (Low) Halogen Type
∗53 : Headlight (Low) LED Type

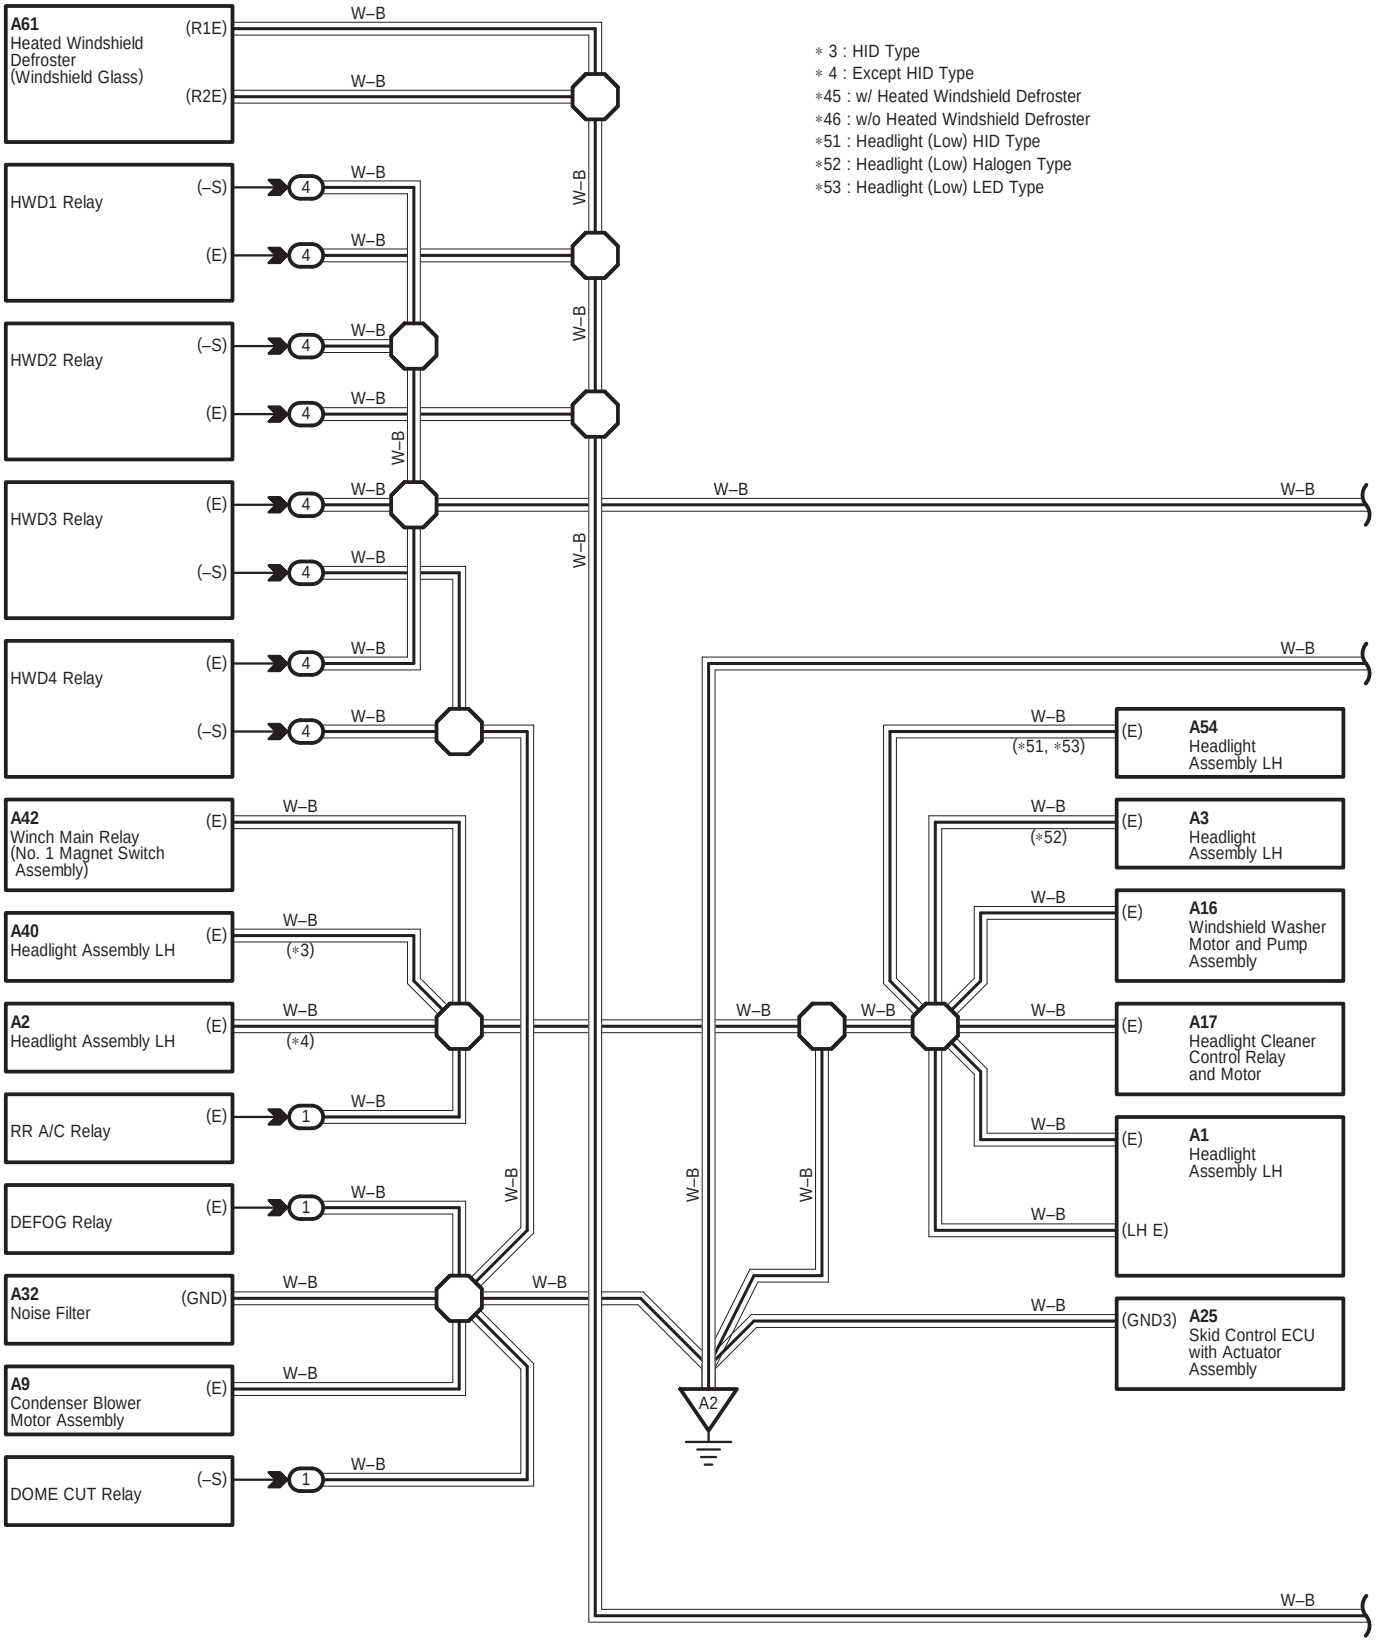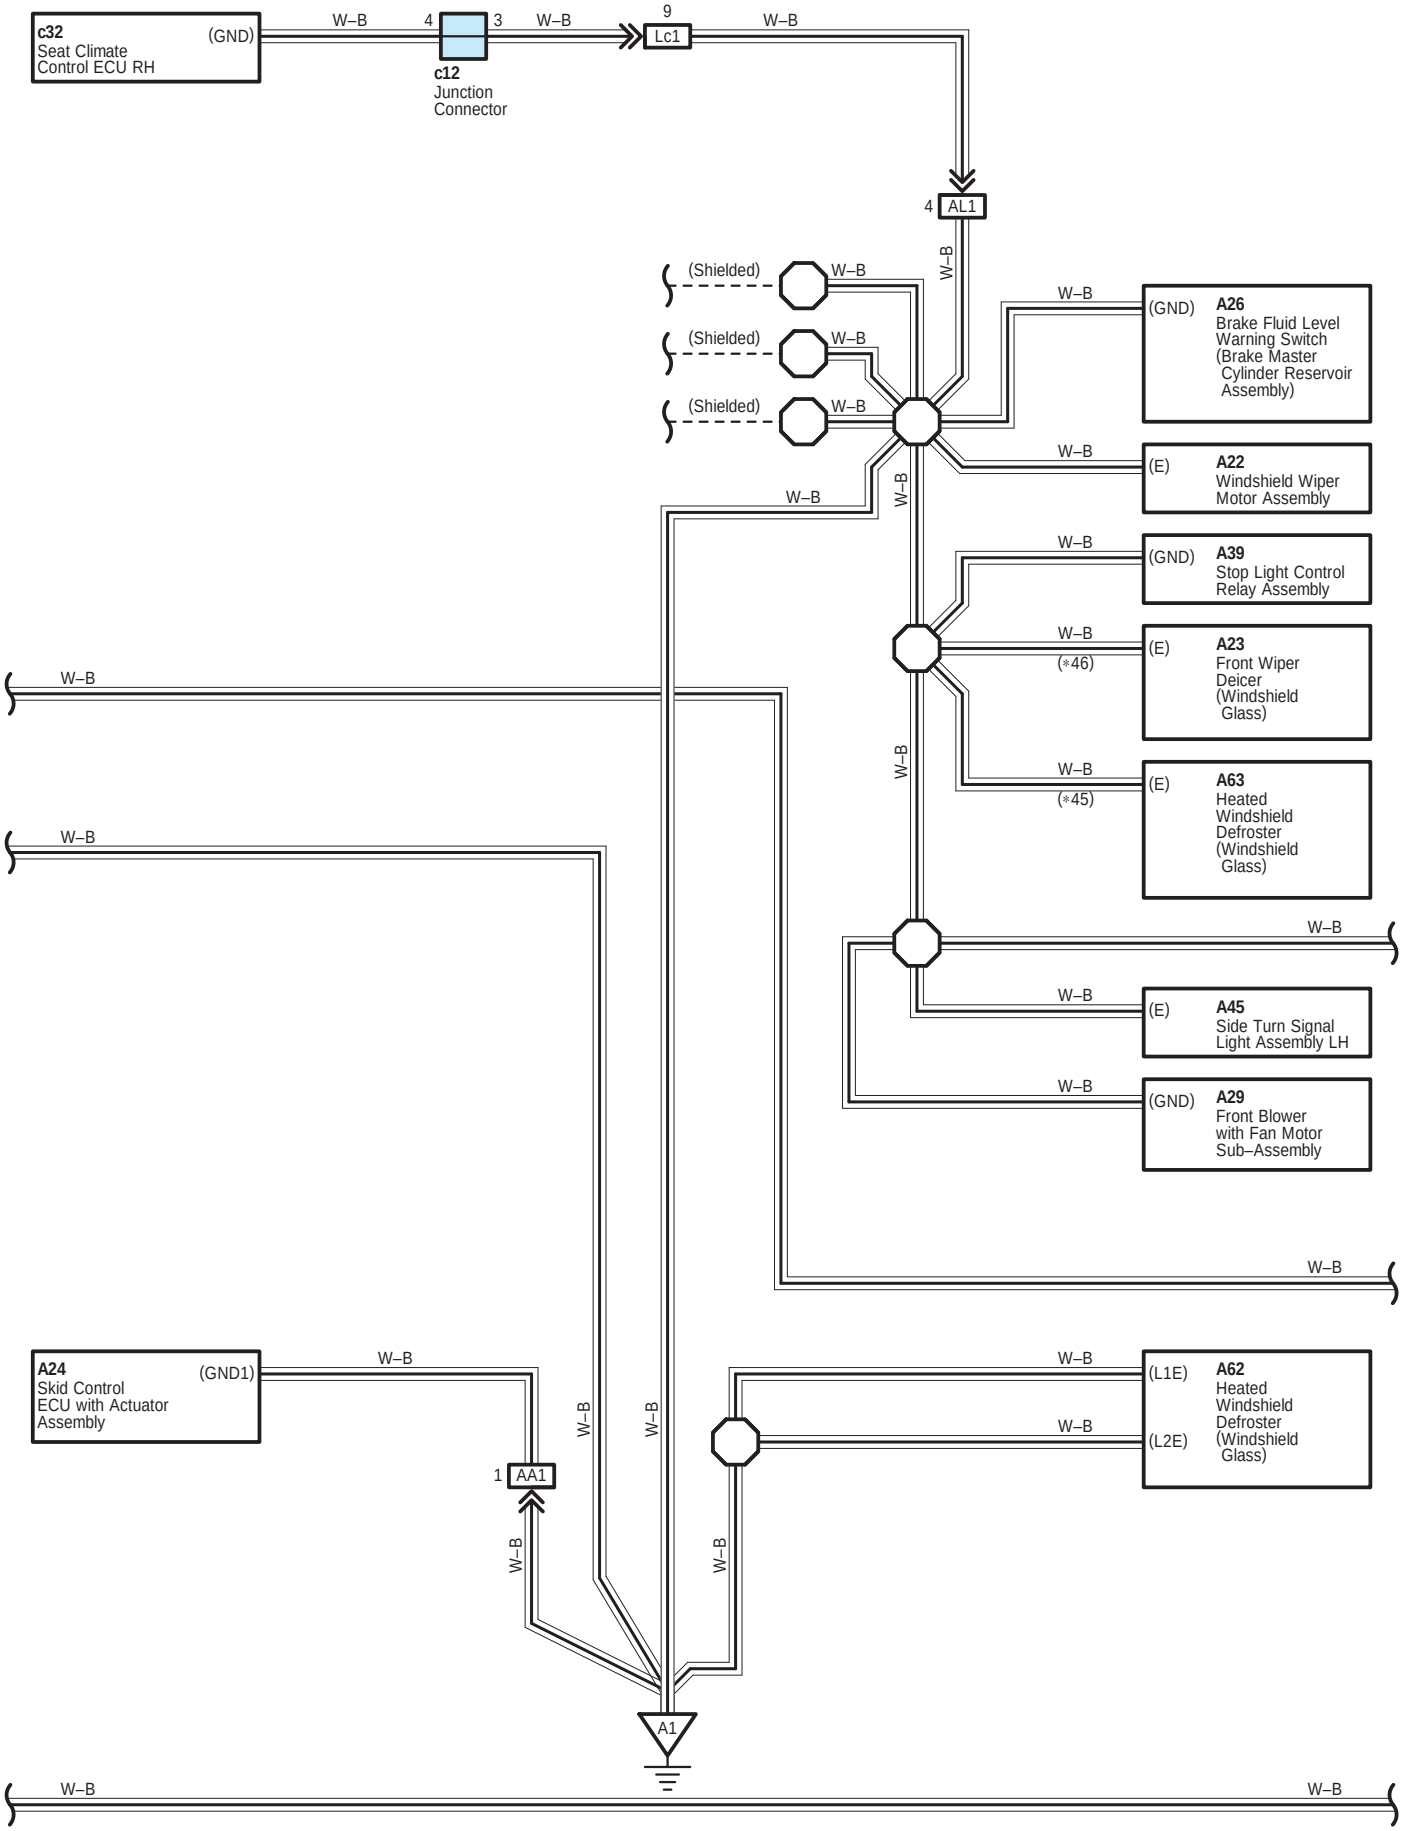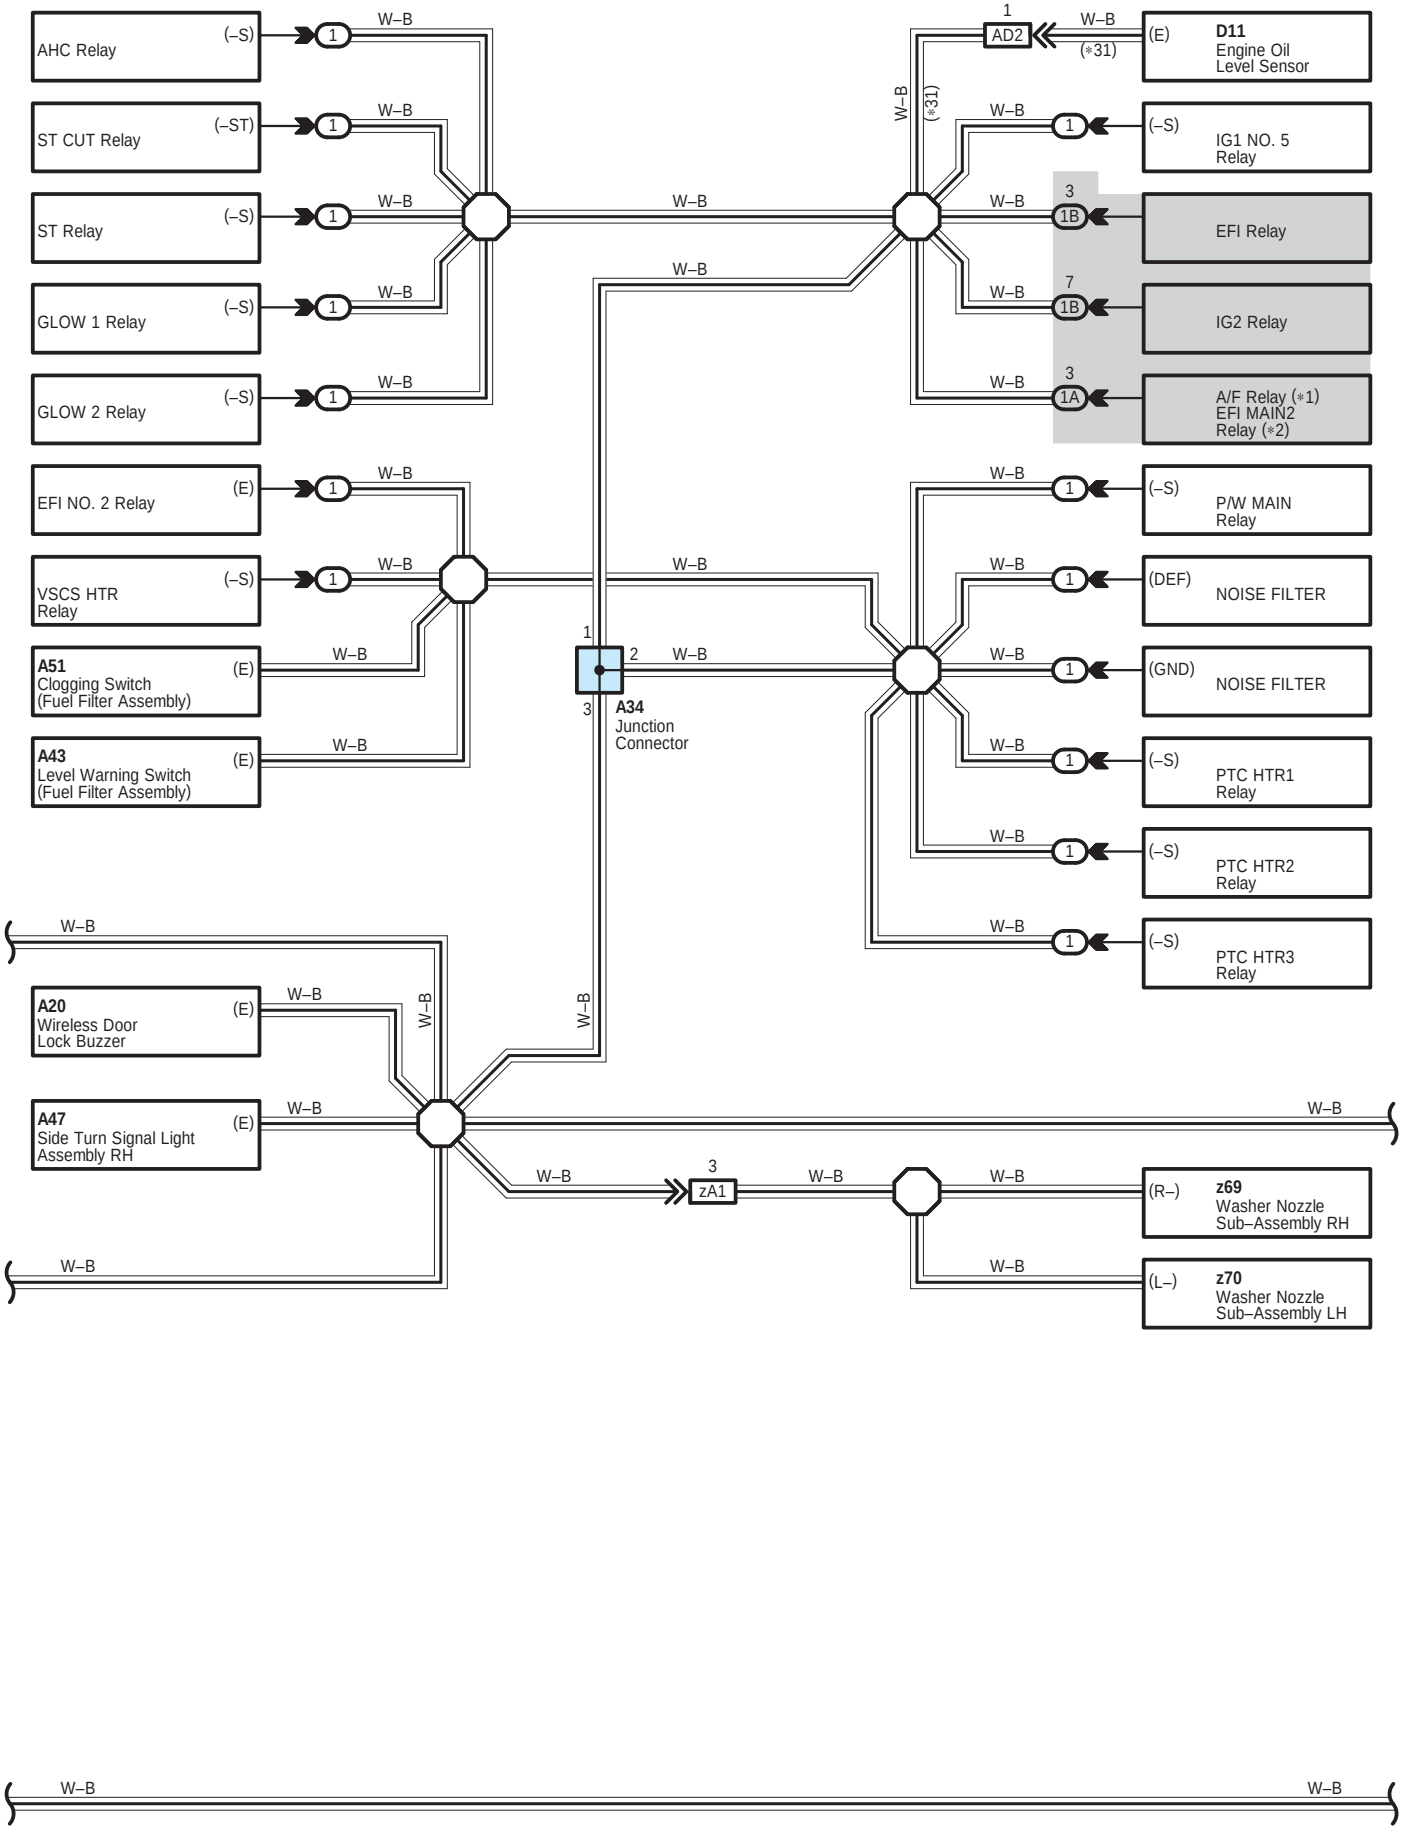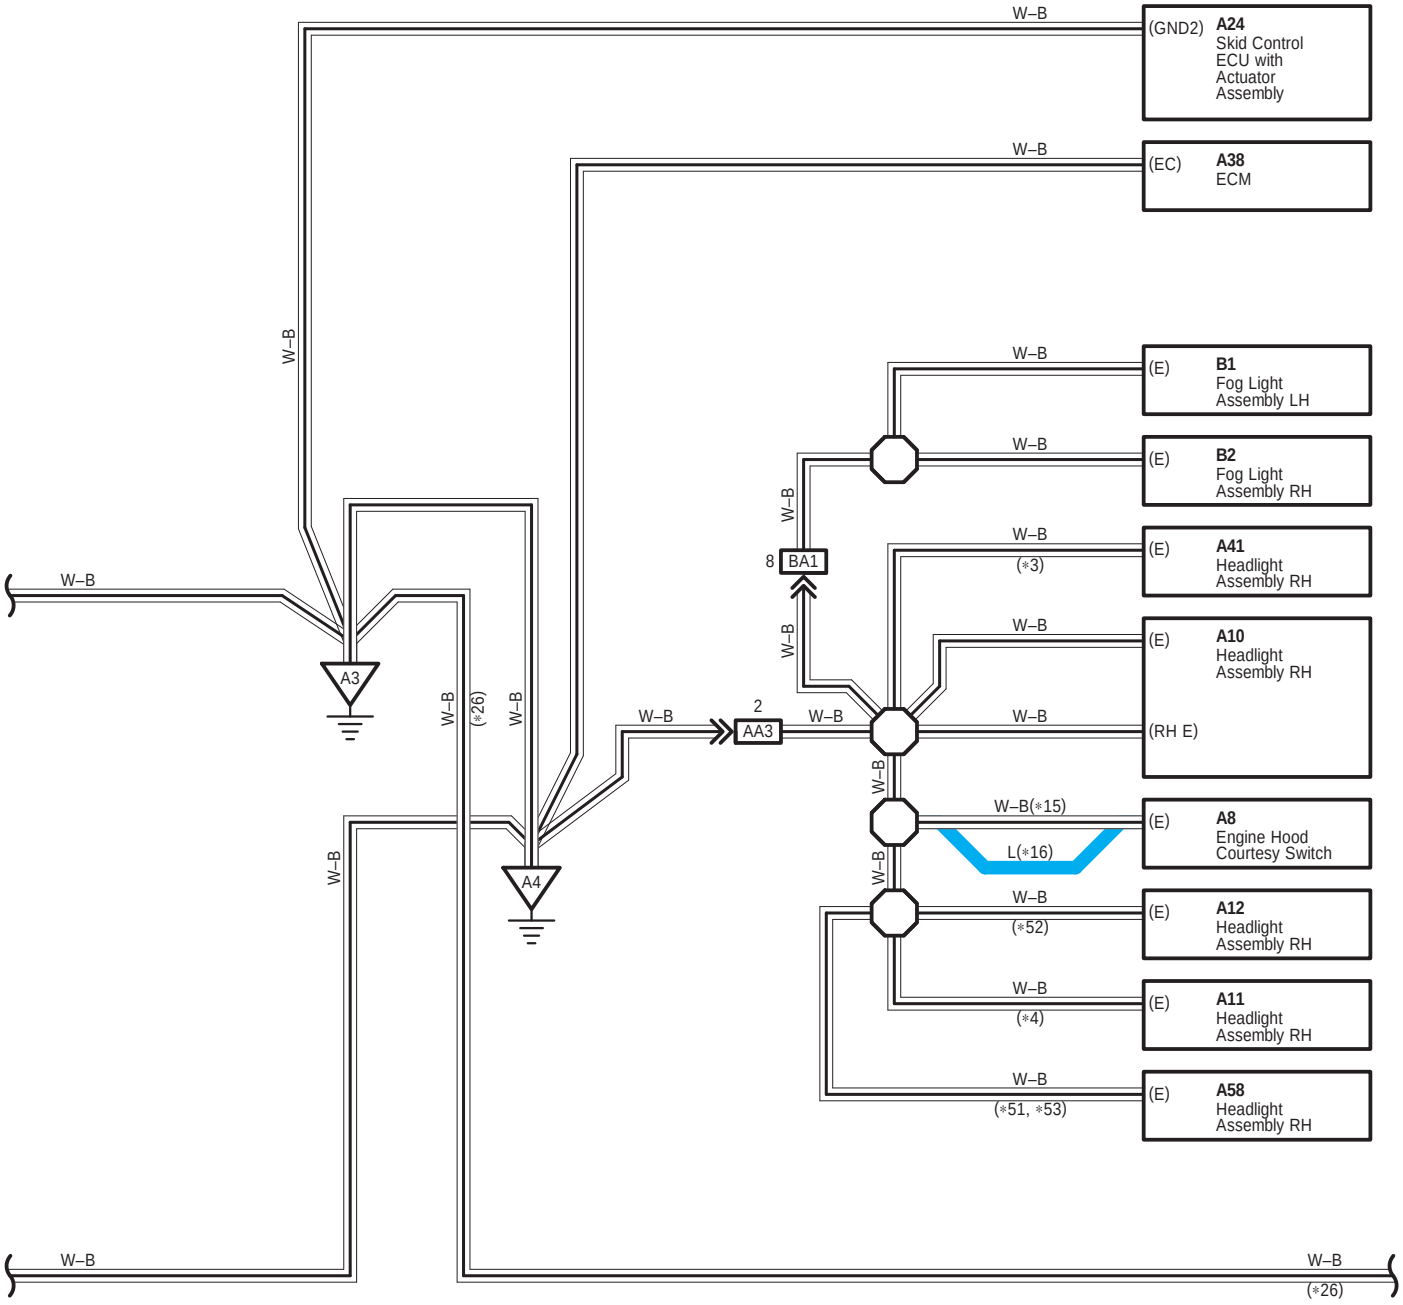


∗17 : 3UR–FE
∗25 : Before Jan. 2012 Production
∗26 : From Jan. 2012 Production
∗31 : 1UR–FE

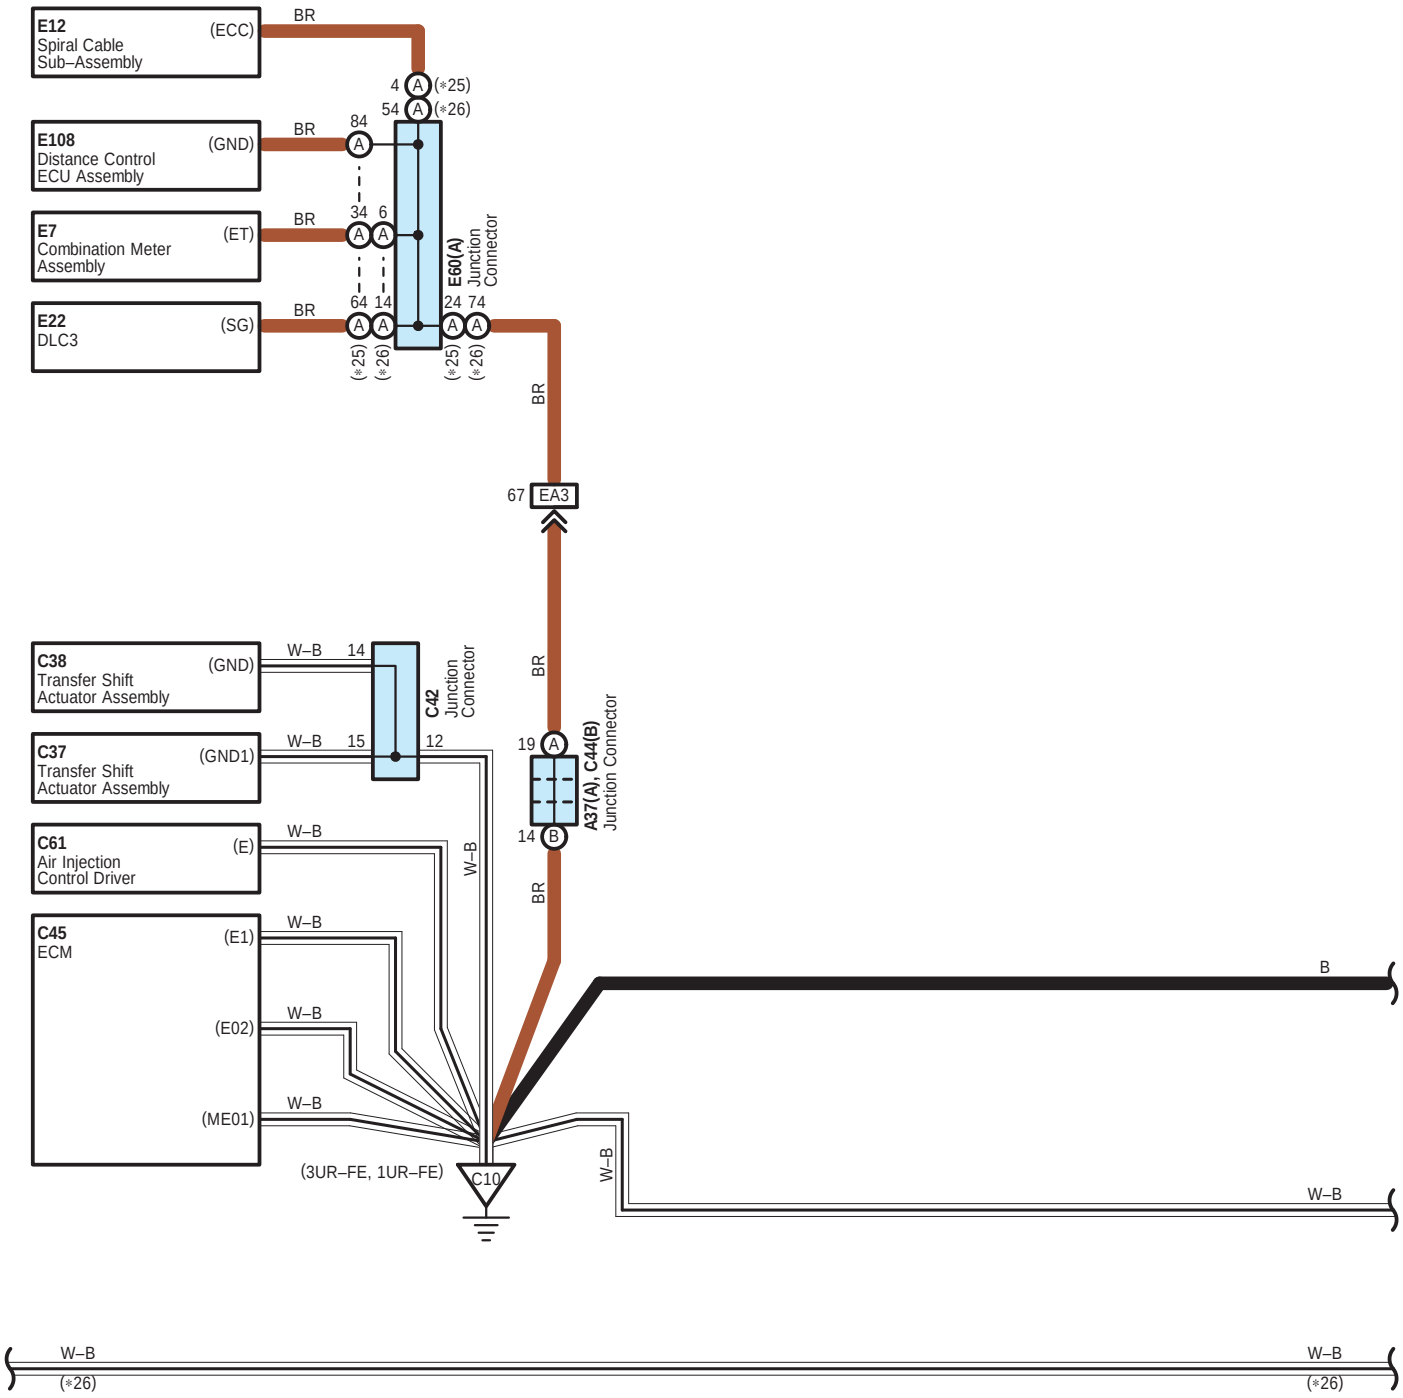

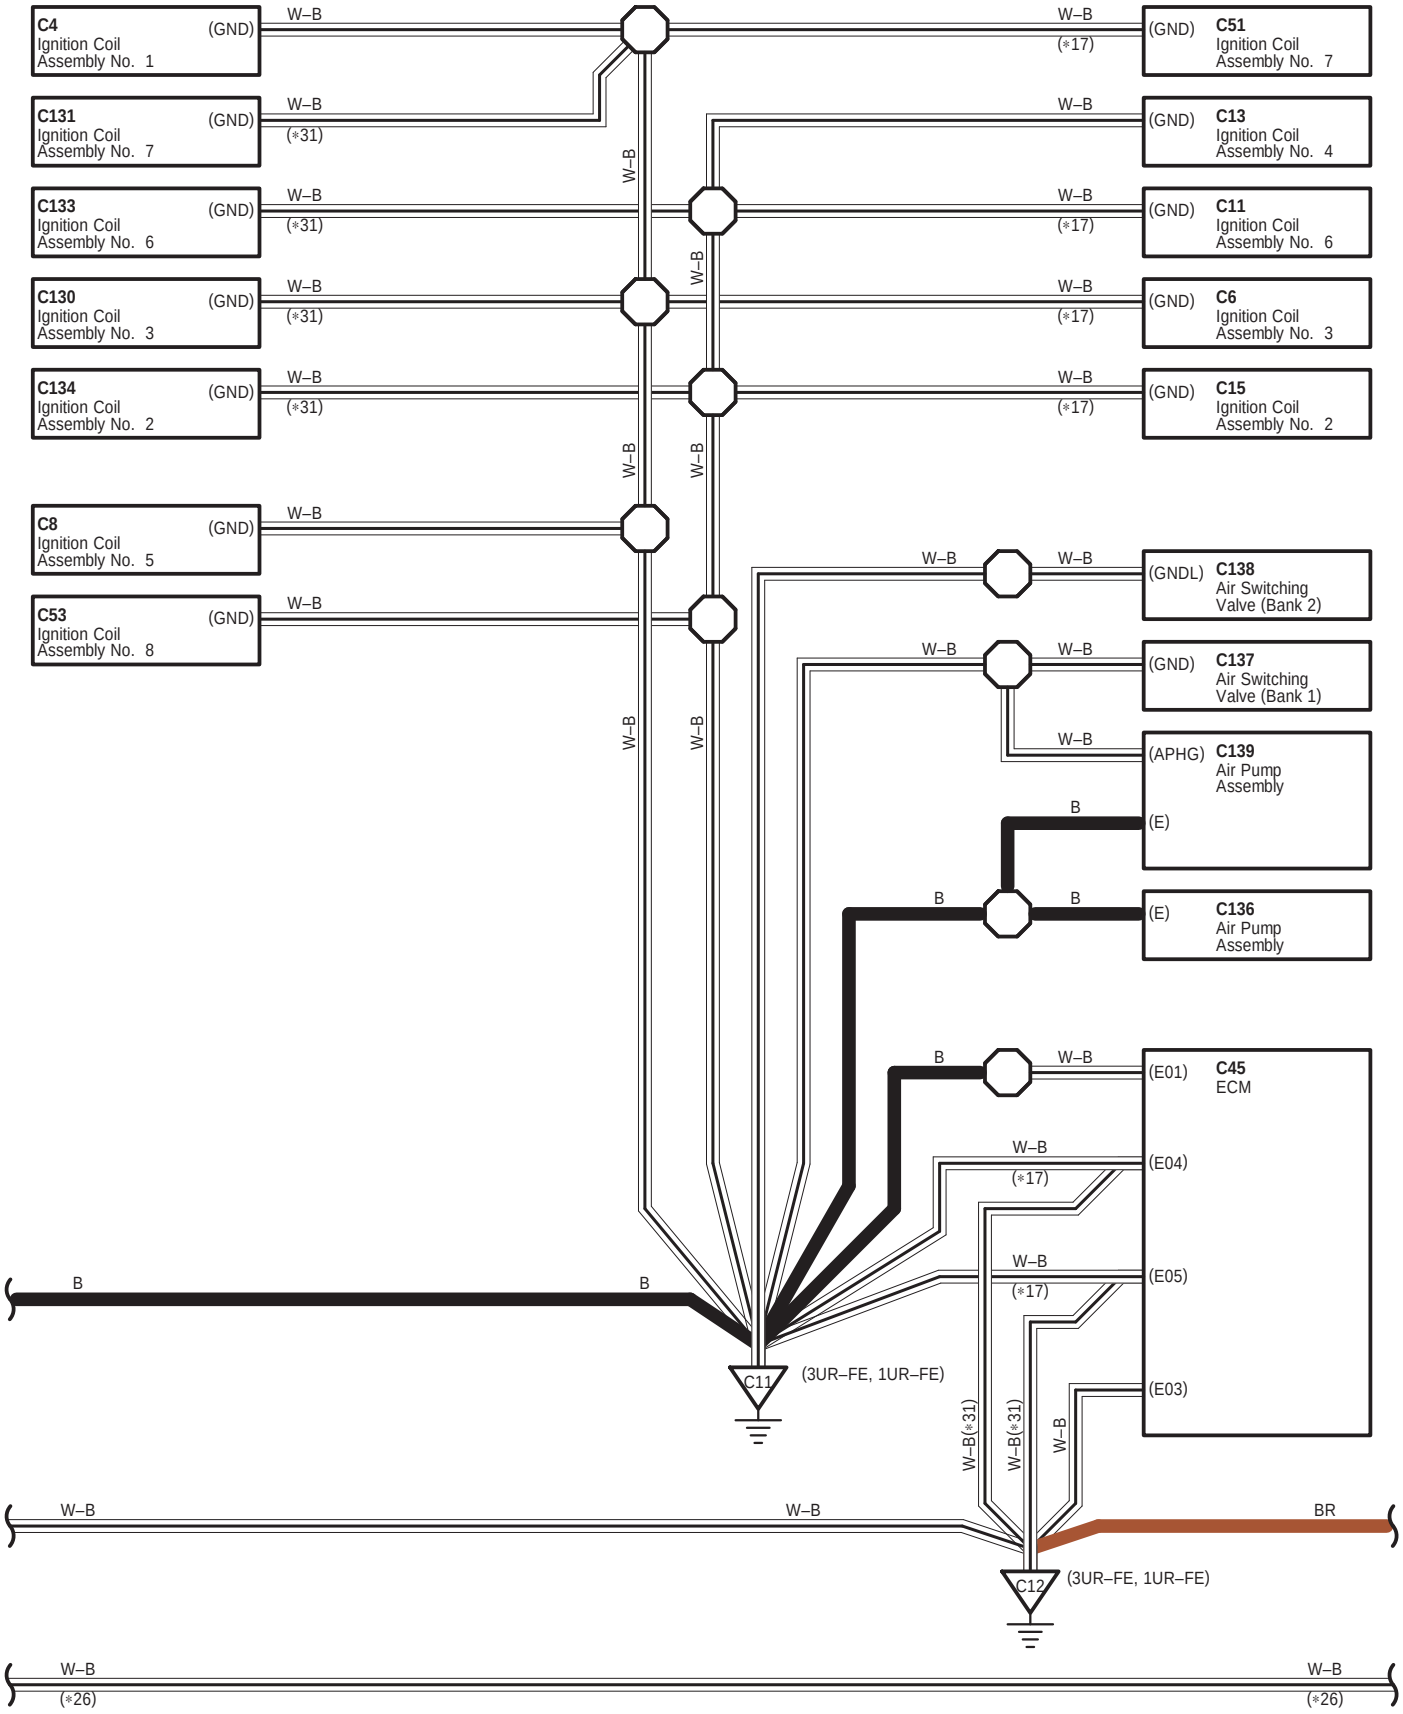

C4
Ignition Coil
Assembly No. 1
(GND)
W–B
C131
Ignition Coil
Assembly No. 7
(GND)
W–B
(*31)
C133
Ignition Coil
Assembly No. 6
(GND)
W–B
(*31)
C130
Ignition Coil
Assembly No. 3
(GND)
W–B
(*31)
C134
Ignition Coil
Assembly No. 2
(GND)
W–B
(*31)
C8
Ignition Coil
Assembly No. 5
(GND)
W–B
C53
Ignition Coil
Assembly No. 8
(GND)
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
(*17)
C51
Ignition Coil
Assembly No. 7
(GND)
C13
Ignition Coil
Assembly No. 4
(GND)
C11
Ignition Coil
Assembly No. 6
(GND)
C6
Ignition Coil
Assembly No. 3
(GND)
C15
Ignition Coil
Assembly No. 2
(GND)
C138
Air Switching
Valve (Bank 2)
(GNDL)
C137
Air Switching
Valve (Bank 1)
(GND)
C139
Air Pump
Assembly
(APHG)
(E)
B
C136
Air Pump
Assembly
(E)
B
B
B
B
C45
ECM
(E01)
(E04)
(E05)
(E03)
W–B
(*17)
W–B
(*17)
W–B
W–B(*31)
W–B(*31)
W–B
C11
(3UR–FE, 1UR–FE)
C12
(3UR–FE, 1UR–FE)
W–B
W–B
BR
W–B
(*26)
W–B
(*26)

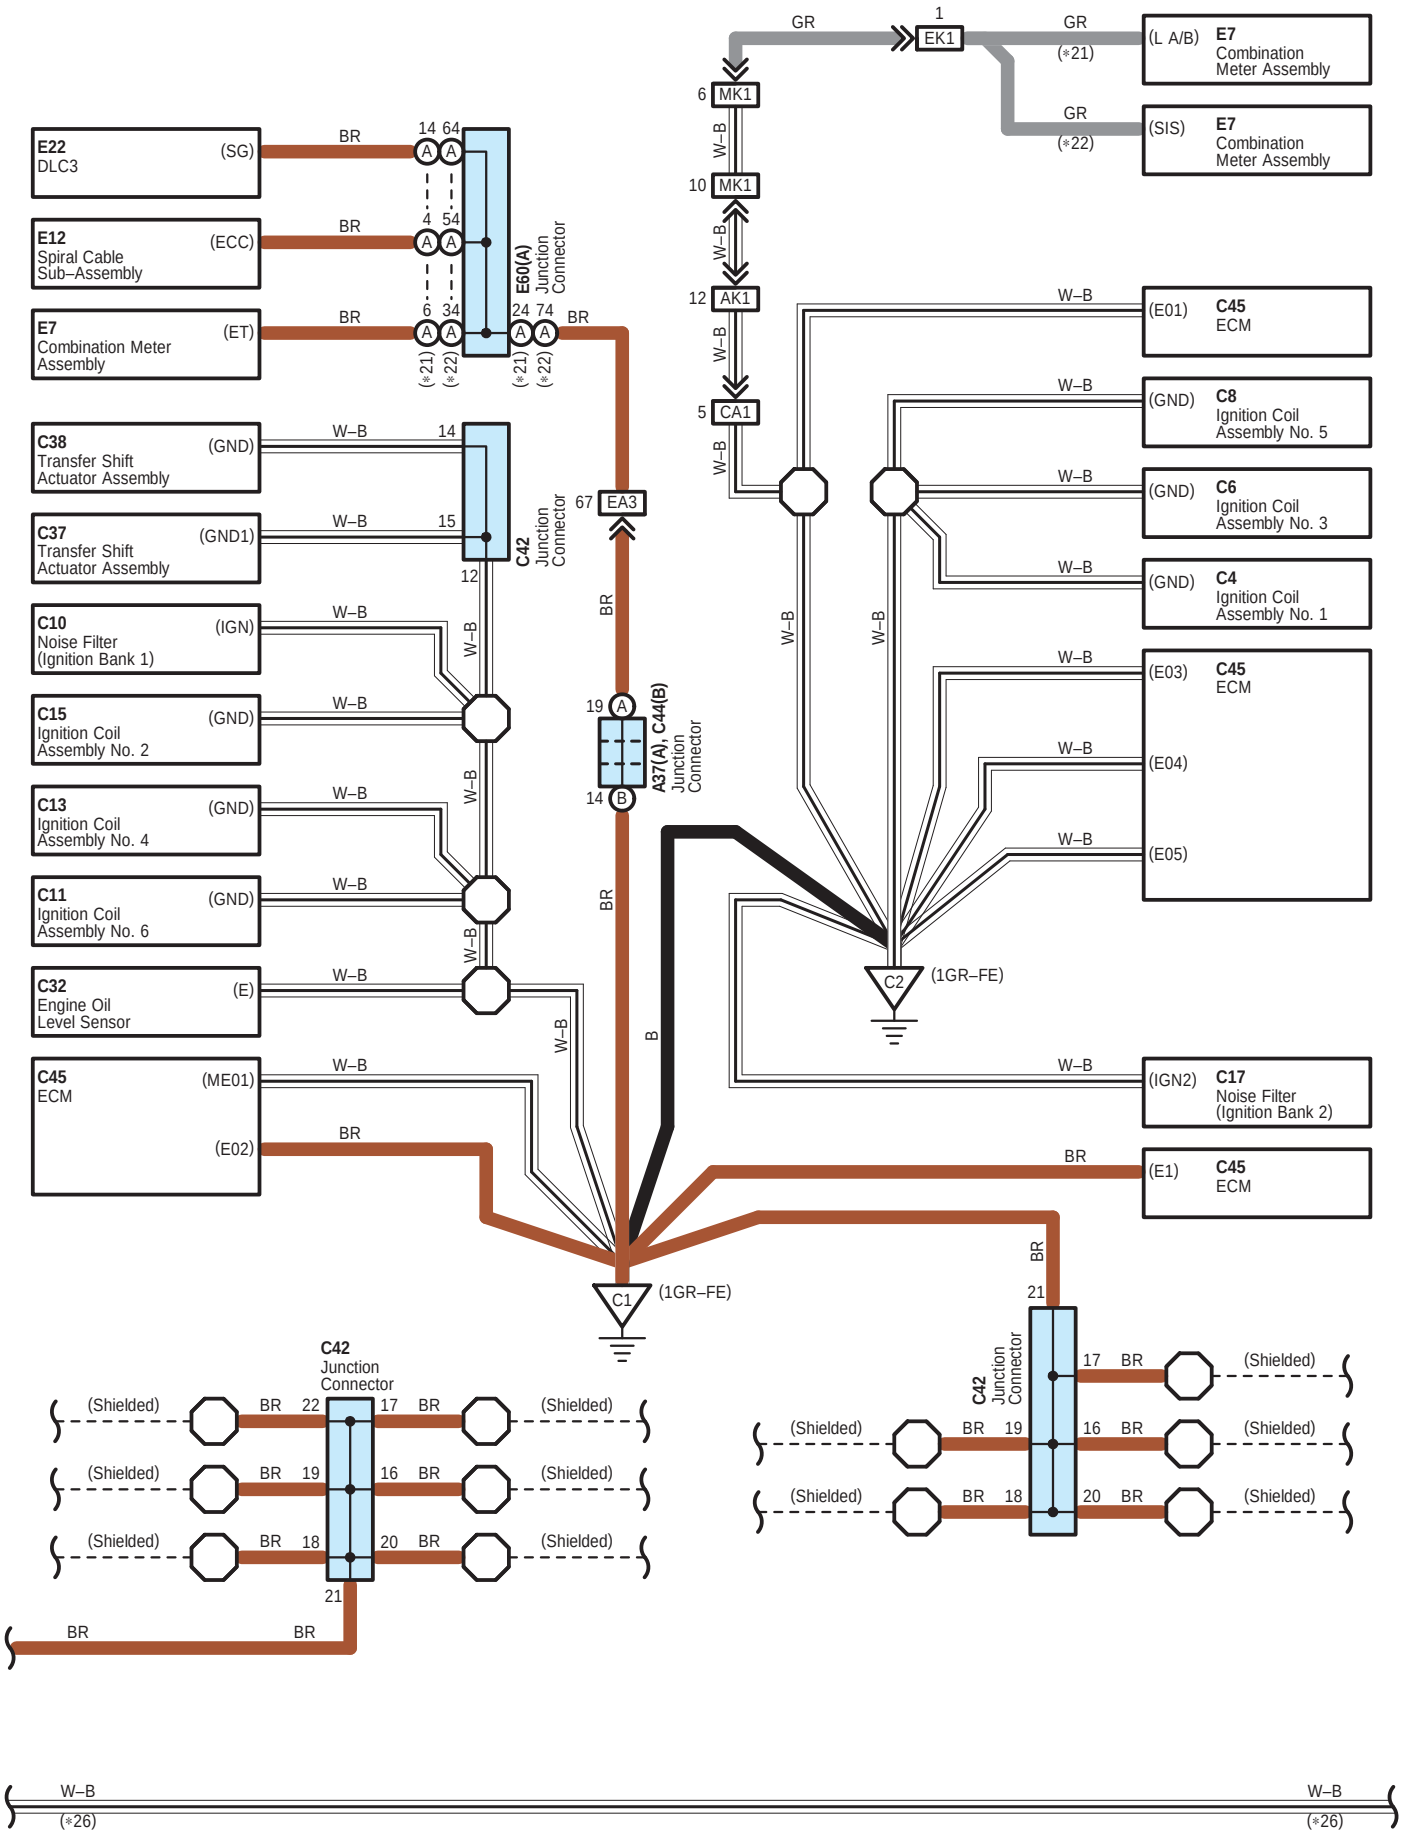

E22 DLC3 (SG)
E12 Spiral Cable Sub–Assembly (ECC)
E7 Combination Meter Assembly (ET)
E60(A) Junction Connector
C38 Transfer Shift Actuator Assembly (GND)
C37 Transfer Shift Actuator Assembly (GND1)
C10 Noise Filter (Ignition Bank 1) (IGN)
C15 Ignition Coil Assembly No. 2 (GND)
C13 Ignition Coil Assembly No. 4 (GND)
C11 Ignition Coil Assembly No. 6 (GND)
C32 Engine Oil Level Sensor (E)
C45 ECM (ME01) (E02)
C42 Junction Connector
A37(A), C44(B) Junction Connector
EK1
MK1
AK1
CA1
EA3
C1 (1GR–FE)
C2 (1GR–FE)
E7 Combination Meter Assembly (L A/B)
E7 Combination Meter Assembly (SIS)
C45 ECM (E01)
C8 Ignition Coil Assembly No. 5 (GND)
C6 Ignition Coil Assembly No. 3 (GND)
C4 Ignition Coil Assembly No. 1 (GND)
C45 ECM (E03) (E04) (E05)
C17 Noise Filter (Ignition Bank 2) (IGN2)
C45 ECM (E1)
(Shielded)
W–B
BR
GR
B
(*21)
(*22)
(*26)

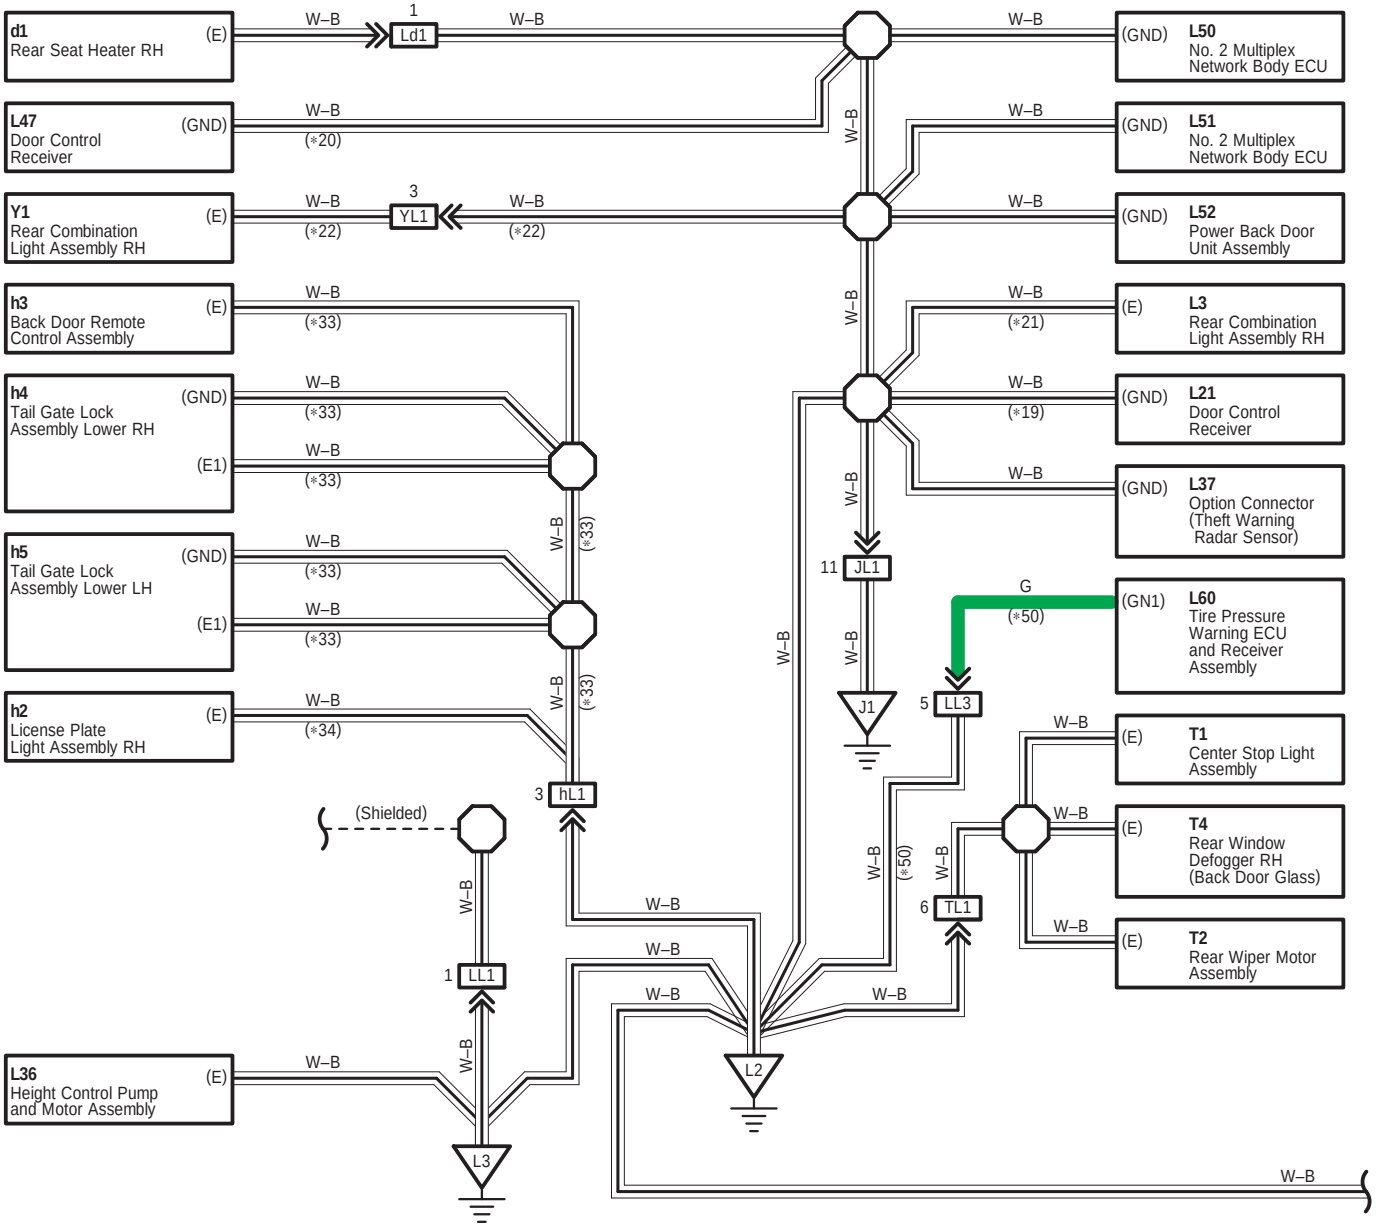


*19 : w/ Entry & Start System
*20 : w/o Entry & Start System
*21 : Liftgate Type
*22 : Swing Type
*26 : From Jan. 2012 Production
*33 : w/ Power Back Door
*34 : w/o Power Back Door
*50 : w/ Tire Pressure Warning System


∗ 7 : w/ Front Power Seat Position Motor
∗ 8 : w/o Front Power Seat Position Motor
∗25 : Before Jan. 2012 Production
∗26 : From Jan. 2012 Production

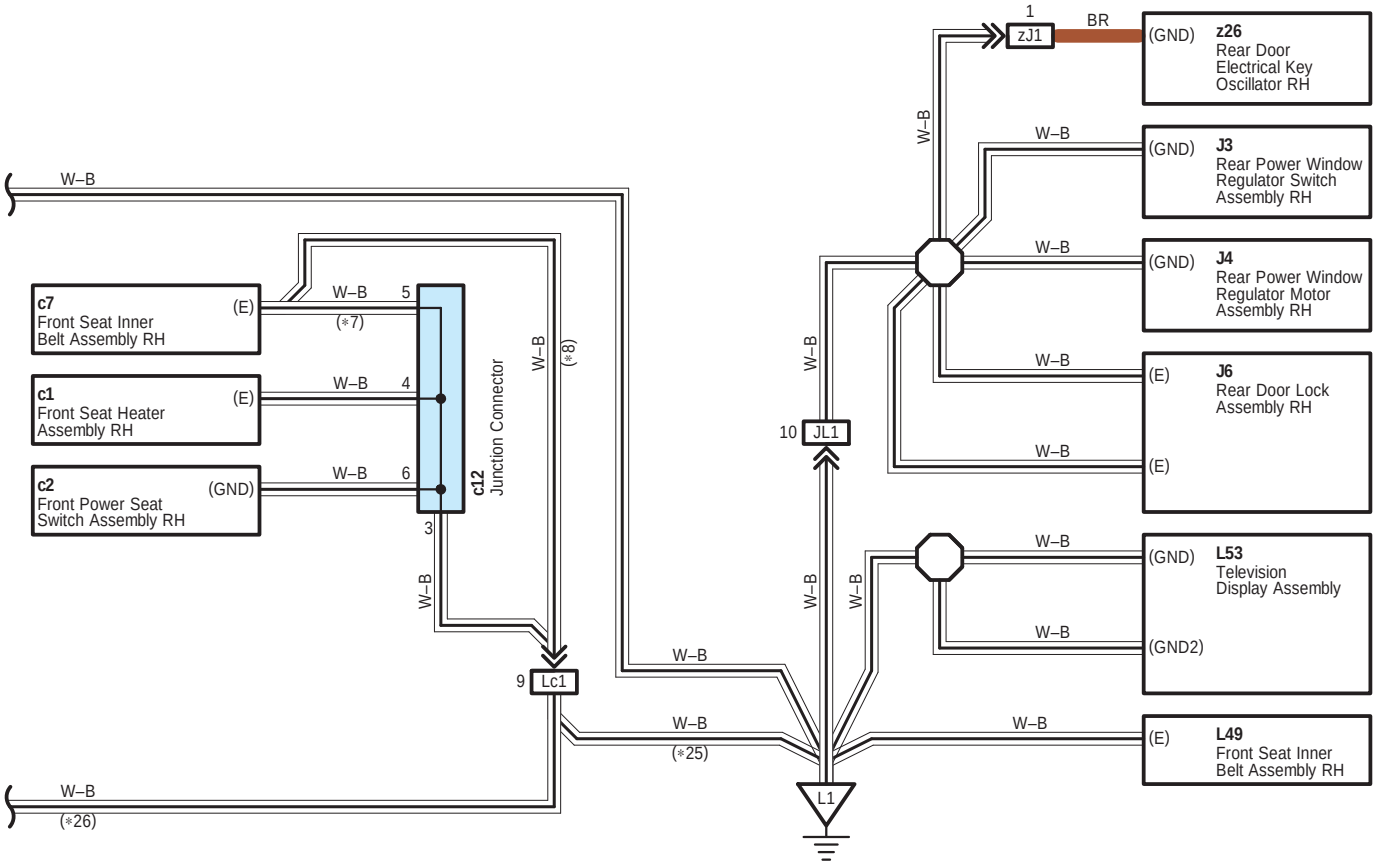


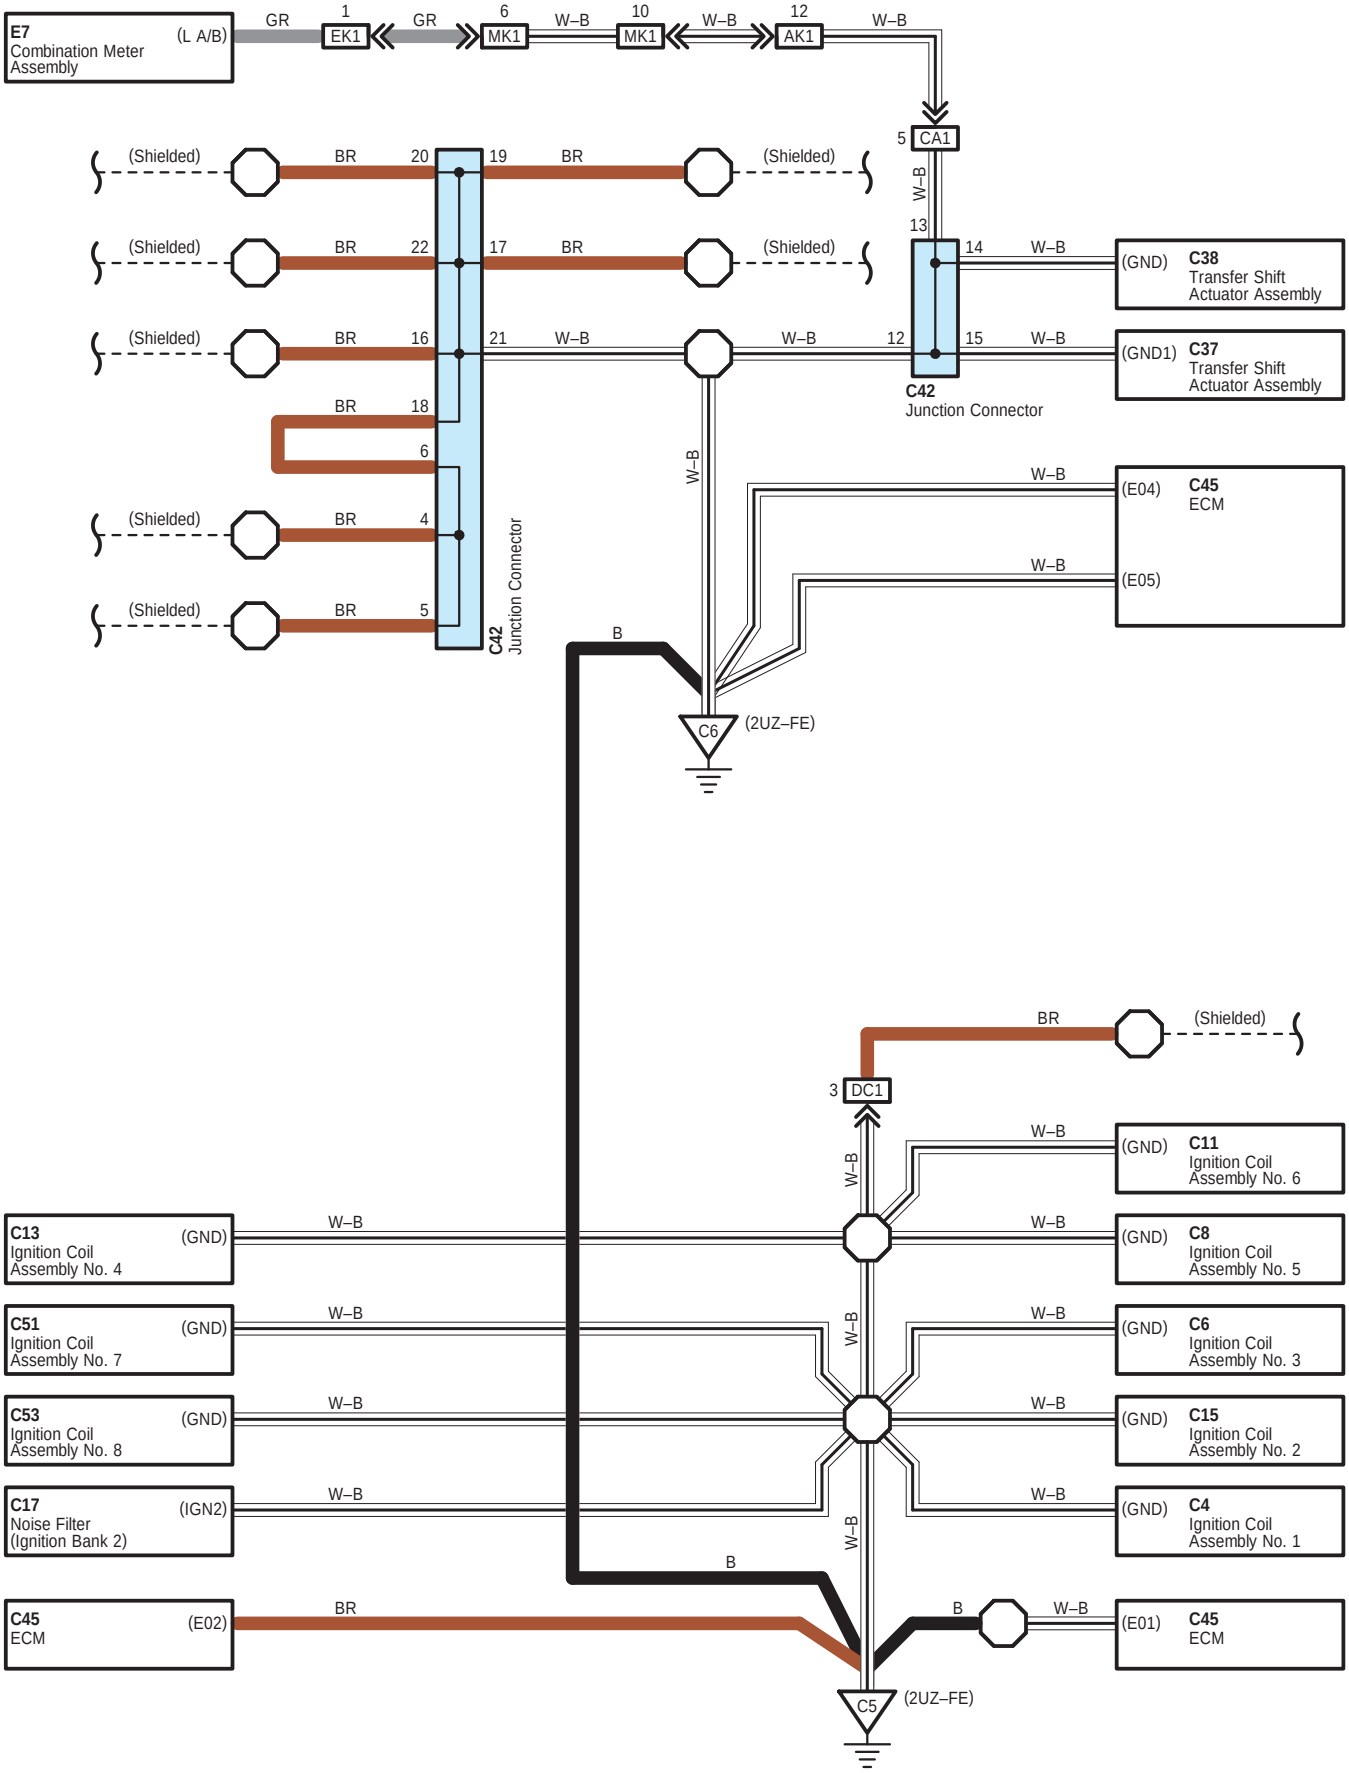

E7
Combination Meter Assembly
(L A/B)
GR
1
EK1
GR
6
MK1
W–B
10
MK1
W–B
12
AK1
W–B
5
CA1
W–B
13
14
W–B
(GND)
C38
Transfer Shift Actuator Assembly
15
W–B
(GND1)
C37
Transfer Shift Actuator Assembly
C42
Junction Connector
(Shielded)
BR
20
19
BR
(Shielded)
22
17
BR
16
21
W–B
W–B
12
18
6
4
5
C42
Junction Connector
W–B
(E04)
C45
ECM
(E05)
B
C6
(2UZ–FE)
BR
(Shielded)
3
DC1
W–B
(GND)
C11
Ignition Coil Assembly No. 6
C13
Ignition Coil Assembly No. 4
C8
Ignition Coil Assembly No. 5
C51
Ignition Coil Assembly No. 7
C6
Ignition Coil Assembly No. 3
C53
Ignition Coil Assembly No. 8
C15
Ignition Coil Assembly No. 2
C17
Noise Filter (Ignition Bank 2)
(IGN2)
C4
Ignition Coil Assembly No. 1
B
C45
ECM
(E02)
BR
B
W–B
(E01)
C45
ECM
C5
(2UZ–FE)

∗27 : w/ DPF
∗28 : w/o DPF
∗38 : Before Jan. 2012 Production Liftgate Type
∗39 : From Jan. 2012 Production Liftgate Type, Swing Type

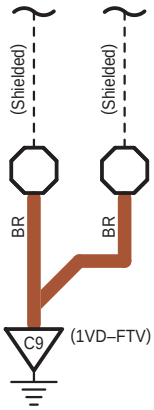


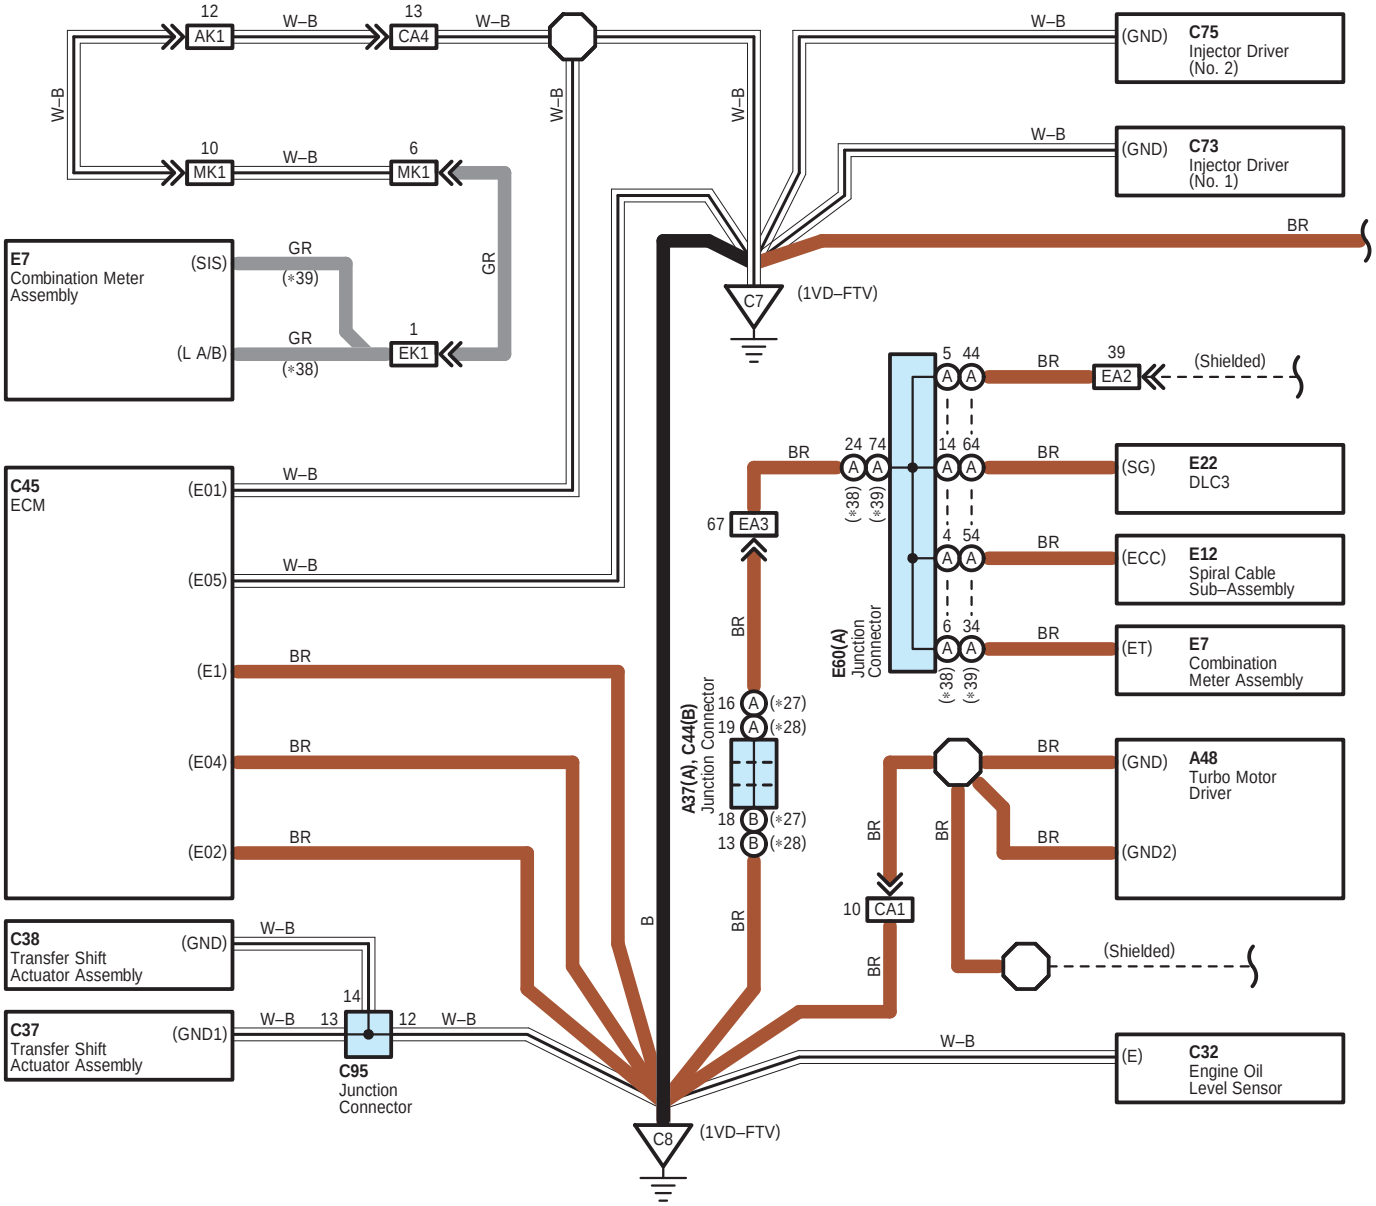


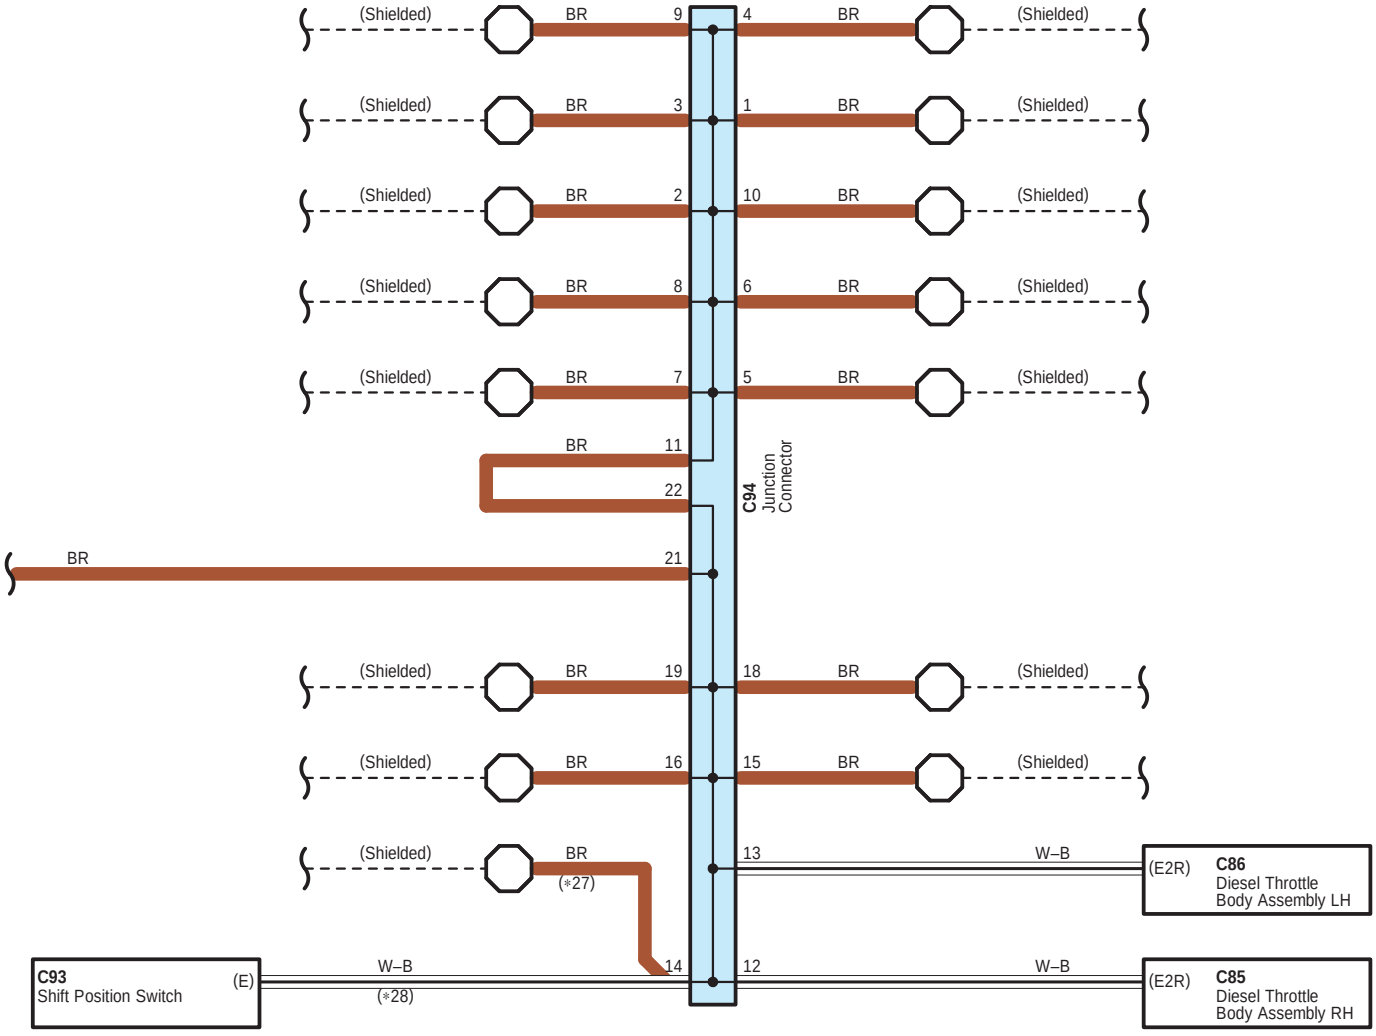

(Shielded)
BR
9
4
BR
(Shielded)
(Shielded)
BR
3
1
BR
(Shielded)
(Shielded)
BR
2
10
BR
(Shielded)
(Shielded)
BR
8
6
BR
(Shielded)
(Shielded)
BR
7
5
BR
(Shielded)
BR
11
22
C94
Junction
Connector
BR
21
(Shielded)
BR
19
18
BR
(Shielded)
(Shielded)
BR
16
15
BR
(Shielded)
(Shielded)
BR
(*27)
13
W–B
(E2R)
C86
Diesel Throttle
Body Assembly LH
C93
Shift Position Switch
(E)
W–B
(*28)
14
12
W–B
(E2R)
C85
Diesel Throttle
Body Assembly RH

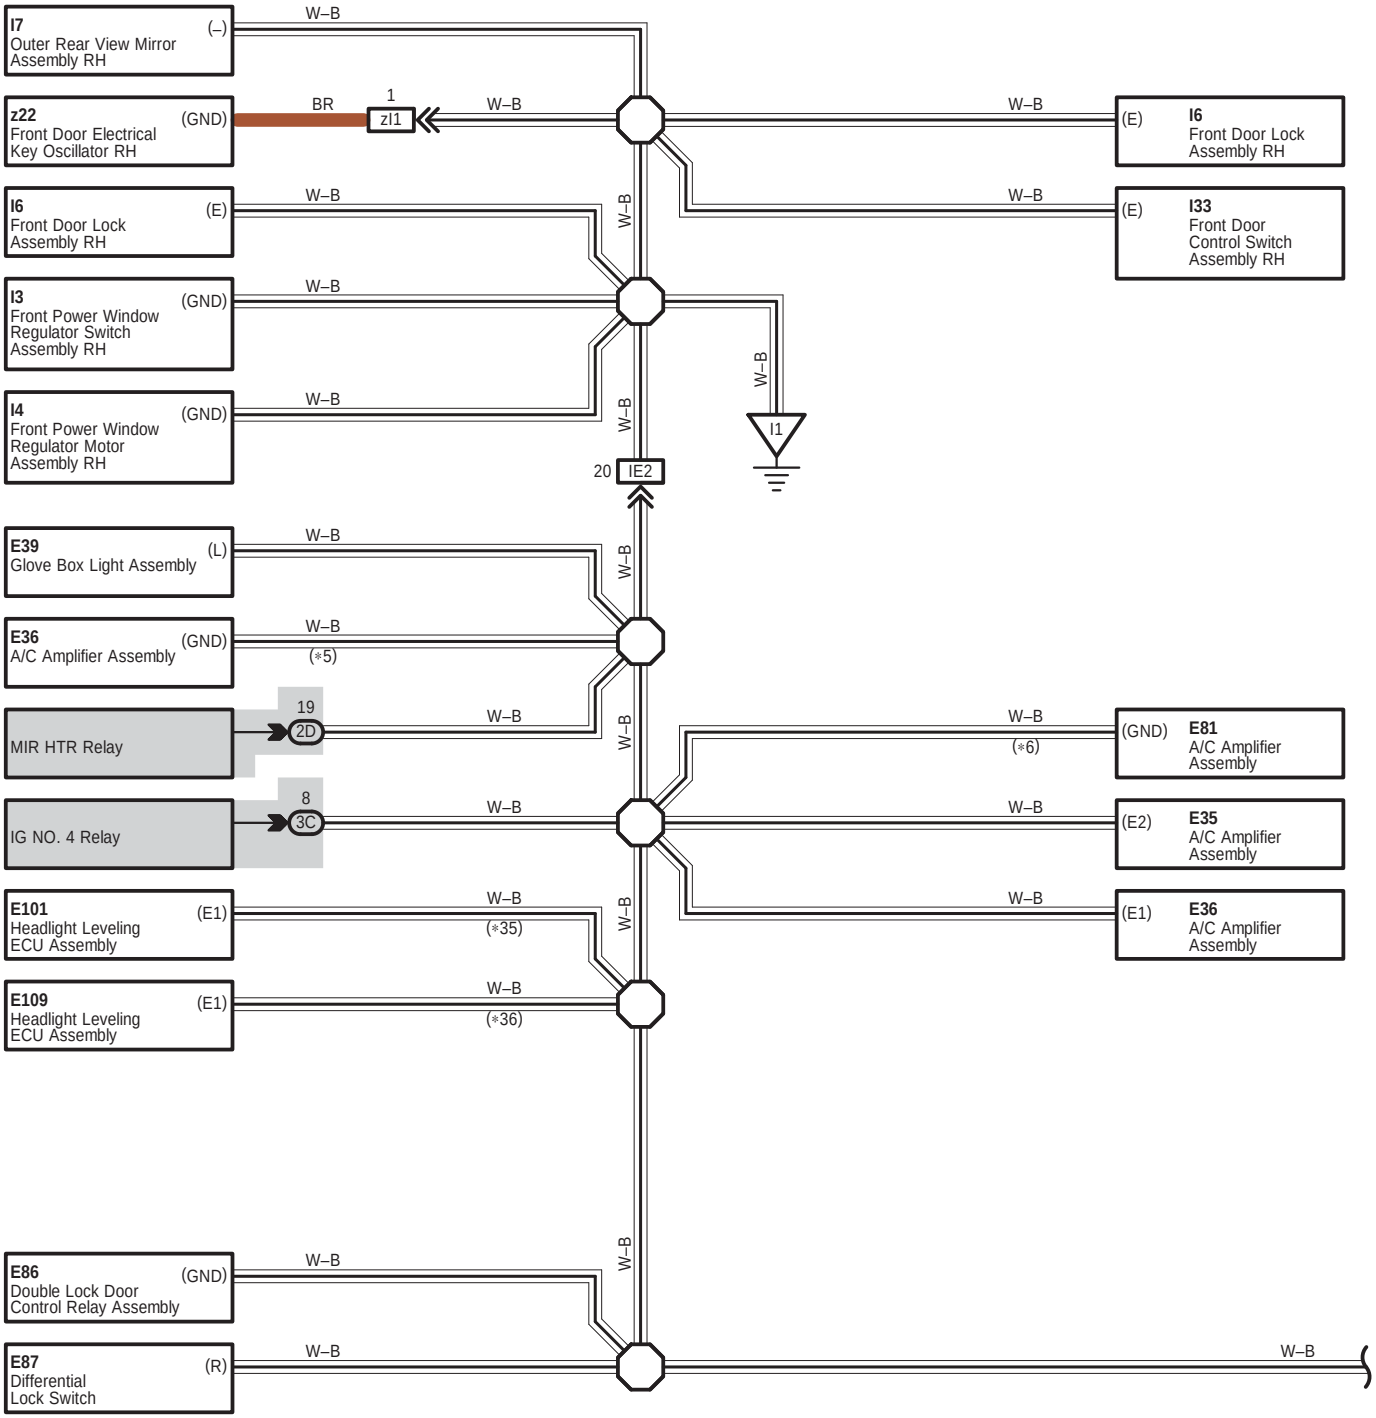
I7
Outer Rear View Mirror Assembly RH
(–)
z22
Front Door Electrical Key Oscillator RH
(GND)
I6
Front Door Lock Assembly RH
(E)
I3
Front Power Window Regulator Switch Assembly RH
(GND)
I4
Front Power Window Regulator Motor Assembly RH
(GND)
E39
Glove Box Light Assembly
(L)
E36
A/C Amplifier Assembly
(GND)
MIR HTR Relay
IG NO. 4 Relay
E101
Headlight Leveling ECU Assembly
(E1)
E109
Headlight Leveling ECU Assembly
(E1)
E86
Double Lock Door Control Relay Assembly
(GND)
E87
Differential Lock Switch
(R)
W–B
BR
1
zI1
20
IE2
I1
19
2D
8
3C
(∗5)
(∗35)
(∗36)
(∗6)
I6
Front Door Lock Assembly RH
I33
Front Door Control Switch Assembly RH
E81
A/C Amplifier Assembly
E35
A/C Amplifier Assembly
E36
A/C Amplifier Assembly


∗ 5 : w/ Rear A/C
∗ 6 : w/o Rear A/C
∗35 : Dynamic Type
∗36 : Static Type
∗50 : w/ Tire Pressure Warning System

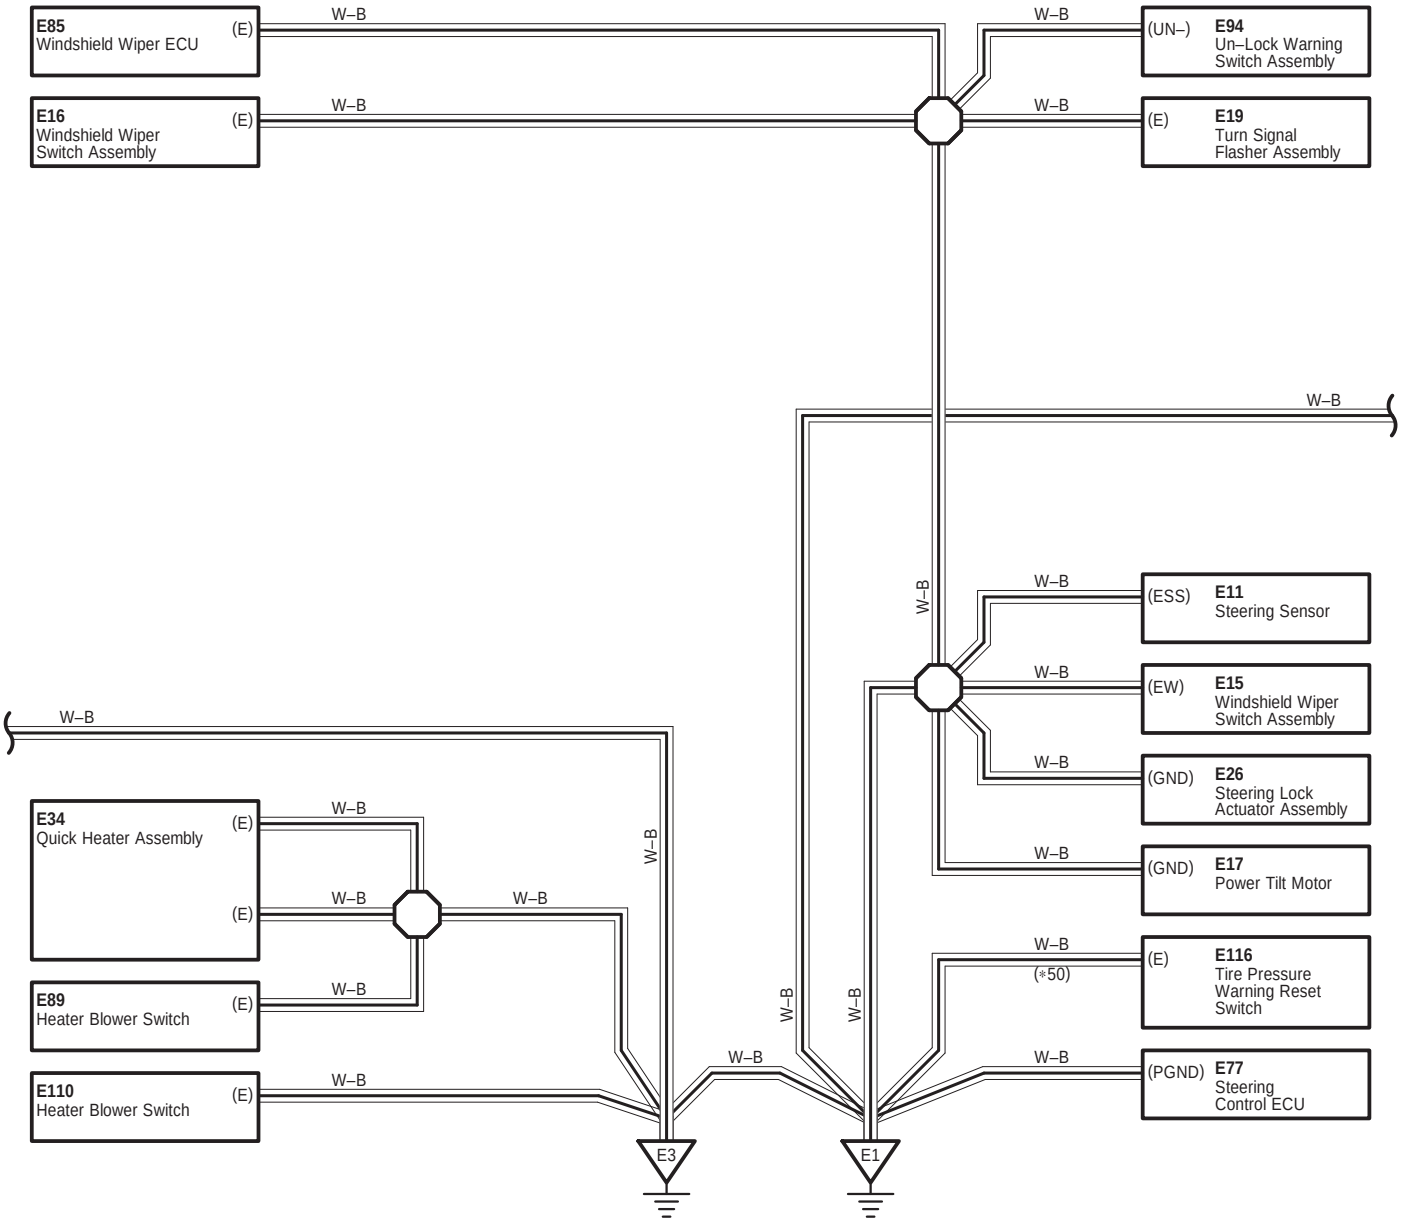


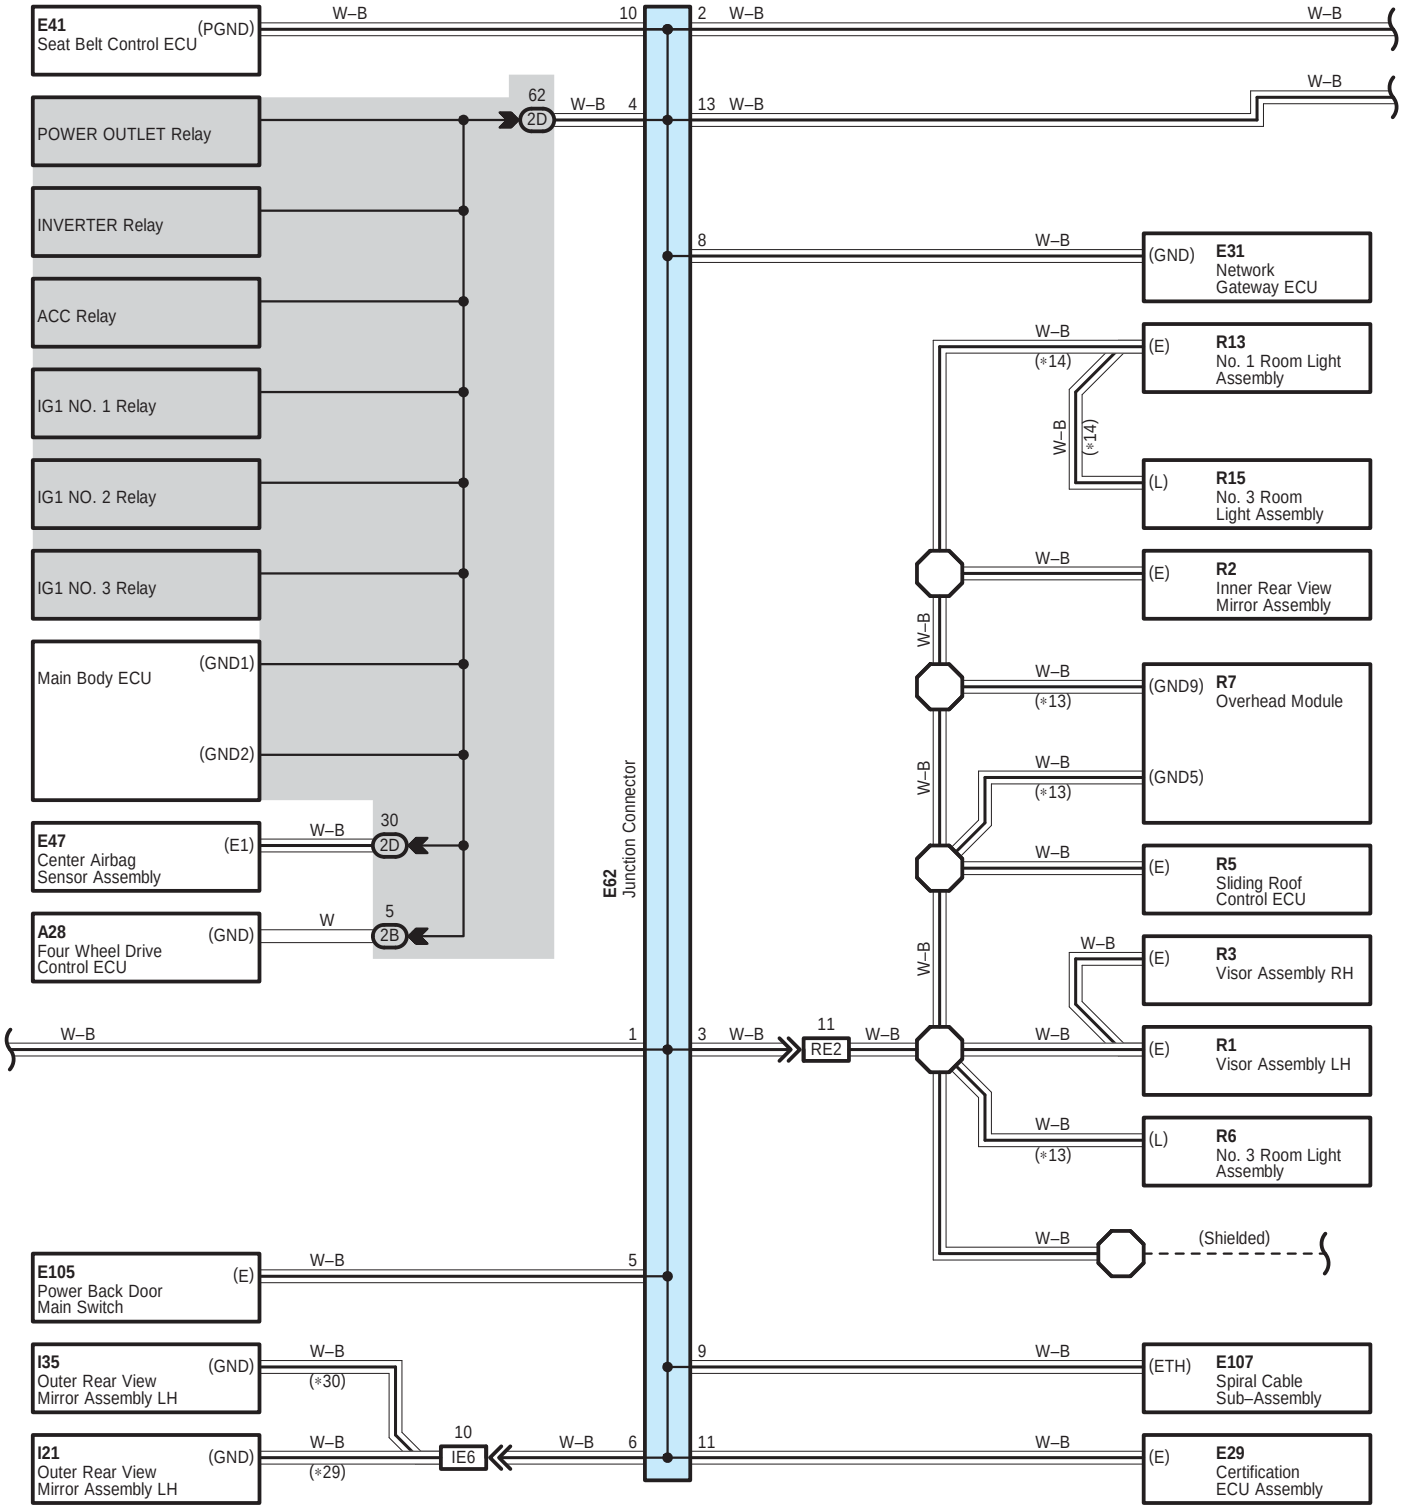
E41
Seat Belt Control ECU
(PGND)
W–B
10
2
W–B
W–B
POWER OUTLET Relay
62
2D
W–B
4
13
W–B
W–B
INVERTER Relay
ACC Relay
IG1 NO. 1 Relay
IG1 NO. 2 Relay
IG1 NO. 3 Relay
Main Body ECU
(GND1)
(GND2)
E47
Center Airbag
Sensor Assembly
(E1)
W–B
30
2D
A28
Four Wheel Drive
Control ECU
(GND)
W
5
2B
E62
Junction Connector
8
W–B
(GND)
E31
Network
Gateway ECU
W–B
(∗14)
(E)
R13
No. 1 Room Light
Assembly
W–B
(∗14)
(L)
R15
No. 3 Room
Light Assembly
W–B
(E)
R2
Inner Rear View
Mirror Assembly
W–B
W–B
(∗13)
(GND9)
R7
Overhead Module
W–B
(∗13)
(GND5)
W–B
W–B
(E)
R5
Sliding Roof
Control ECU
W–B
W–B
(E)
R3
Visor Assembly RH
W–B
1
3
W–B
11
RE2
W–B
W–B
(E)
R1
Visor Assembly LH
W–B
(∗13)
(L)
R6
No. 3 Room Light
Assembly
W–B
(Shielded)
E105
Power Back Door
Main Switch
(E)
W–B
5
I35
Outer Rear View
Mirror Assembly LH
(GND)
W–B
(∗30)
9
W–B
(ETH)
E107
Spiral Cable
Sub–Assembly
I21
Outer Rear View
Mirror Assembly LH
(GND)
W–B
(∗29)
10
IE6
W–B
6
11
W–B
(E)
E29
Certification
ECU Assembly

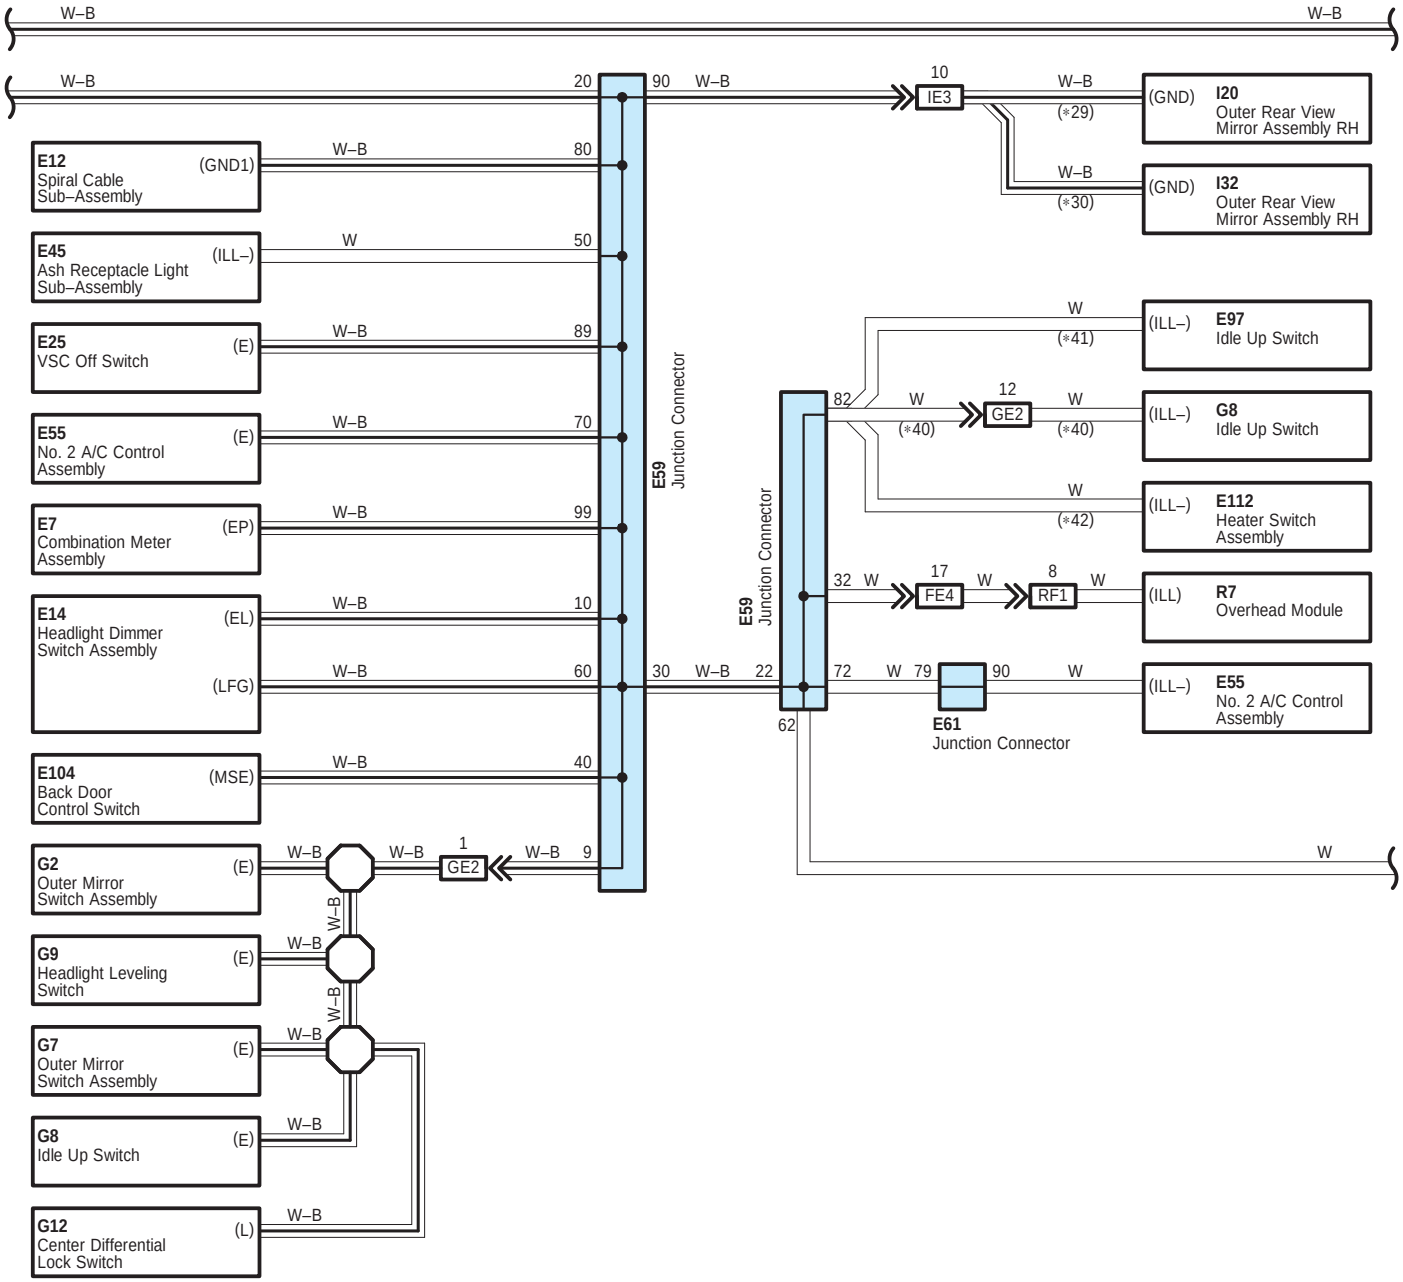



∗13 : w/ Overhead Module
∗14 : w/o Overhead Module
∗29 : w/ Multi–Terrain Monitor
∗30 : w/o Multi–Terrain Monitor
∗40 : Before Jan. 2012 Production w/ Viscous Heater
∗41 : From Jan. 2012 Production w/ Viscous Heater 1VD–FTV w/o DPF
∗42 : From Jan. 2012 Production w/ Viscous Heater 1VD–FTV w/ DPF

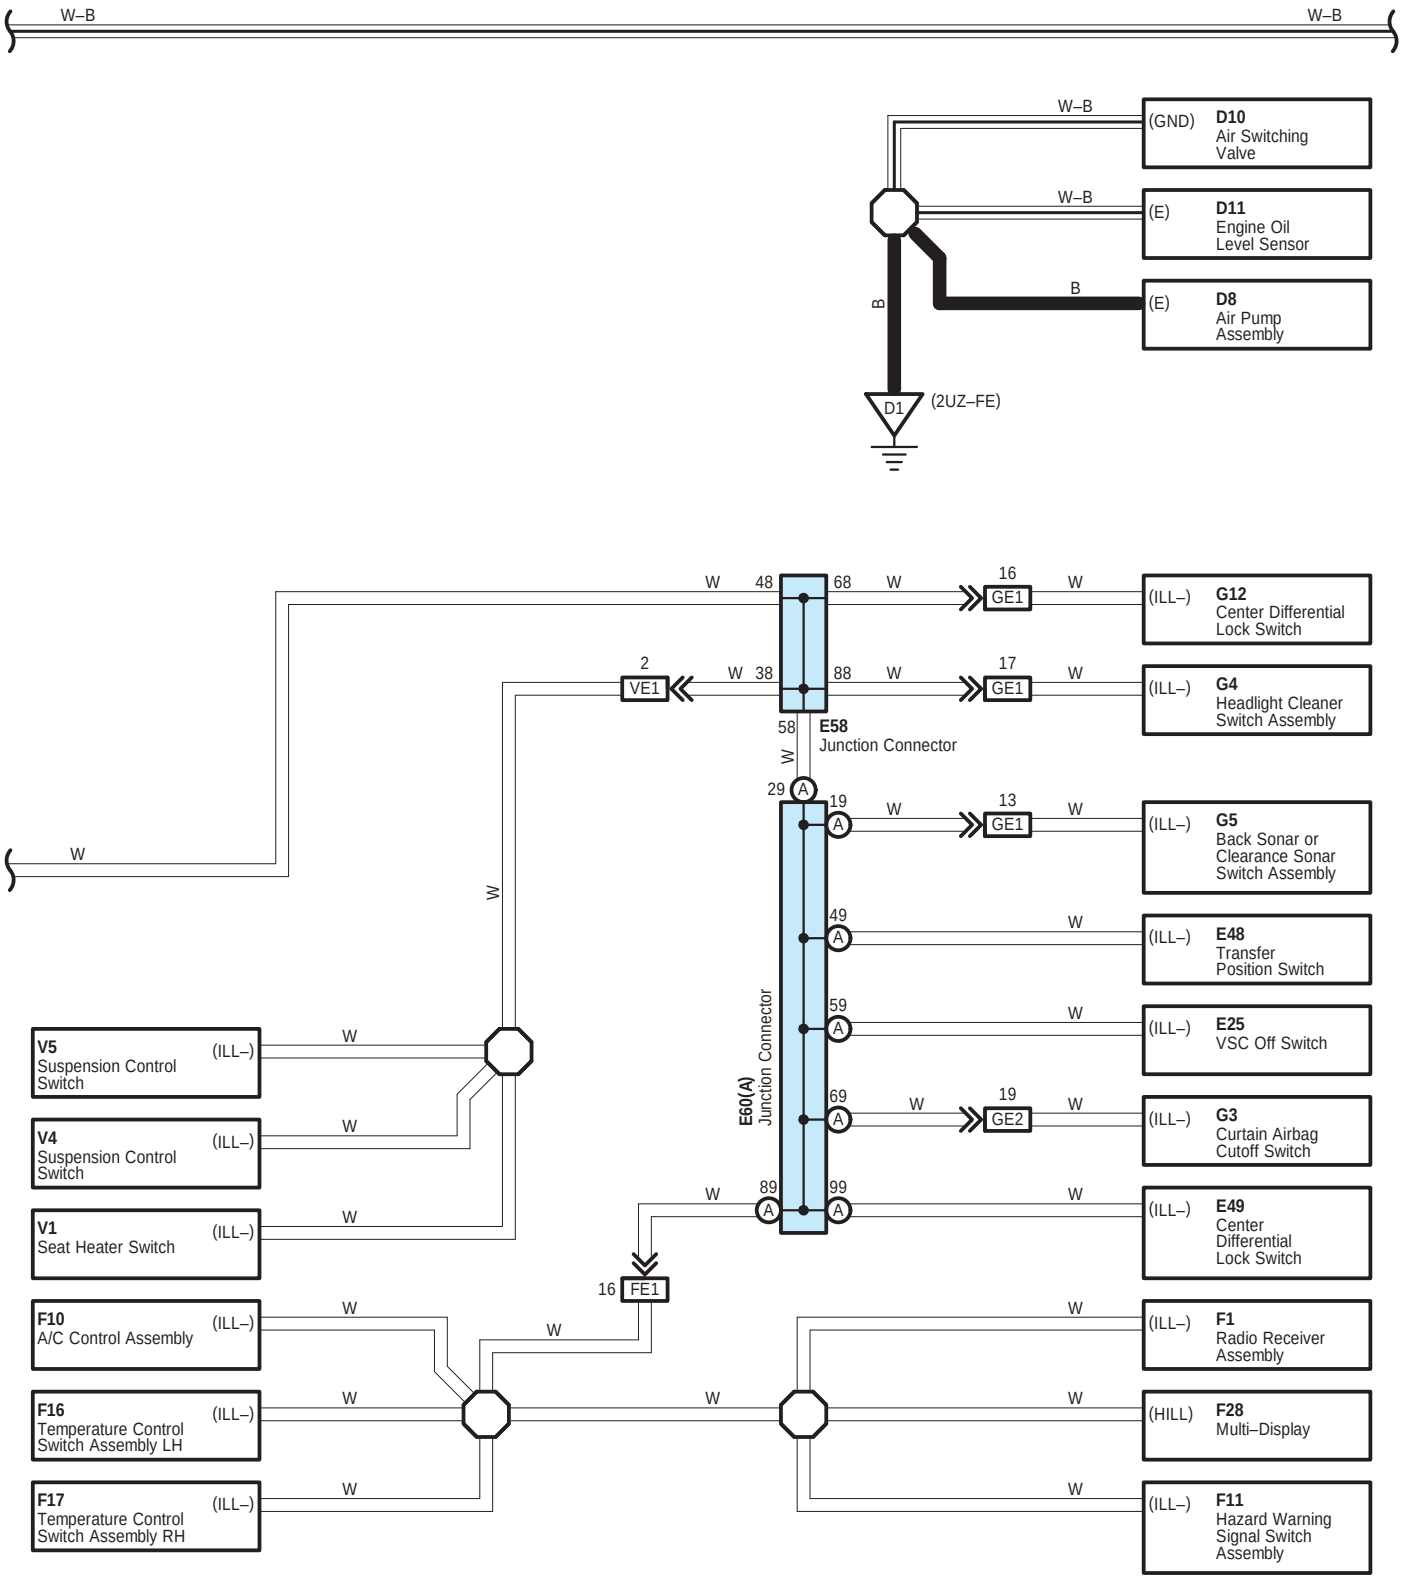
W–B
W–B
W–B
(GND)
D10
Air Switching Valve
W–B
(E)
D11
Engine Oil Level Sensor
B
B
(E)
D8
Air Pump Assembly
D1
(2UZ–FE)
W
48
68
W
16
GE1
W
(ILL–)
G12
Center Differential Lock Switch
2
VE1
W
38
88
W
17
GE1
W
(ILL–)
G4
Headlight Cleaner Switch Assembly
58
E58
Junction Connector
W
29
A
19
A
W
13
GE1
W
(ILL–)
G5
Back Sonar or Clearance Sonar Switch Assembly
49
A
W
(ILL–)
E48
Transfer Position Switch
59
A
W
(ILL–)
E25
VSC Off Switch
E60(A)
Junction Connector
69
A
W
19
GE2
W
(ILL–)
G3
Curtain Airbag Cutoff Switch
W
89
A
99
A
W
(ILL–)
E49
Center Differential Lock Switch
16
FE1
V5
Suspension Control Switch
(ILL–)
W
V4
Suspension Control Switch
(ILL–)
W
V1
Seat Heater Switch
(ILL–)
W
F10
A/C Control Assembly
(ILL–)
W
W
W
(ILL–)
F1
Radio Receiver Assembly
F16
Temperature Control Switch Assembly LH
(ILL–)
W
W
W
(HILL)
F28
Multi–Display
F17
Temperature Control Switch Assembly RH
(ILL–)
W
W
(ILL–)
F11
Hazard Warning Signal Switch Assembly

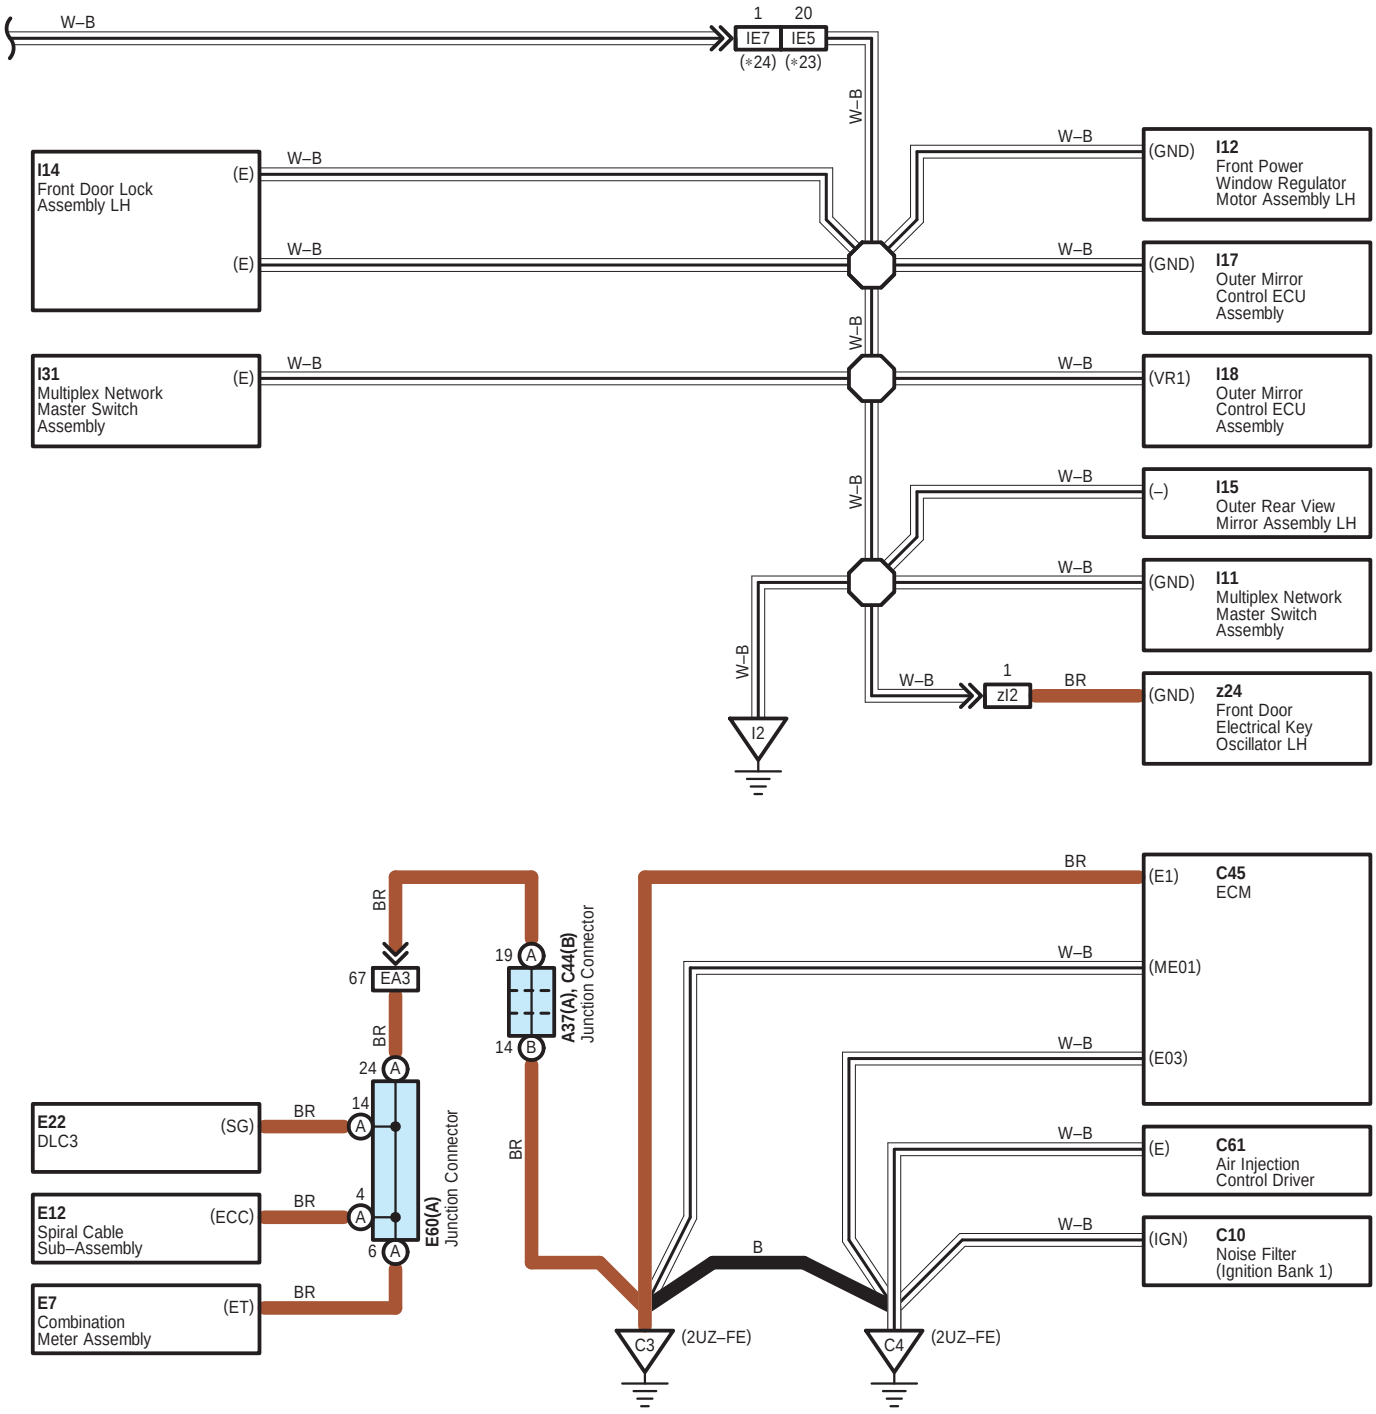


*23 : Liftgate Type, Swing Type Driver' s Door Only Jam Protection
*24 : Swing Type All Door Jam Protection

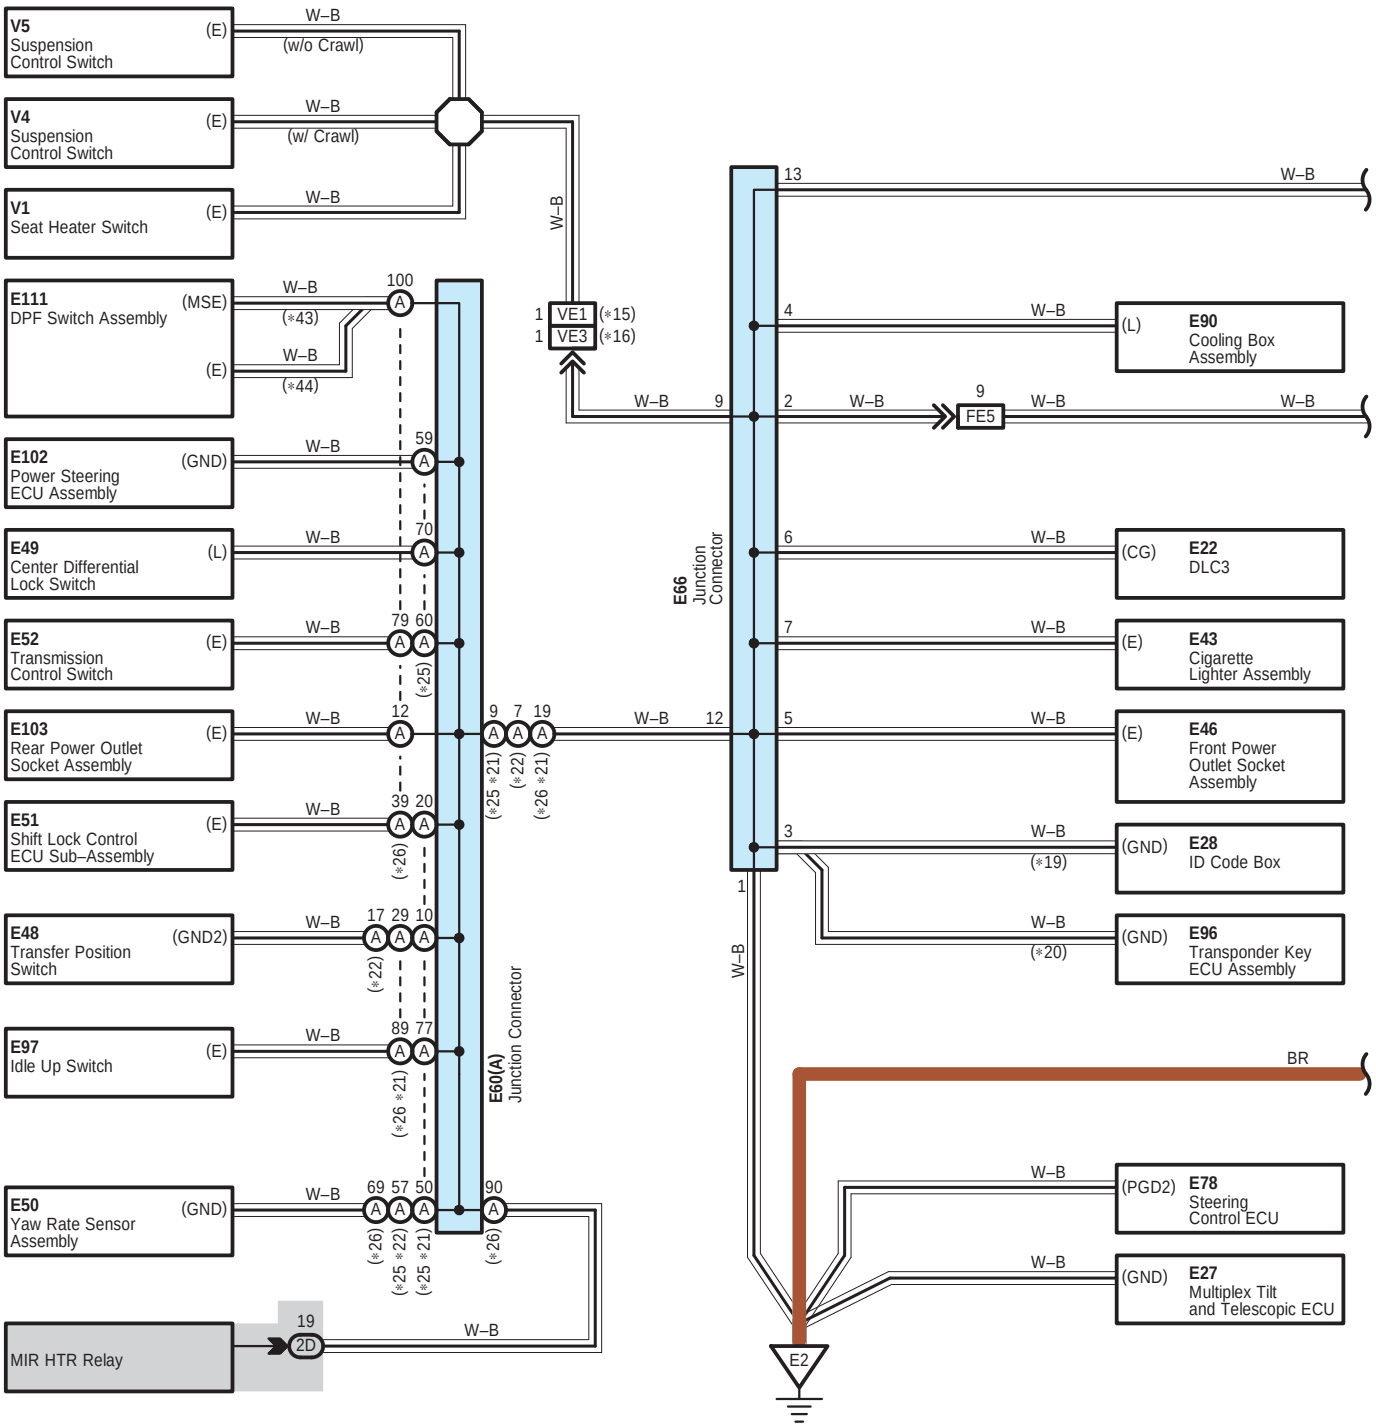

V5
Suspension
Control Switch
(E)
W–B
(w/o Crawl)
V4
Suspension
Control Switch
(E)
W–B
(w/ Crawl)
V1
Seat Heater Switch
(E)
W–B
E111
DPF Switch Assembly
(MSE)
W–B
(∗43)
(E)
W–B
(∗44)
E102
Power Steering
ECU Assembly
(GND)
W–B
E49
Center Differential
Lock Switch
(L)
W–B
E52
Transmission
Control Switch
(E)
W–B
E103
Rear Power Outlet
Socket Assembly
(E)
W–B
E51
Shift Lock Control
ECU Sub–Assembly
(E)
W–B
E48
Transfer Position
Switch
(GND2)
W–B
E97
Idle Up Switch
(E)
W–B
E50
Yaw Rate Sensor
Assembly
(GND)
W–B
MIR HTR Relay
19
2D
W–B
100
59
70
79
60
(∗25)
12
39
20
(∗26)
17
29
10
(∗22)
89
77
(∗26 ∗21)
69
57
50
(∗26)
(∗25 ∗22)
(∗25 ∗21)
90
(∗26)
W–B
1
VE1
1
VE3
(∗15)
(∗16)
W–B
9
E60(A)
Junction Connector
9
7
19
(∗25 ∗21)
(∗22)
(∗26 ∗21)
W–B
12
E66
Junction
Connector
13
W–B
4
W–B
(L)
E90
Cooling Box
Assembly
2
W–B
9
FE5
W–B
W–B
6
W–B
(CG)
E22
DLC3
7
W–B
(E)
E43
Cigarette
Lighter Assembly
5
W–B
(E)
E46
Front Power
Outlet Socket
Assembly
3
W–B
(∗19)
(GND)
E28
ID Code Box
1
W–B
W–B
(∗20)
(GND)
E96
Transponder Key
ECU Assembly
BR
W–B
(PGD2)
E78
Steering
Control ECU
W–B
(GND)
E27
Multiplex Tilt
and Telescopic ECU
E2

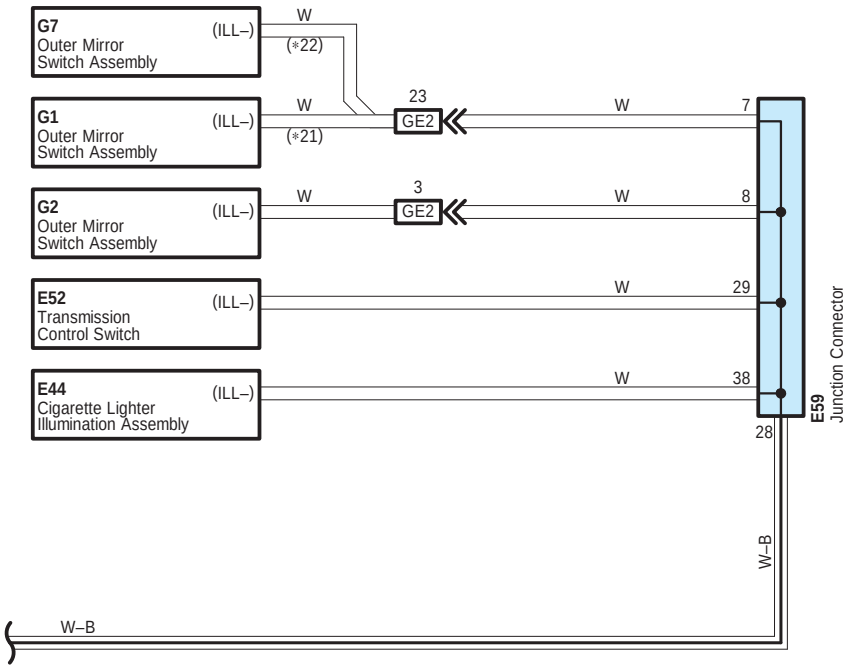






*15 : Before Jul. 2009 Production
*16 : From Jul. 2009 Production
*19 : w/ Entry & Start System
*20 : w/o Entry & Start System
*21 : Liftgate Type
*22 : Swing Type
*25 : Before Jan. 2012 Production
*26 : From Jan. 2012 Production
*43 : Before Jan. 2013 Production
*44 : From Jan. 2013 Production
*48 : Before Aug. 2013 Production
*49 : From Aug. 2013 Production

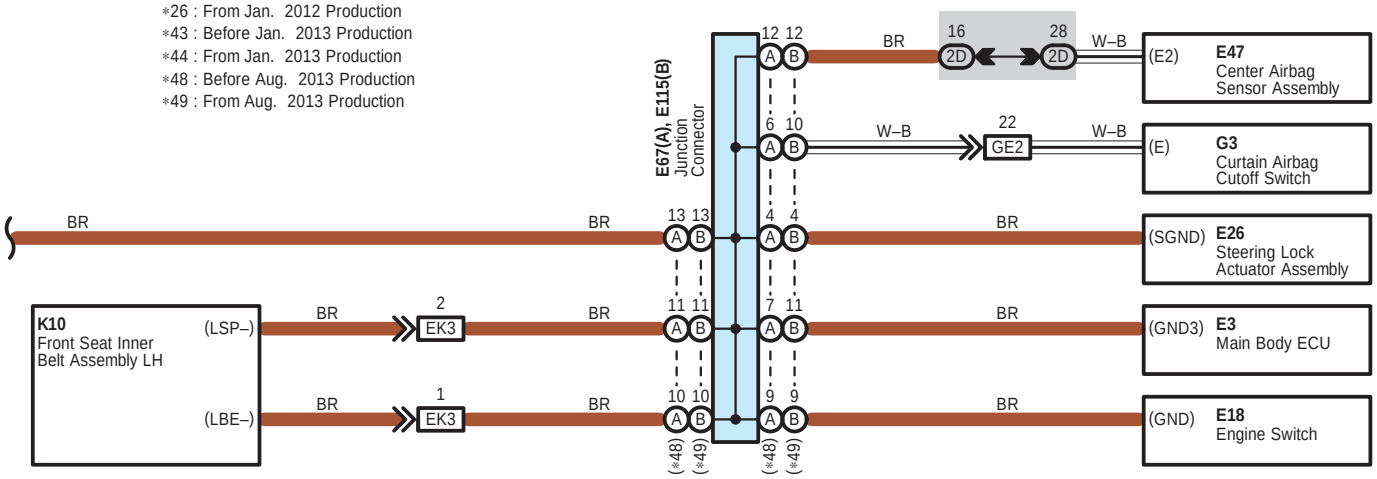

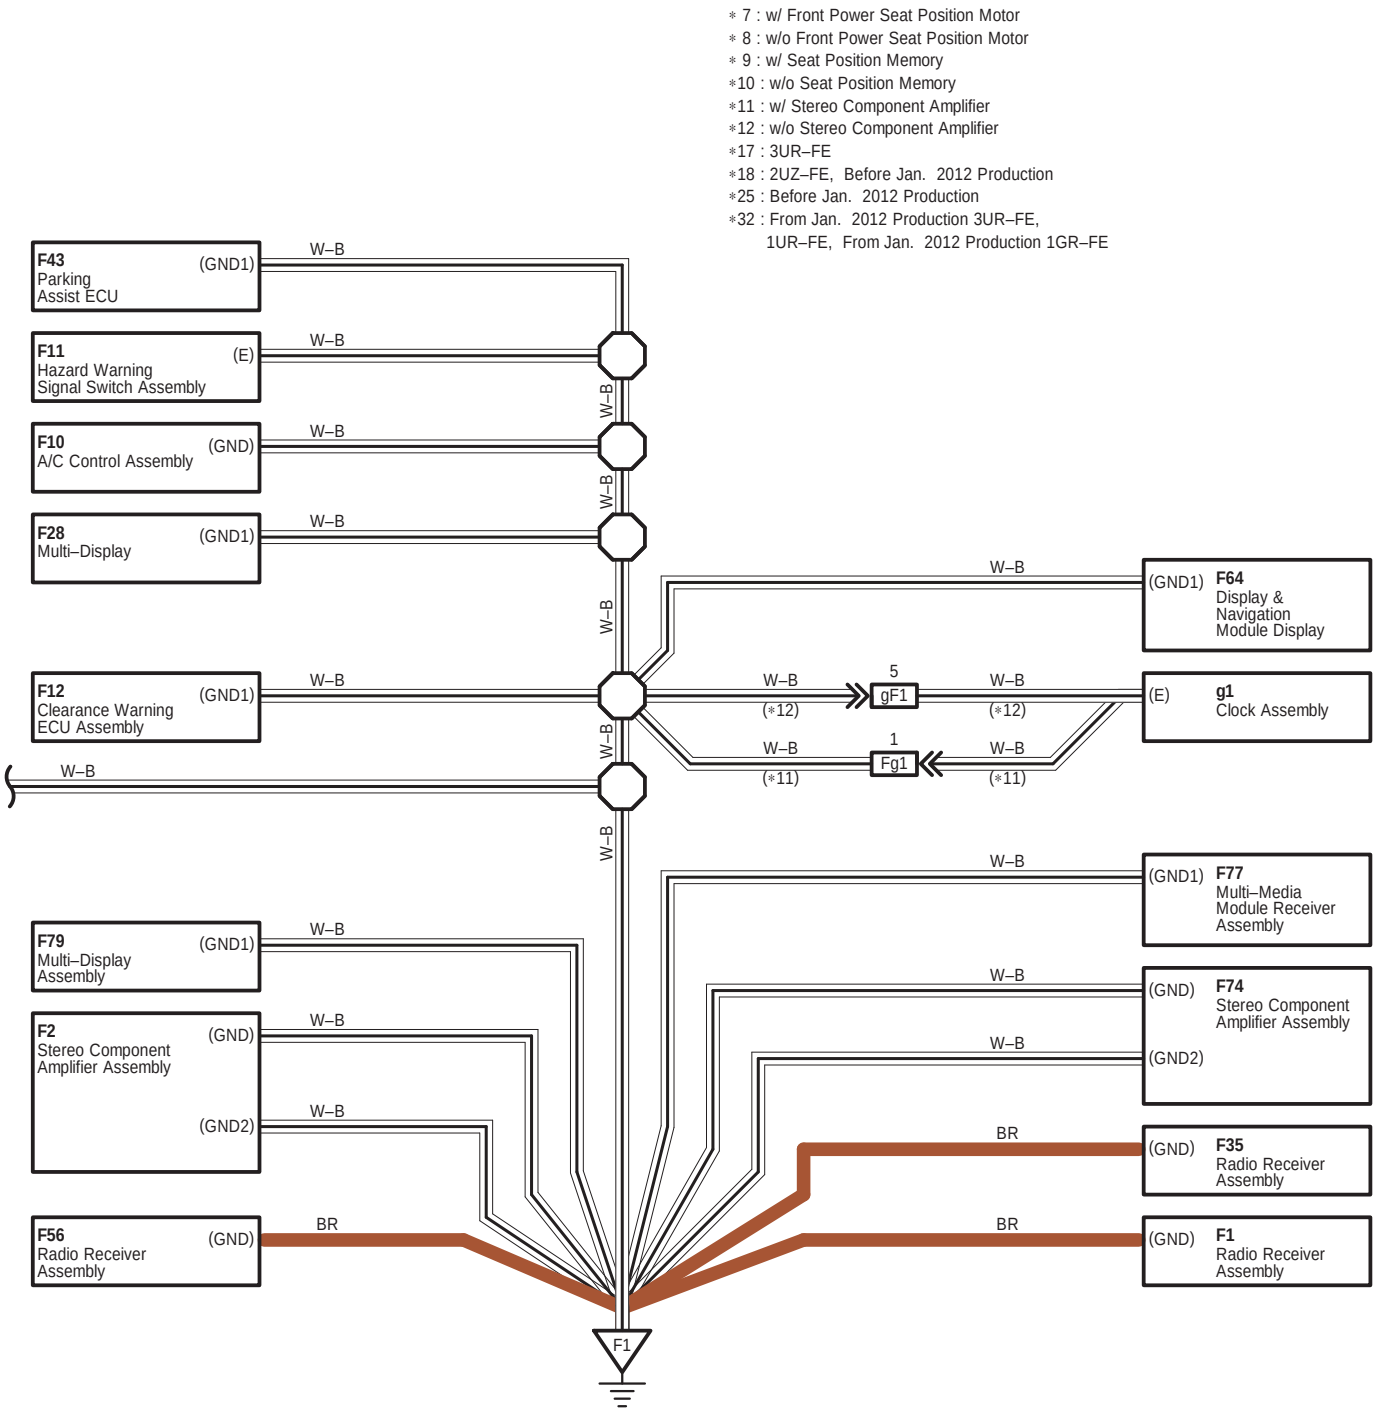

∗ 7 : w/ Front Power Seat Position Motor
∗ 8 : w/o Front Power Seat Position Motor
∗ 9 : w/ Seat Position Memory
∗10 : w/o Seat Position Memory
∗11 : w/ Stereo Component Amplifier
∗12 : w/o Stereo Component Amplifier
∗17 : 3UR–FE
∗18 : 2UZ–FE, Before Jan. 2012 Production
∗25 : Before Jan. 2012 Production
∗32 : From Jan. 2012 Production 3UR–FE,
1UR–FE, From Jan. 2012 Production 1GR–FE
F43 (GND1) Parking Assist ECU
F11 (E) Hazard Warning Signal Switch Assembly
F10 (GND) A/C Control Assembly
F28 (GND1) Multi–Display
F12 (GND1) Clearance Warning ECU Assembly
F79 (GND1) Multi–Display Assembly
F2 (GND) Stereo Component Amplifier Assembly
(GND2)
F56 (GND) Radio Receiver Assembly
W–B
BR
5
gF1
1
Fg1
(∗12)
(∗11)
(GND1) F64 Display & Navigation Module Display
(E) g1 Clock Assembly
(GND1) F77 Multi–Media Module Receiver Assembly
(GND) F74 Stereo Component Amplifier Assembly
(GND2)
(GND) F35 Radio Receiver Assembly
(GND) F1 Radio Receiver Assembly
F1

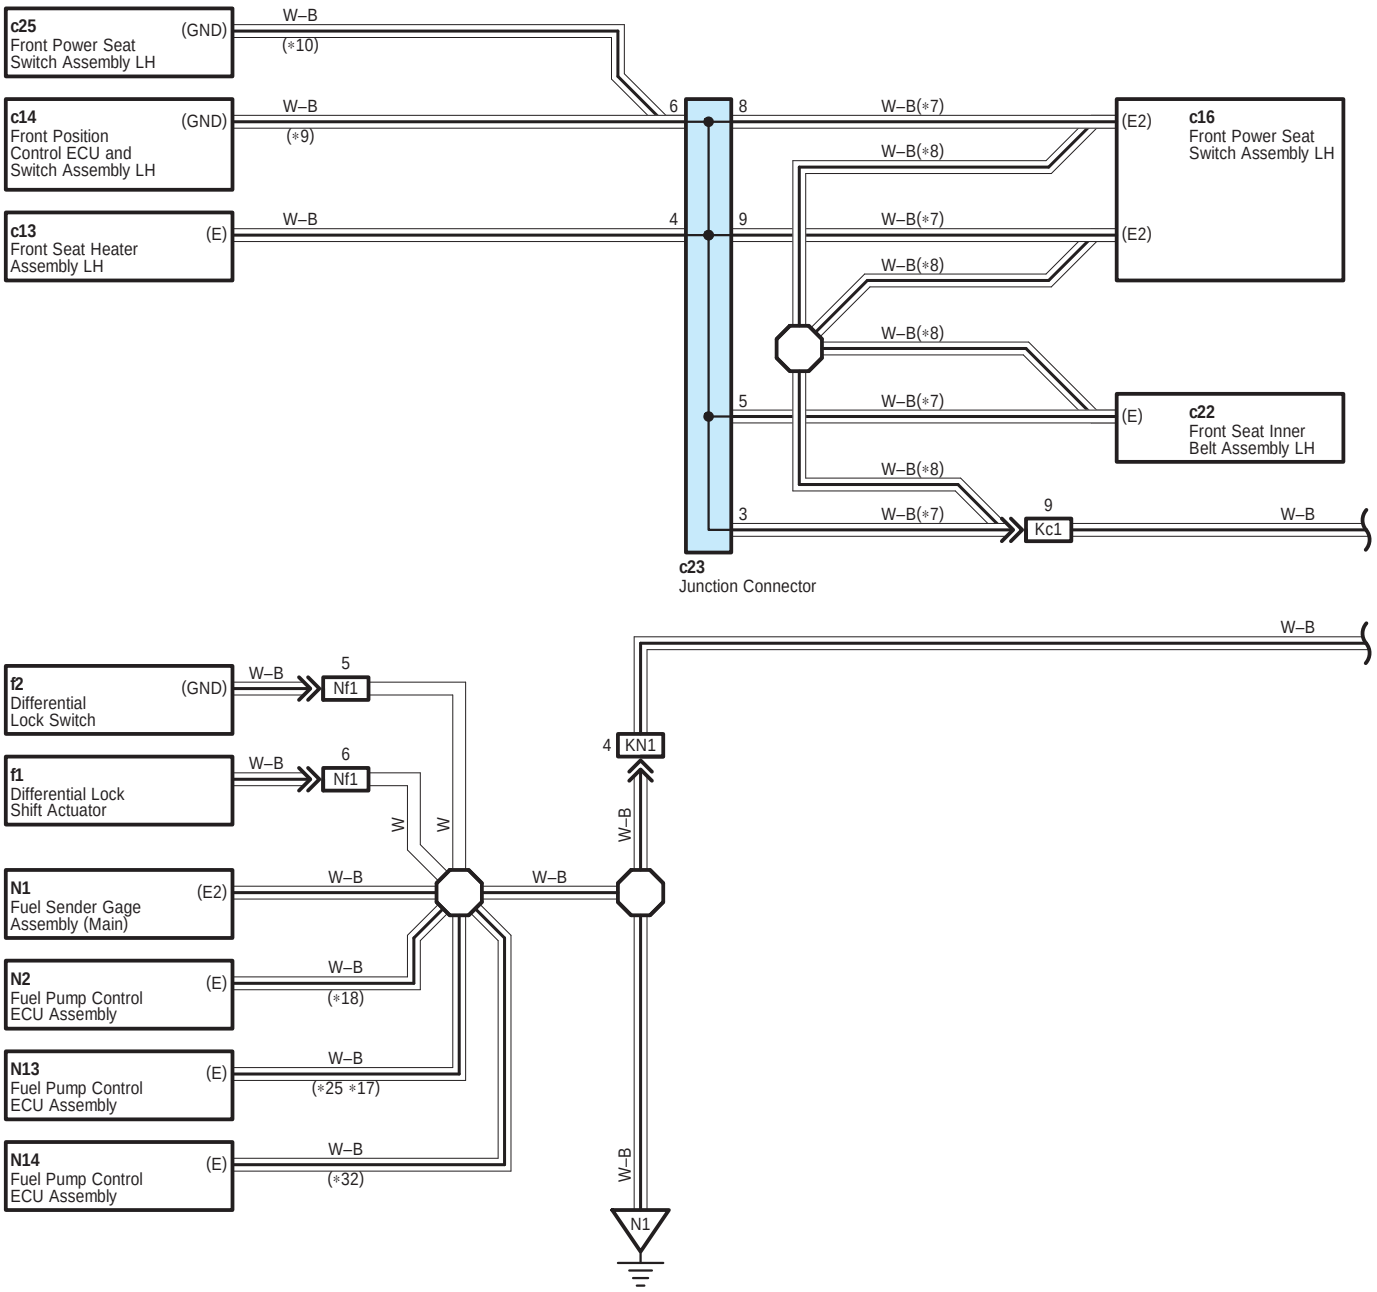
c25
Front Power Seat
Switch Assembly LH
(GND)
W–B
(∗10)
c14
Front Position
Control ECU and
Switch Assembly LH
(GND)
W–B
(∗9)
c13
Front Seat Heater
Assembly LH
(E)
W–B
6
4
8
9
5
3
W–B(∗7)
W–B(∗8)
(E2)
c16
Front Power Seat
Switch Assembly LH
(E)
c22
Front Seat Inner
Belt Assembly LH
9
Kc1
c23
Junction Connector
f2
Differential
Lock Switch
(GND)
f1
Differential Lock
Shift Actuator
N1
Fuel Sender Gage
Assembly (Main)
(E2)
N2
Fuel Pump Control
ECU Assembly
(E)
(∗18)
N13
Fuel Pump Control
ECU Assembly
(E)
(∗25 ∗17)
N14
Fuel Pump Control
ECU Assembly
(E)
(∗32)
5
Nf1
6
Nf1
W
4
KN1
N1

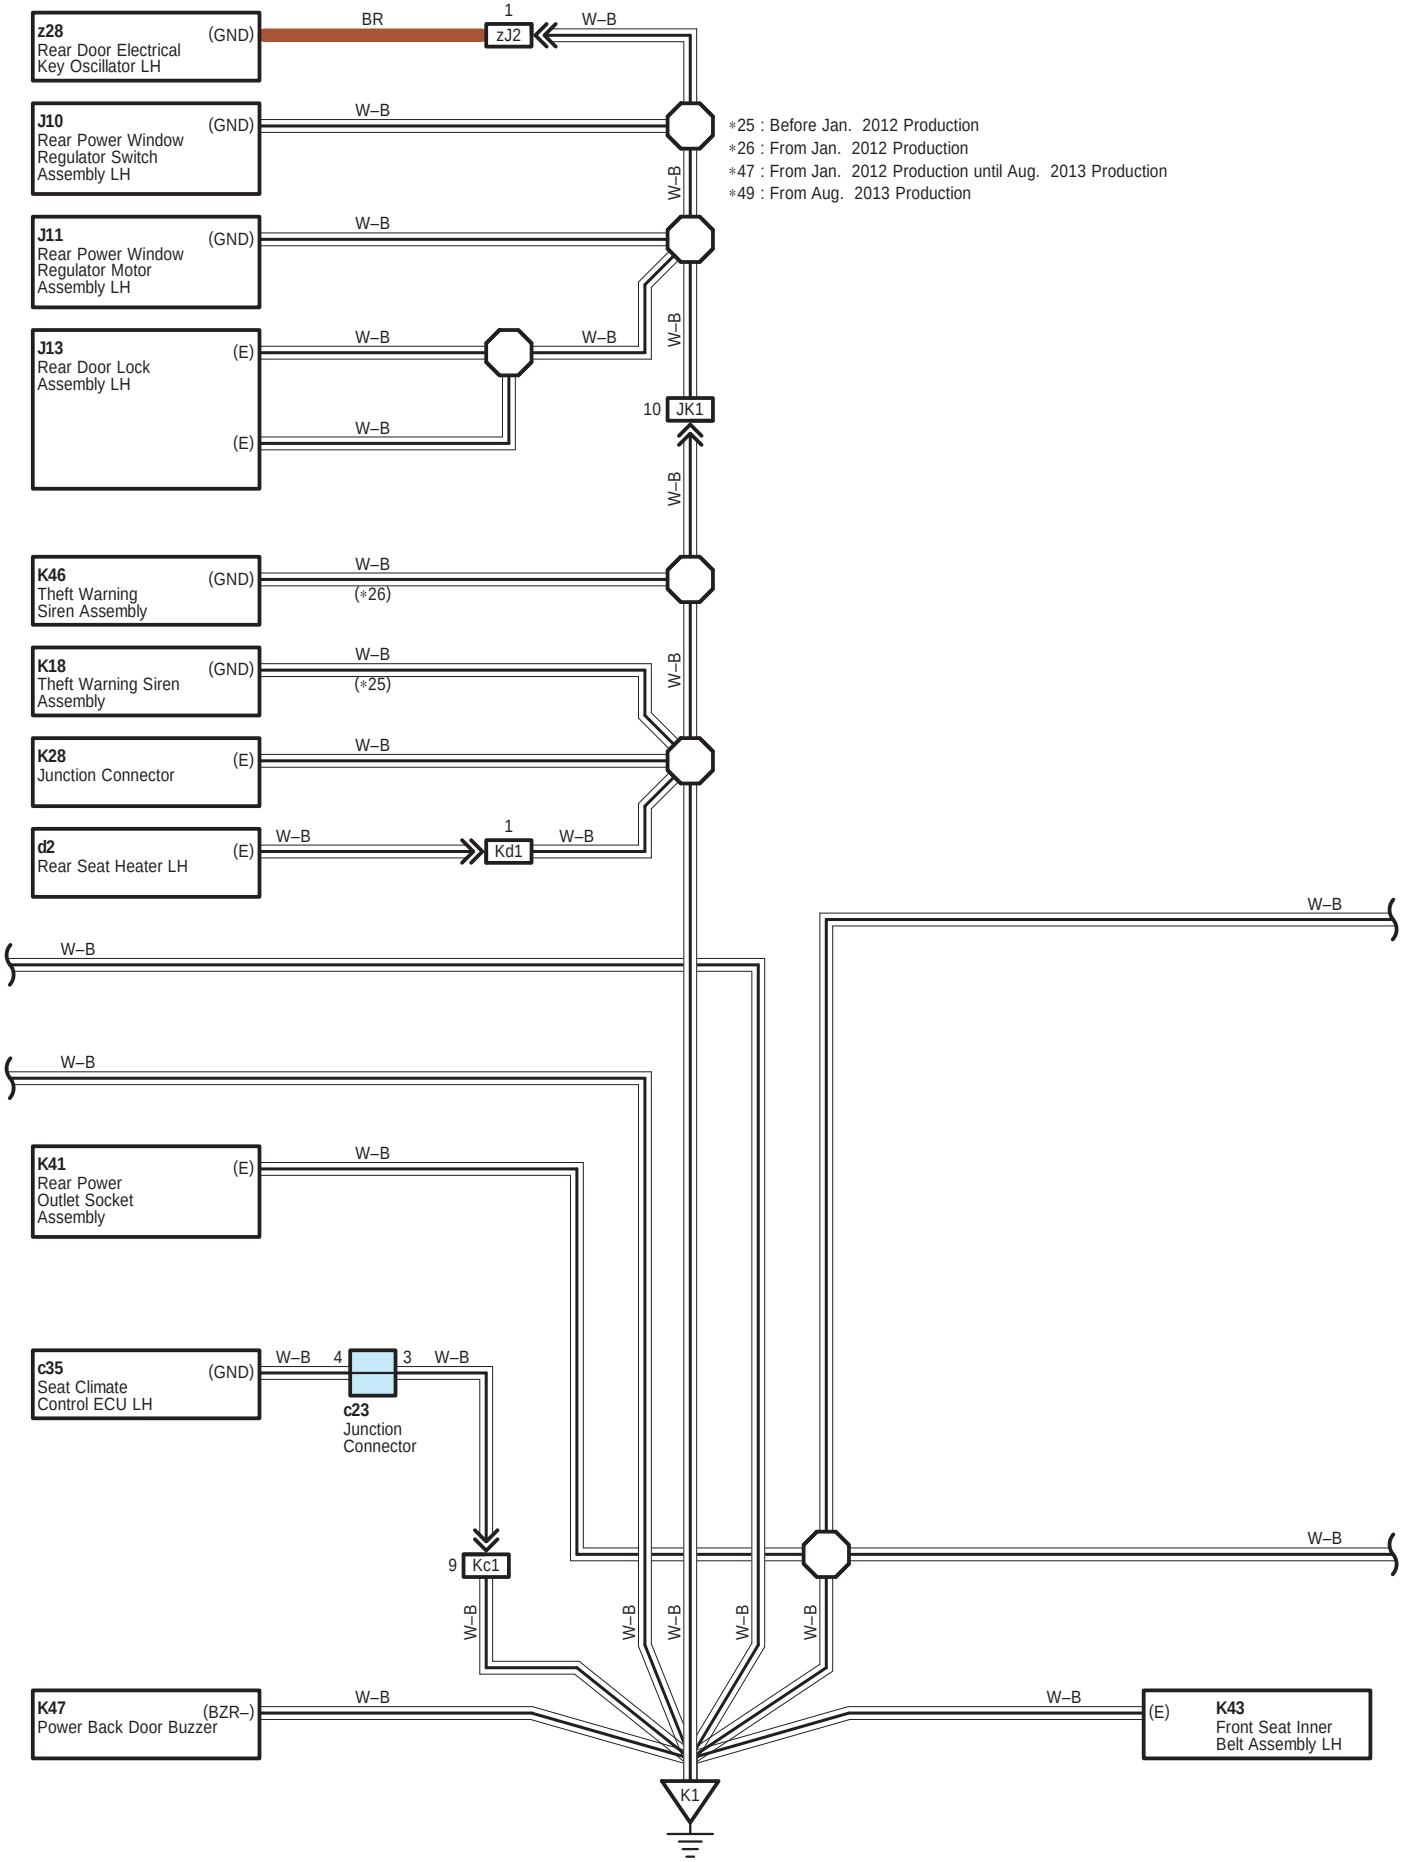

z28
Rear Door Electrical Key Oscillator LH
(GND)
BR
1
zJ2
W–B
J10
Rear Power Window Regulator Switch Assembly LH
(GND)
J11
Rear Power Window Regulator Motor Assembly LH
(GND)
J13
Rear Door Lock Assembly LH
(E)
(E)
∗25 : Before Jan. 2012 Production
∗26 : From Jan. 2012 Production
∗47 : From Jan. 2012 Production until Aug. 2013 Production
∗49 : From Aug. 2013 Production
10 JK1
K46
Theft Warning Siren Assembly
(GND)
(∗26)
K18
Theft Warning Siren Assembly
(GND)
(∗25)
K28
Junction Connector
(E)
d2
Rear Seat Heater LH
(E)
1
Kd1
K41
Rear Power Outlet Socket Assembly
(E)
c35
Seat Climate Control ECU LH
(GND)
4
3
c23
Junction Connector
9 Kc1
K47
Power Back Door Buzzer
(BZR–)
K43
Front Seat Inner Belt Assembly LH
(E)
K1

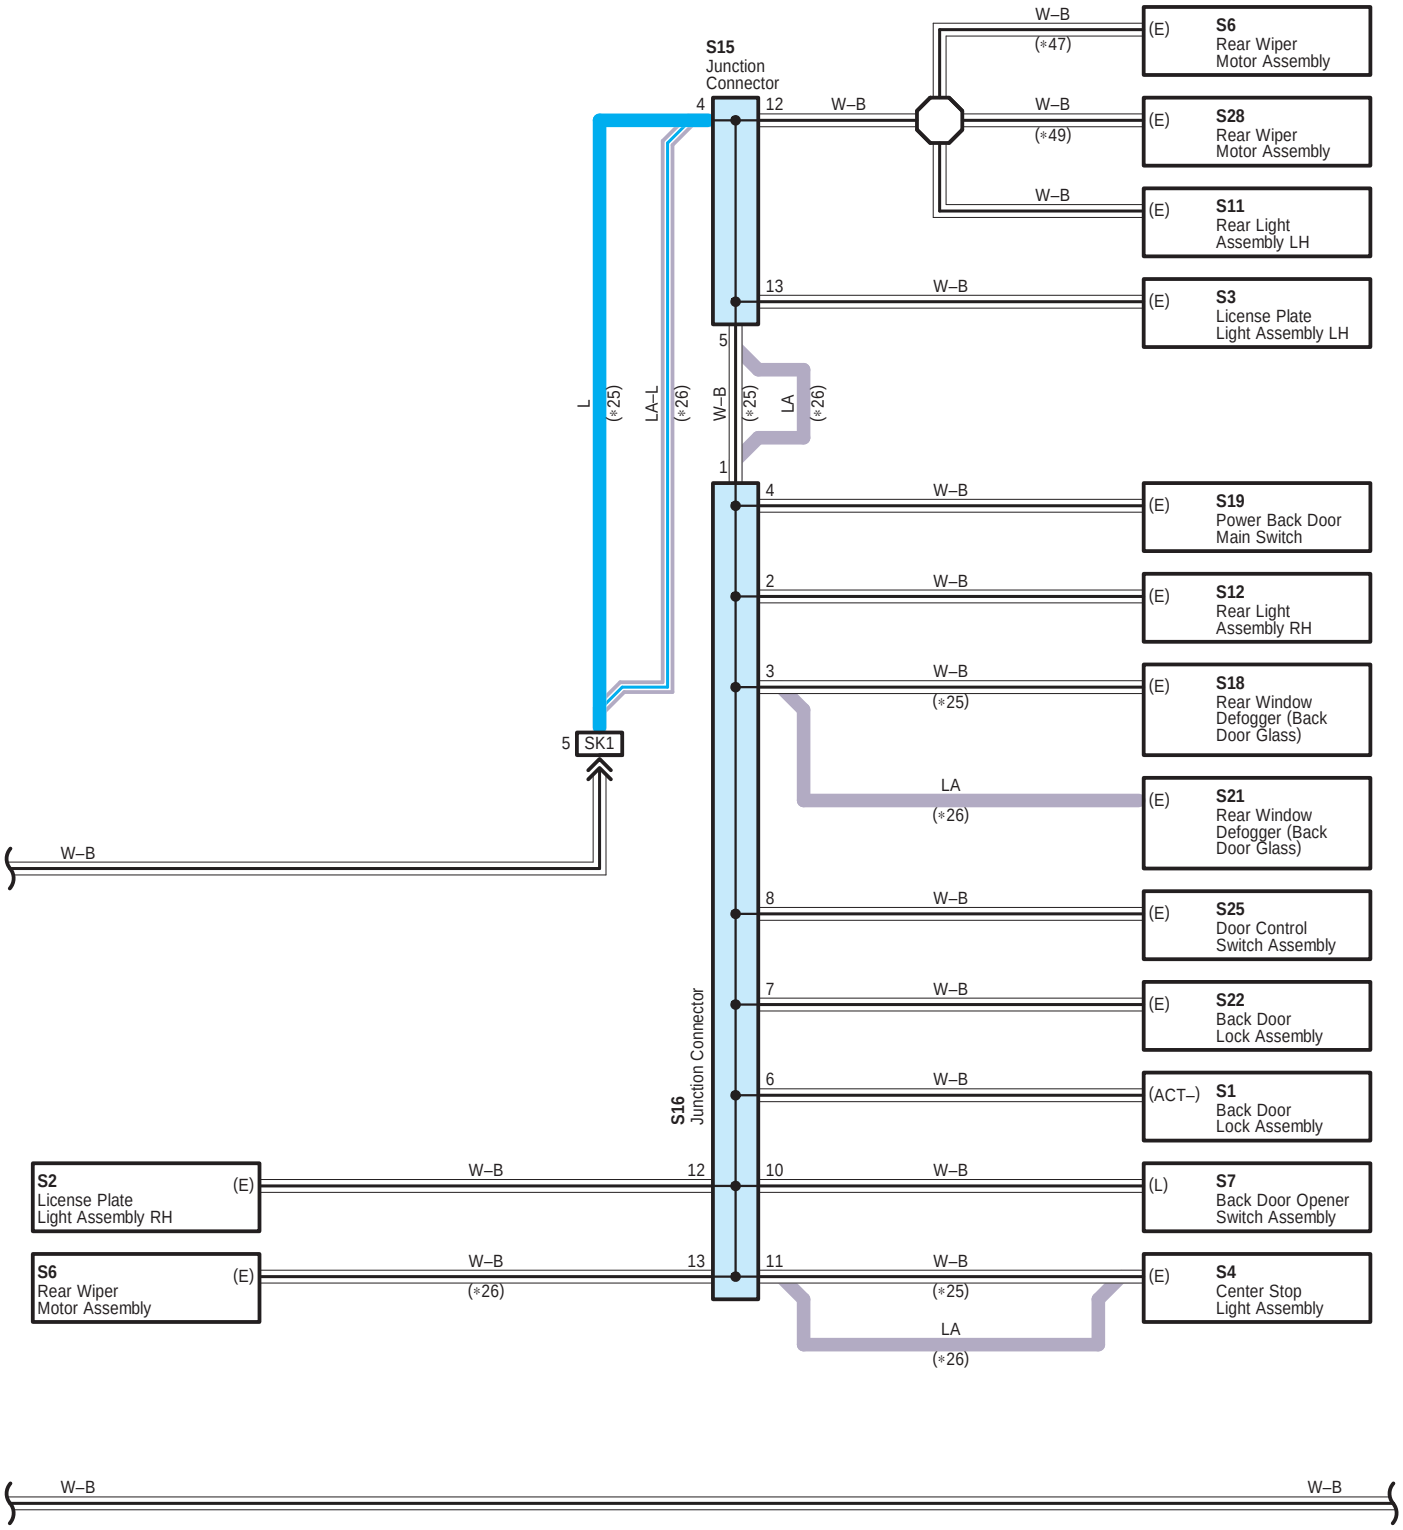
S15
Junction
Connector
4
12
W–B
W–B
(*47)
(E)
S6
Rear Wiper
Motor Assembly
W–B
(*49)
(E)
S28
Rear Wiper
Motor Assembly
W–B
(E)
S11
Rear Light
Assembly LH
13
W–B
(E)
S3
License Plate
Light Assembly LH
5
1
L
(*25)
LA–L
(*26)
W–B
(*25)
LA
(*26)
4
W–B
(E)
S19
Power Back Door
Main Switch
2
W–B
(E)
S12
Rear Light
Assembly RH
3
W–B
(*25)
(E)
S18
Rear Window
Defogger (Back
Door Glass)
LA
(*26)
(E)
S21
Rear Window
Defogger (Back
Door Glass)
5
SK1
W–B
8
W–B
(E)
S25
Door Control
Switch Assembly
7
W–B
(E)
S22
Back Door
Lock Assembly
6
W–B
(ACT–)
S1
Back Door
Lock Assembly
S16
Junction Connector
S2
License Plate
Light Assembly RH
(E)
W–B
12
10
W–B
(L)
S7
Back Door Opener
Switch Assembly
S6
Rear Wiper
Motor Assembly
(E)
W–B
(*26)
13
11
W–B
(*25)
(E)
S4
Center Stop
Light Assembly
LA
(*26)
W–B
W–B


∗21 : Liftgate Type
∗22 : Swing Type

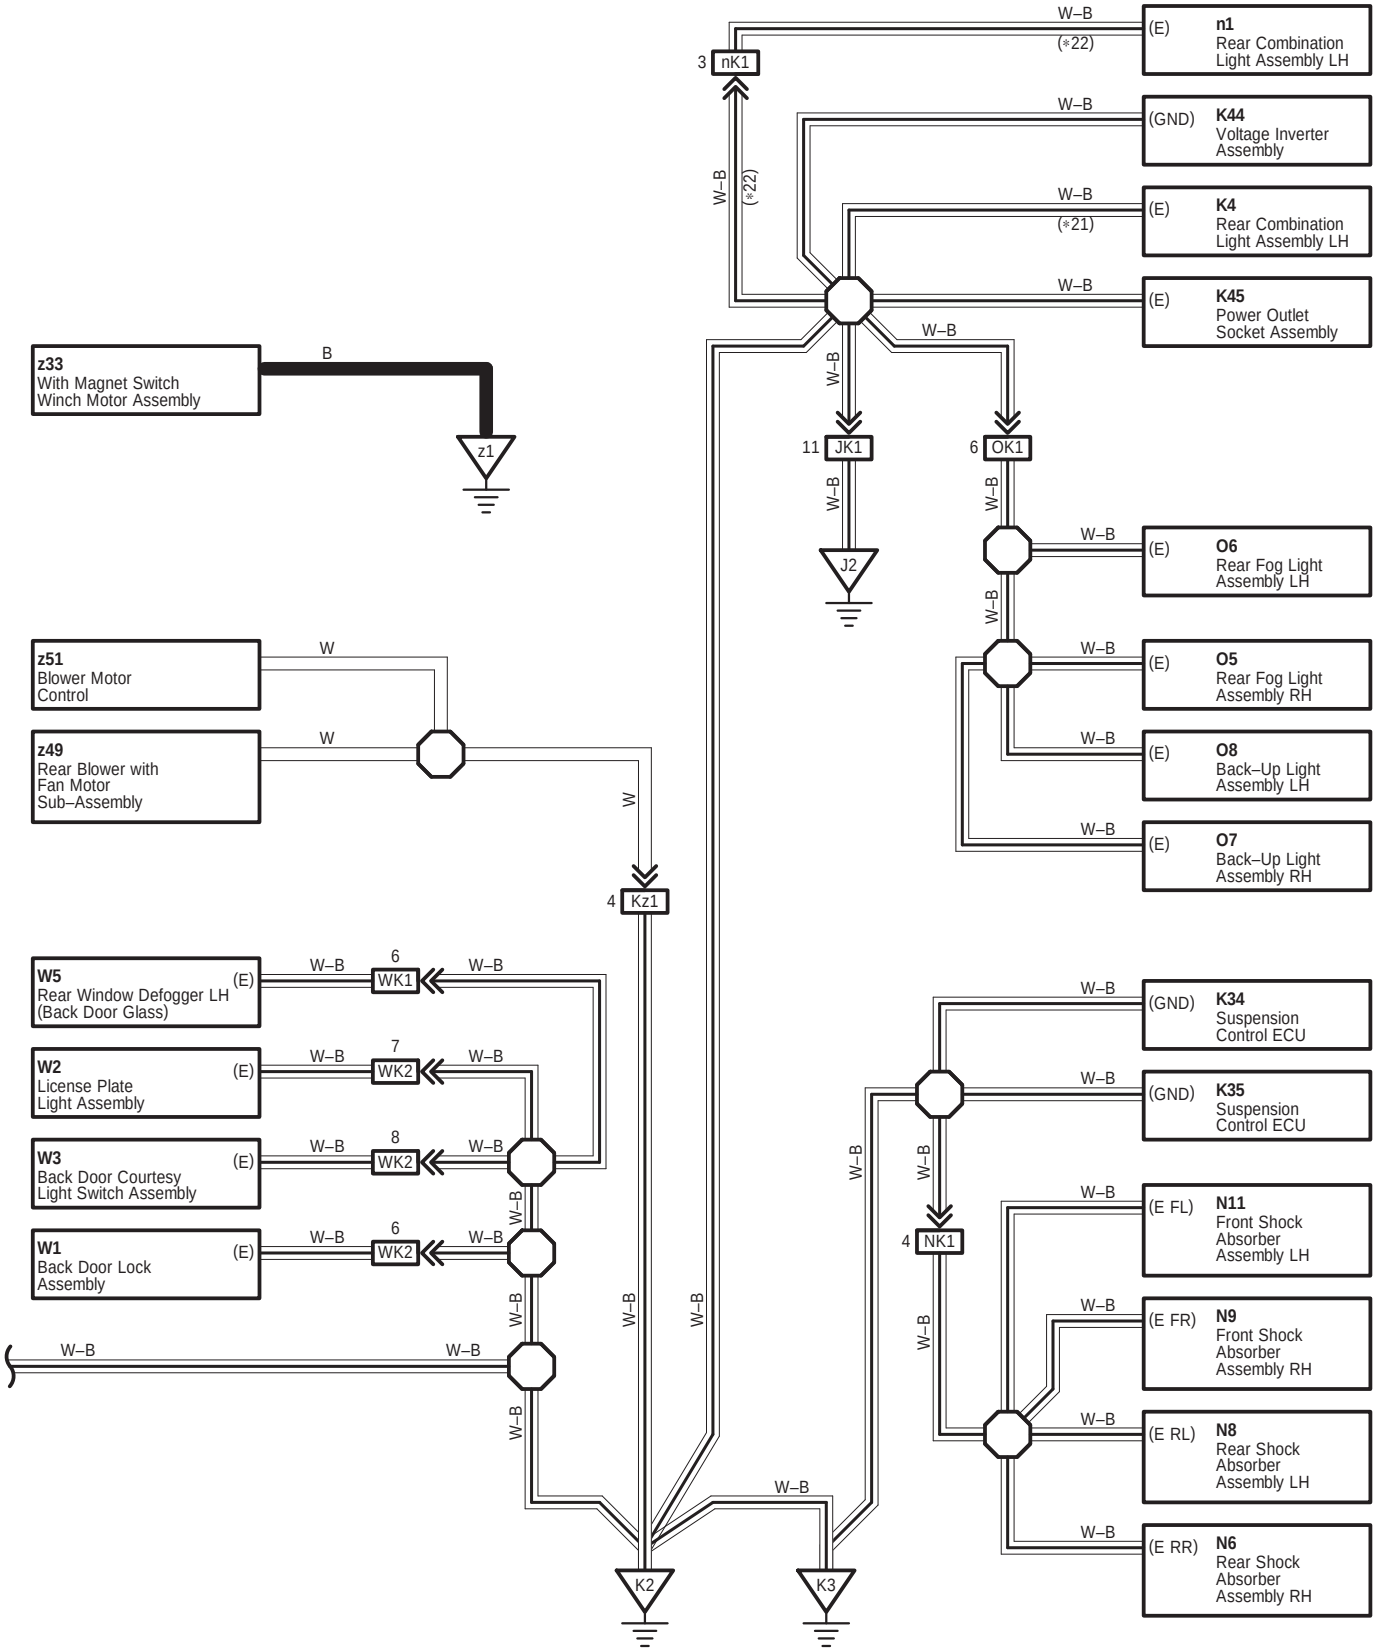


A 34
White

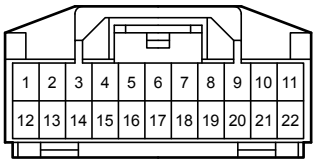


A 37
Blue

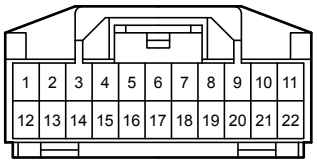


C 42
White

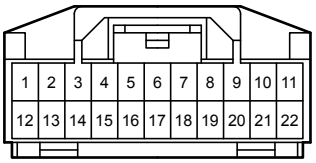


C 44
Blue

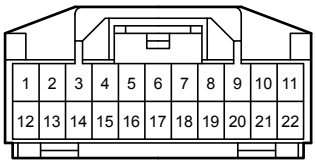


C 94
Gray

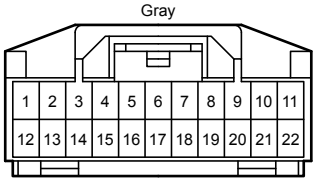


C 95
Black

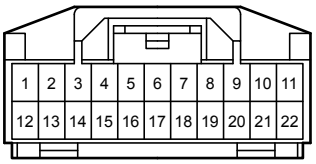


E 58

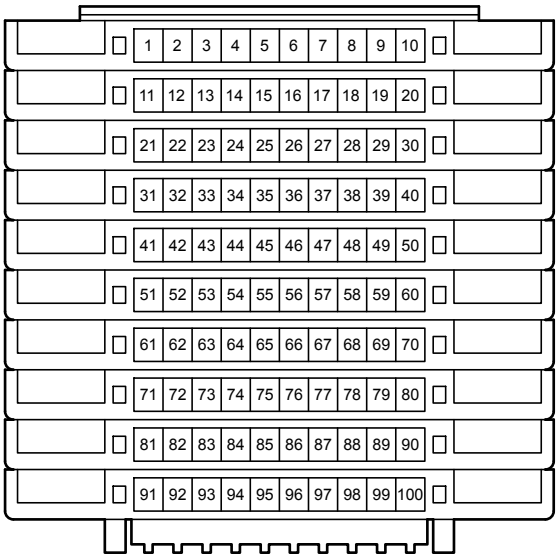


E 59

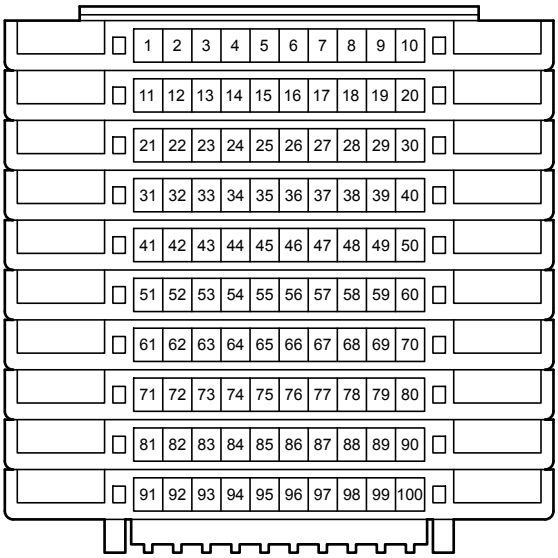


E 60

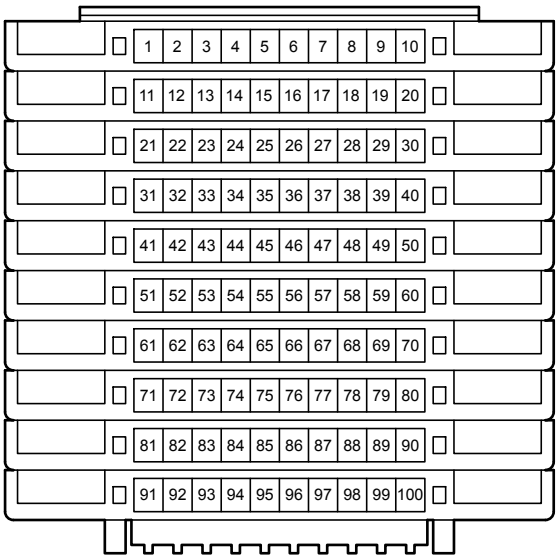


E 61

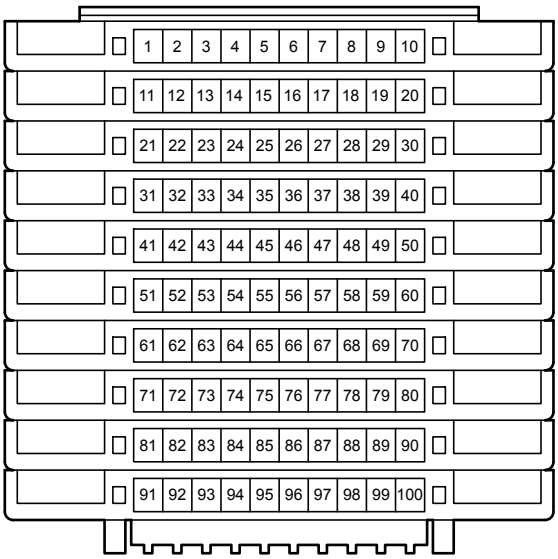


E 62
White

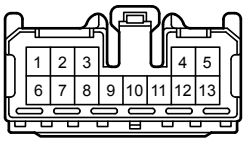


E 66
White

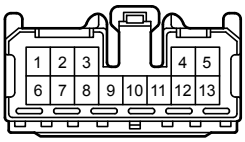


E 67
White

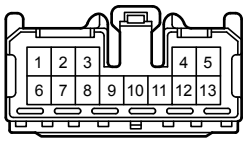


E115
White

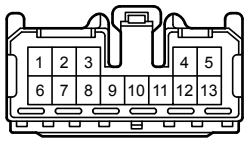


S 15
White

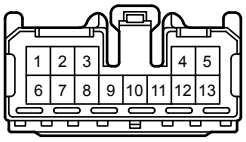


S 16
White

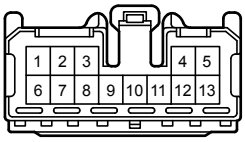


c 12
White




c 23
White




1A
White

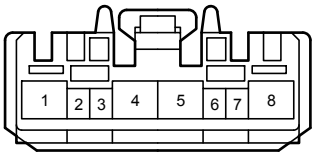


1B
White

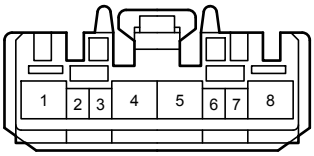


2B
White

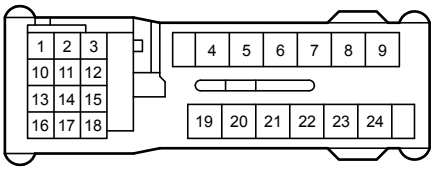


2D
White

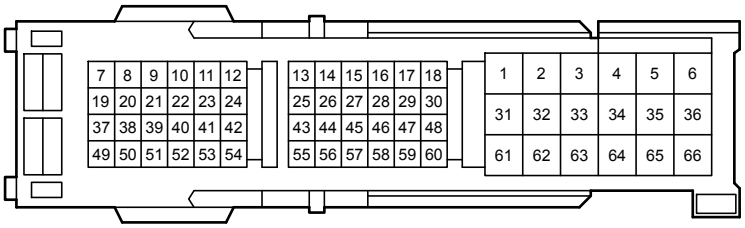


3C
White

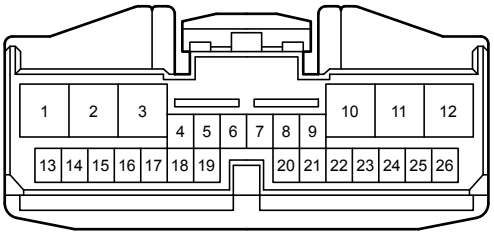


AA1
Gray

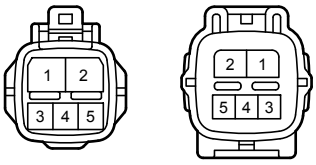


AA3
Gray

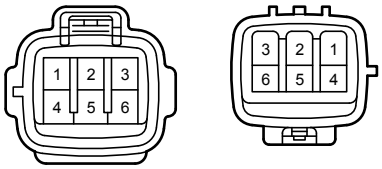


AD2
Black

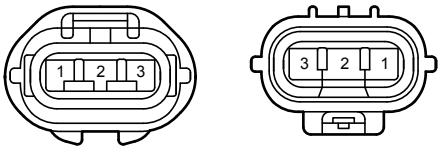


AK1
Blue

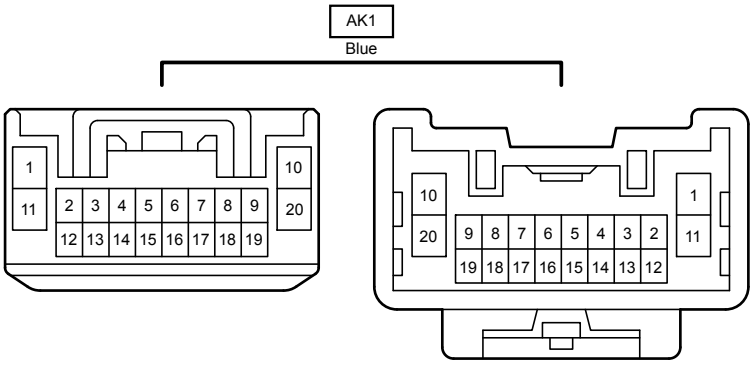


AL1
White

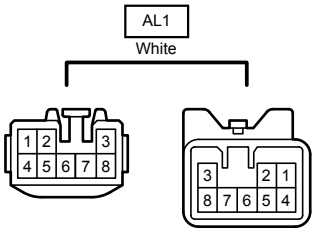


BA1
Black

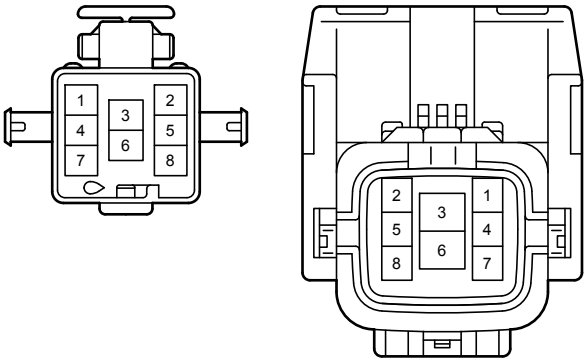


CA1
White

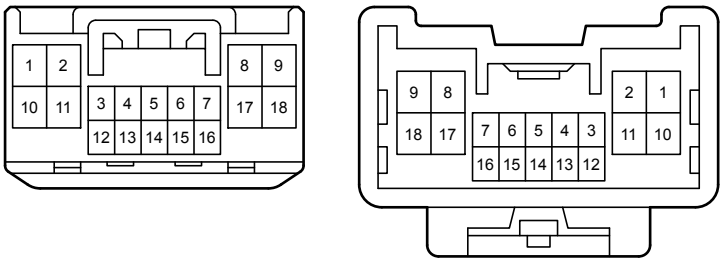

CA4
White

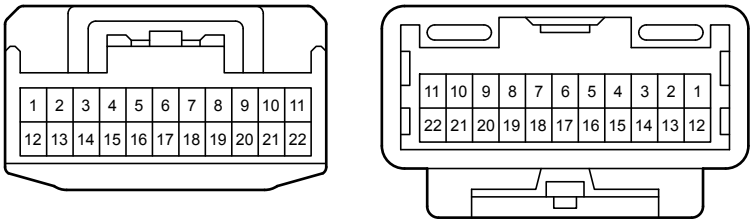


DC1
Black

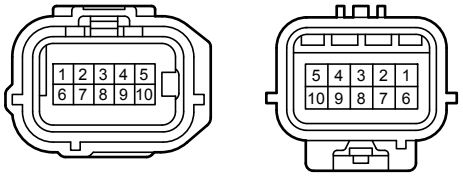


EA2

White


Gray

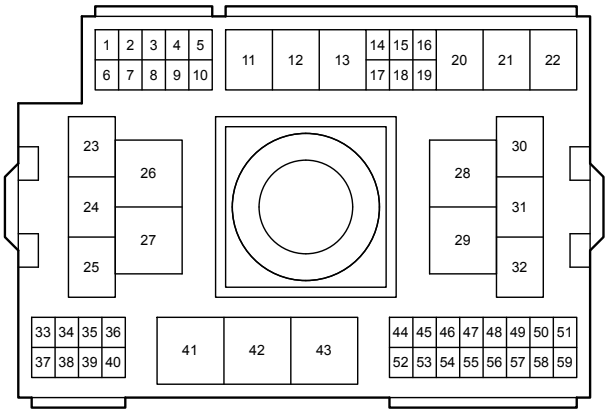


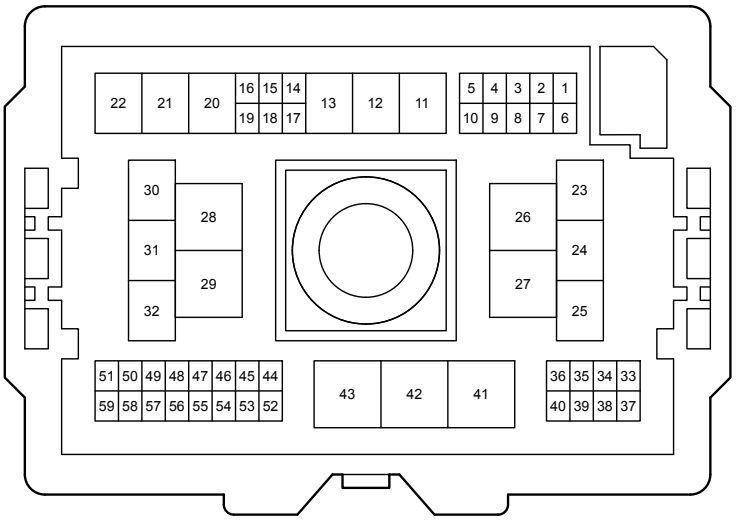



EA3


White

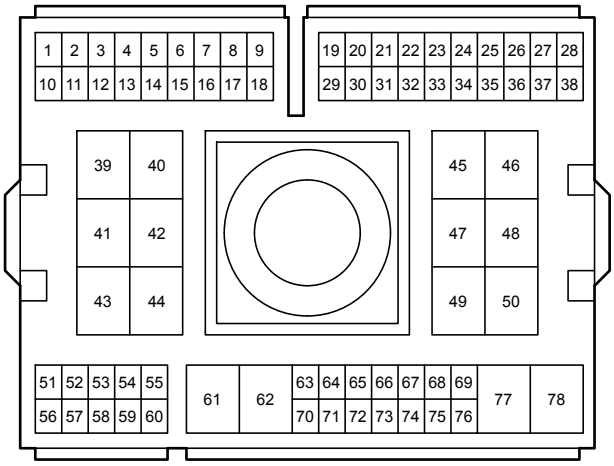


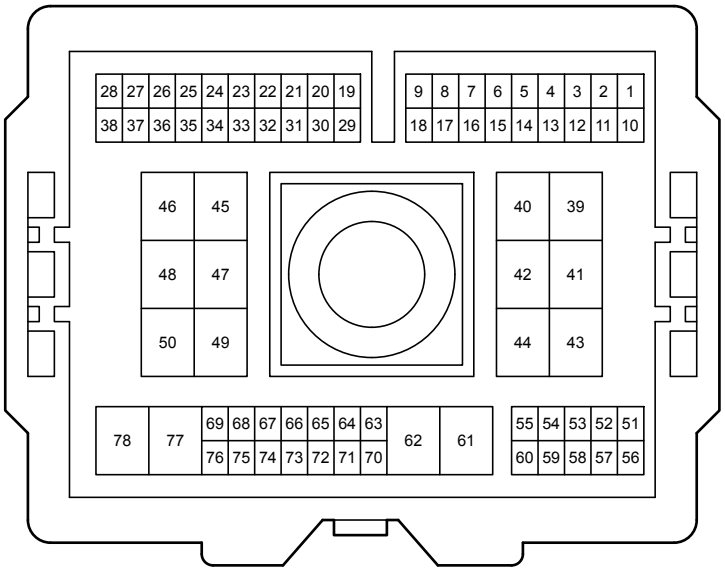


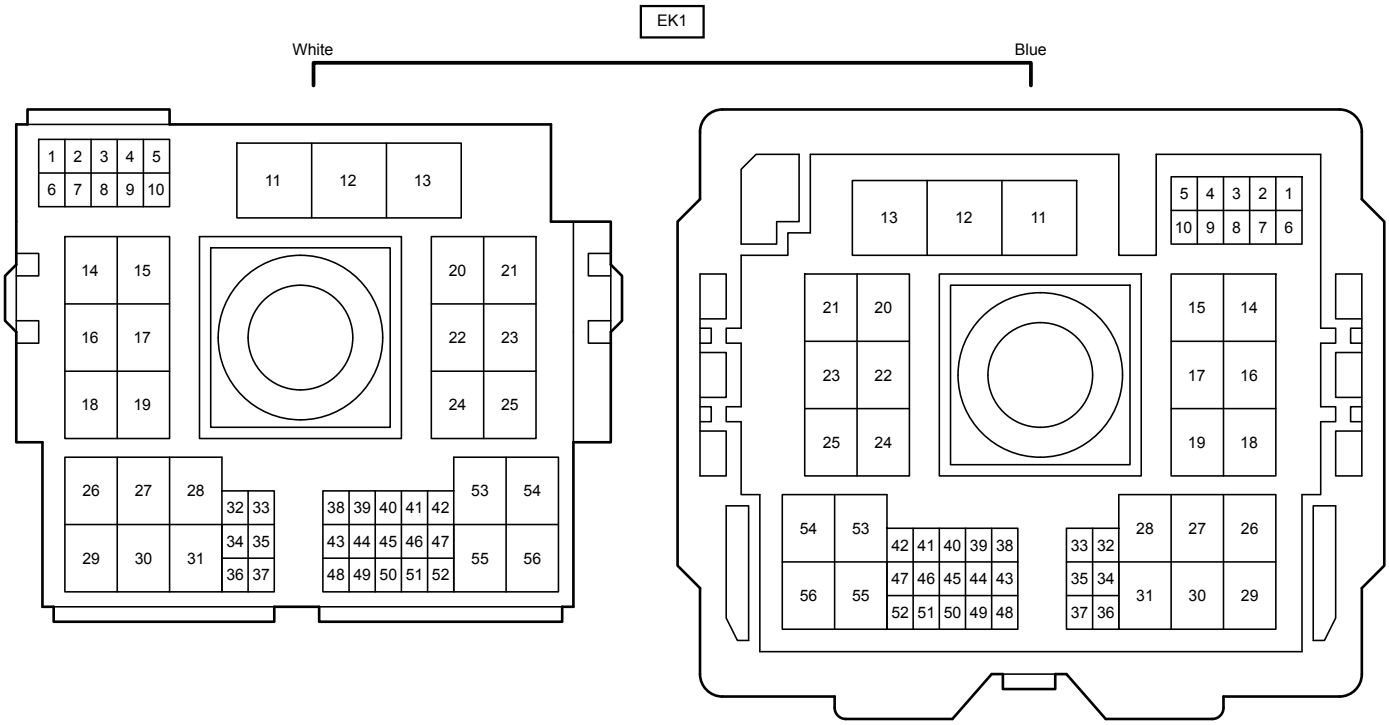
EK1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
5 4 3 2 1
10 9 8 7 6
21 20
23 22
25 24
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29

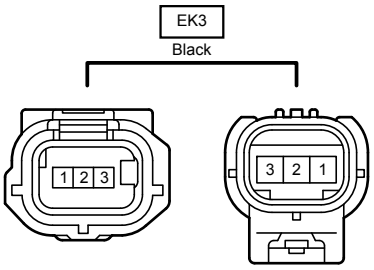

EK3
Black
1 2 3
3 2 1

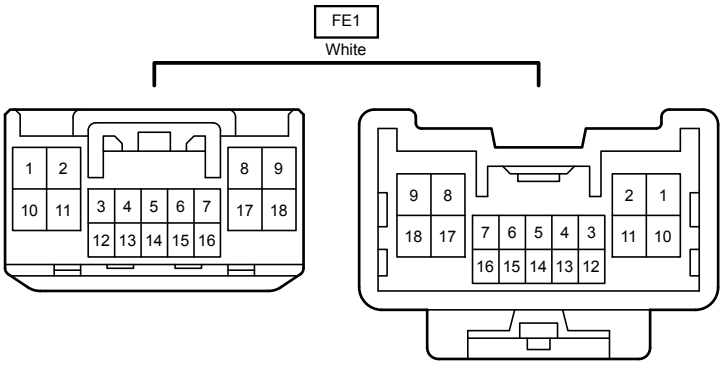
FE1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

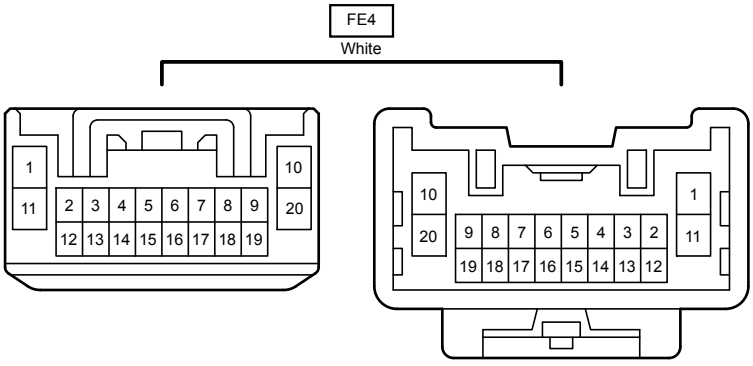

FE4
White
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11

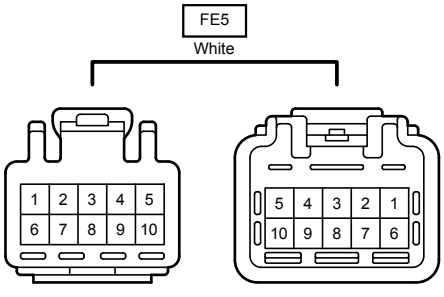
FE5
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6


Fg1
Black

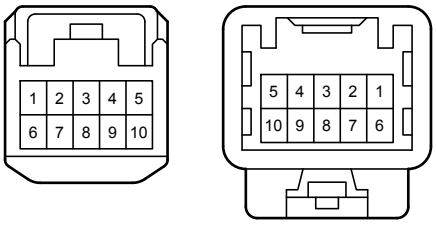


GE1
White

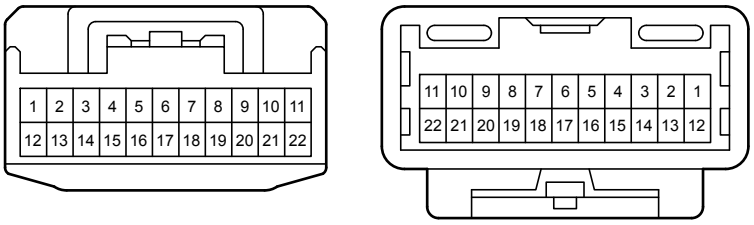


GE2
White

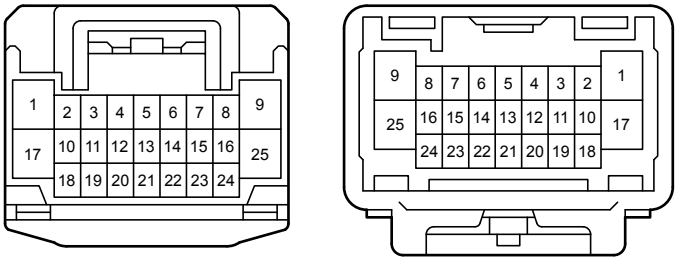


IE2
Blue

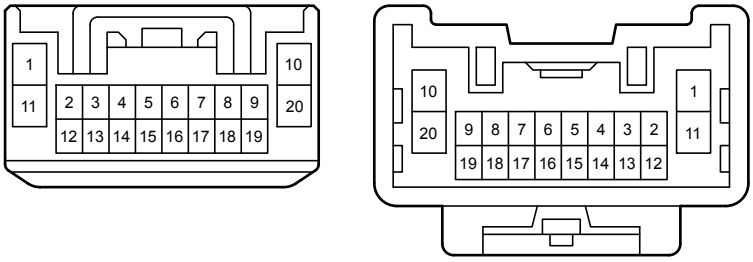


IE3
White

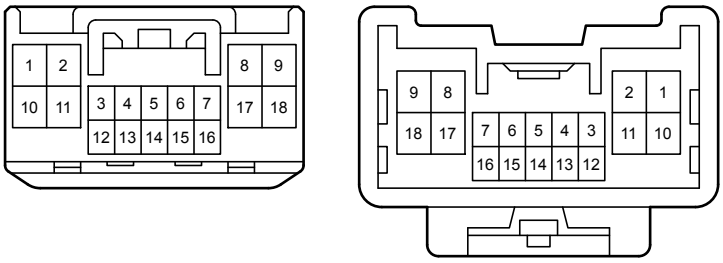


IE5
Blue

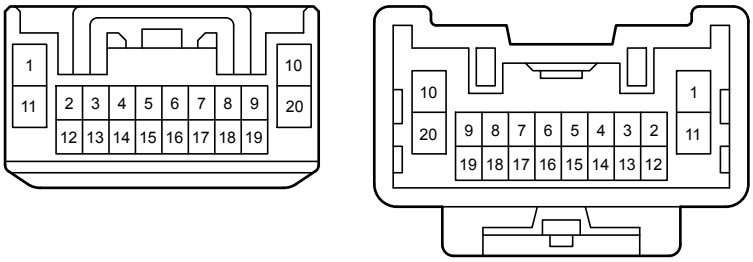


IE6
White

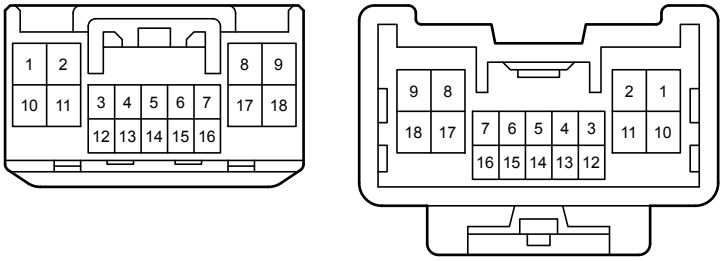


IE7
White

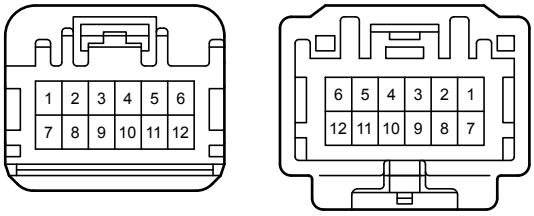


JK1
White

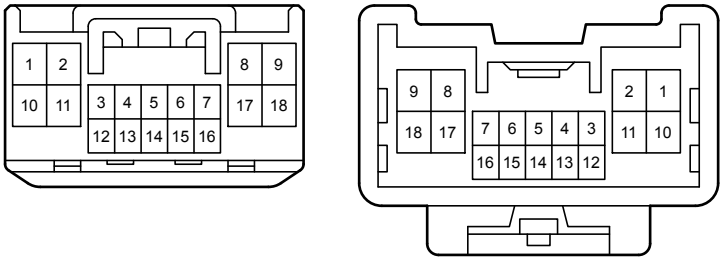


JL1
White

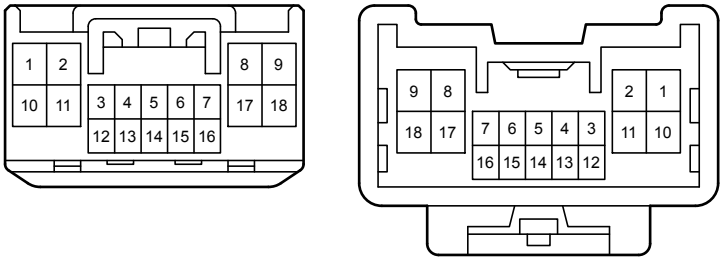


KN1
White

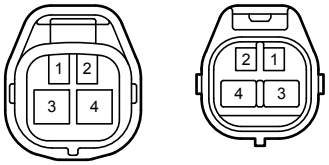


Kc1
White

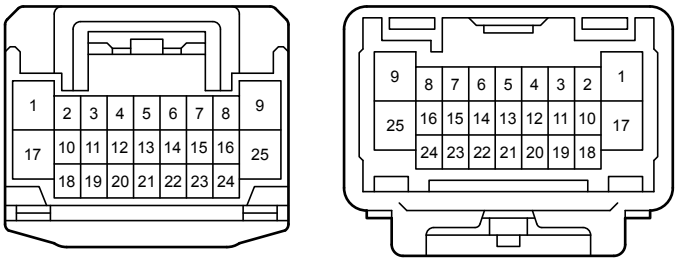


Kd1
White

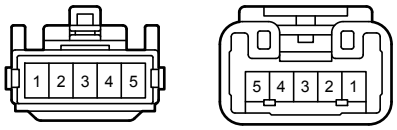


Kz1
Blue

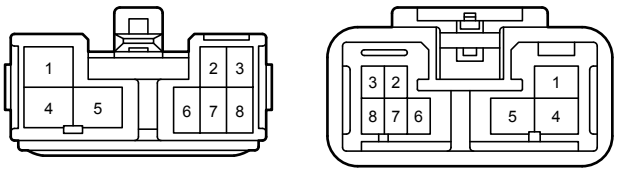


LL1
White




LL3
White

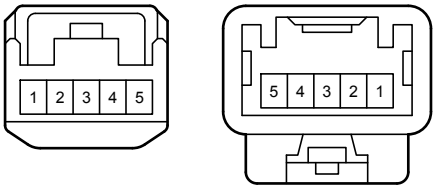


Lc1
White

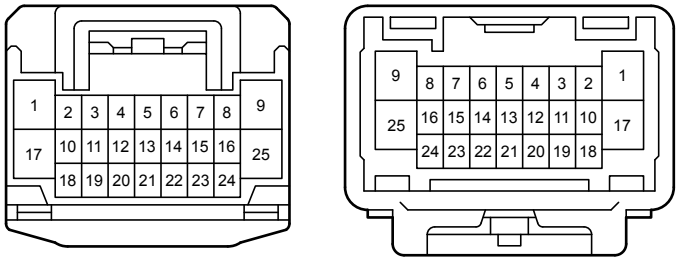


Ld1
White

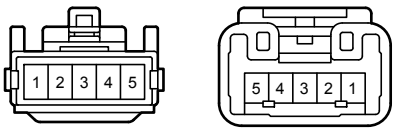


MK1
White

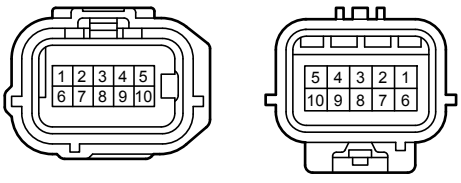


NK1
White

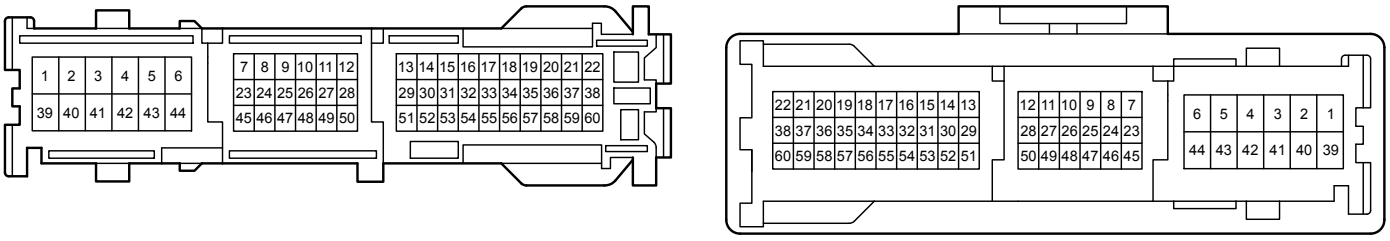


Nf1
White

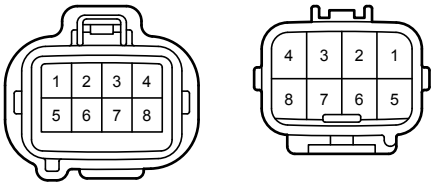


OK1
Black

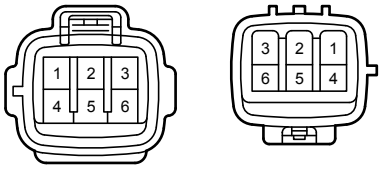


RE2
Blue

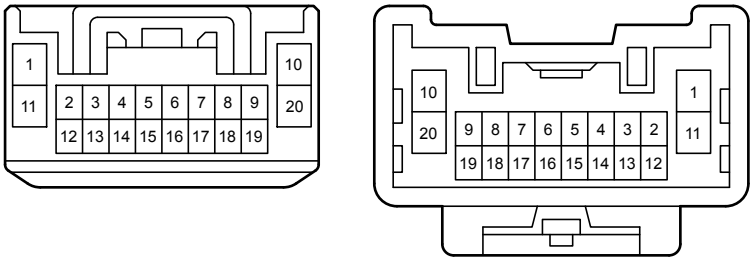


RF1
Gray

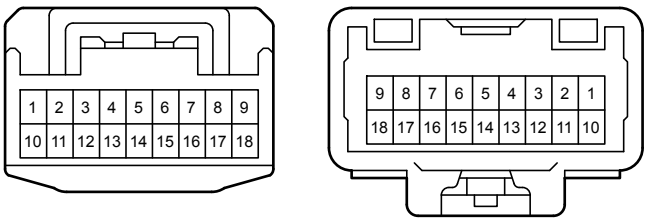


SK1
White

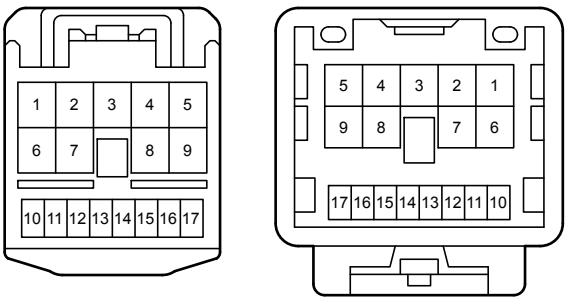


TL1
White

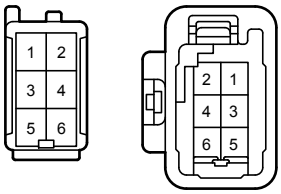


VE1
White

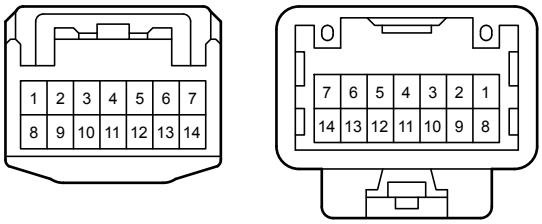


VE3
Gray

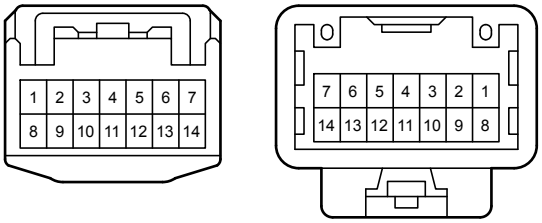


WK1
White

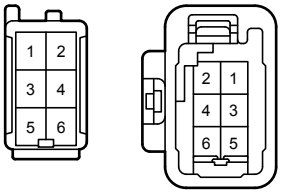


WK2
Gray

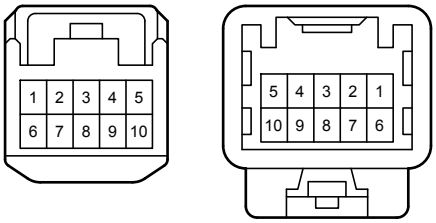


YL1
Blue

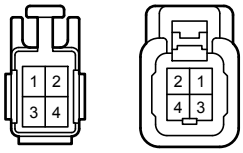


gF1
Black

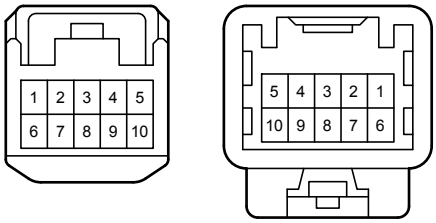


hL1
Black

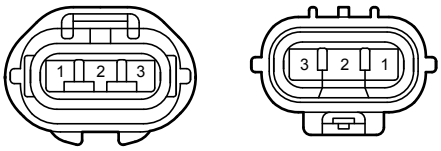


nK1
Blue

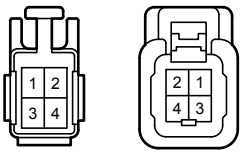

zA1
White

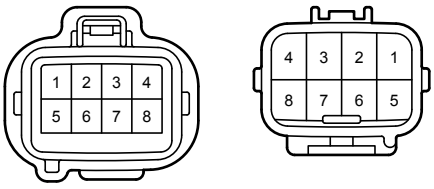

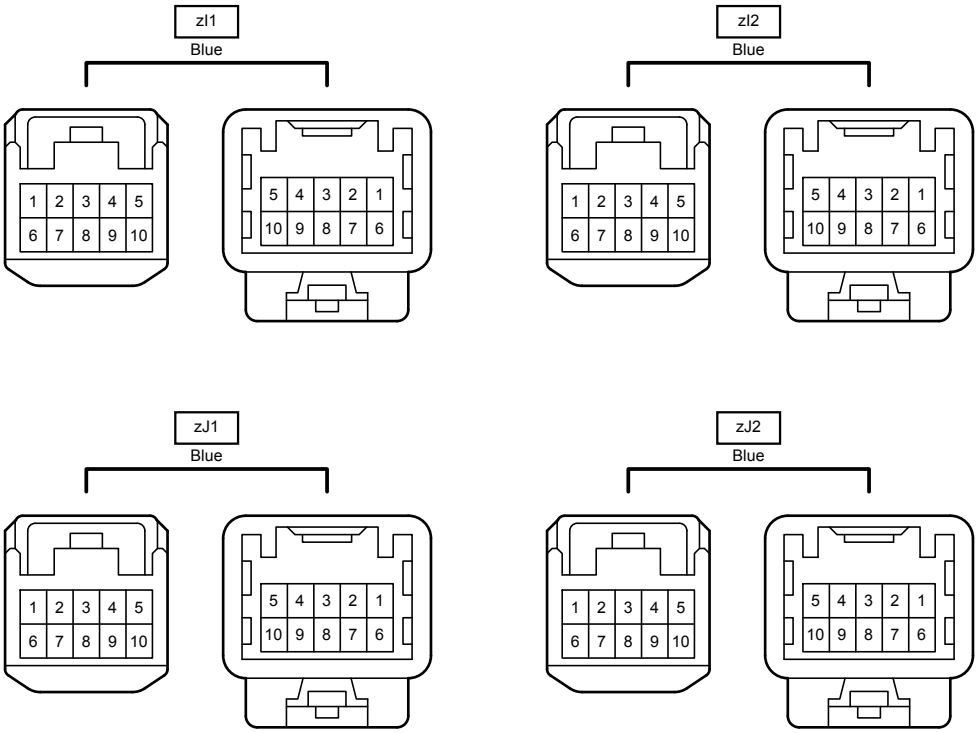
zI1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zI2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6