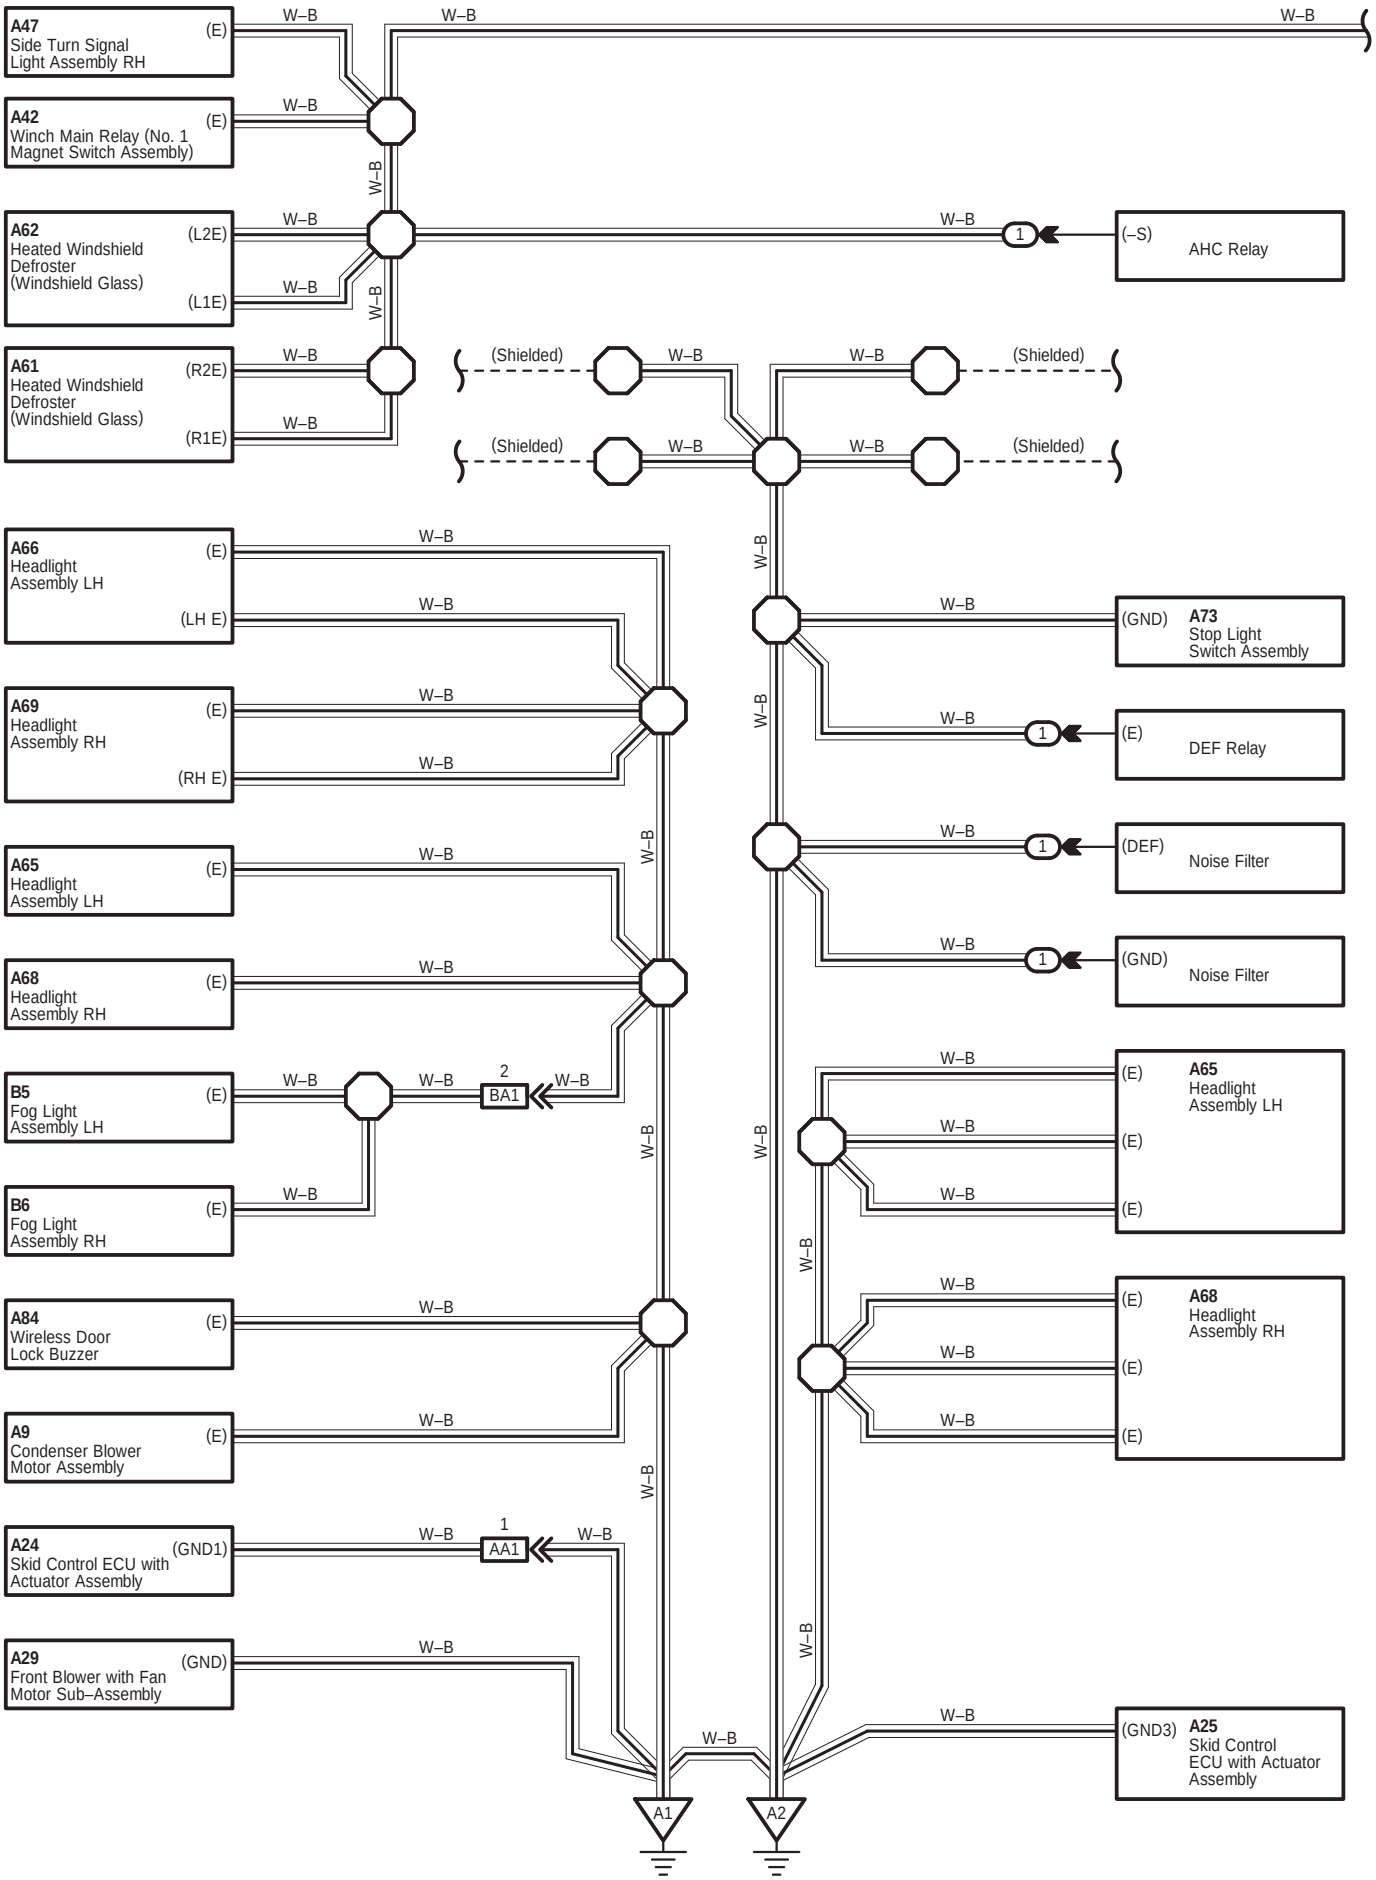
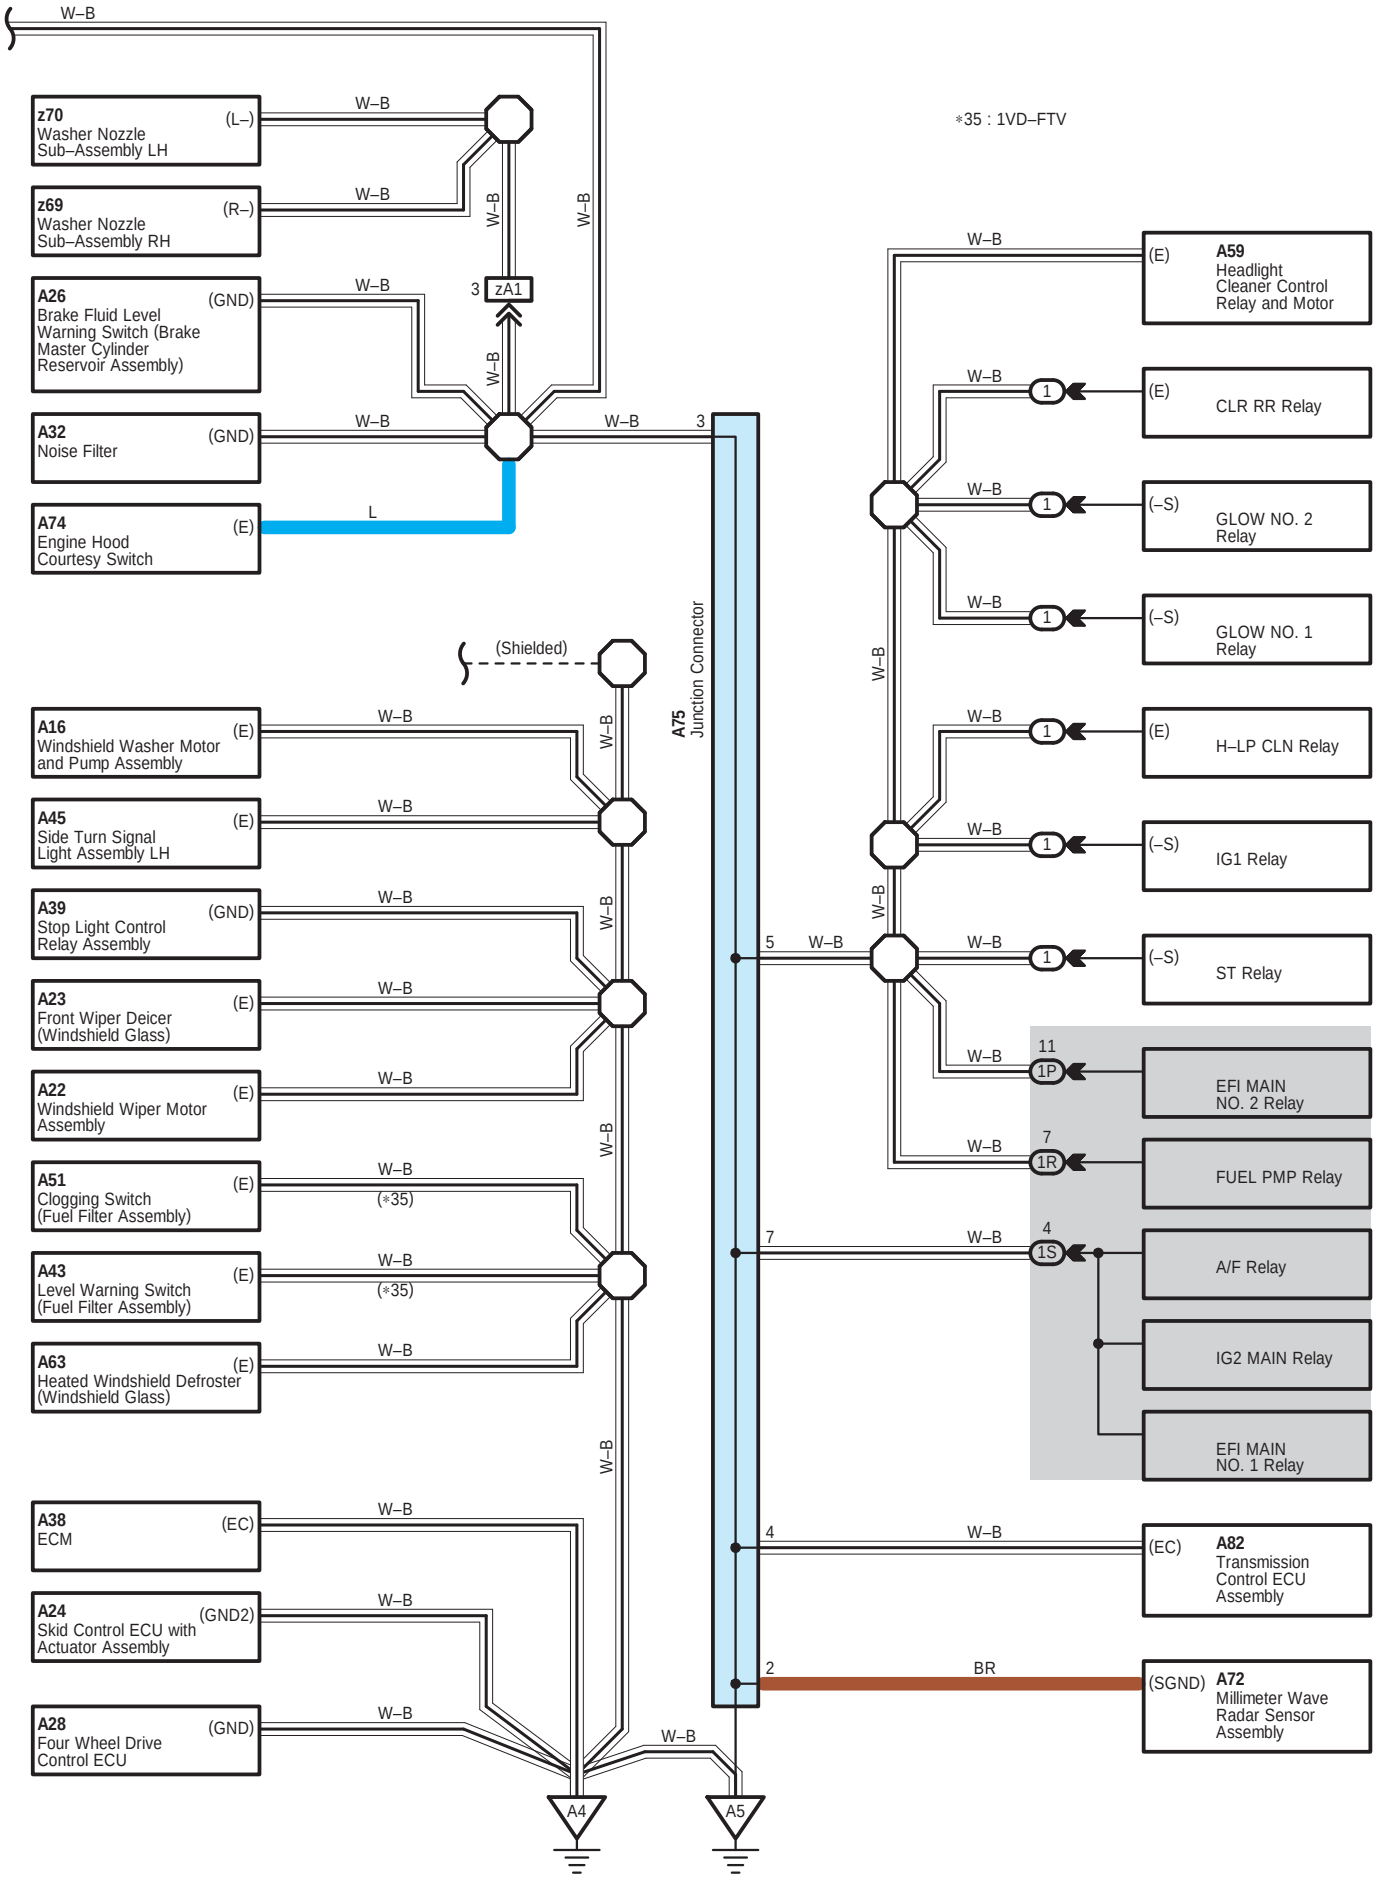
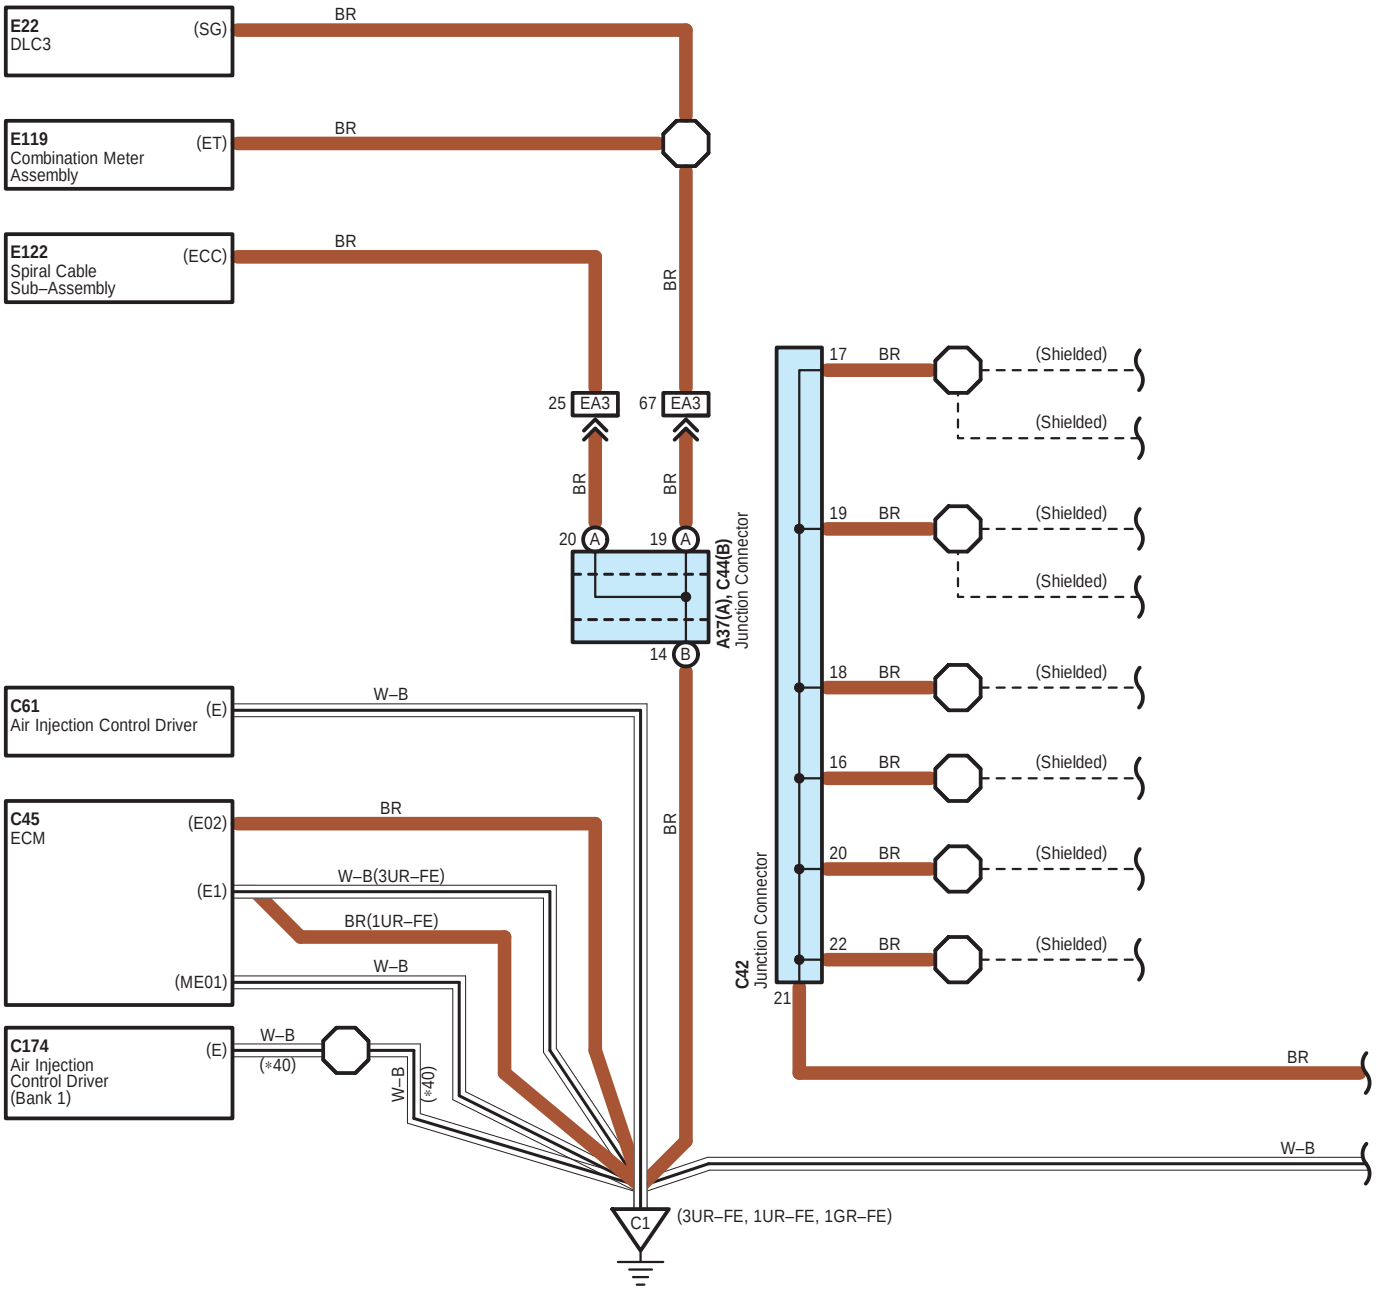
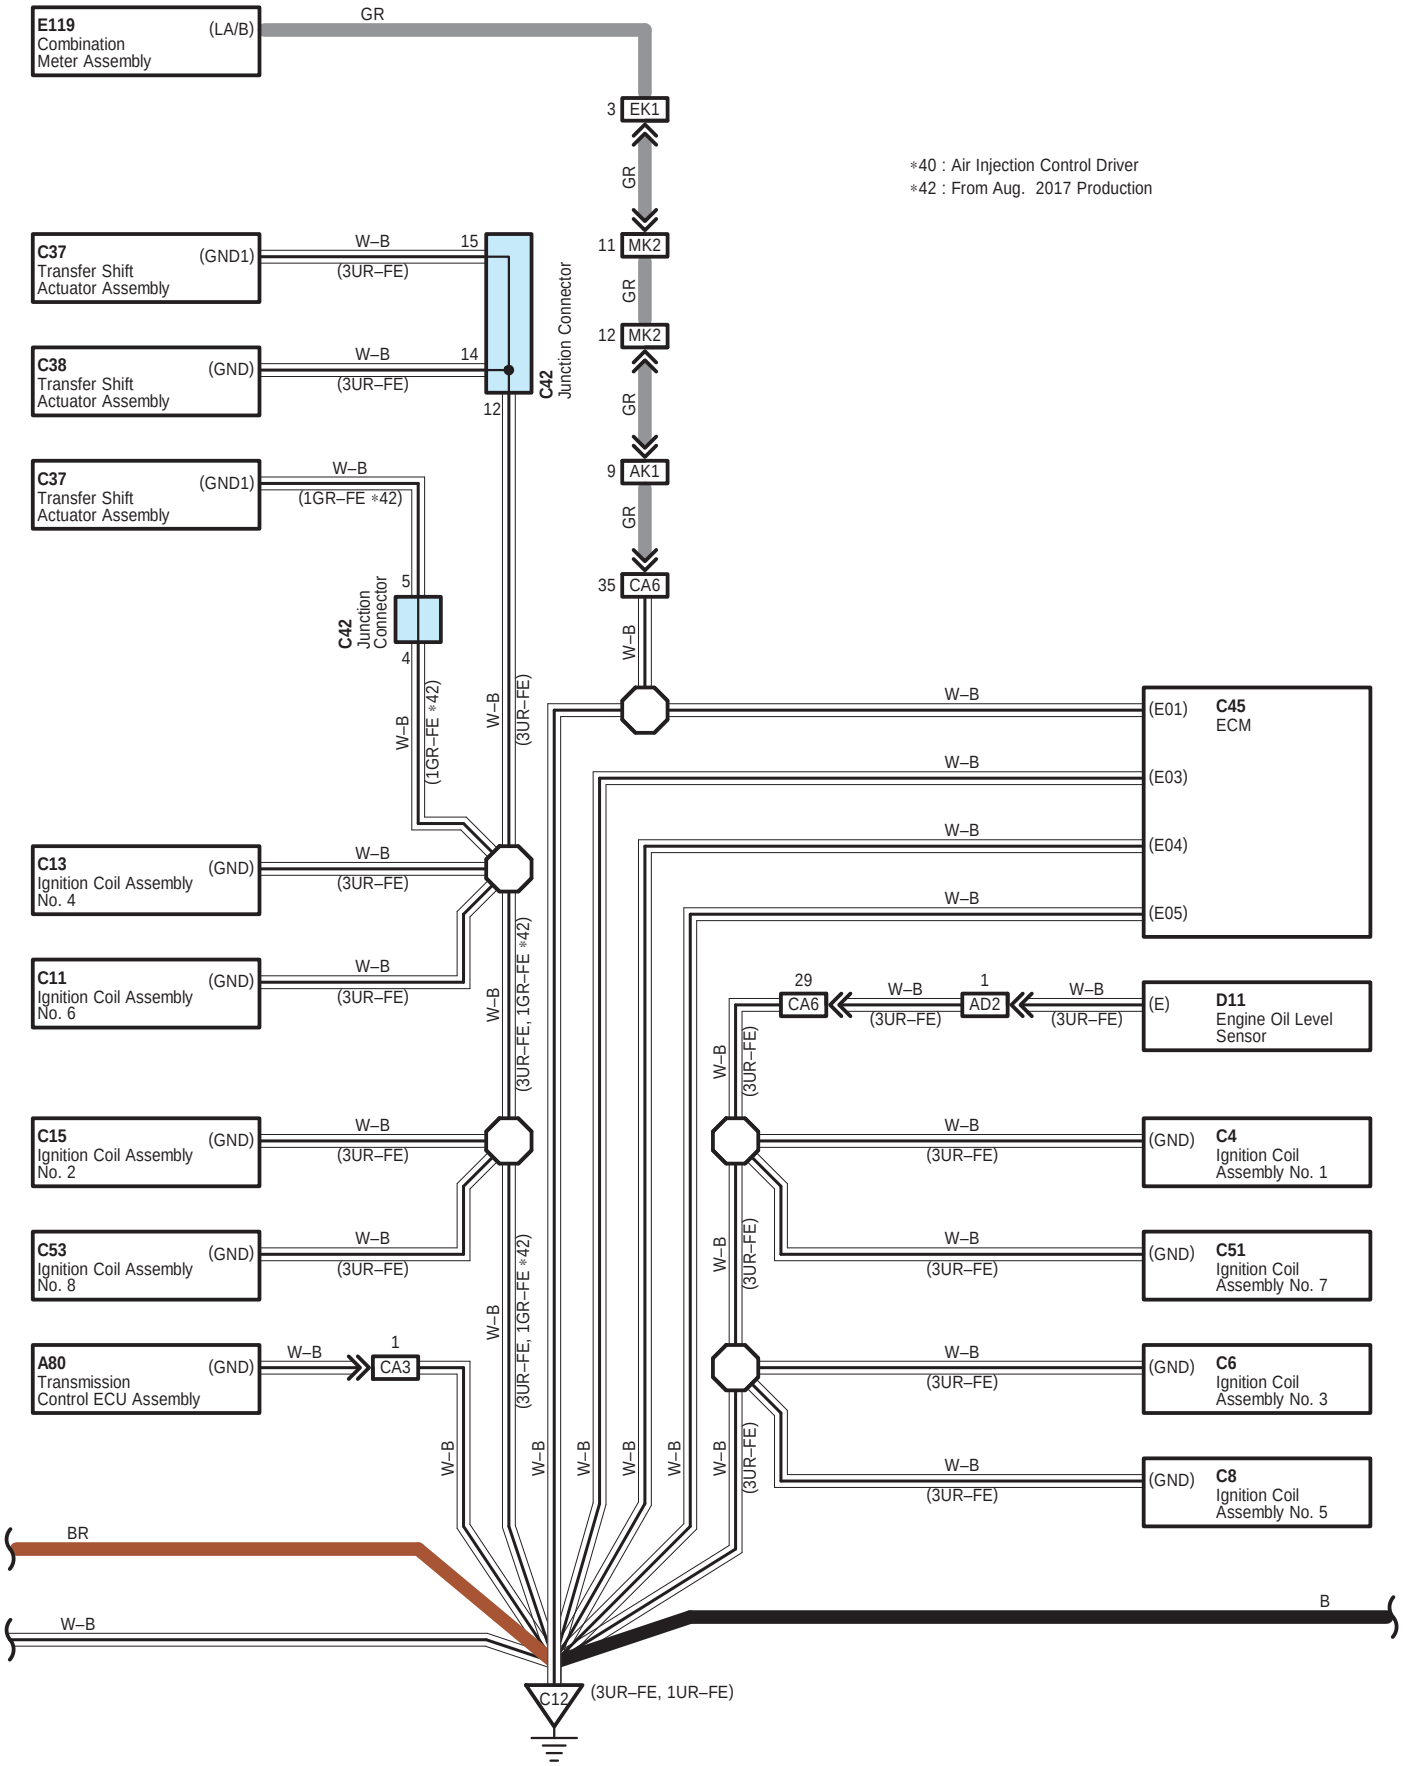
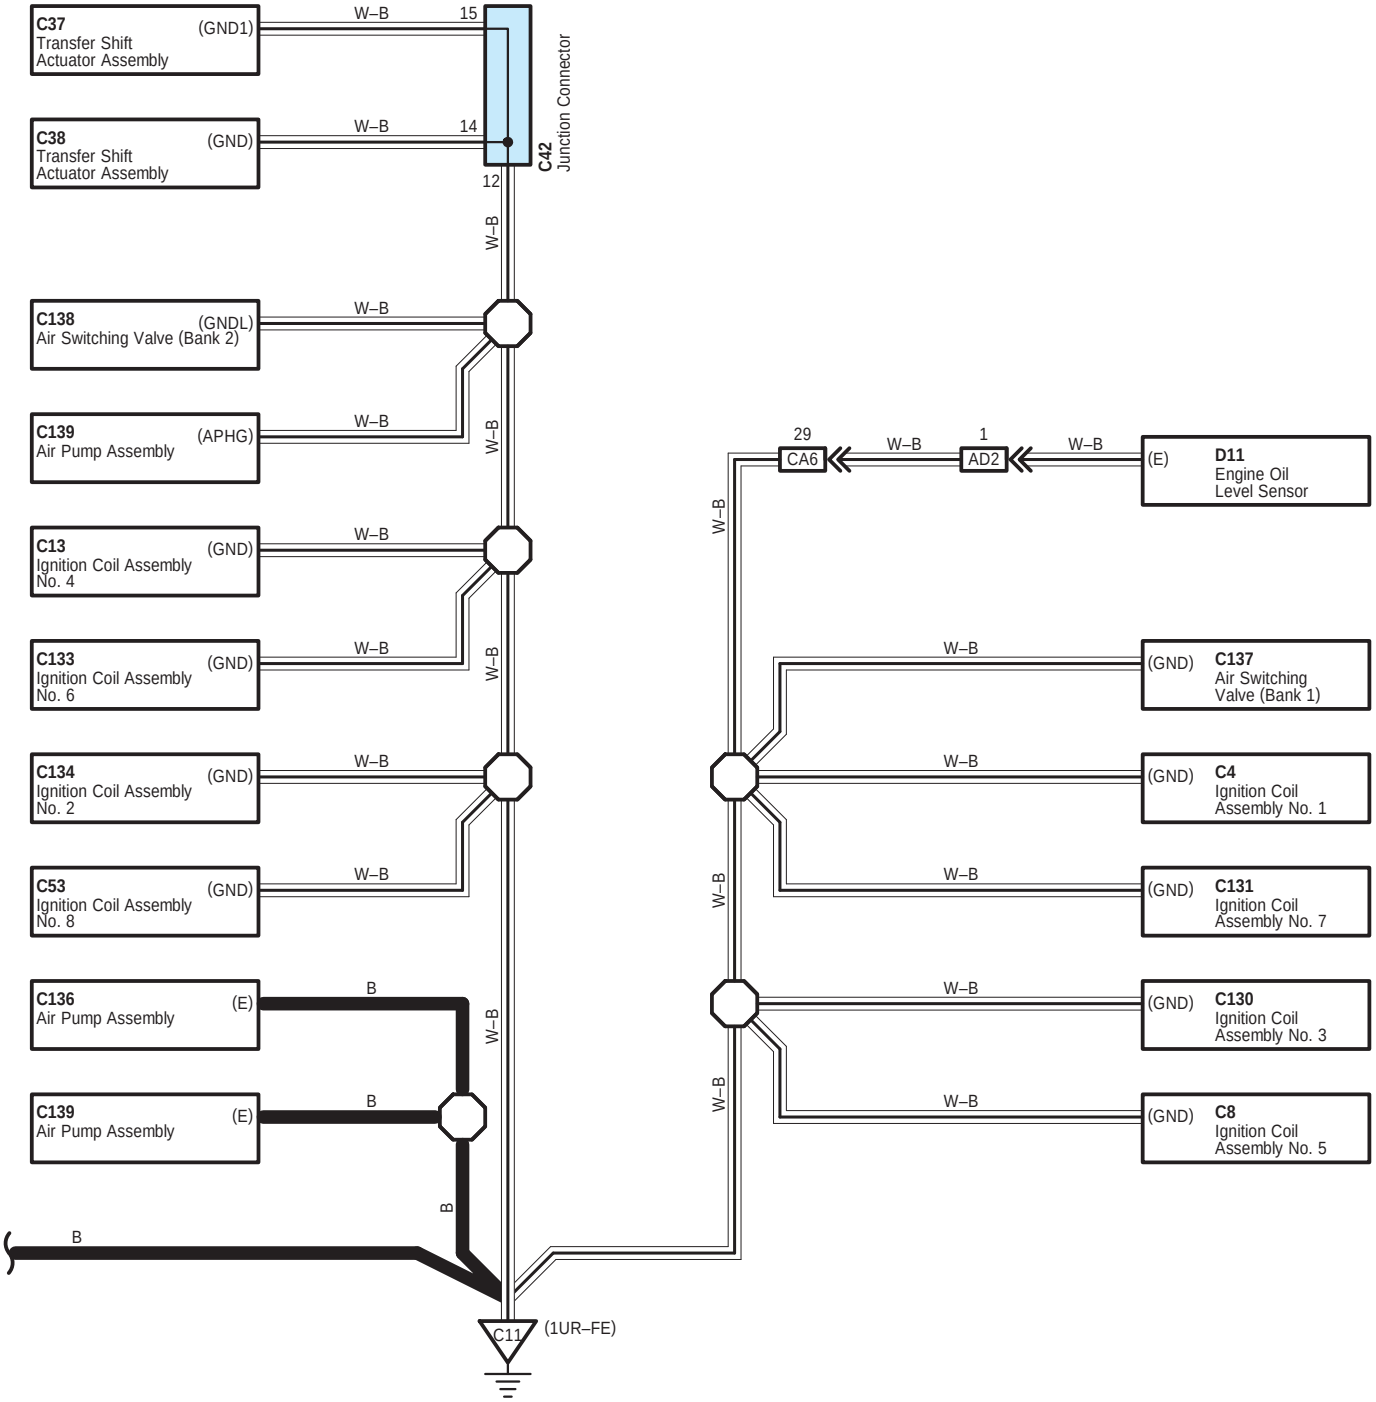
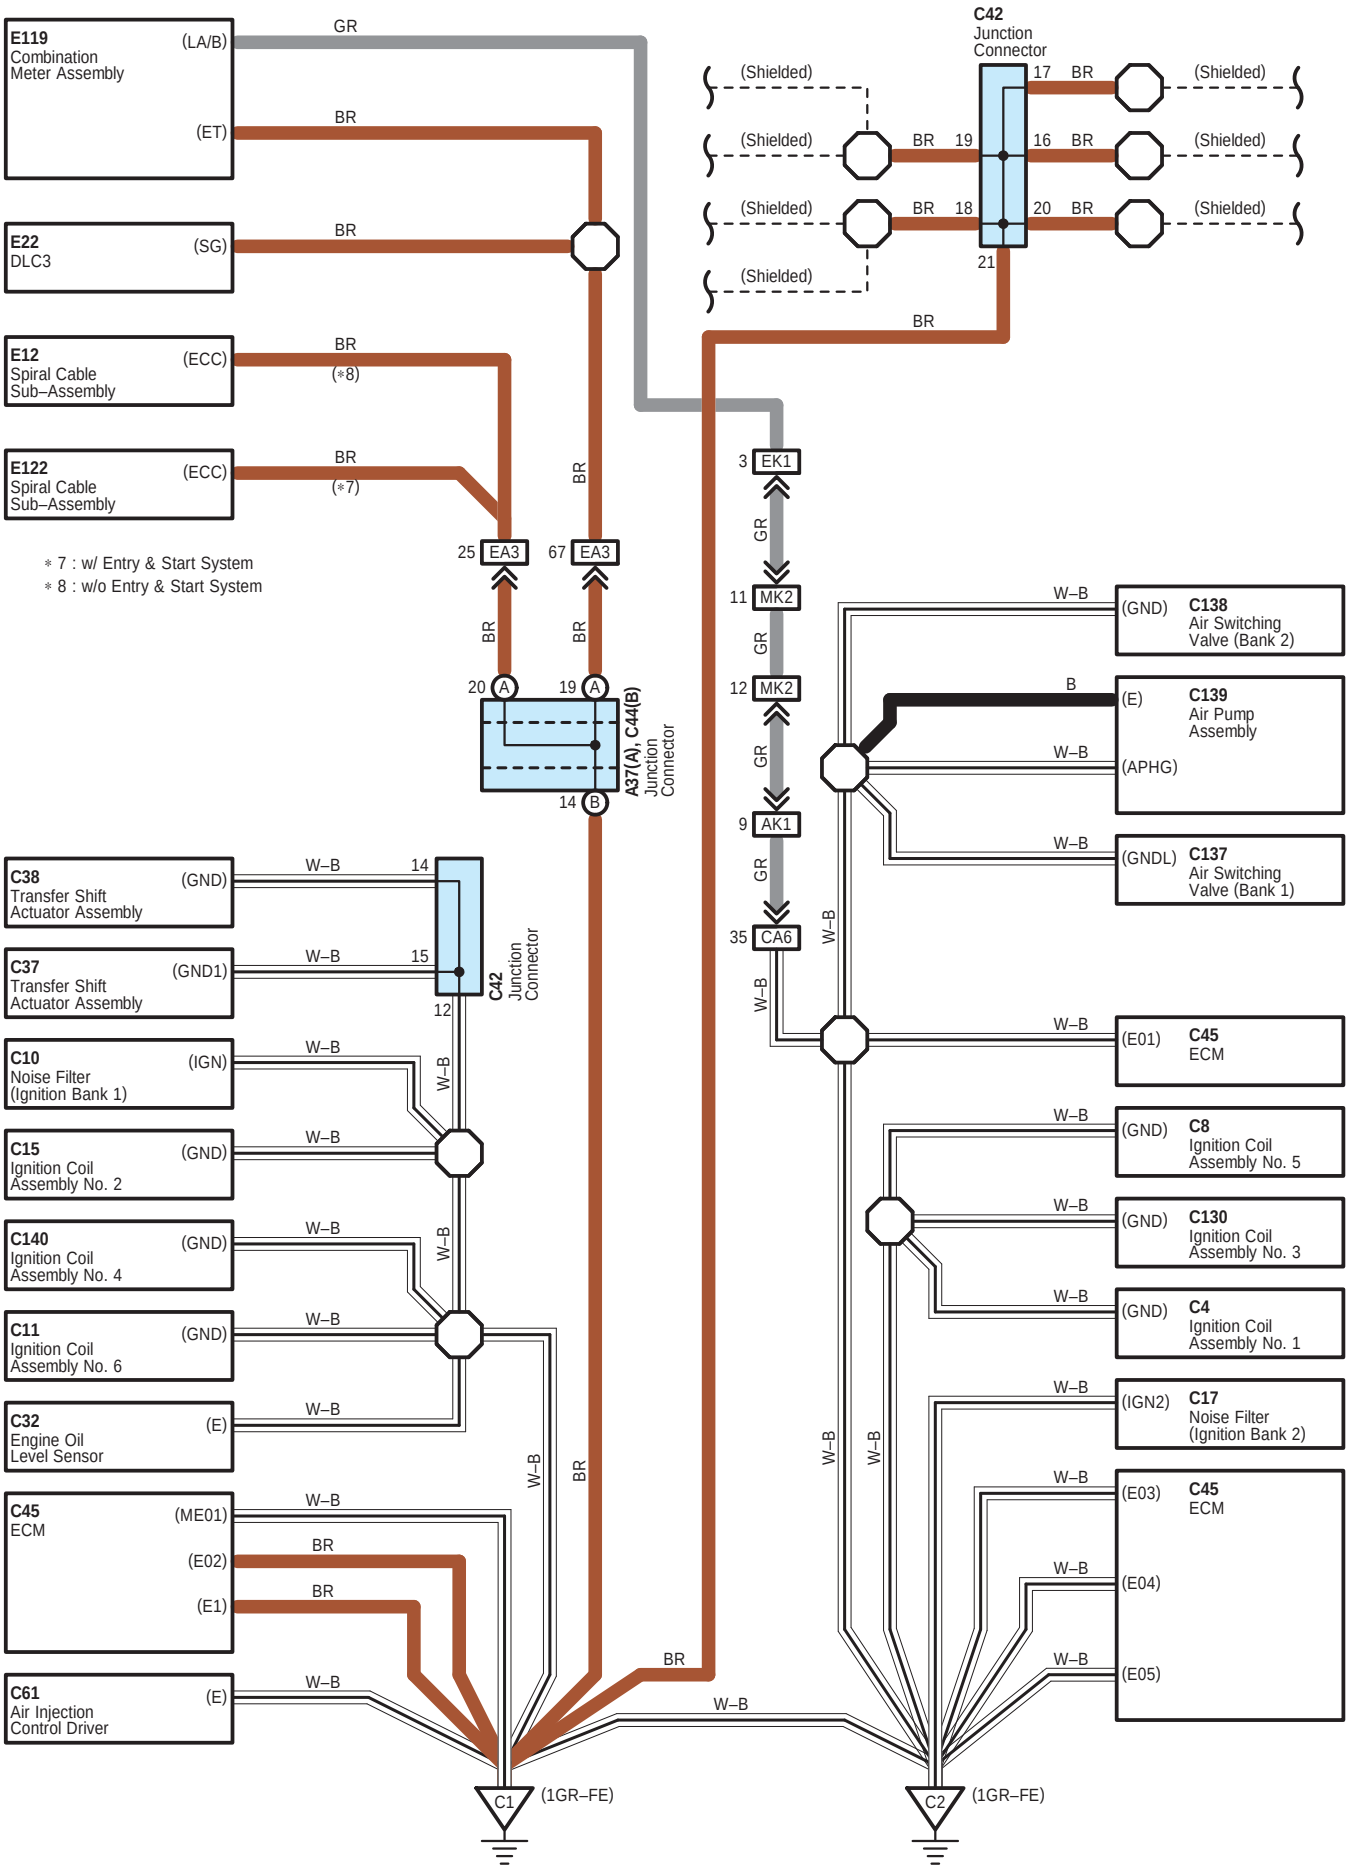

A47
Side Turn Signal
Light Assembly RH
(E)
A42
Winch Main Relay (No. 1
Magnet Switch Assembly)
(E)
A62
Heated Windshield
Defroster
(Windshield Glass)
(L2E)
(L1E)
A61
Heated Windshield
Defroster
(Windshield Glass)
(R2E)
(R1E)
A66
Headlight
Assembly LH
(E)
(LH E)
A69
Headlight
Assembly RH
(E)
(RH E)
A65
Headlight
Assembly LH
(E)
A68
Headlight
Assembly RH
(E)
B5
Fog Light
Assembly LH
(E)
B6
Fog Light
Assembly RH
(E)
A84
Wireless Door
Lock Buzzer
(E)
A9
Condenser Blower
Motor Assembly
(E)
A24
Skid Control ECU with
Actuator Assembly
(GND1)
A29
Front Blower with Fan
Motor Sub–Assembly
(GND)
W–B
(Shielded)
BA1
AA1
1
2
A1
A2
(–S)
AHC Relay
(GND)
A73
Stop Light
Switch Assembly
(E)
DEF Relay
(DEF)
Noise Filter
(GND)
Noise Filter
A65
Headlight
Assembly LH
A68
Headlight
Assembly RH
(GND3)
A25
Skid Control
ECU with Actuator
Assembly



W–B
z70 Washer Nozzle Sub–Assembly LH (L–)
z69 Washer Nozzle Sub–Assembly RH (R–)
A26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly) (GND)
A32 Noise Filter (GND)
A74 Engine Hood Courtesy Switch (E)
L
3 zA1
∗35 : 1VD–FTV
A59 Headlight Cleaner Control Relay and Motor (E)
CLR RR Relay (E)
GLOW NO. 2 Relay (–S)
GLOW NO. 1 Relay (–S)
H–LP CLN Relay (E)
IG1 Relay (–S)
ST Relay (–S)
EFI MAIN NO. 2 Relay
FUEL PMP Relay
A/F Relay
IG2 MAIN Relay
EFI MAIN NO. 1 Relay
A75 Junction Connector
(Shielded)
A16 Windshield Washer Motor and Pump Assembly (E)
A45 Side Turn Signal Light Assembly LH (E)
A39 Stop Light Control Relay Assembly (GND)
A23 Front Wiper Deicer (Windshield Glass) (E)
A22 Windshield Wiper Motor Assembly (E)
A51 Clogging Switch (Fuel Filter Assembly) (E)
(∗35)
A43 Level Warning Switch (Fuel Filter Assembly) (E)
(∗35)
A63 Heated Windshield Defroster (Windshield Glass) (E)
A38 ECM (EC)
A24 Skid Control ECU with Actuator Assembly (GND2)
A28 Four Wheel Drive Control ECU (GND)
A82 Transmission Control ECU Assembly (EC)
A72 Millimeter Wave Radar Sensor Assembly (SGND)
BR
A4
A5


E22
DLC3
(SG)
BR
E119
Combination Meter
Assembly
(ET)
BR
E122
Spiral Cable
Sub–Assembly
(ECC)
BR
BR
25 EA3
67 EA3
BR
BR
20 A
19 A
14 B
A37(A), C44(B)
Junction Connector
C61
Air Injection Control Driver
(E)
W–B
C45
ECM
(E02)
BR
(E1)
W–B(3UR–FE)
BR(1UR–FE)
(ME01)
W–B
C174
Air Injection
Control Driver
(Bank 1)
(E)
W–B
(*40)
W–B
(*40)
BR
W–B
C1
(3UR–FE, 1UR–FE, 1GR–FE)
C42
Junction Connector
17 BR (Shielded)
(Shielded)
19 BR (Shielded)
(Shielded)
18 BR (Shielded)
16 BR (Shielded)
20 BR (Shielded)
22 BR (Shielded)
21
BR



E119
Combination
Meter Assembly
(LA/B)
GR
3 EK1
GR
11 MK2
GR
12 MK2
GR
9 AK1
GR
35 CA6
W–B
∗40 : Air Injection Control Driver
∗42 : From Aug. 2017 Production
C37
Transfer Shift
Actuator Assembly
(GND1)
W–B
(3UR–FE)
15
C38
Transfer Shift
Actuator Assembly
(GND)
W–B
(3UR–FE)
14
12
C42
Junction Connector
C37
Transfer Shift
Actuator Assembly
(GND1)
W–B
(1GR–FE ∗42)
C42
Junction
Connector
5
4
W–B
(1GR–FE ∗42)
W–B
(3UR–FE)
C13
Ignition Coil Assembly
No. 4
(GND)
W–B
(3UR–FE)
C11
Ignition Coil Assembly
No. 6
(GND)
W–B
(3UR–FE)
W–B
(3UR–FE, 1GR–FE ∗42)
C15
Ignition Coil Assembly
No. 2
(GND)
W–B
(3UR–FE)
C53
Ignition Coil Assembly
No. 8
(GND)
W–B
(3UR–FE)
W–B
(3UR–FE, 1GR–FE ∗42)
A80
Transmission
Control ECU Assembly
(GND)
W–B
1
CA3
W–B
W–B
W–B
W–B
W–B
W–B
W–B
(E01)
C45
ECM
(E03)
(E04)
(E05)
29
CA6
W–B
(3UR–FE)
1
AD2
W–B
(3UR–FE)
(E)
D11
Engine Oil Level
Sensor
W–B
(3UR–FE)
(GND)
C4
Ignition Coil
Assembly No. 1
C51
Ignition Coil
Assembly No. 7
C6
Ignition Coil
Assembly No. 3
C8
Ignition Coil
Assembly No. 5
BR
W–B
B
C12
(3UR–FE, 1UR–FE)



C37
Transfer Shift
Actuator Assembly
(GND1)
W–B
15
C38
Transfer Shift
Actuator Assembly
(GND)
W–B
14
C42
Junction Connector
12
W–B
C138
Air Switching Valve (Bank 2)
(GNDL)
W–B
C139
Air Pump Assembly
(APHG)
W–B
W–B
C13
Ignition Coil Assembly
No. 4
(GND)
W–B
C133
Ignition Coil Assembly
No. 6
(GND)
W–B
W–B
C134
Ignition Coil Assembly
No. 2
(GND)
W–B
C53
Ignition Coil Assembly
No. 8
(GND)
W–B
C136
Air Pump Assembly
(E)
B
C139
Air Pump Assembly
(E)
B
W–B
B
B
C11
(1UR–FE)
29
CA6
W–B
1
AD2
W–B
(E)
D11
Engine Oil
Level Sensor
W–B
W–B
(GND)
C137
Air Switching
Valve (Bank 1)
W–B
(GND)
C4
Ignition Coil
Assembly No. 1
W–B
(GND)
C131
Ignition Coil
Assembly No. 7
W–B
(GND)
C130
Ignition Coil
Assembly No. 3
W–B
(GND)
C8
Ignition Coil
Assembly No. 5



E119
Combination
Meter Assembly
(LA/B)
(ET)
E22
DLC3
(SG)
E12
Spiral Cable
Sub–Assembly
(ECC)
E122
Spiral Cable
Sub–Assembly
(ECC)
∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
GR
BR
BR
BR
(∗8)
BR
(∗7)
25 EA3
67 EA3
20 A
19 A
14 B
A37(A), C44(B)
Junction
Connector
C42
Junction
Connector
(Shielded)
17 BR
16 BR
20 BR
BR 19
BR 18
21
BR
3 EK1
11 MK2
12 MK2
9 AK1
35 CA6
GR
W–B
C38
Transfer Shift
Actuator Assembly
(GND)
C37
Transfer Shift
Actuator Assembly
(GND1)
C10
Noise Filter
(Ignition Bank 1)
(IGN)
C15
Ignition Coil
Assembly No. 2
(GND)
C140
Ignition Coil
Assembly No. 4
(GND)
C11
Ignition Coil
Assembly No. 6
(GND)
C32
Engine Oil
Level Sensor
(E)
C45
ECM
(ME01)
(E02)
(E1)
C61
Air Injection
Control Driver
(E)
14
15
12
C42
Junction
Connector
C1
(1GR–FE)
C2
(1GR–FE)
C138
Air Switching
Valve (Bank 2)
(GND)
C139
Air Pump
Assembly
(E)
(APHG)
B
C137
Air Switching
Valve (Bank 1)
(GNDL)
C45
ECM
(E01)
C8
Ignition Coil
Assembly No. 5
(GND)
C130
Ignition Coil
Assembly No. 3
(GND)
C4
Ignition Coil
Assembly No. 1
(GND)
C17
Noise Filter
(Ignition Bank 2)
(IGN2)
C45
ECM
(E03)
(E04)
(E05)

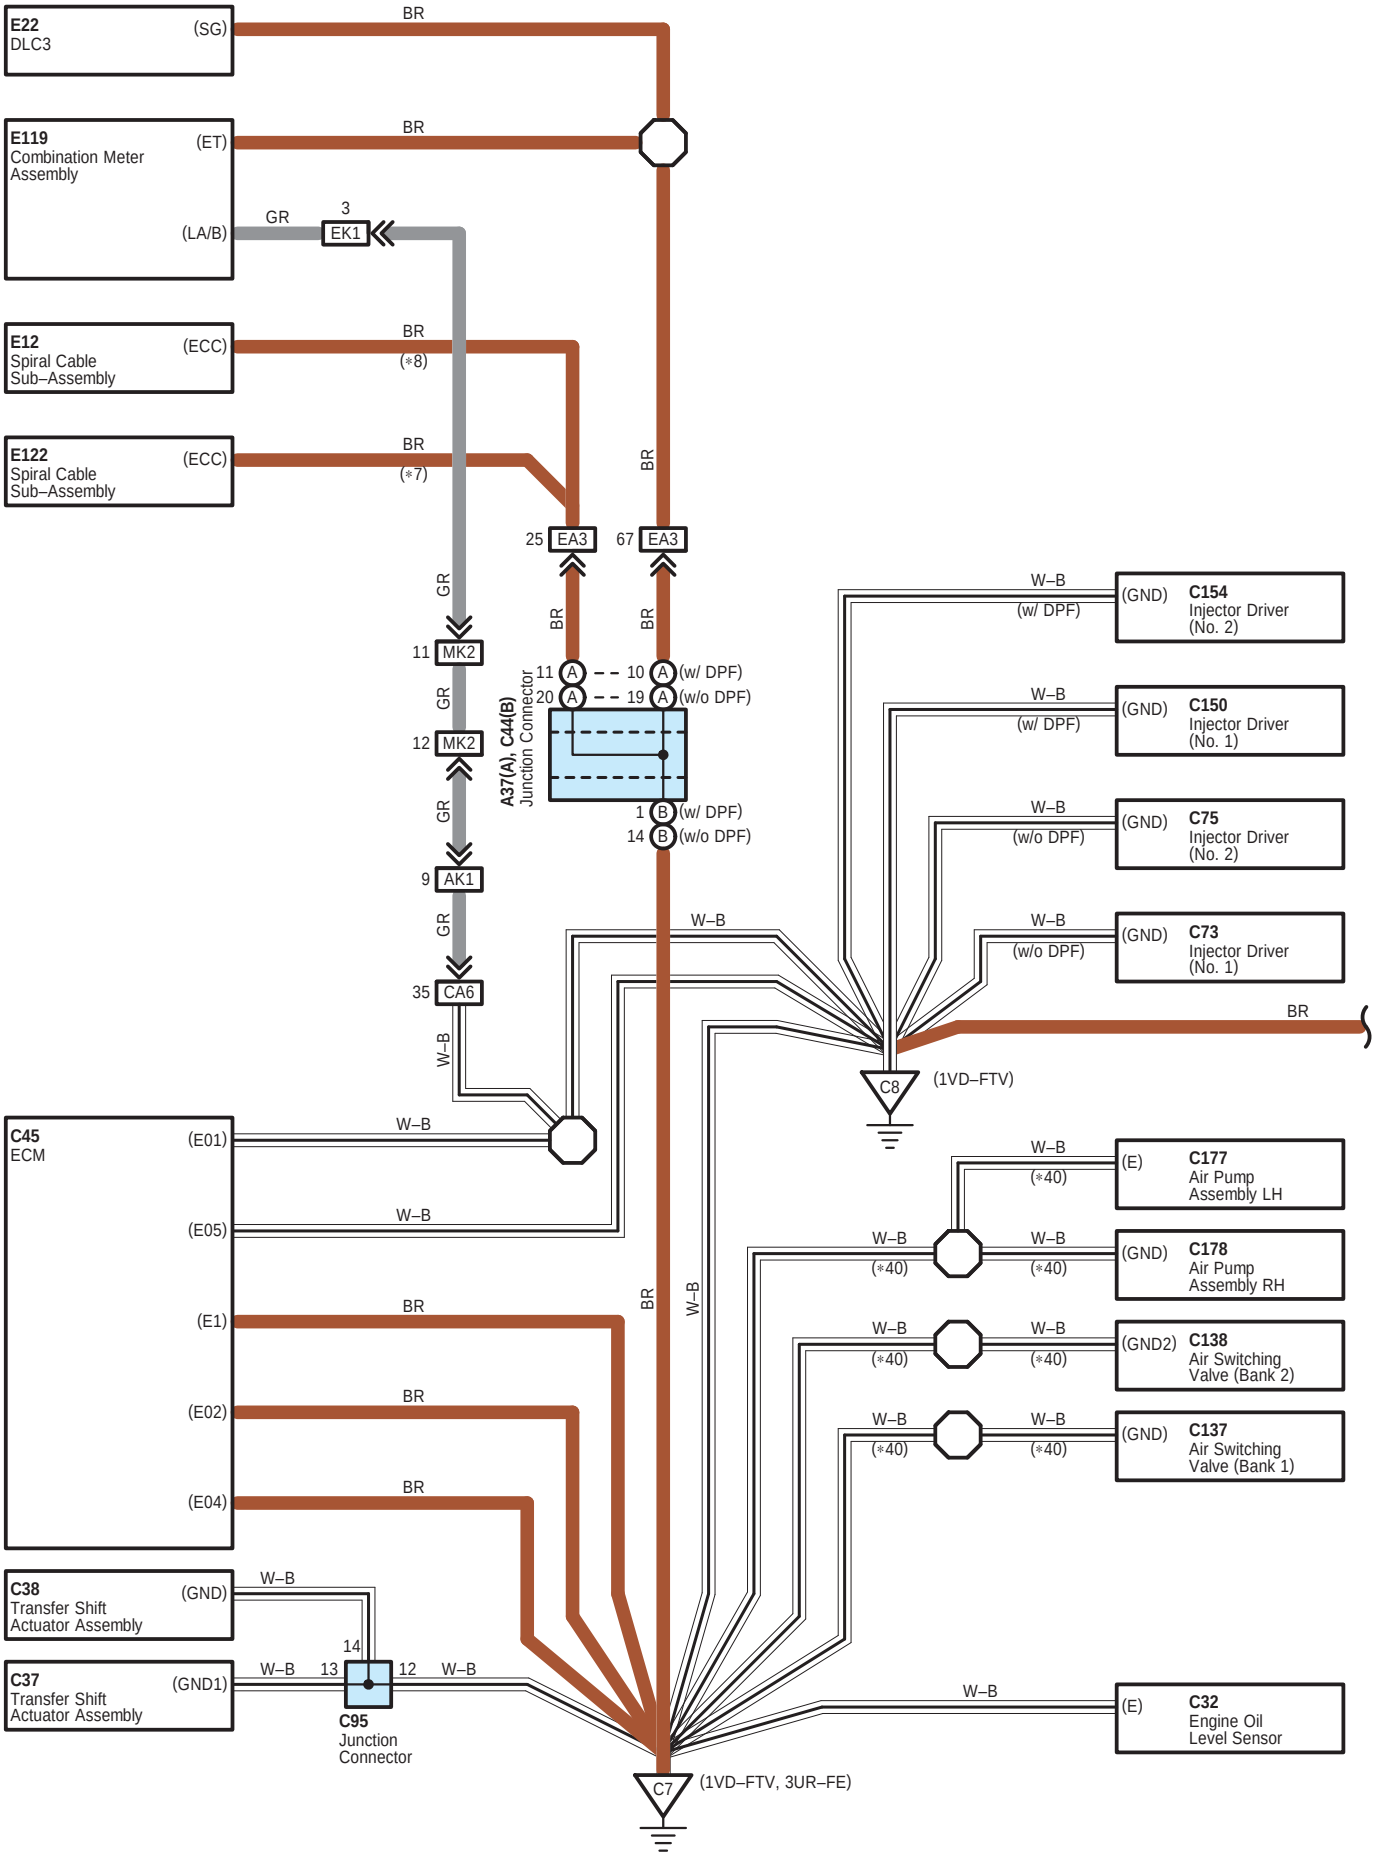

E22
DLC3
(SG)
BR
E119
Combination Meter Assembly
(ET)
(LA/B)
GR
3
EK1
E12
Spiral Cable Sub–Assembly
(ECC)
BR
(*8)
E122
Spiral Cable Sub–Assembly
(ECC)
BR
(*7)
25 EA3
67 EA3
GR
BR
11 MK2
12 MK2
9 AK1
35 CA6
W–B
A37(A), C44(B)
Junction Connector
11 A – 10 A (w/ DPF)
20 A – 19 A (w/o DPF)
1 B (w/ DPF)
14 B (w/o DPF)
C45
ECM
(E01)
(E05)
(E1)
(E02)
(E04)
C38
Transfer Shift Actuator Assembly
(GND)
C37
Transfer Shift Actuator Assembly
(GND1)
14
13
12
C95
Junction Connector
C8
(1VD–FTV)
C7
(1VD–FTV, 3UR–FE)
(GND) C154 Injector Driver (No. 2) (w/ DPF)
(GND) C150 Injector Driver (No. 1) (w/ DPF)
(GND) C75 Injector Driver (No. 2) (w/o DPF)
(GND) C73 Injector Driver (No. 1) (w/o DPF)
(E) C177 Air Pump Assembly LH (*40)
(GND) C178 Air Pump Assembly RH (*40)
(GND2) C138 Air Switching Valve (Bank 2) (*40)
(GND) C137 Air Switching Valve (Bank 1) (*40)
(E) C32 Engine Oil Level Sensor


∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
∗40 : Air Injection Control Driver

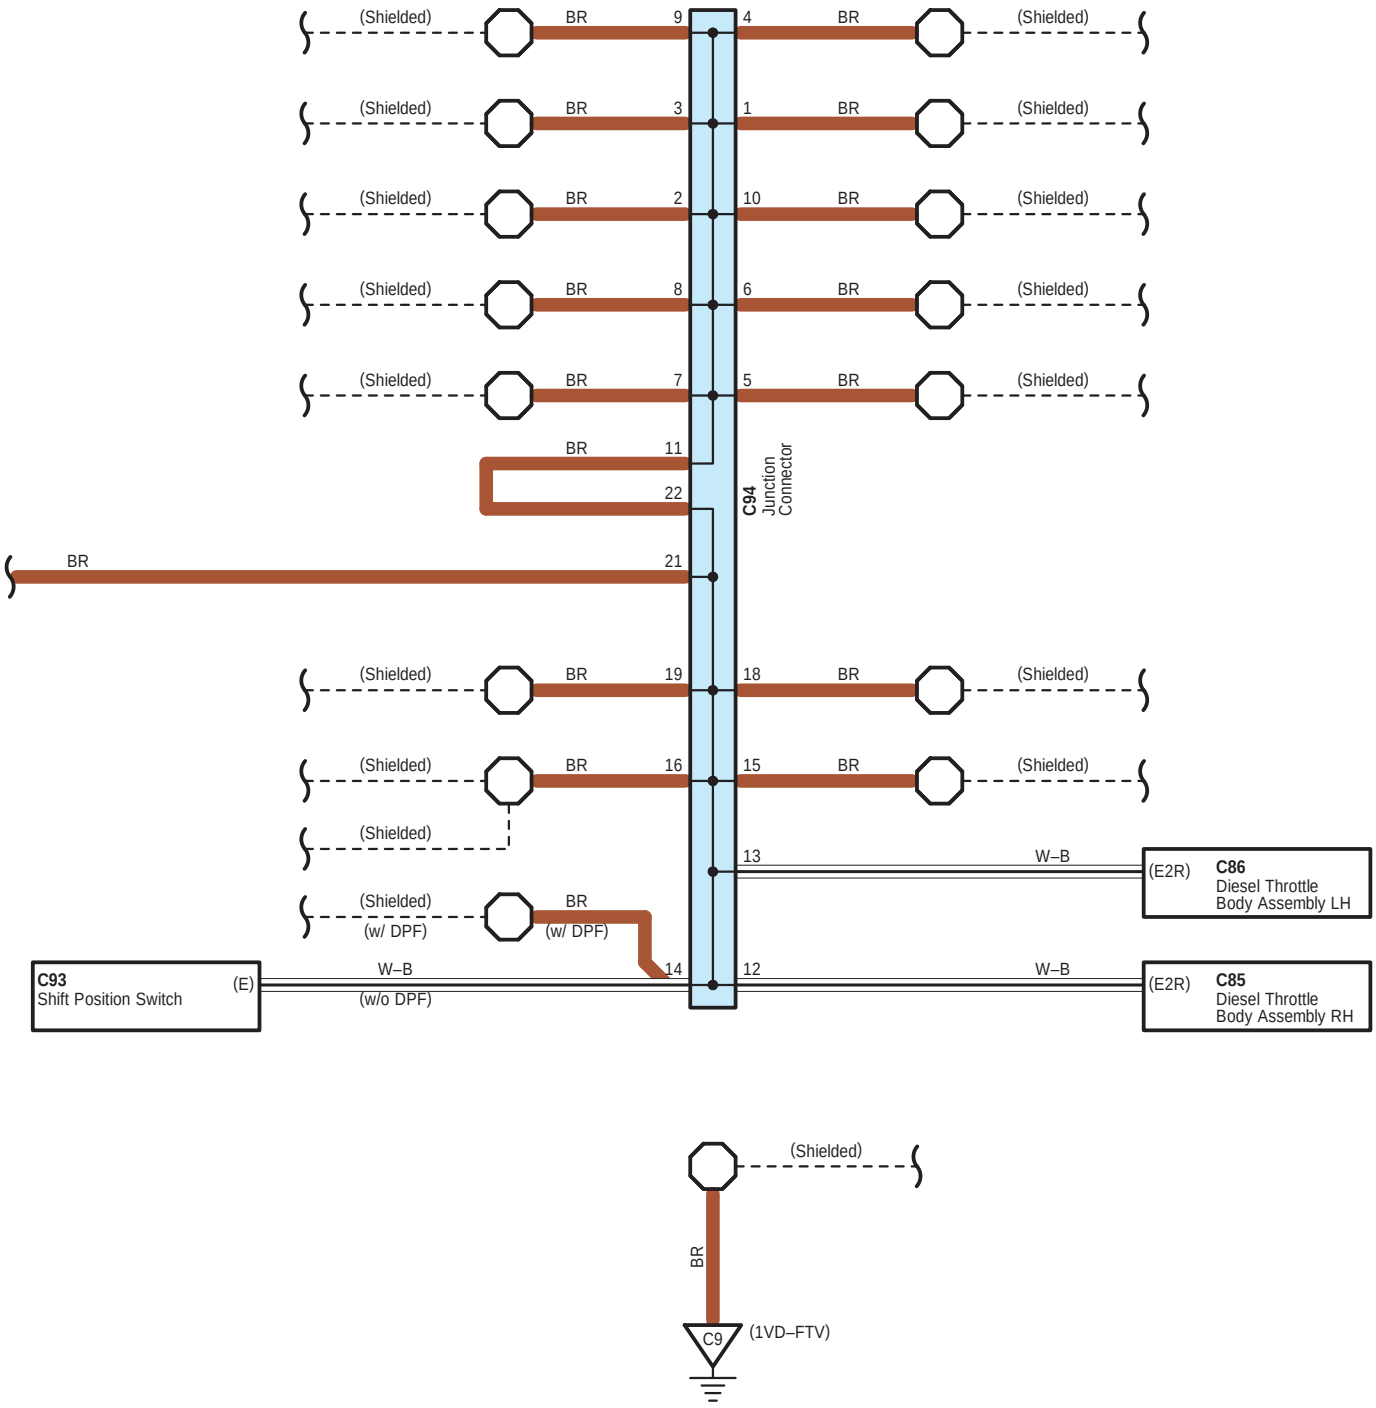


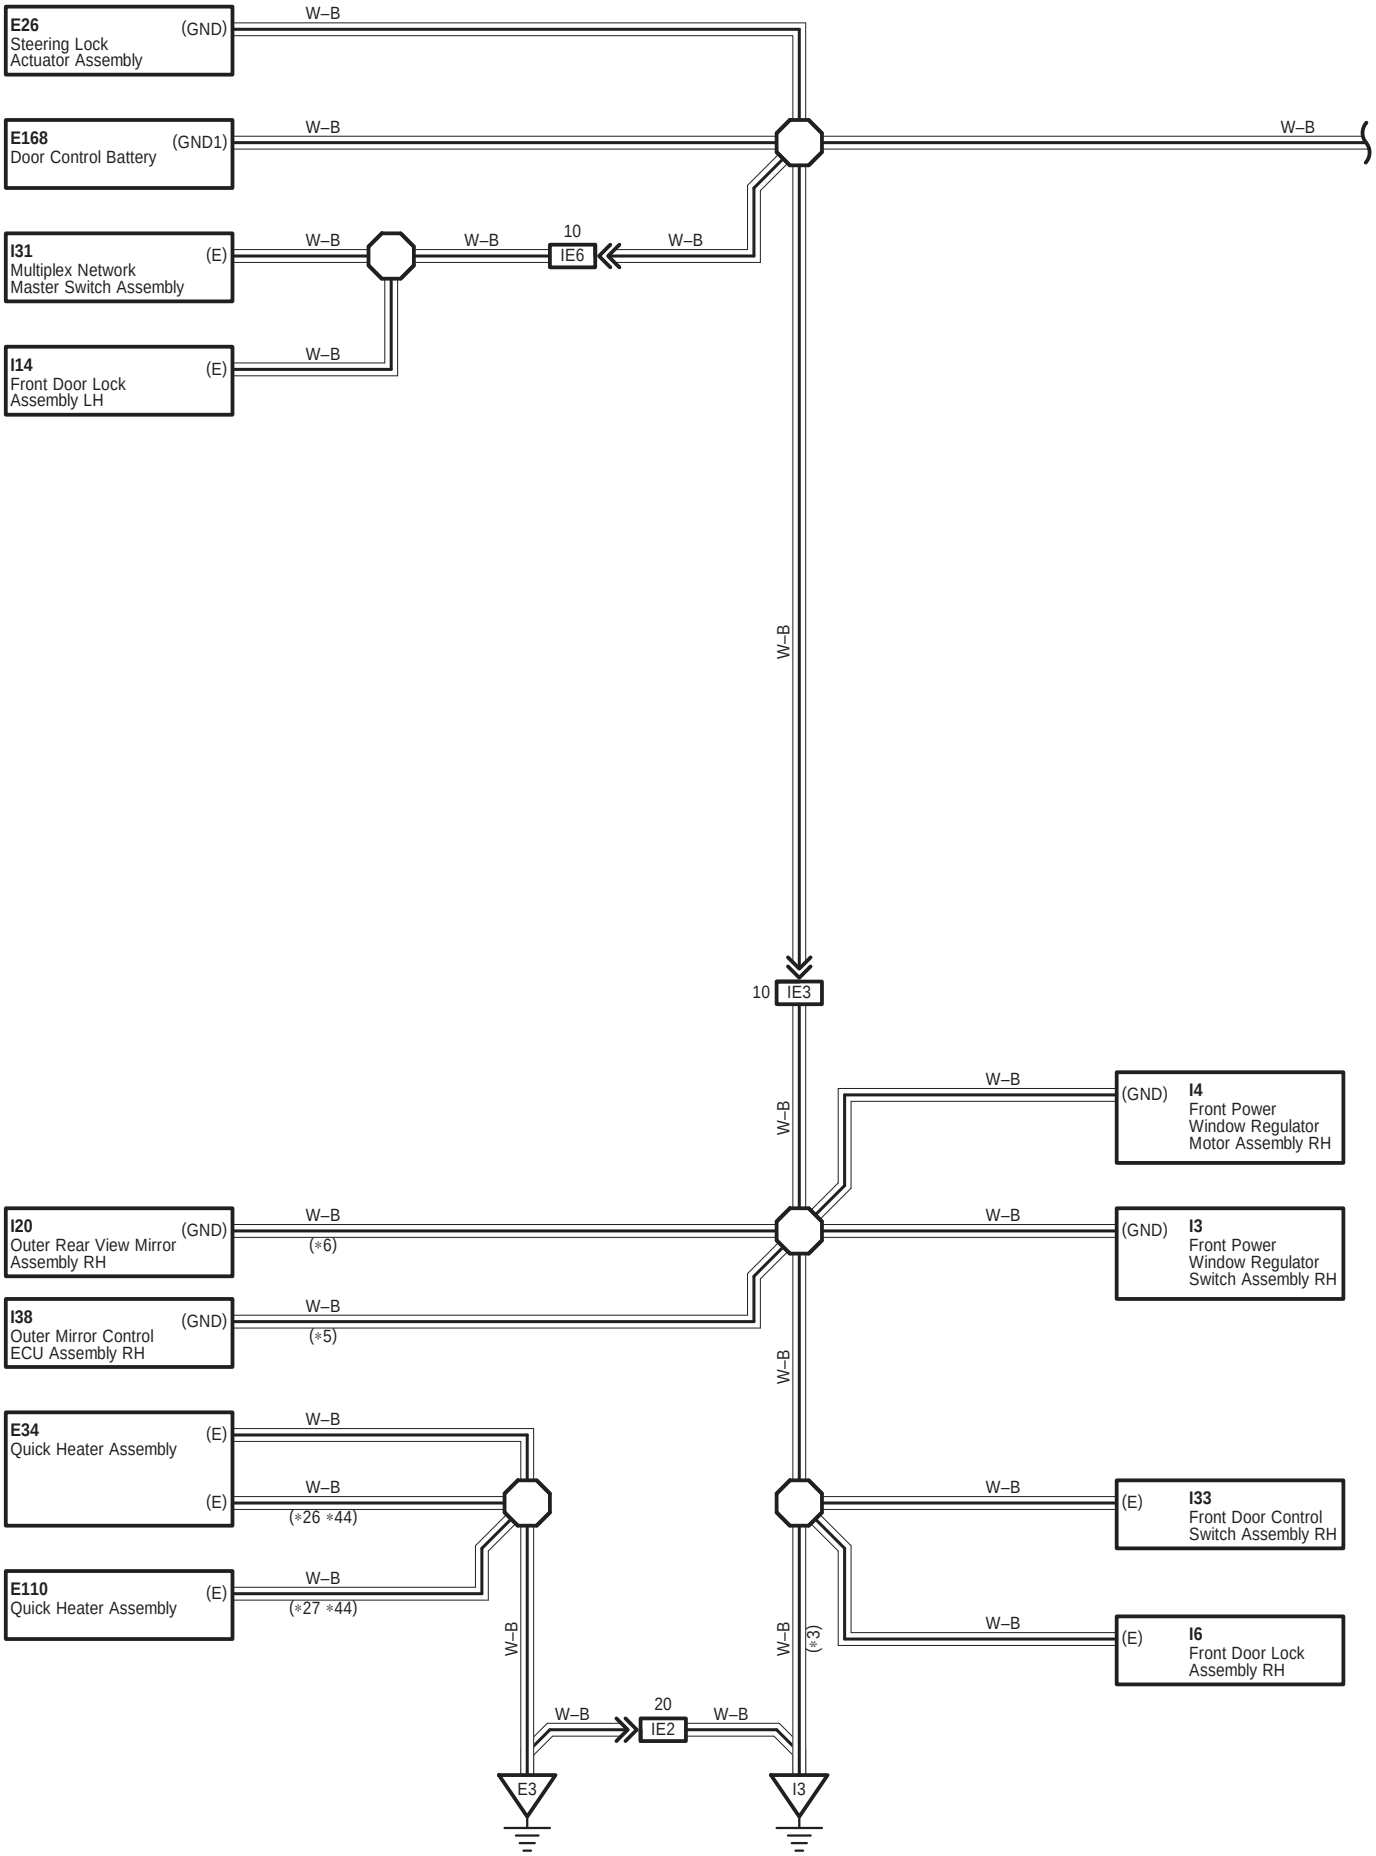
E26
Steering Lock
Actuator Assembly
(GND)
W–B
E168
Door Control Battery
(GND1)
W–B
W–B
I31
Multiplex Network
Master Switch Assembly
(E)
W–B
W–B
10
IE6
W–B
I14
Front Door Lock
Assembly LH
(E)
W–B
W–B
10
IE3
W–B
W–B
I4
Front Power
Window Regulator
Motor Assembly RH
(GND)
I20
Outer Rear View Mirror
Assembly RH
(GND)
W–B
(*6)
W–B
I3
Front Power
Window Regulator
Switch Assembly RH
(GND)
I38
Outer Mirror Control
ECU Assembly RH
(GND)
W–B
(*5)
W–B
E34
Quick Heater Assembly
(E)
W–B
(E)
W–B
(*26 *44)
W–B
I33
Front Door Control
Switch Assembly RH
(E)
E110
Quick Heater Assembly
(E)
W–B
(*27 *44)
W–B
I6
Front Door Lock
Assembly RH
(E)
W–B
W–B
W–B
(*3)
W–B
20
IE2
W–B
E3
I3

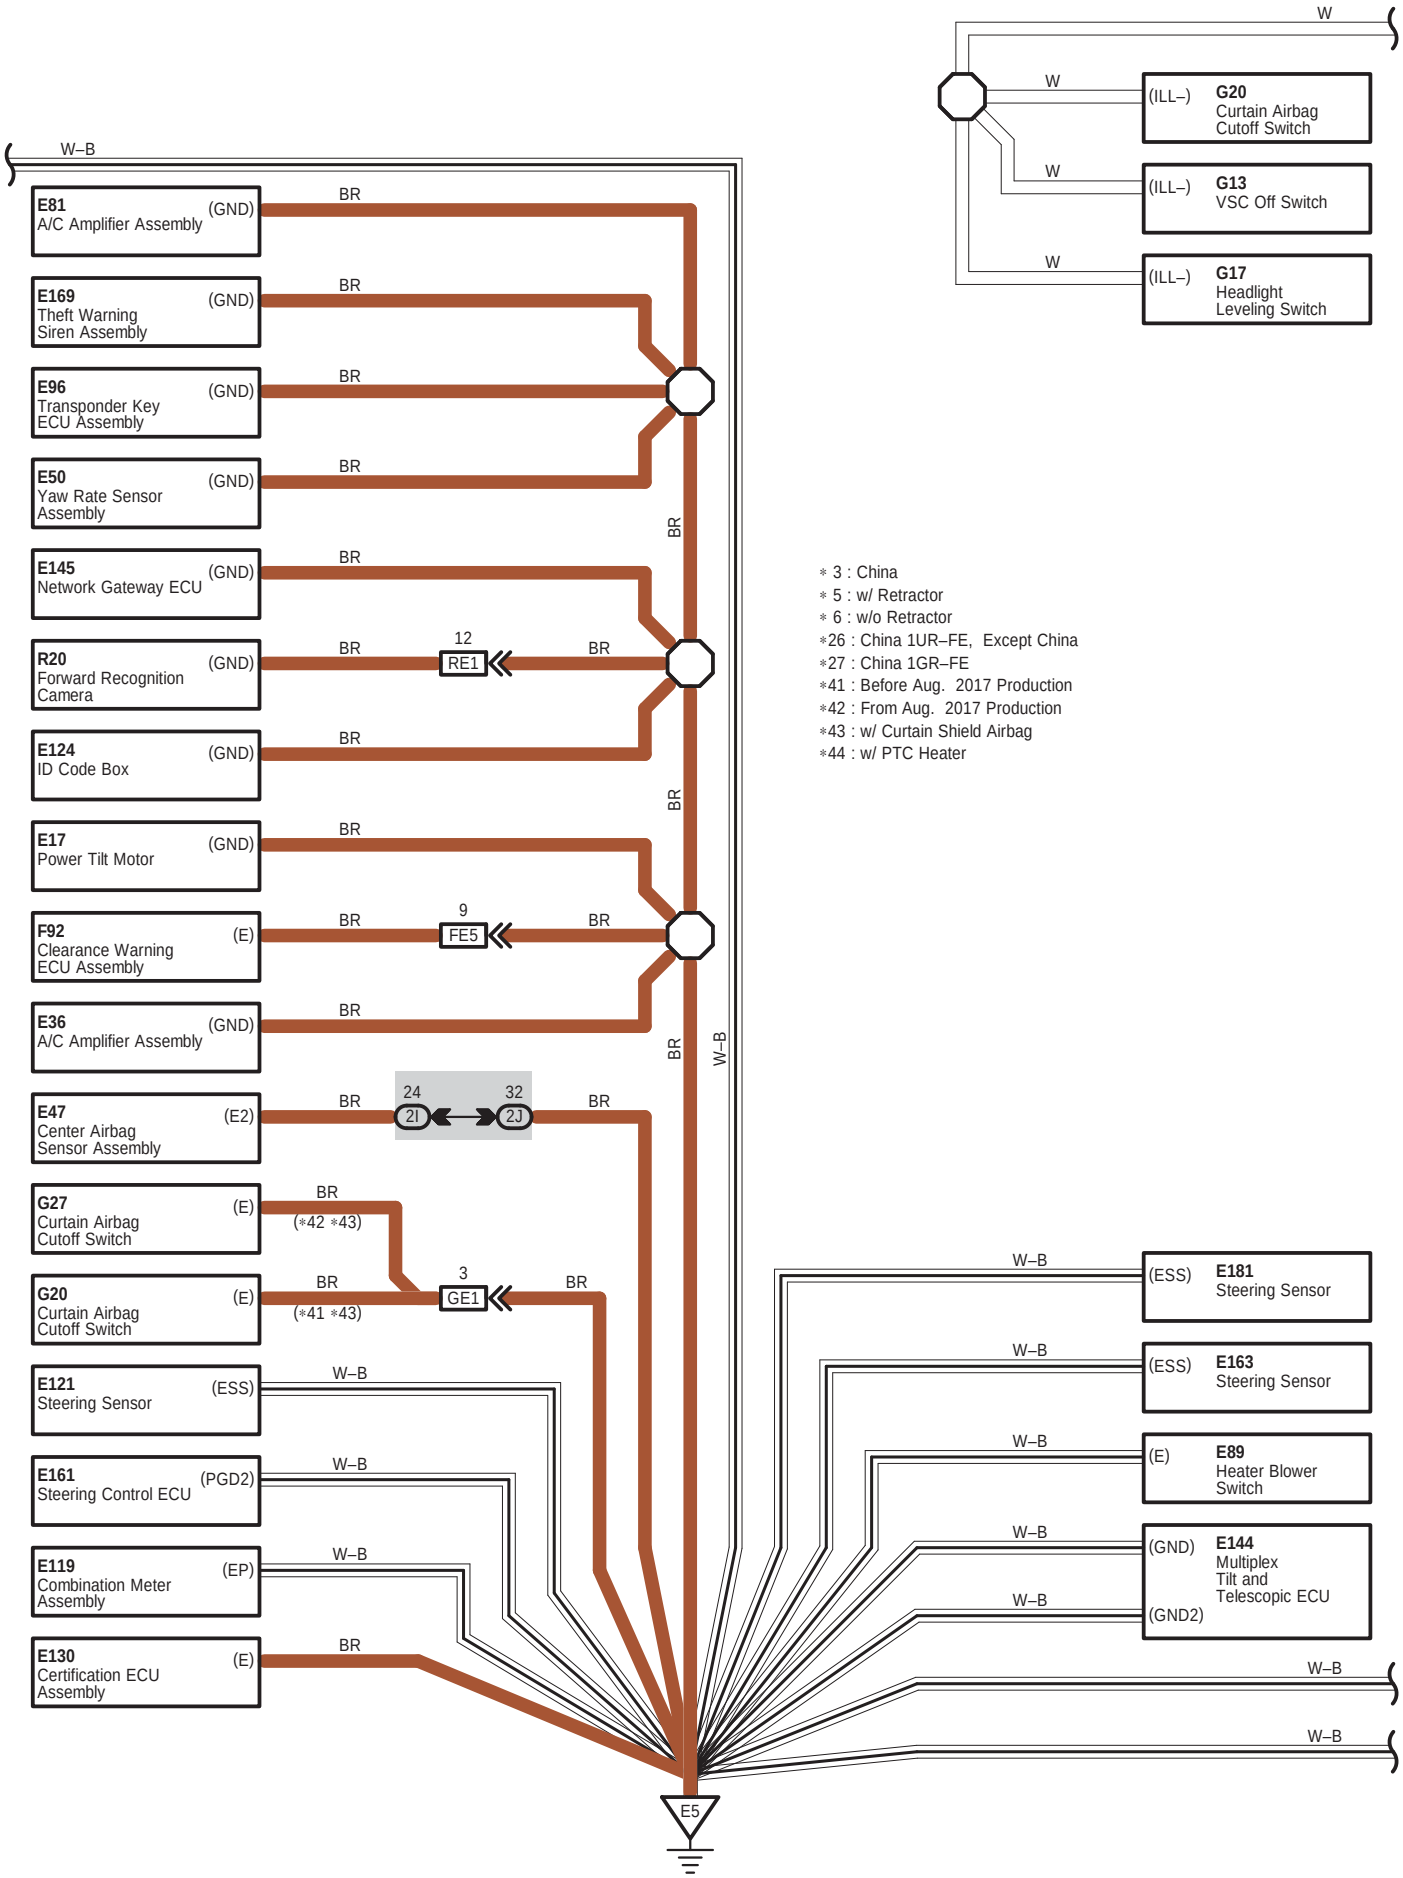

W
W
(ILL–) G20 Curtain Airbag Cutoff Switch
W
(ILL–) G13 VSC Off Switch
W
(ILL–) G17 Headlight Leveling Switch
W–B
E81 (GND) A/C Amplifier Assembly
E169 (GND) Theft Warning Siren Assembly
E96 (GND) Transponder Key ECU Assembly
E50 (GND) Yaw Rate Sensor Assembly
E145 (GND) Network Gateway ECU
R20 (GND) Forward Recognition Camera
E124 (GND) ID Code Box
E17 (GND) Power Tilt Motor
F92 (E) Clearance Warning ECU Assembly
E36 (GND) A/C Amplifier Assembly
E47 (E2) Center Airbag Sensor Assembly
G27 (E) Curtain Airbag Cutoff Switch
G20 (E) Curtain Airbag Cutoff Switch
E121 (ESS) Steering Sensor
E161 (PGD2) Steering Control ECU
E119 (EP) Combination Meter Assembly
E130 (E) Certification ECU Assembly
BR
12 RE1
9 FE5
24 2I 32 2J
3 GE1
(*42 *43)
(*41 *43)
W–B
E5
∗ 3 : China
∗ 5 : w/ Retractor
∗ 6 : w/o Retractor
∗26 : China 1UR–FE, Except China
∗27 : China 1GR–FE
∗41 : Before Aug. 2017 Production
∗42 : From Aug. 2017 Production
∗43 : w/ Curtain Shield Airbag
∗44 : w/ PTC Heater
(ESS) E181 Steering Sensor
(ESS) E163 Steering Sensor
(E) E89 Heater Blower Switch
(GND) (GND2) E144 Multiplex Tilt and Telescopic ECU

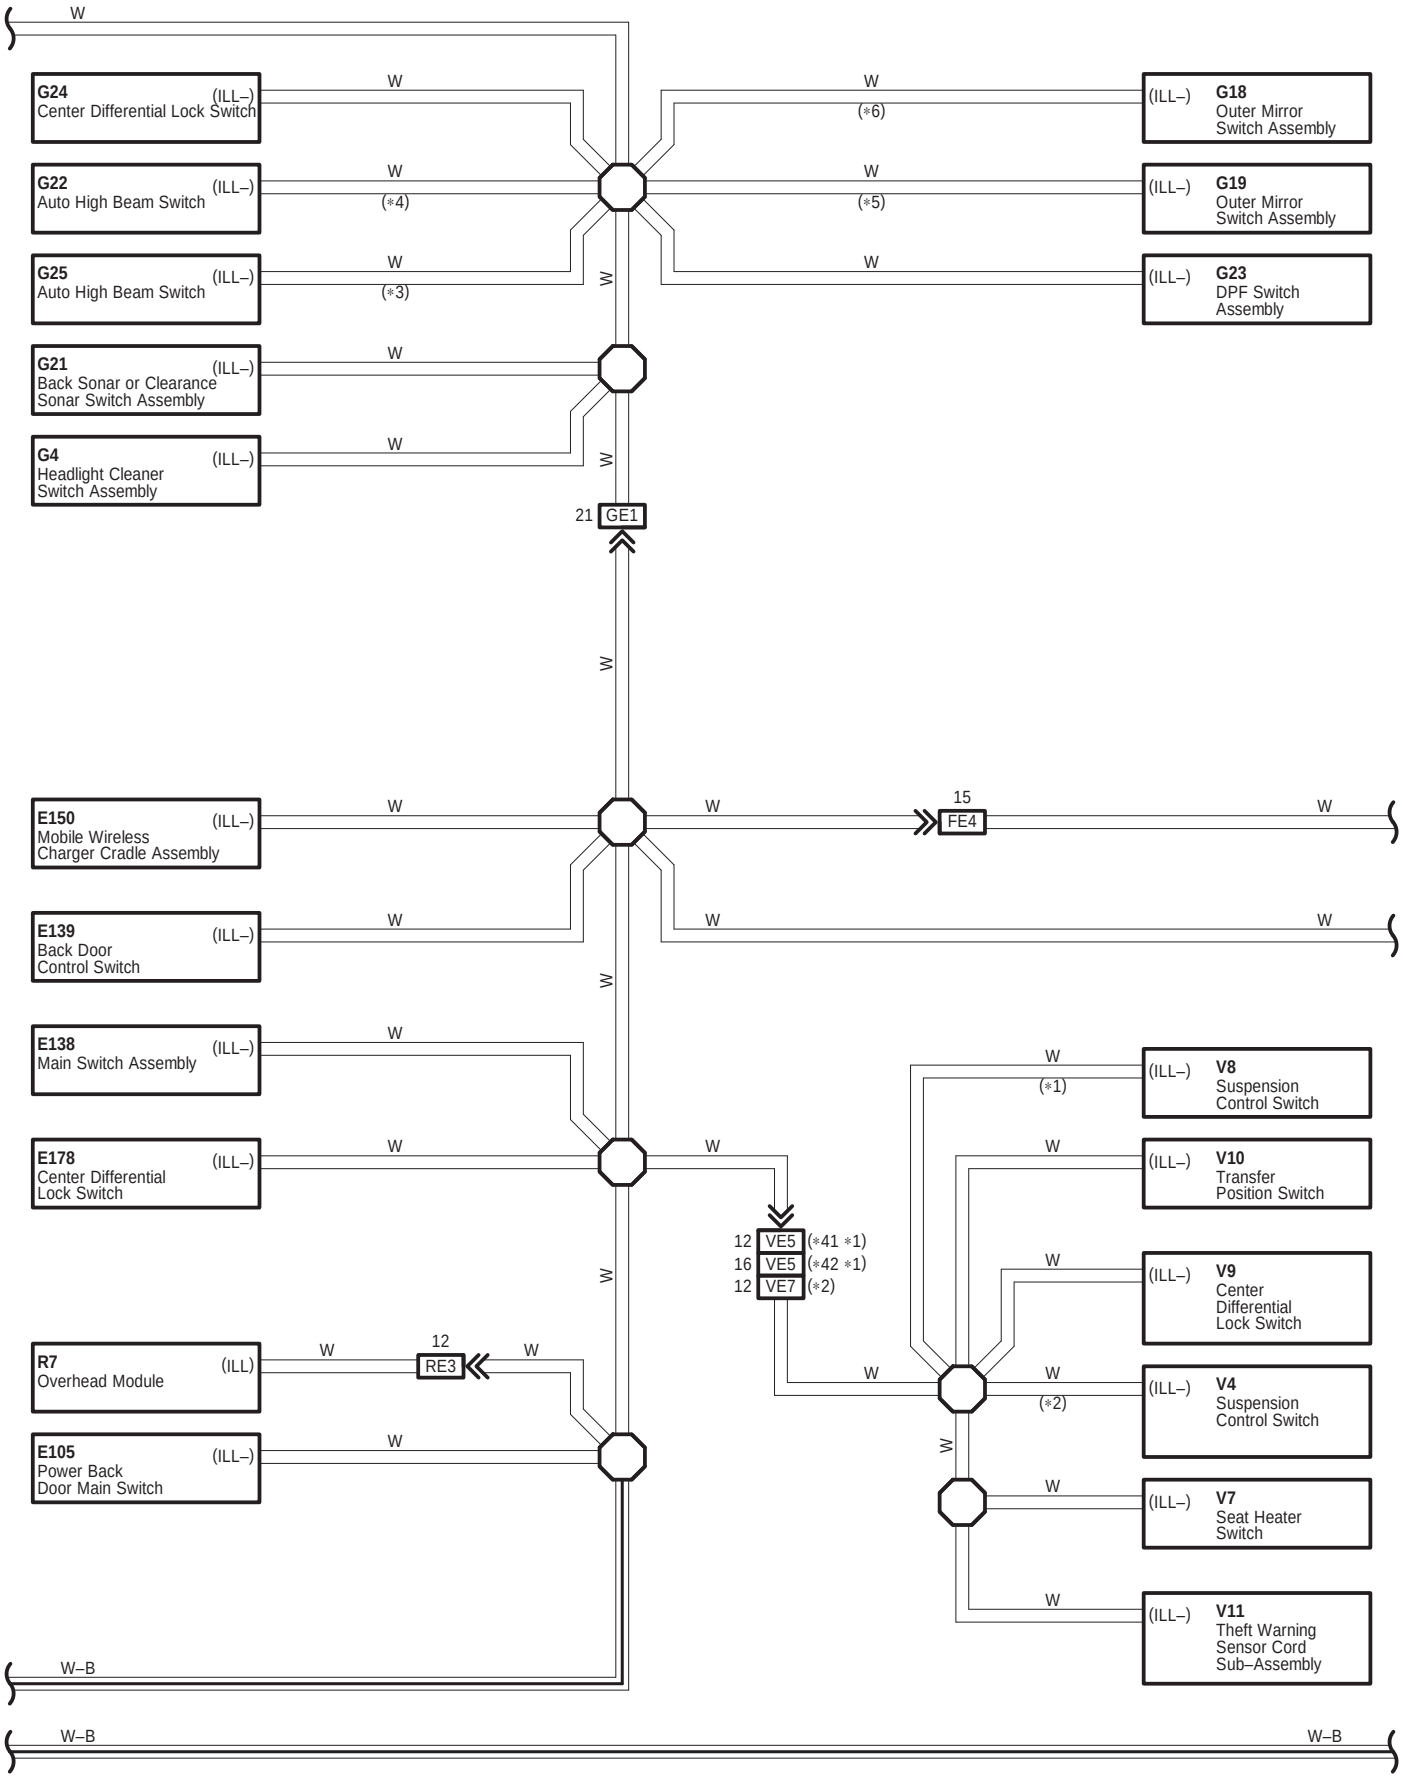

W
G24 (ILL–) Center Differential Lock Switch
G22 (ILL–) Auto High Beam Switch
G25 (ILL–) Auto High Beam Switch
G21 (ILL–) Back Sonar or Clearance Sonar Switch Assembly
G4 (ILL–) Headlight Cleaner Switch Assembly
(∗4)
(∗3)
(∗6)
(∗5)
(ILL–) G18 Outer Mirror Switch Assembly
(ILL–) G19 Outer Mirror Switch Assembly
(ILL–) G23 DPF Switch Assembly
21 GE1
15 FE4
E150 (ILL–) Mobile Wireless Charger Cradle Assembly
E139 (ILL–) Back Door Control Switch
E138 (ILL–) Main Switch Assembly
E178 (ILL–) Center Differential Lock Switch
12 VE5 (∗41 ∗1)
16 VE5 (∗42 ∗1)
12 VE7 (∗2)
(∗1)
(ILL–) V8 Suspension Control Switch
(ILL–) V10 Transfer Position Switch
(ILL–) V9 Center Differential Lock Switch
(∗2)
(ILL–) V4 Suspension Control Switch
(ILL–) V7 Seat Heater Switch
(ILL–) V11 Theft Warning Sensor Cord Sub–Assembly
R7 (ILL) Overhead Module
12 RE3
E105 (ILL–) Power Back Door Main Switch
W–B
W–B
W–B

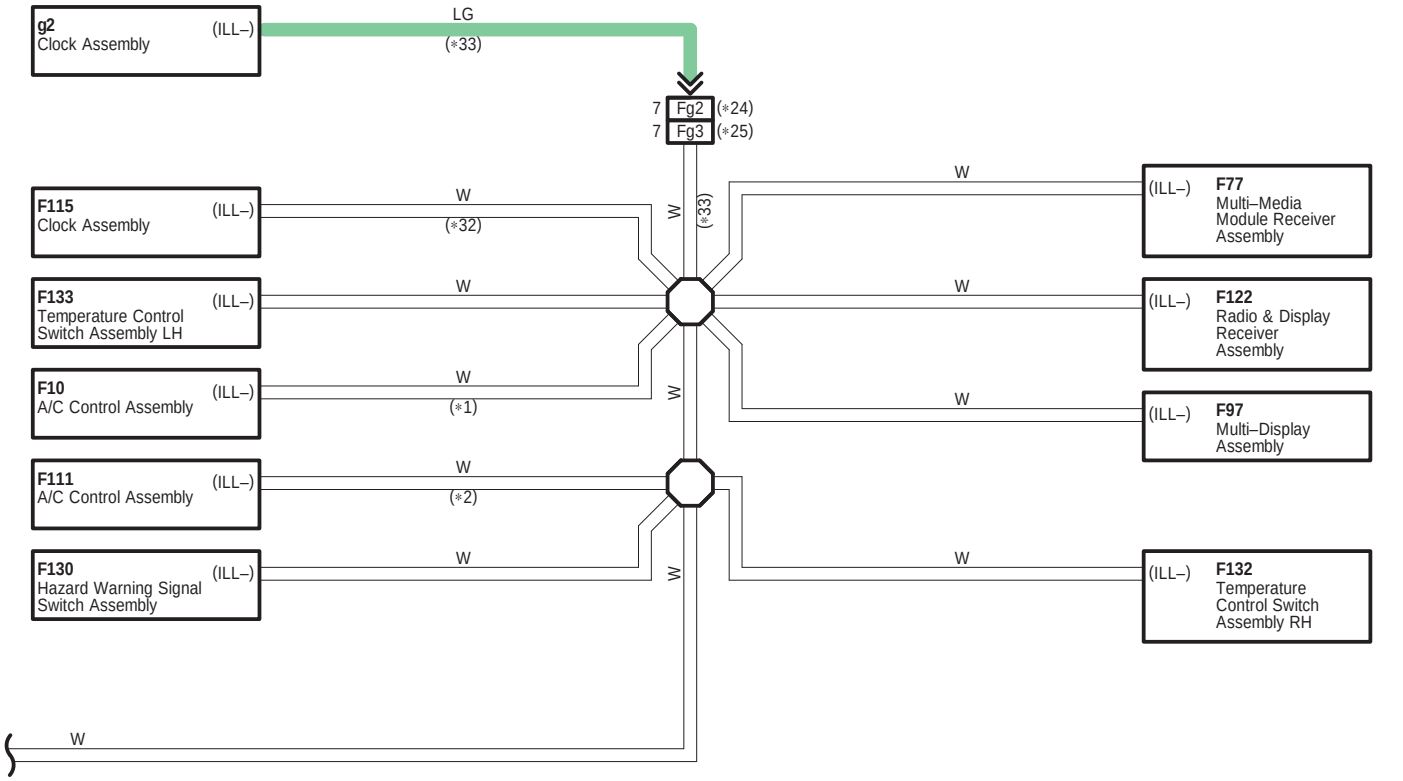


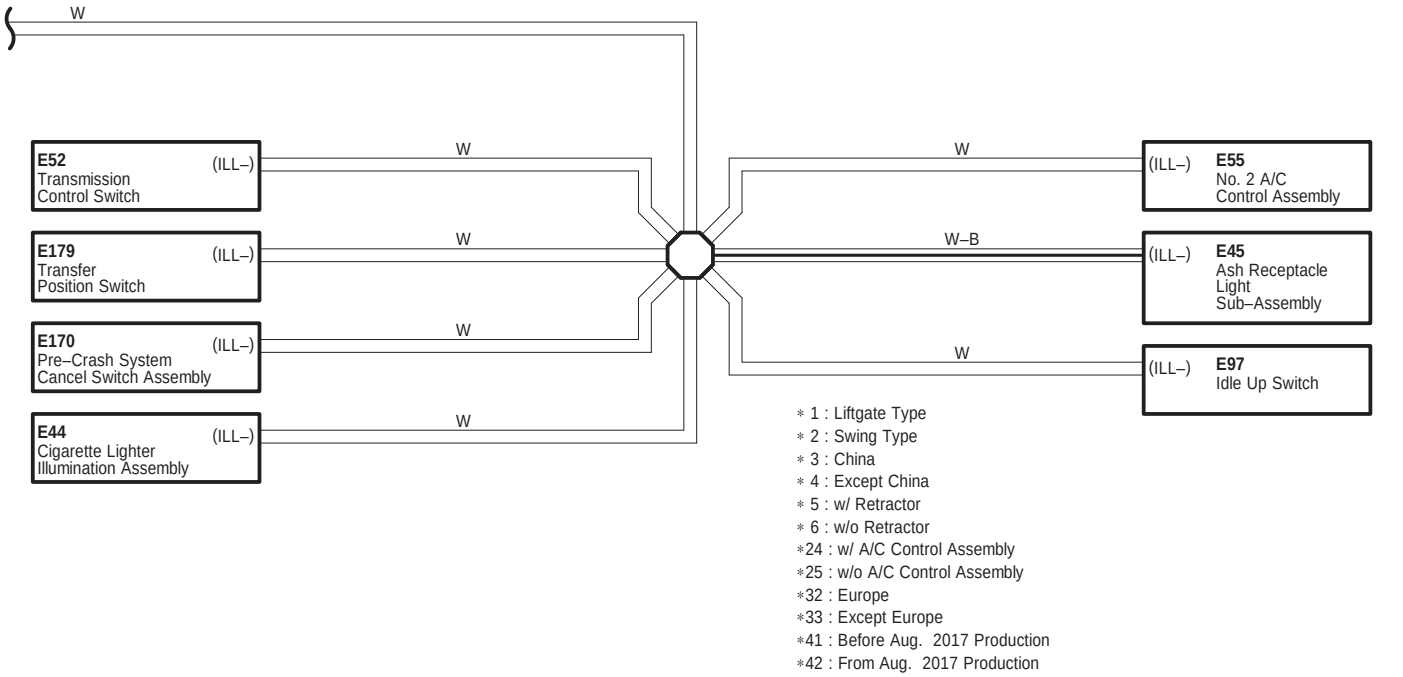



∗ 1 : Liftgate Type
∗ 2 : Swing Type
∗ 3 : China
∗ 4 : Except China
∗ 5 : w/ Retractor
∗ 6 : w/o Retractor
∗24 : w/ A/C Control Assembly
∗25 : w/o A/C Control Assembly
∗32 : Europe
∗33 : Except Europe
∗41 : Before Aug. 2017 Production
∗42 : From Aug. 2017 Production




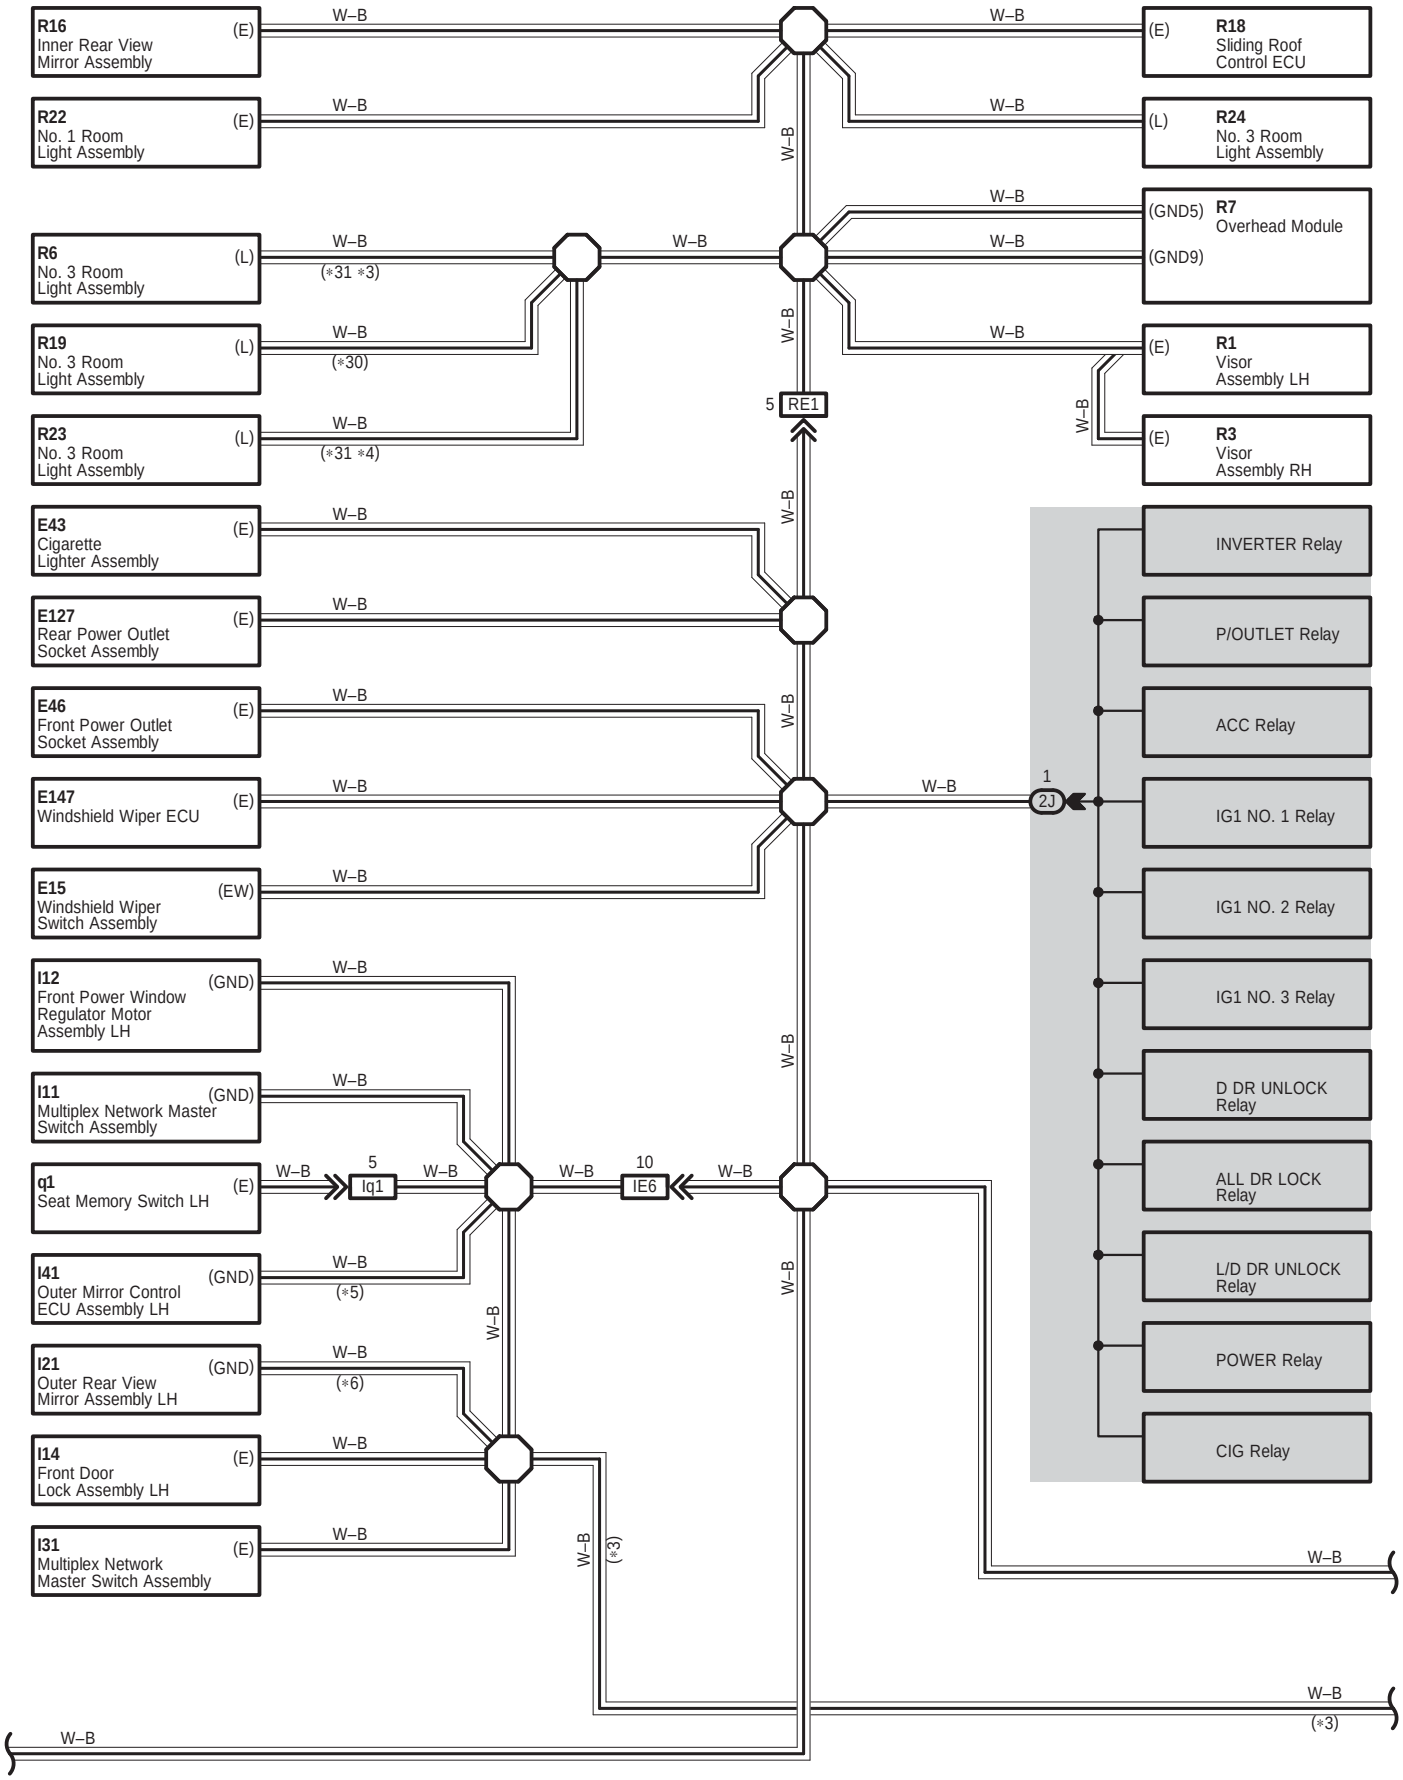
R16
Inner Rear View Mirror Assembly
(E)
R22
No. 1 Room Light Assembly
(E)
R6
No. 3 Room Light Assembly
(L)
R19
No. 3 Room Light Assembly
(L)
R23
No. 3 Room Light Assembly
(L)
E43
Cigarette Lighter Assembly
(E)
E127
Rear Power Outlet Socket Assembly
(E)
E46
Front Power Outlet Socket Assembly
(E)
E147
Windshield Wiper ECU
(E)
E15
Windshield Wiper Switch Assembly
(EW)
I12
Front Power Window Regulator Motor Assembly LH
(GND)
I11
Multiplex Network Master Switch Assembly
(GND)
q1
Seat Memory Switch LH
(E)
I41
Outer Mirror Control ECU Assembly LH
(GND)
I21
Outer Rear View Mirror Assembly LH
(GND)
I14
Front Door Lock Assembly LH
(E)
I31
Multiplex Network Master Switch Assembly
(E)
W–B
(*31 *3)
(*30)
(*31 *4)
(*5)
(*6)
(*3)
5
RE1
Iq1
10
IE6
1
2J
R18
Sliding Roof Control ECU
(E)
R24
No. 3 Room Light Assembly
(L)
R7
Overhead Module
(GND5)
(GND9)
R1
Visor Assembly LH
(E)
R3
Visor Assembly RH
(E)
INVERTER Relay
P/OUTLET Relay
ACC Relay
IG1 NO. 1 Relay
IG1 NO. 2 Relay
IG1 NO. 3 Relay
D DR UNLOCK Relay
ALL DR LOCK Relay
L/D DR UNLOCK Relay
POWER Relay
CIG Relay

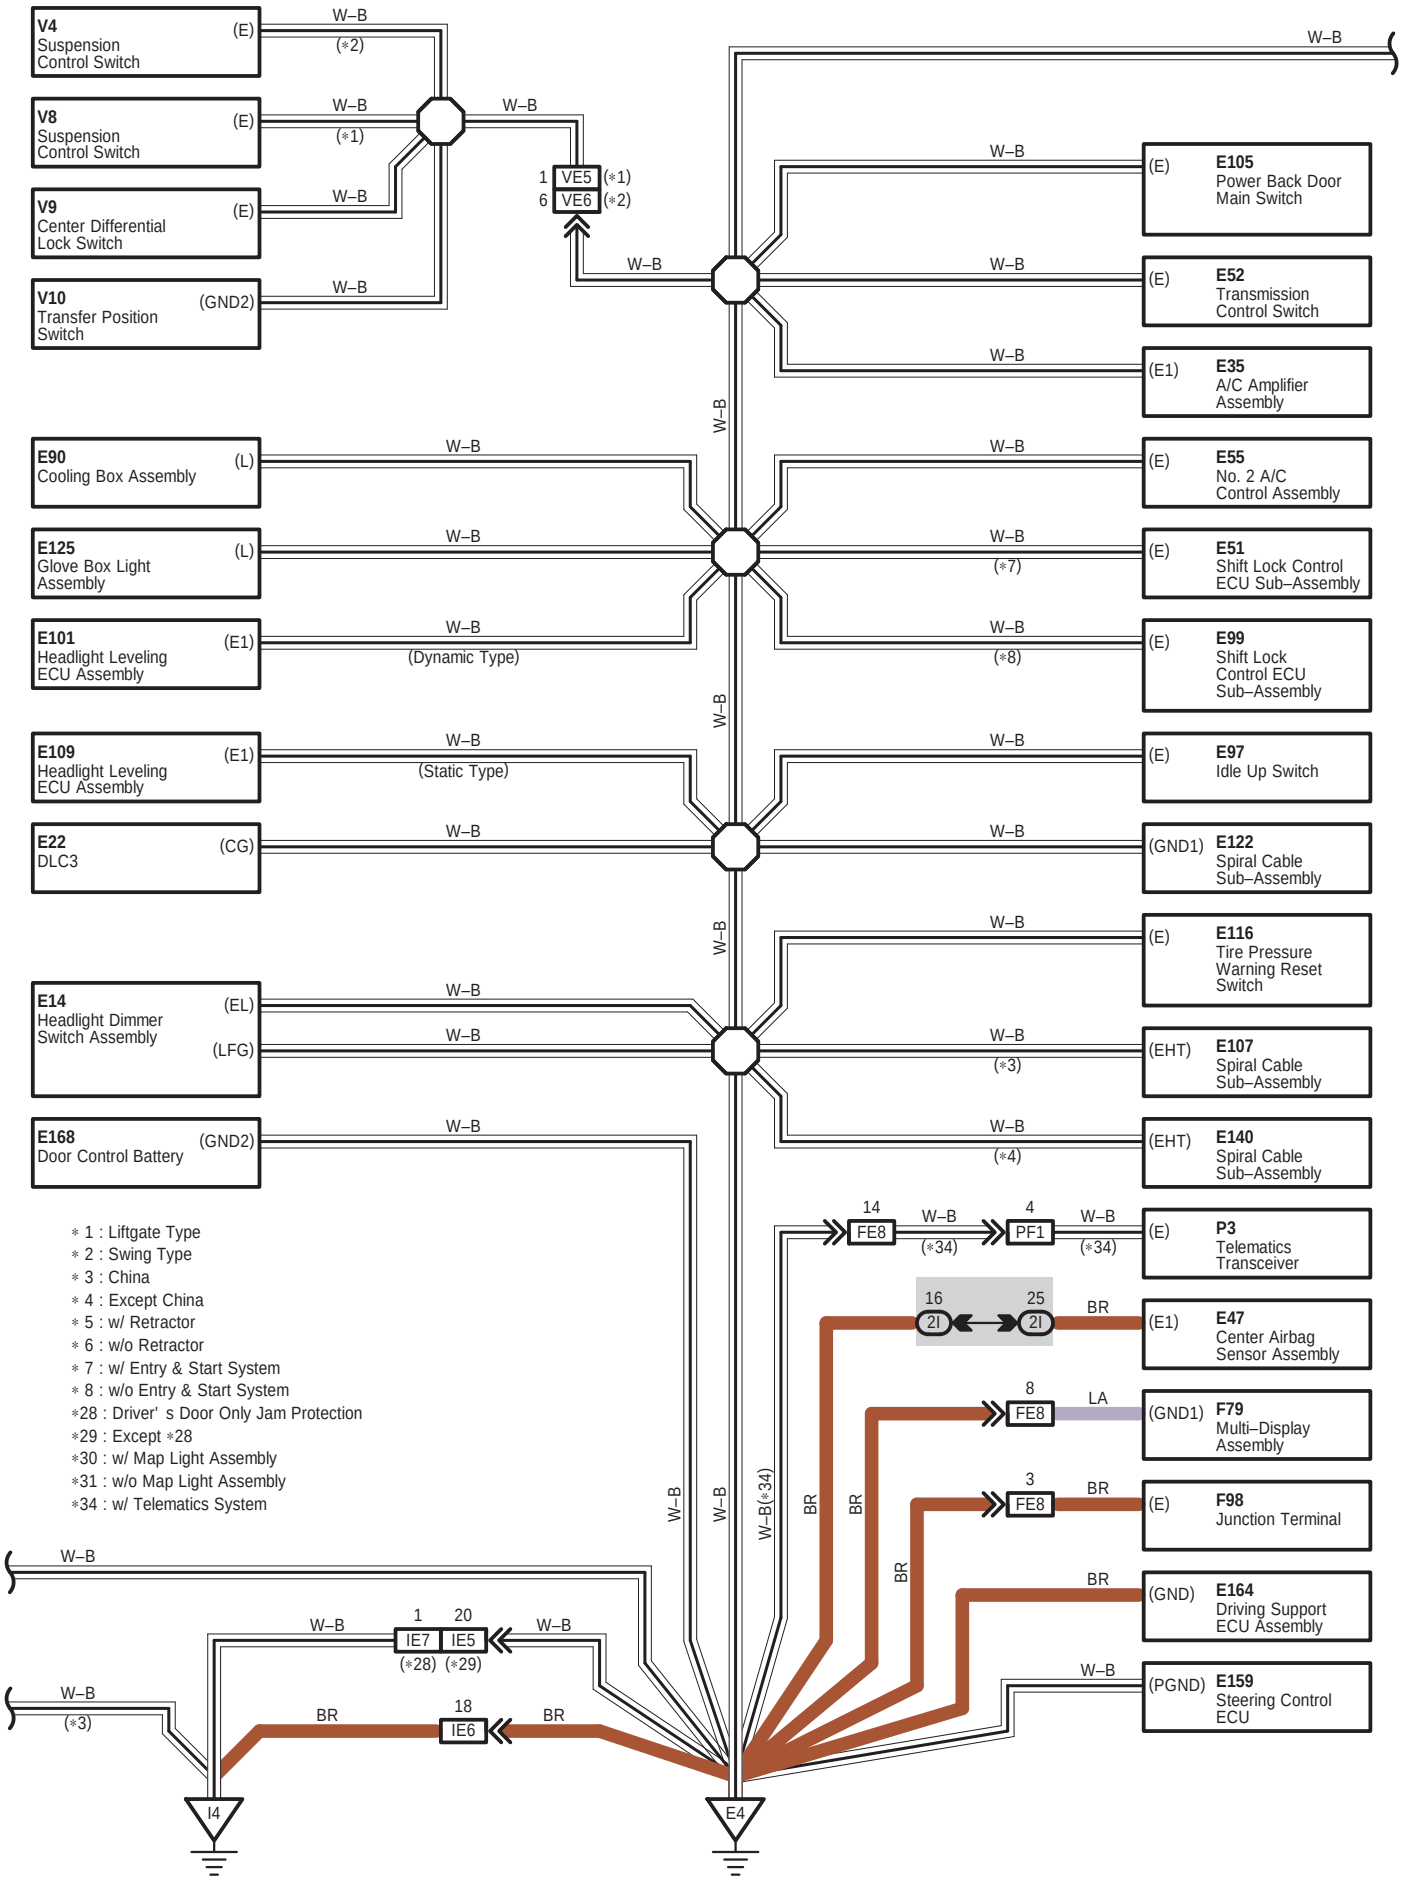

V4 Suspension Control Switch (E)
V8 Suspension Control Switch (E)
V9 Center Differential Lock Switch (E)
V10 Transfer Position Switch (GND2)
W–B
(∗2)
(∗1)
VE5 (∗1)
VE6 (∗2)
E90 Cooling Box Assembly (L)
E125 Glove Box Light Assembly (L)
E101 Headlight Leveling ECU Assembly (E1)
(Dynamic Type)
E109 Headlight Leveling ECU Assembly (E1)
(Static Type)
E22 DLC3 (CG)
E14 Headlight Dimmer Switch Assembly (EL) (LFG)
E168 Door Control Battery (GND2)
E105 Power Back Door Main Switch (E)
E52 Transmission Control Switch (E)
E35 A/C Amplifier Assembly (E1)
E55 No. 2 A/C Control Assembly (E)
E51 Shift Lock Control ECU Sub–Assembly (E)
(∗7)
E99 Shift Lock Control ECU Sub–Assembly (E)
(∗8)
E97 Idle Up Switch (E)
E122 Spiral Cable Sub–Assembly (GND1)
E116 Tire Pressure Warning Reset Switch (E)
E107 Spiral Cable Sub–Assembly (EHT)
(∗3)
E140 Spiral Cable Sub–Assembly (EHT)
(∗4)
P3 Telematics Transceiver (E)
E47 Center Airbag Sensor Assembly (E1)
F79 Multi–Display Assembly (GND1)
F98 Junction Terminal (E)
E164 Driving Support ECU Assembly (GND)
E159 Steering Control ECU (PGND)
FE8
PF1
2I
IE7
IE5
IE6
(∗28)
(∗29)
(∗34)
BR
LA
W–B(∗34)
I4
E4
∗ 1 : Liftgate Type
∗ 2 : Swing Type
∗ 3 : China
∗ 4 : Except China
∗ 5 : w/ Retractor
∗ 6 : w/o Retractor
∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
∗28 : Driver' s Door Only Jam Protection
∗29 : Except ∗28
∗30 : w/ Map Light Assembly
∗31 : w/o Map Light Assembly
∗34 : w/ Telematics System

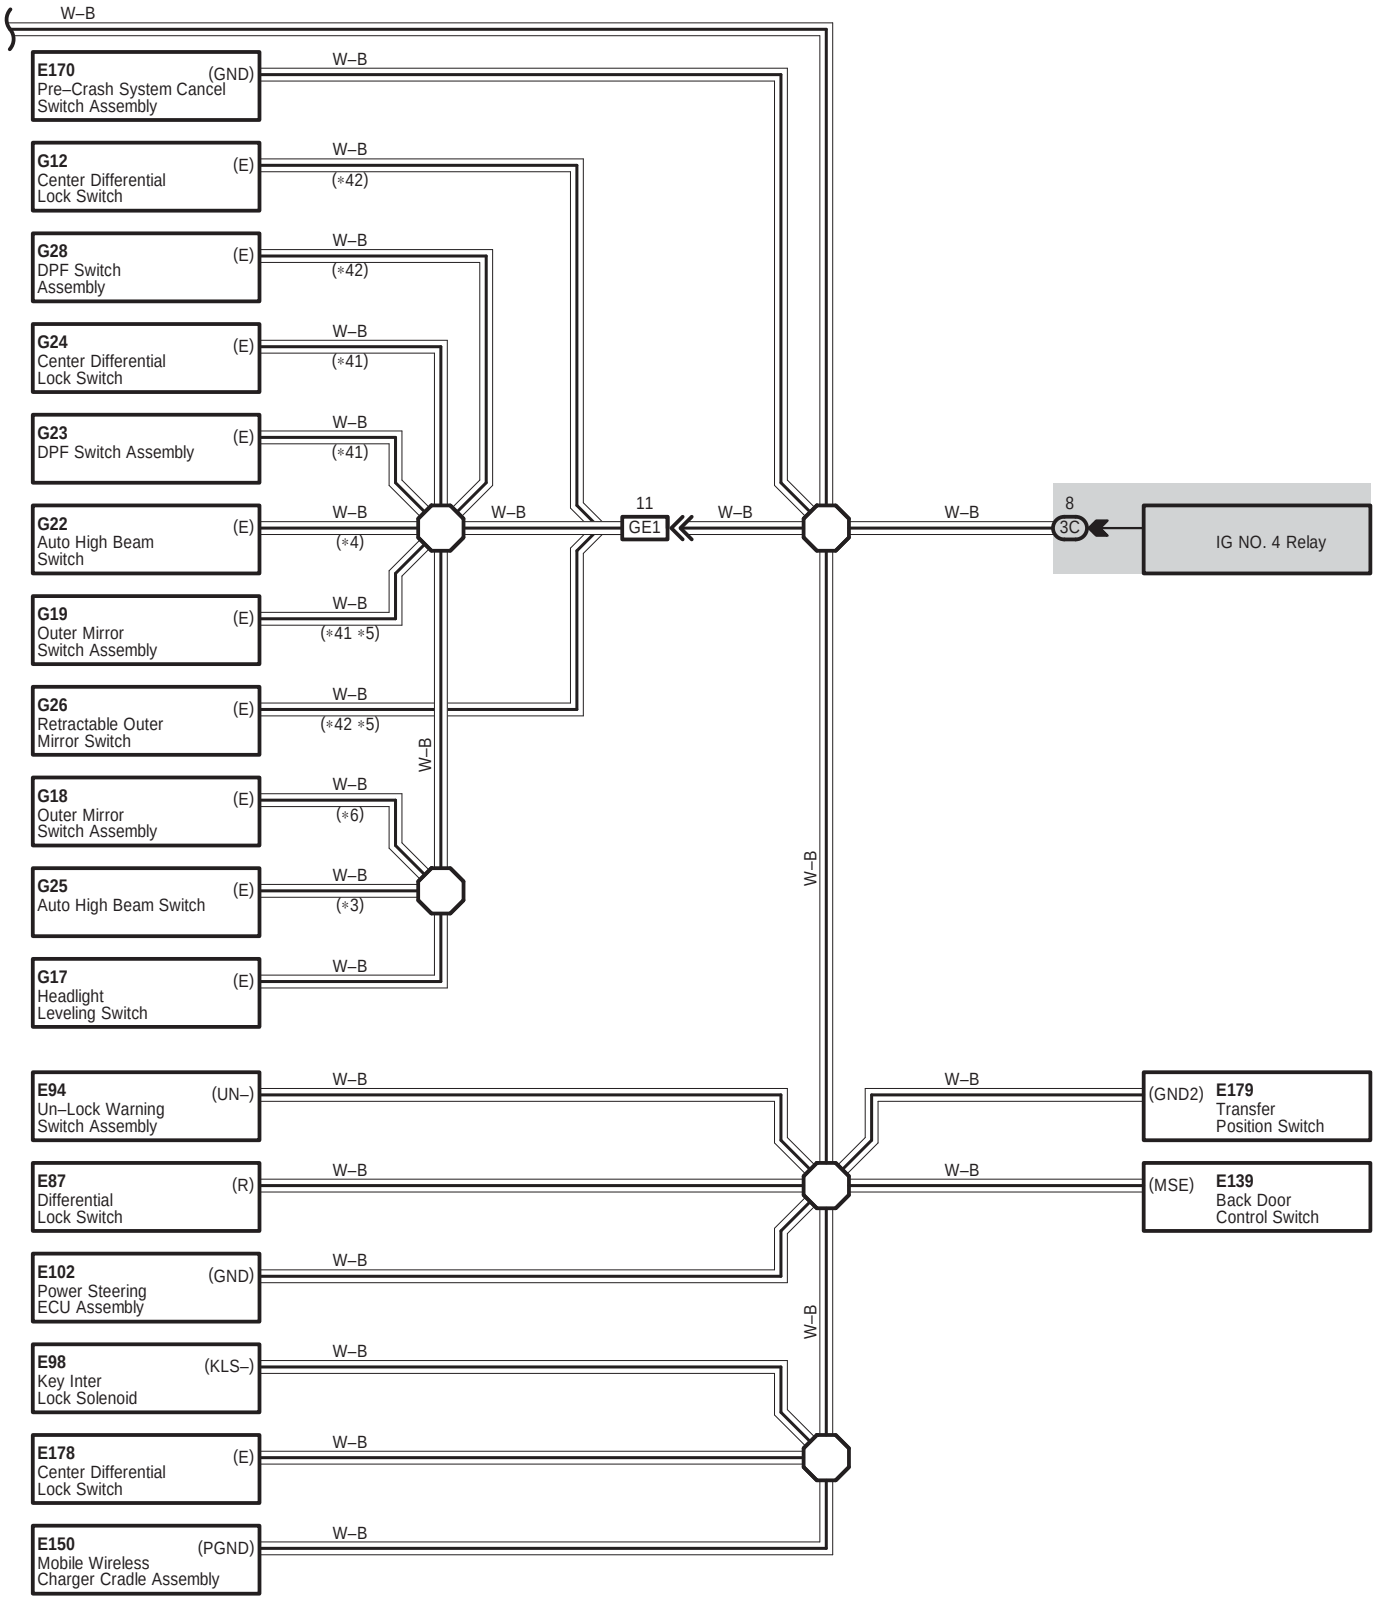
W–B
E170 (GND)
Pre–Crash System Cancel Switch Assembly
G12 (E)
Center Differential Lock Switch
G28 (E)
DPF Switch Assembly
G24 (E)
Center Differential Lock Switch
G23 (E)
DPF Switch Assembly
G22 (E)
Auto High Beam Switch
G19 (E)
Outer Mirror Switch Assembly
G26 (E)
Retractable Outer Mirror Switch
G18 (E)
Outer Mirror Switch Assembly
G25 (E)
Auto High Beam Switch
G17 (E)
Headlight Leveling Switch
(*42)
(*41)
(*4)
(*41 *5)
(*42 *5)
(*6)
(*3)
11
GE1
8
3C
IG NO. 4 Relay
E94 (UN–)
Un–Lock Warning Switch Assembly
E87 (R)
Differential Lock Switch
E102 (GND)
Power Steering ECU Assembly
E98 (KLS–)
Key Inter Lock Solenoid
E178 (E)
Center Differential Lock Switch
E150 (PGND)
Mobile Wireless Charger Cradle Assembly
(GND2) E179
Transfer Position Switch
(MSE) E139
Back Door Control Switch

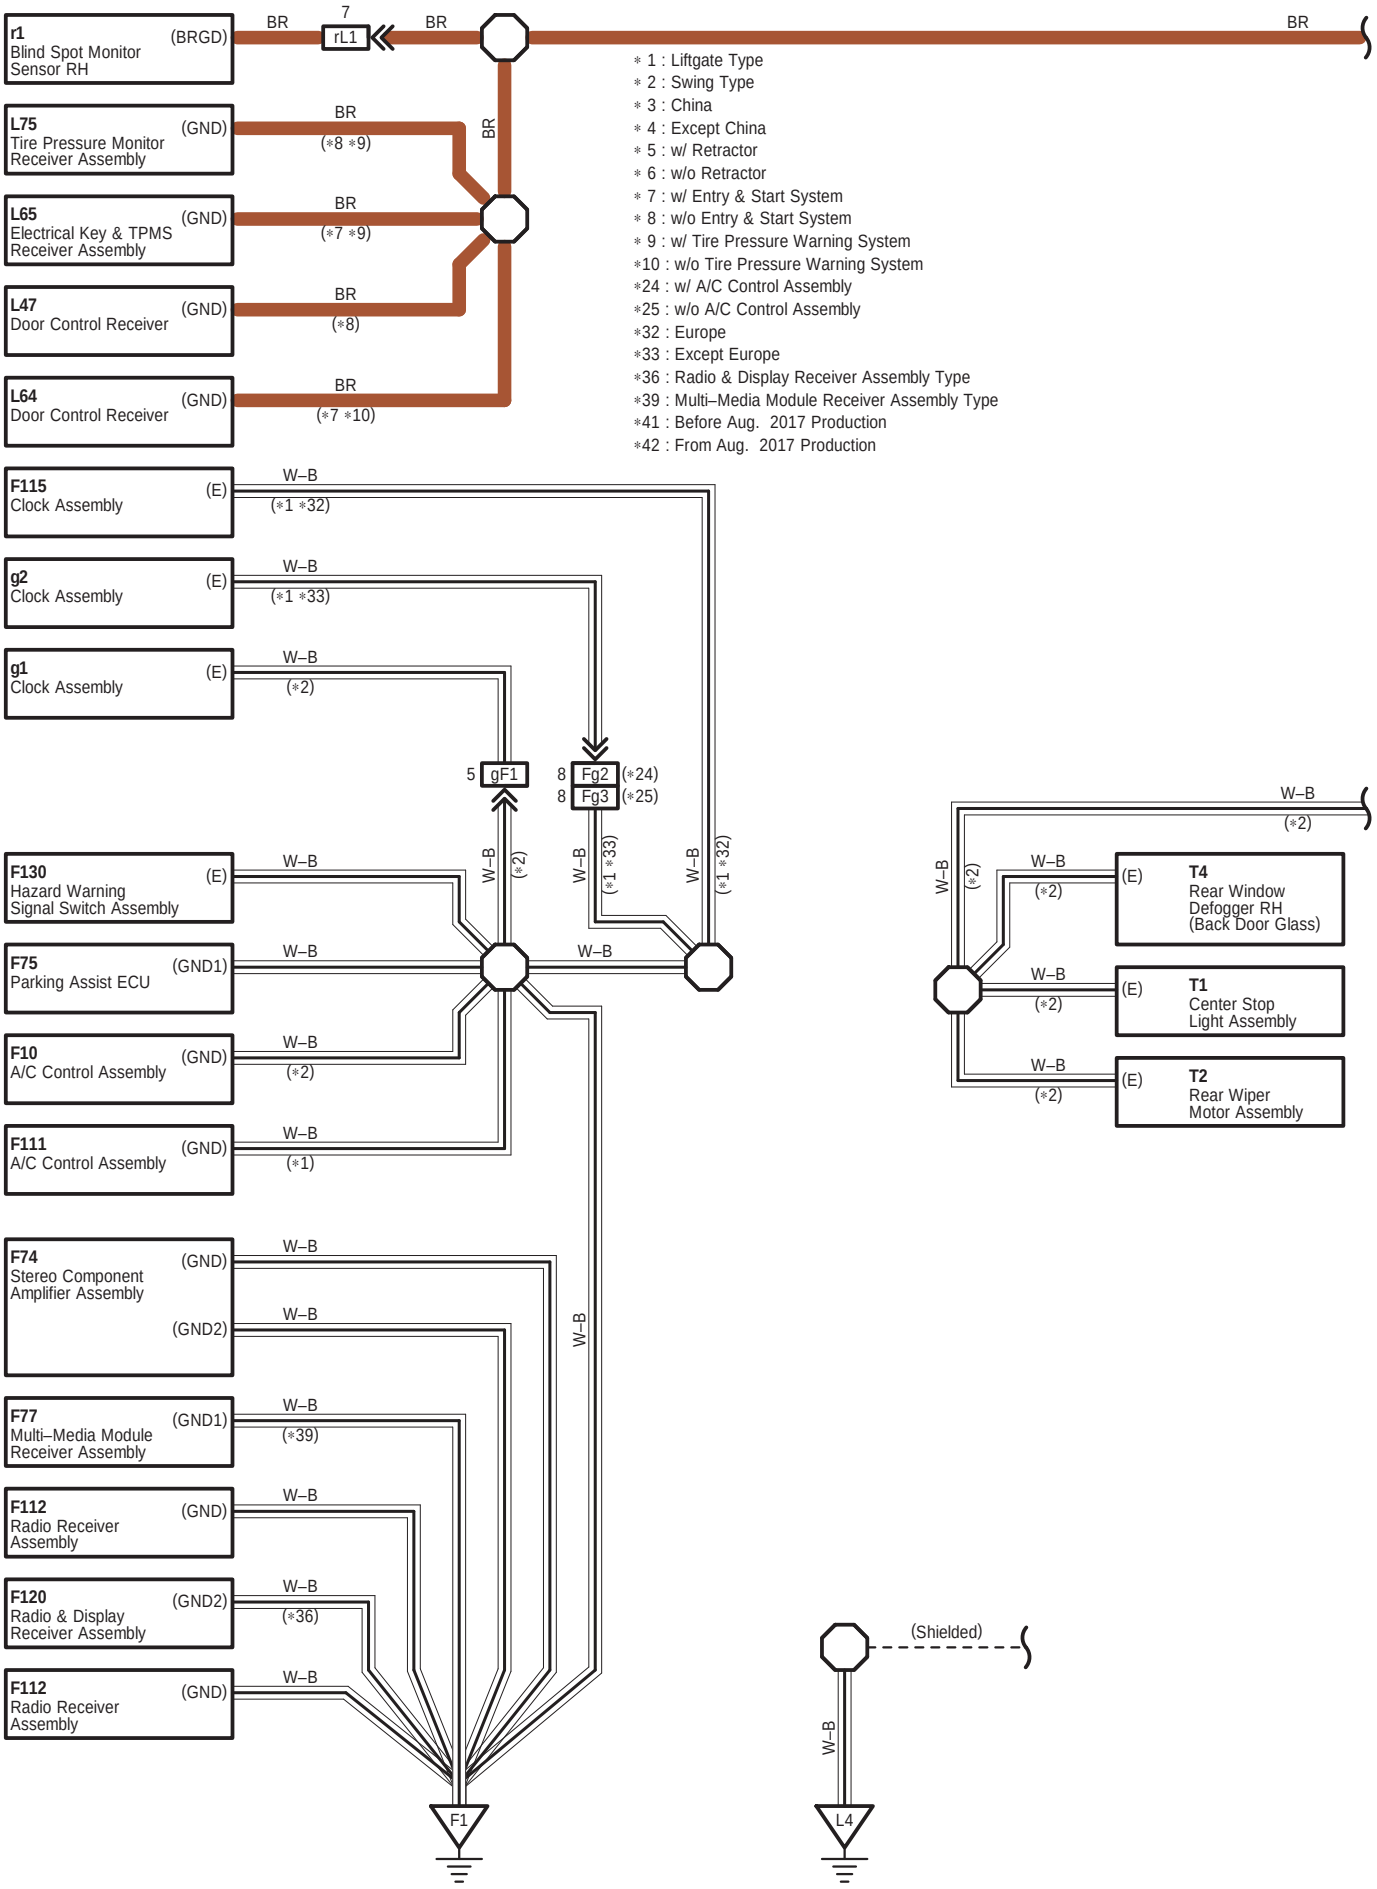

r1
Blind Spot Monitor Sensor RH
(BRGD)
BR
7
rL1
BR
BR
L75
Tire Pressure Monitor Receiver Assembly
(GND)
BR
(∗8 ∗9)
L65
Electrical Key & TPMS Receiver Assembly
(GND)
BR
(∗7 ∗9)
L47
Door Control Receiver
(GND)
BR
(∗8)
L64
Door Control Receiver
(GND)
BR
(∗7 ∗10)
∗ 1 : Liftgate Type
∗ 2 : Swing Type
∗ 3 : China
∗ 4 : Except China
∗ 5 : w/ Retractor
∗ 6 : w/o Retractor
∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
∗ 9 : w/ Tire Pressure Warning System
∗10 : w/o Tire Pressure Warning System
∗24 : w/ A/C Control Assembly
∗25 : w/o A/C Control Assembly
∗32 : Europe
∗33 : Except Europe
∗36 : Radio & Display Receiver Assembly Type
∗39 : Multi–Media Module Receiver Assembly Type
∗41 : Before Aug. 2017 Production
∗42 : From Aug. 2017 Production
F115
Clock Assembly
(E)
W–B
(∗1 ∗32)
g2
Clock Assembly
(E)
W–B
(∗1 ∗33)
g1
Clock Assembly
(E)
W–B
(∗2)
5 gF1
8 Fg2 (∗24)
8 Fg3 (∗25)
W–B
(∗2)
W–B
(∗1 ∗33)
W–B
(∗1 ∗32)
F130
Hazard Warning Signal Switch Assembly
(E)
W–B
F75
Parking Assist ECU
(GND1)
W–B
F10
A/C Control Assembly
(GND)
W–B
(∗2)
F111
A/C Control Assembly
(GND)
W–B
(∗1)
W–B
W–B
W–B
(∗2)
W–B
(∗2)
(E)
T4
Rear Window Defogger RH (Back Door Glass)
W–B
(∗2)
(E)
T1
Center Stop Light Assembly
W–B
(∗2)
(E)
T2
Rear Wiper Motor Assembly
F74
Stereo Component Amplifier Assembly
(GND)
W–B
(GND2)
W–B
W–B
F77
Multi–Media Module Receiver Assembly
(GND1)
W–B
(∗39)
F112
Radio Receiver Assembly
(GND)
W–B
F120
Radio & Display Receiver Assembly
(GND2)
W–B
(∗36)
F112
Radio Receiver Assembly
(GND)
W–B
F1
(Shielded)
W–B
L4

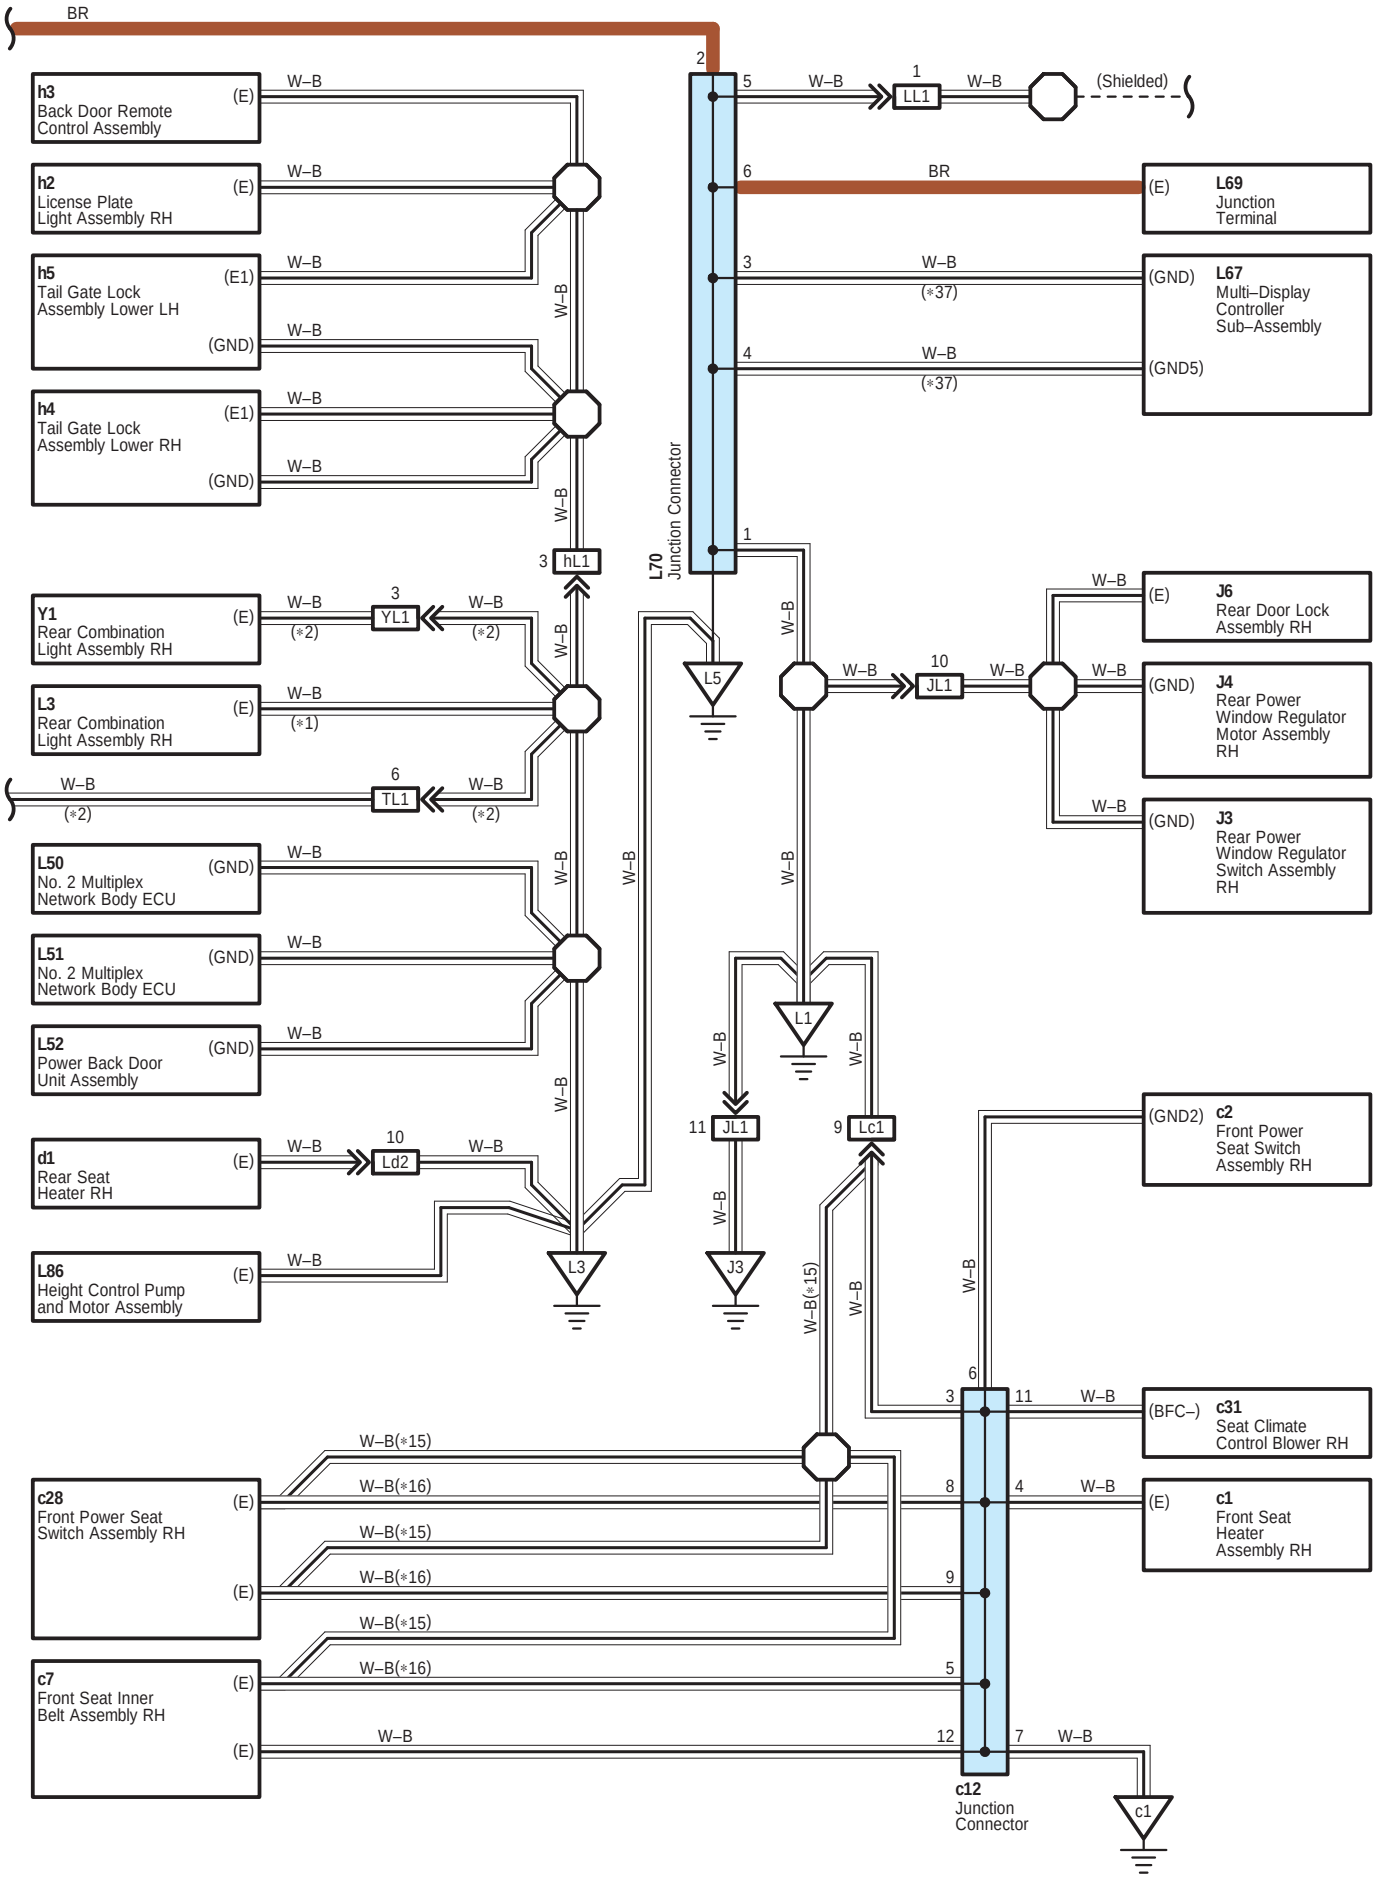

BR
h3
Back Door Remote
Control Assembly
(E)
W–B
h2
License Plate
Light Assembly RH
h5
Tail Gate Lock
Assembly Lower LH
(E1)
(GND)
h4
Tail Gate Lock
Assembly Lower RH
Y1
Rear Combination
Light Assembly RH
L3
Rear Combination
Light Assembly RH
L50
No. 2 Multiplex
Network Body ECU
L51
No. 2 Multiplex
Network Body ECU
L52
Power Back Door
Unit Assembly
d1
Rear Seat
Heater RH
L86
Height Control Pump
and Motor Assembly
(∗1)
(∗2)
YL1
TL1
hL1
Ld2
L70
Junction Connector
LL1
(Shielded)
L69
Junction
Terminal
L67
Multi–Display
Controller
Sub–Assembly
(GND5)
(∗37)
L5
L1
JL1
J6
Rear Door Lock
Assembly RH
J4
Rear Power
Window Regulator
Motor Assembly
RH
J3
Rear Power
Window Regulator
Switch Assembly
RH
Lc1
J3
L3
(GND2)
c2
Front Power
Seat Switch
Assembly RH
(BFC–)
c31
Seat Climate
Control Blower RH
c1
Front Seat
Heater
Assembly RH
W–B(∗15)
W–B(∗16)
c28
Front Power Seat
Switch Assembly RH
c7
Front Seat Inner
Belt Assembly RH
c12
Junction
Connector
c1

Ground Point <LHD From Aug. 2015 Production>

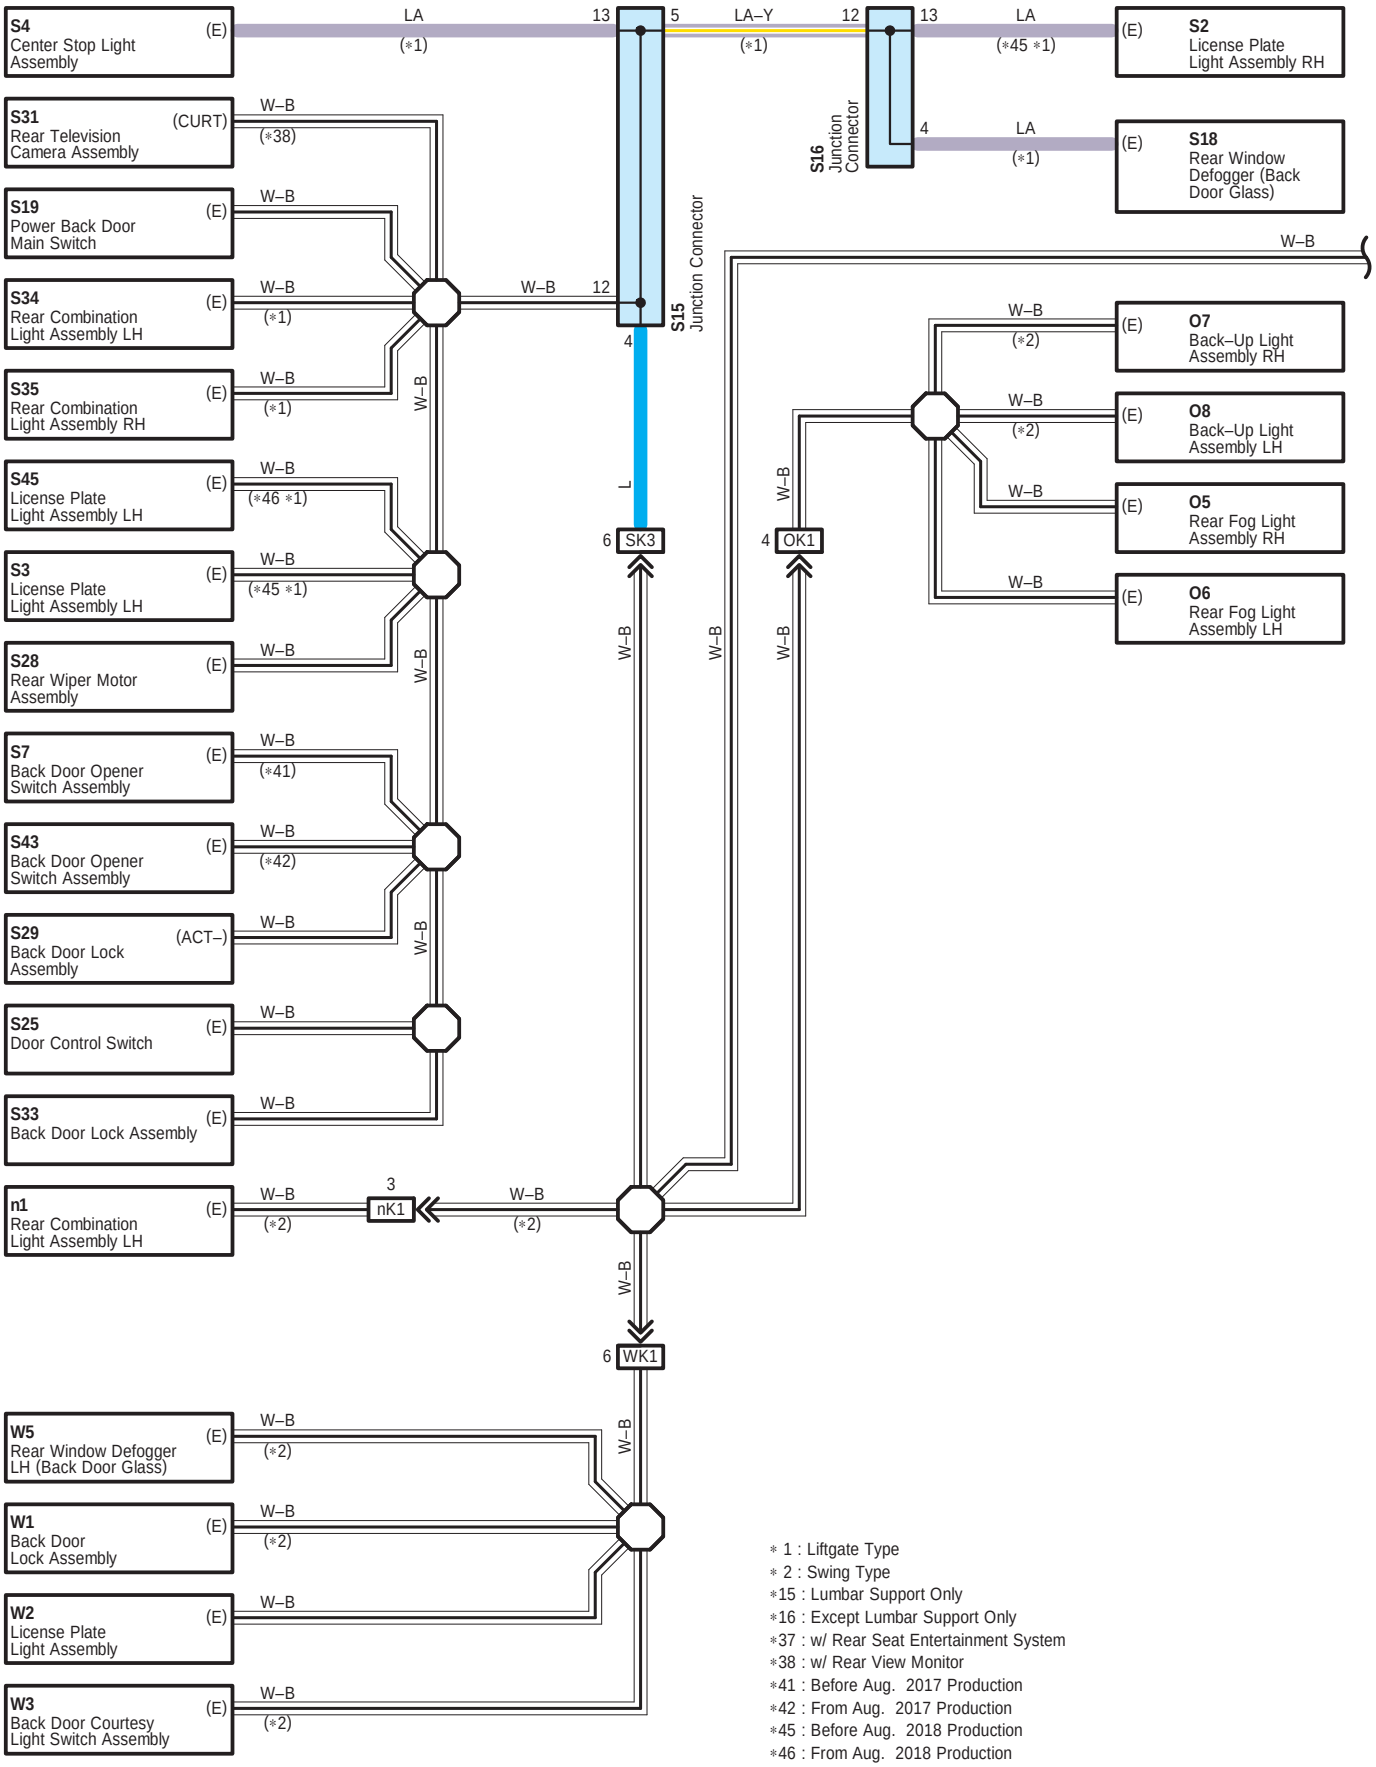


* 1 : Liftgate Type
* 2 : Swing Type
*15 : Lumbar Support Only
*16 : Except Lumbar Support Only
*37 : w/ Rear Seat Entertainment System
*38 : w/ Rear View Monitor
*41 : Before Aug. 2017 Production
*42 : From Aug. 2017 Production
*45 : Before Aug. 2018 Production
*46 : From Aug. 2018 Production

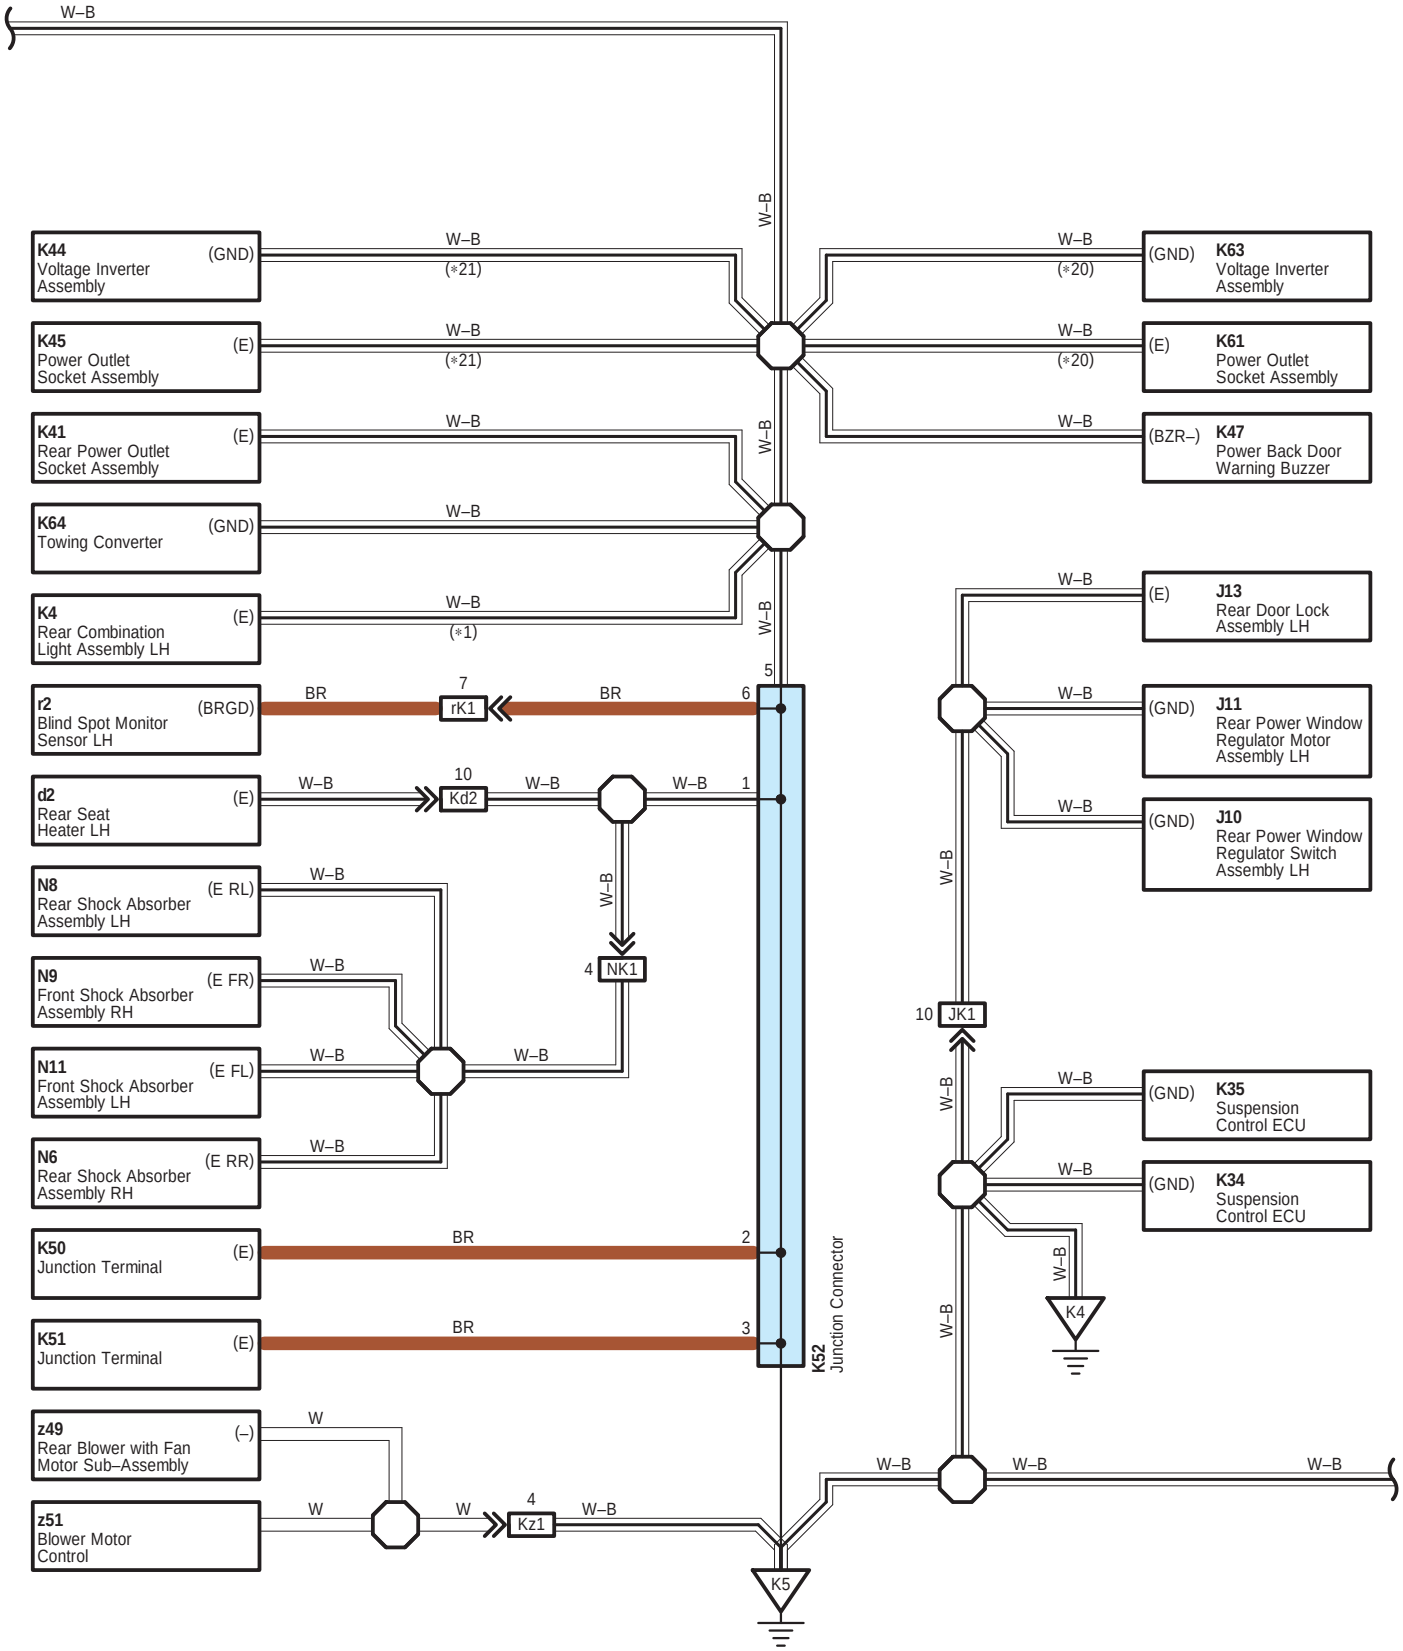

W–B
K44 Voltage Inverter Assembly (GND)
K45 Power Outlet Socket Assembly (E)
K41 Rear Power Outlet Socket Assembly (E)
K64 Towing Converter (GND)
K4 Rear Combination Light Assembly LH (E)
r2 Blind Spot Monitor Sensor LH (BRGD)
d2 Rear Seat Heater LH (E)
N8 Rear Shock Absorber Assembly LH (E RL)
N9 Front Shock Absorber Assembly RH (E FR)
N11 Front Shock Absorber Assembly LH (E FL)
N6 Rear Shock Absorber Assembly RH (E RR)
K50 Junction Terminal (E)
K51 Junction Terminal (E)
z49 Rear Blower with Fan Motor Sub–Assembly (–)
z51 Blower Motor Control
(∗21)
(∗20)
(∗1)
BR
W
rK1
Kd2
NK1
Kz1
JK1
K52 Junction Connector
K63 Voltage Inverter Assembly (GND)
K61 Power Outlet Socket Assembly (E)
K47 Power Back Door Warning Buzzer (BZR–)
J13 Rear Door Lock Assembly LH (E)
J11 Rear Power Window Regulator Motor Assembly LH (GND)
J10 Rear Power Window Regulator Switch Assembly LH (GND)
K35 Suspension Control ECU (GND)
K34 Suspension Control ECU (GND)
K4
K5

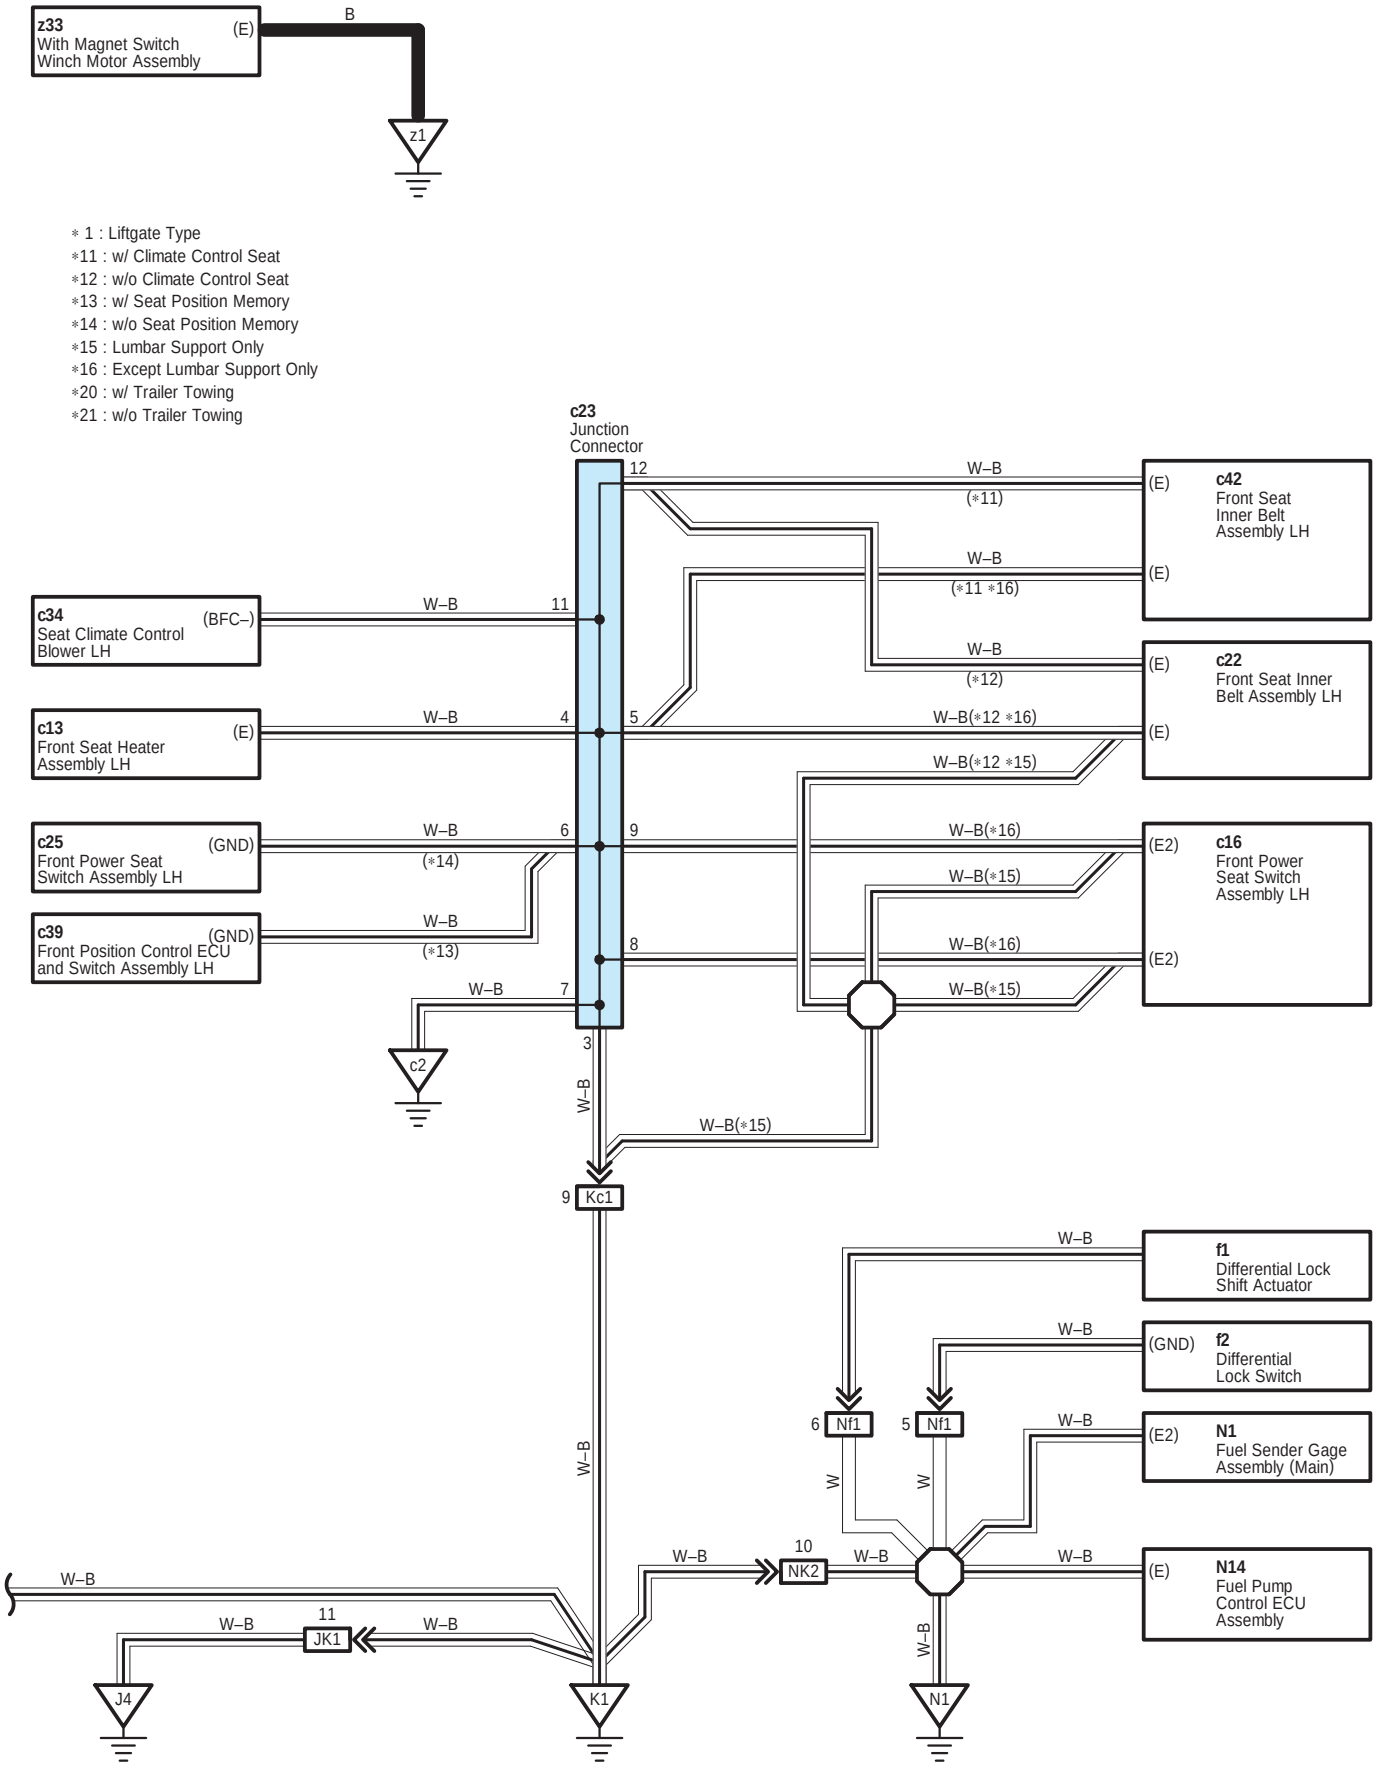
z33
With Magnet Switch
Winch Motor Assembly
(E)
B
z1
∗ 1 : Liftgate Type
∗11 : w/ Climate Control Seat
∗12 : w/o Climate Control Seat
∗13 : w/ Seat Position Memory
∗14 : w/o Seat Position Memory
∗15 : Lumbar Support Only
∗16 : Except Lumbar Support Only
∗20 : w/ Trailer Towing
∗21 : w/o Trailer Towing
c23
Junction
Connector
12
11
4
5
6
9
8
7
3
c34
Seat Climate Control
Blower LH
(BFC–)
c13
Front Seat Heater
Assembly LH
(E)
c25
Front Power Seat
Switch Assembly LH
(GND)
c39
Front Position Control ECU
and Switch Assembly LH
(GND)
c2
W–B
(∗11)
(∗11 ∗16)
(∗12)
W–B(∗12 ∗16)
W–B(∗12 ∗15)
W–B(∗16)
W–B(∗15)
(∗14)
(∗13)
c42
Front Seat
Inner Belt
Assembly LH
c22
Front Seat Inner
Belt Assembly LH
c16
Front Power
Seat Switch
Assembly LH
(E2)
9 Kc1
6 Nf1
5 Nf1
f1
Differential Lock
Shift Actuator
f2
Differential
Lock Switch
N1
Fuel Sender Gage
Assembly (Main)
10 NK2
N14
Fuel Pump
Control ECU
Assembly
11 JK1
J4
K1
N1
W
W–B


A 37
Blue

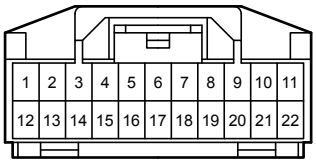


A 75
Black

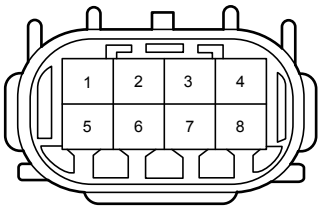


C 42
White

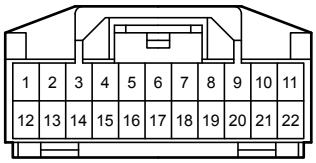


C 44
Blue

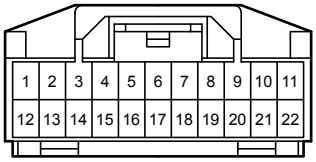


C 94
Gray

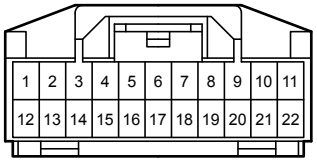


C 95
Black

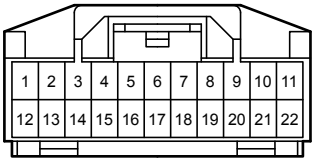


K 52
Black

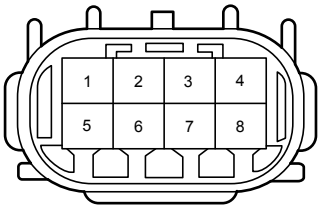


L 70
Black

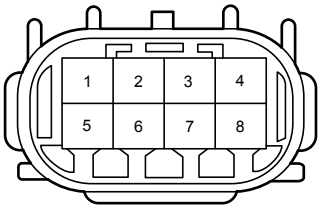


S 15
White

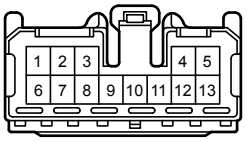


S 16
White

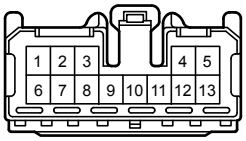


c 12
White



c 23
White




1P
White

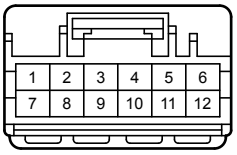


1R
Black




1S
White

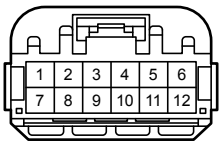


2I
White

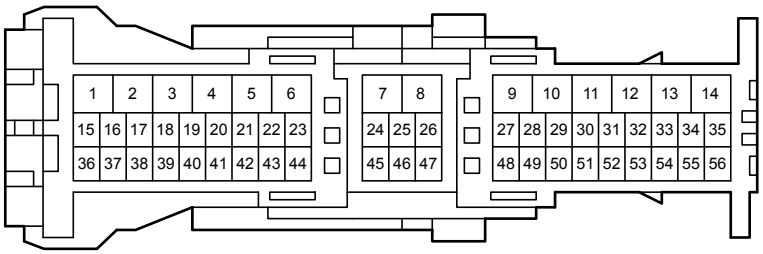


2J
White

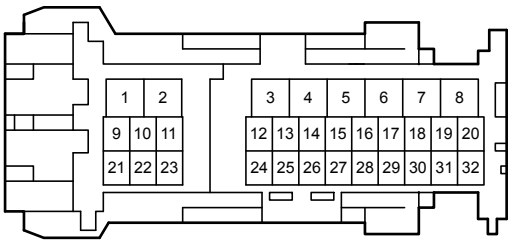


3C
White

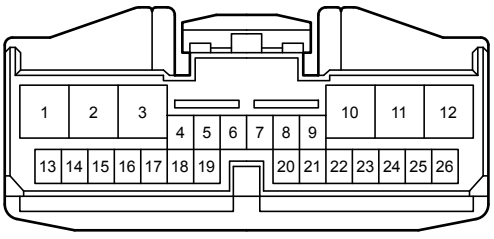


AA1
Gray

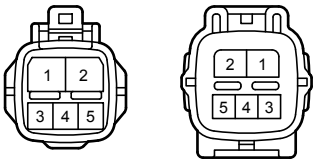


AD2
Black

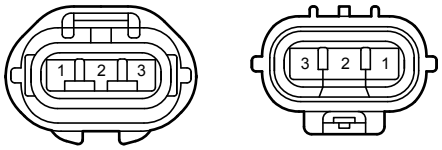


AK1
Blue

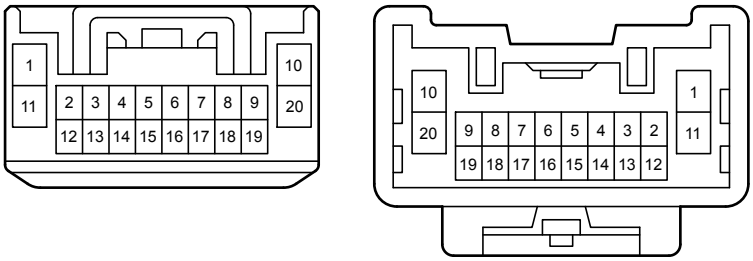


BA1
Black

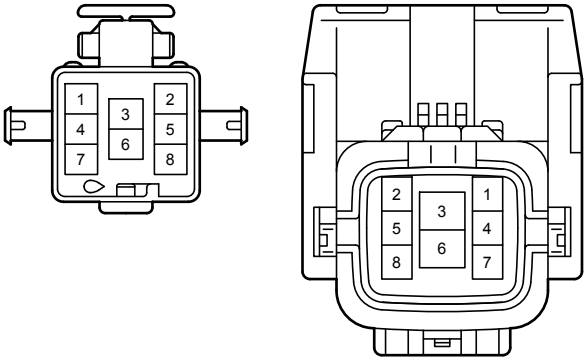


CA3
White

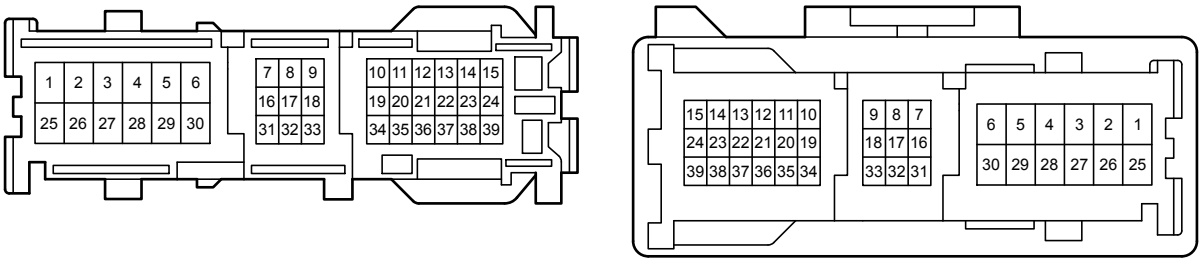

CA6
White

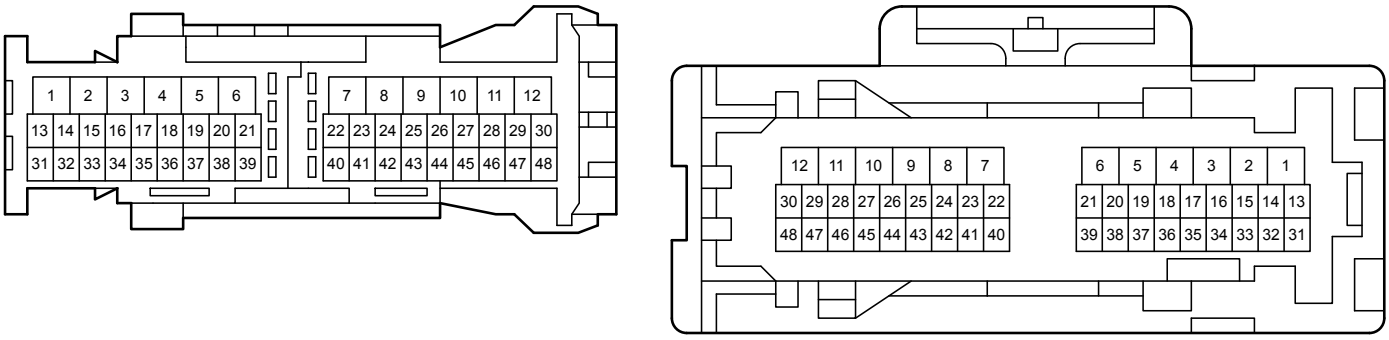


EA3
White

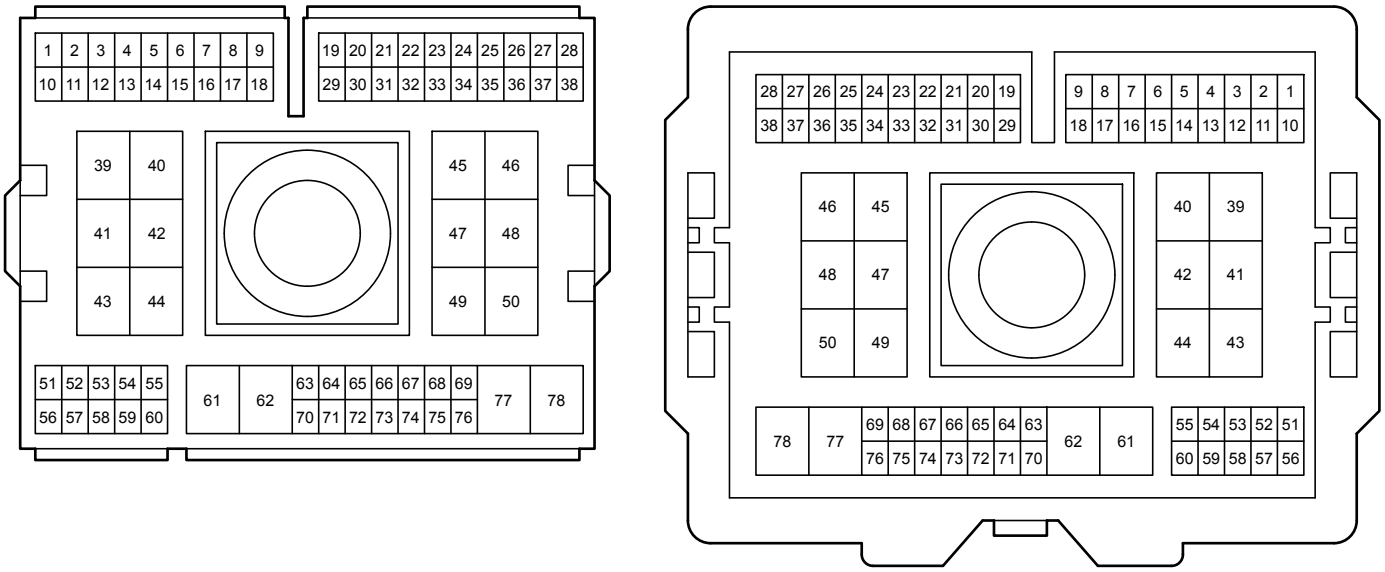


EK1

White

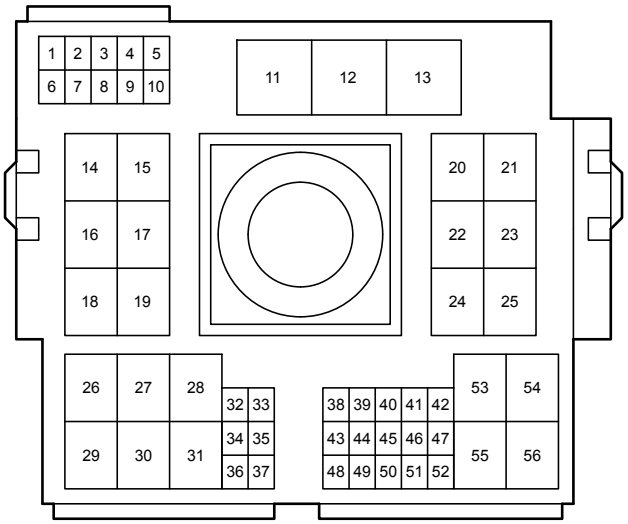


Blue

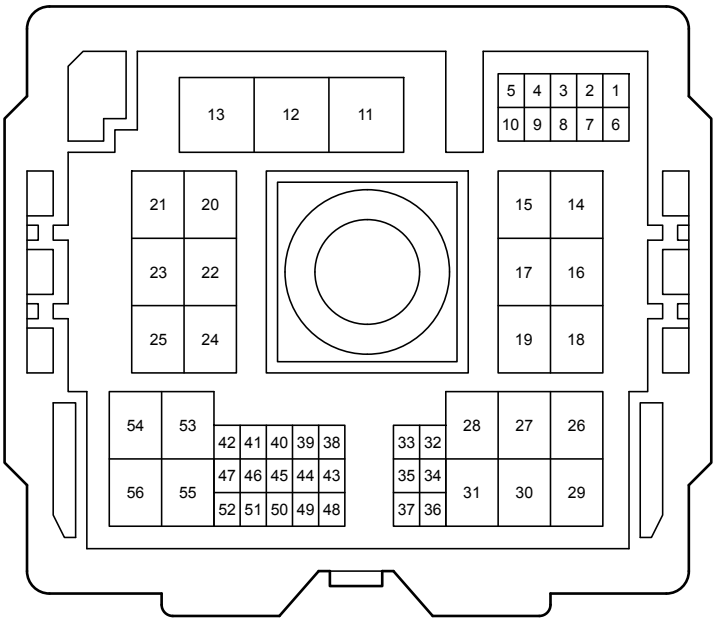


FE4

White

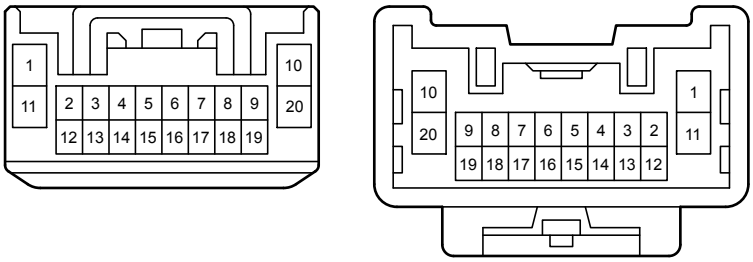


FE5

White

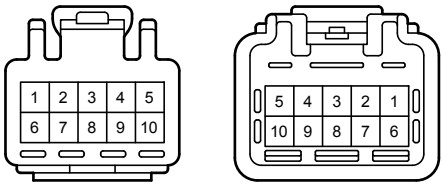


FE8

White

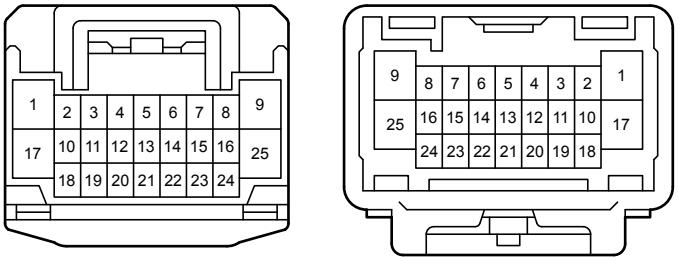


Fg2

White

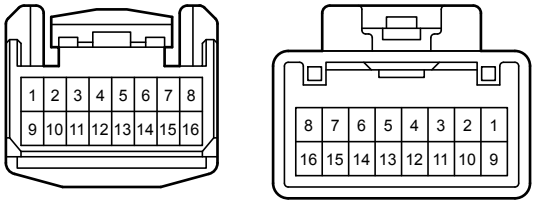


Fg3

Black White

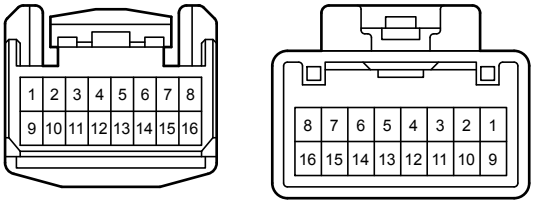


GE1

White

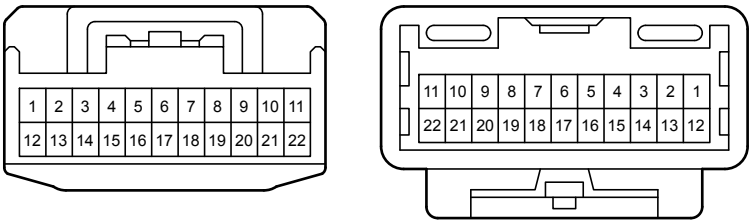


IE2

Blue

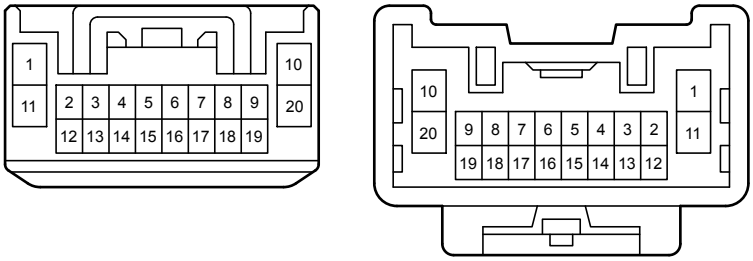


IE3

White

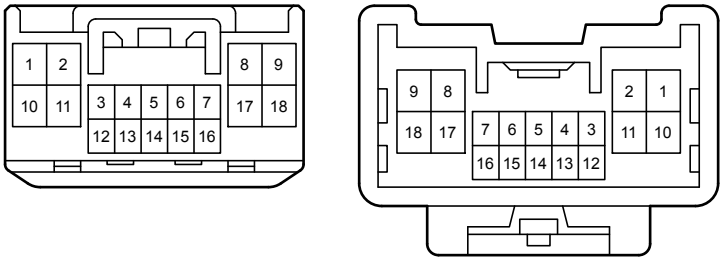


IE5


Blue

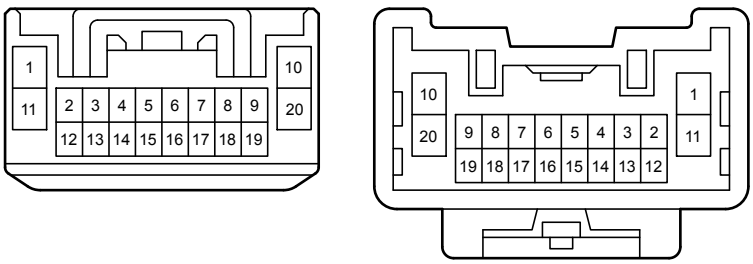


IE6
White

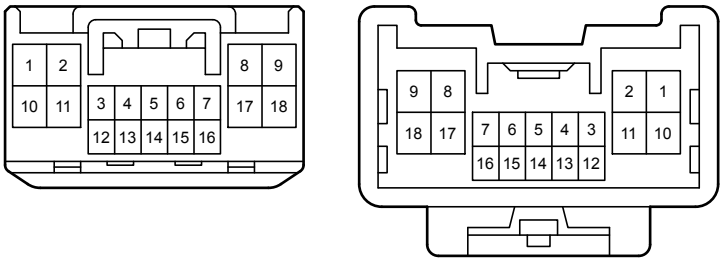


IE7
White

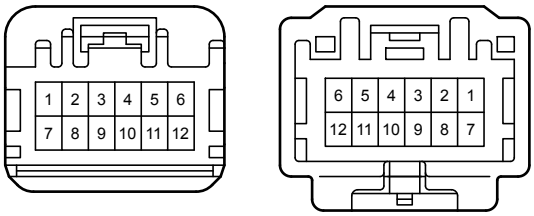


Iq1
White

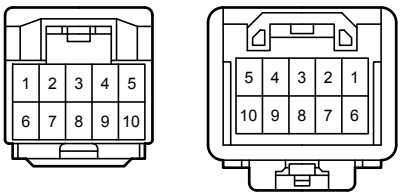


JK1
White

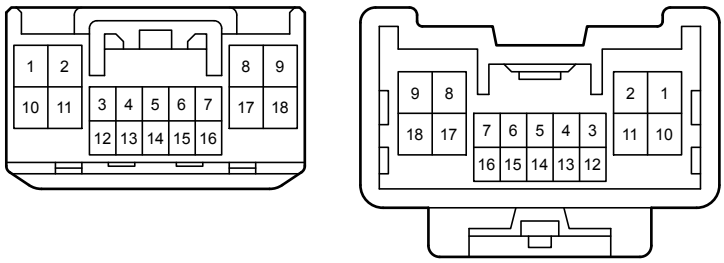



JL1
White

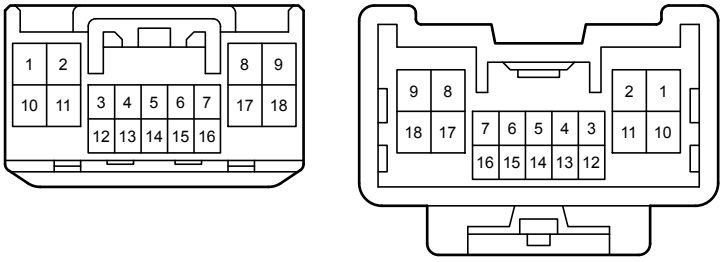



Kc1
White

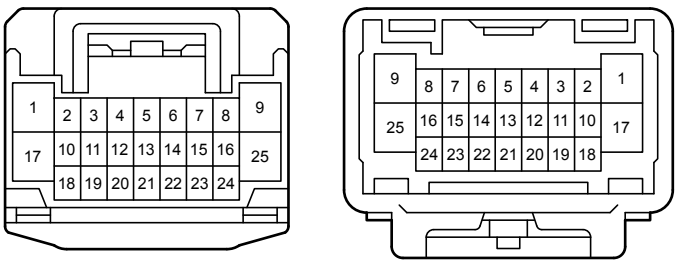

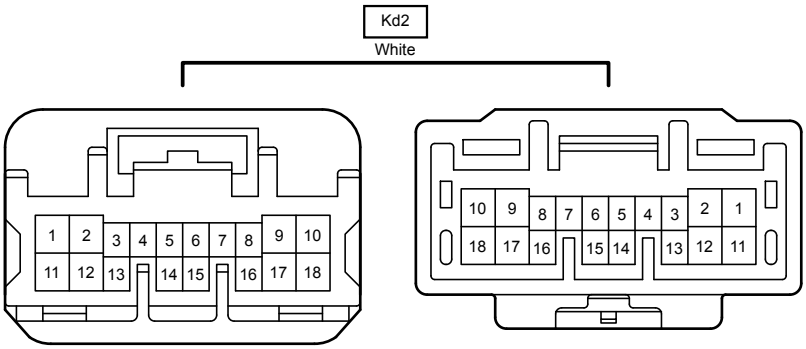

Kd2
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11

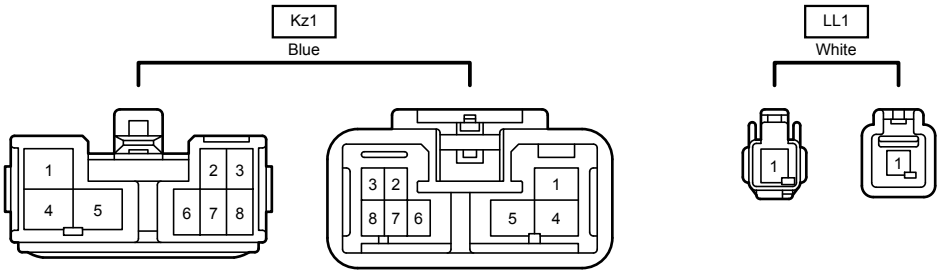
Kz1
Blue
1 2 3 4 5 6 7 8
3 2 1 8 7 6 5 4
LL1
White
1
1

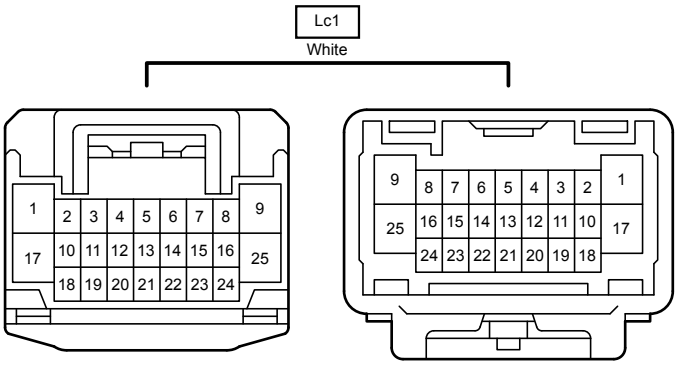

Lc1
White
1 2 3 4 5 6 7 8 9 17 10 11 12 13 14 15 16 25 18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1 25 16 15 14 13 12 11 10 17 24 23 22 21 20 19 18

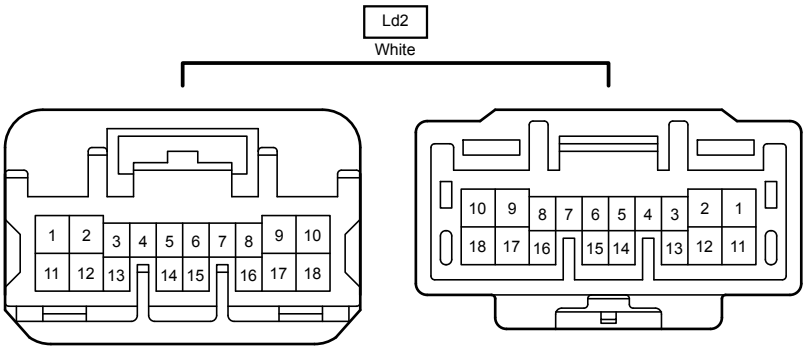
Ld2
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11


MK2
Gray

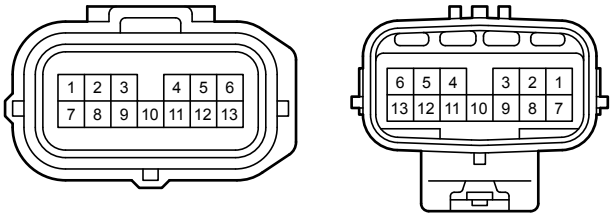


NK1
White

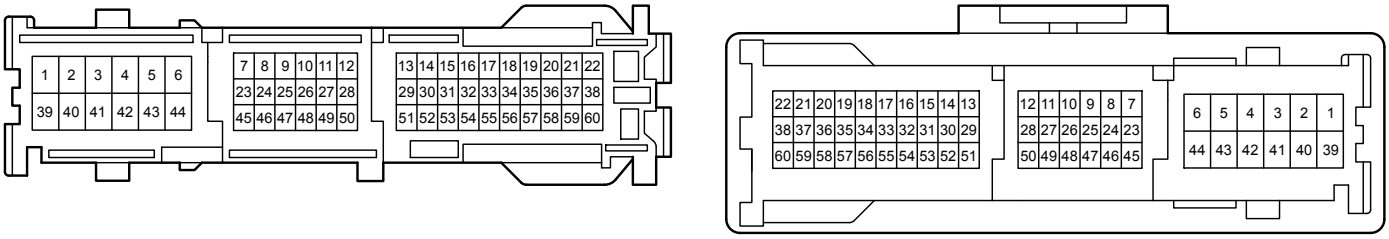


NK2
Black White

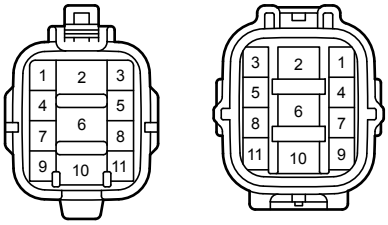


Nf1
White

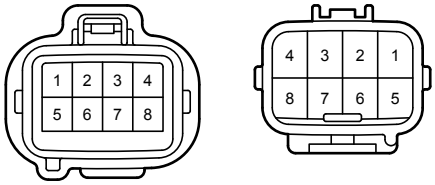


OK1
Black

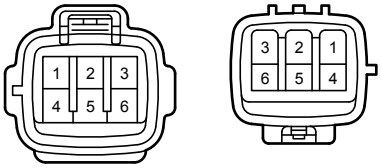


PF1
White

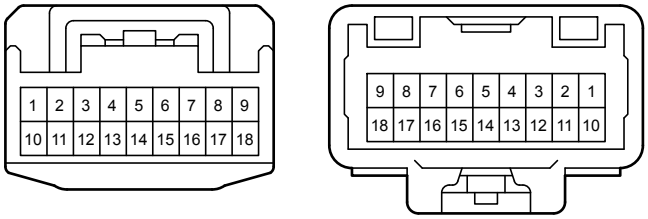


RE1
White

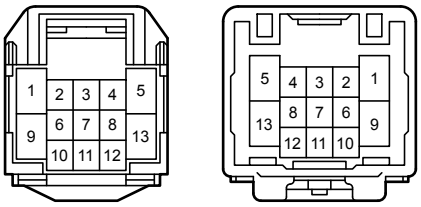


RE3
Blue

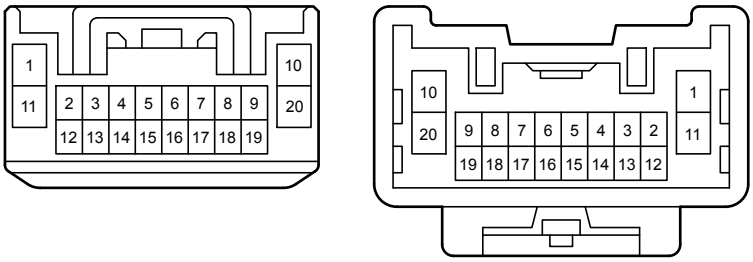


SK3
Blue

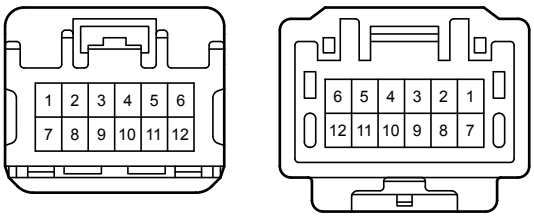


TL1
White

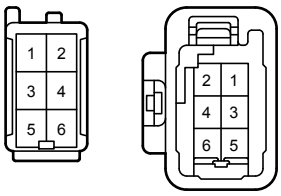


VE5
White

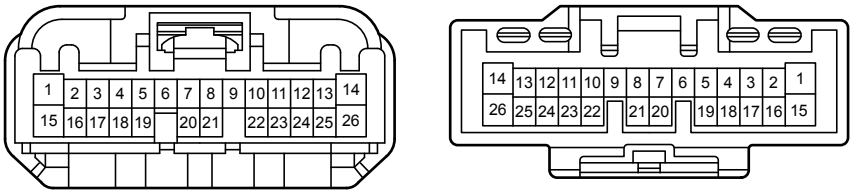


VE6
Gray

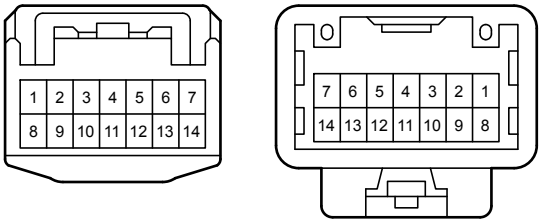

VE7
White

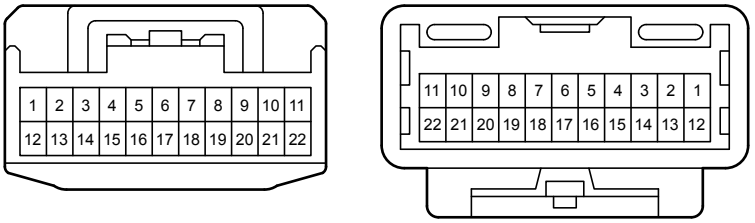

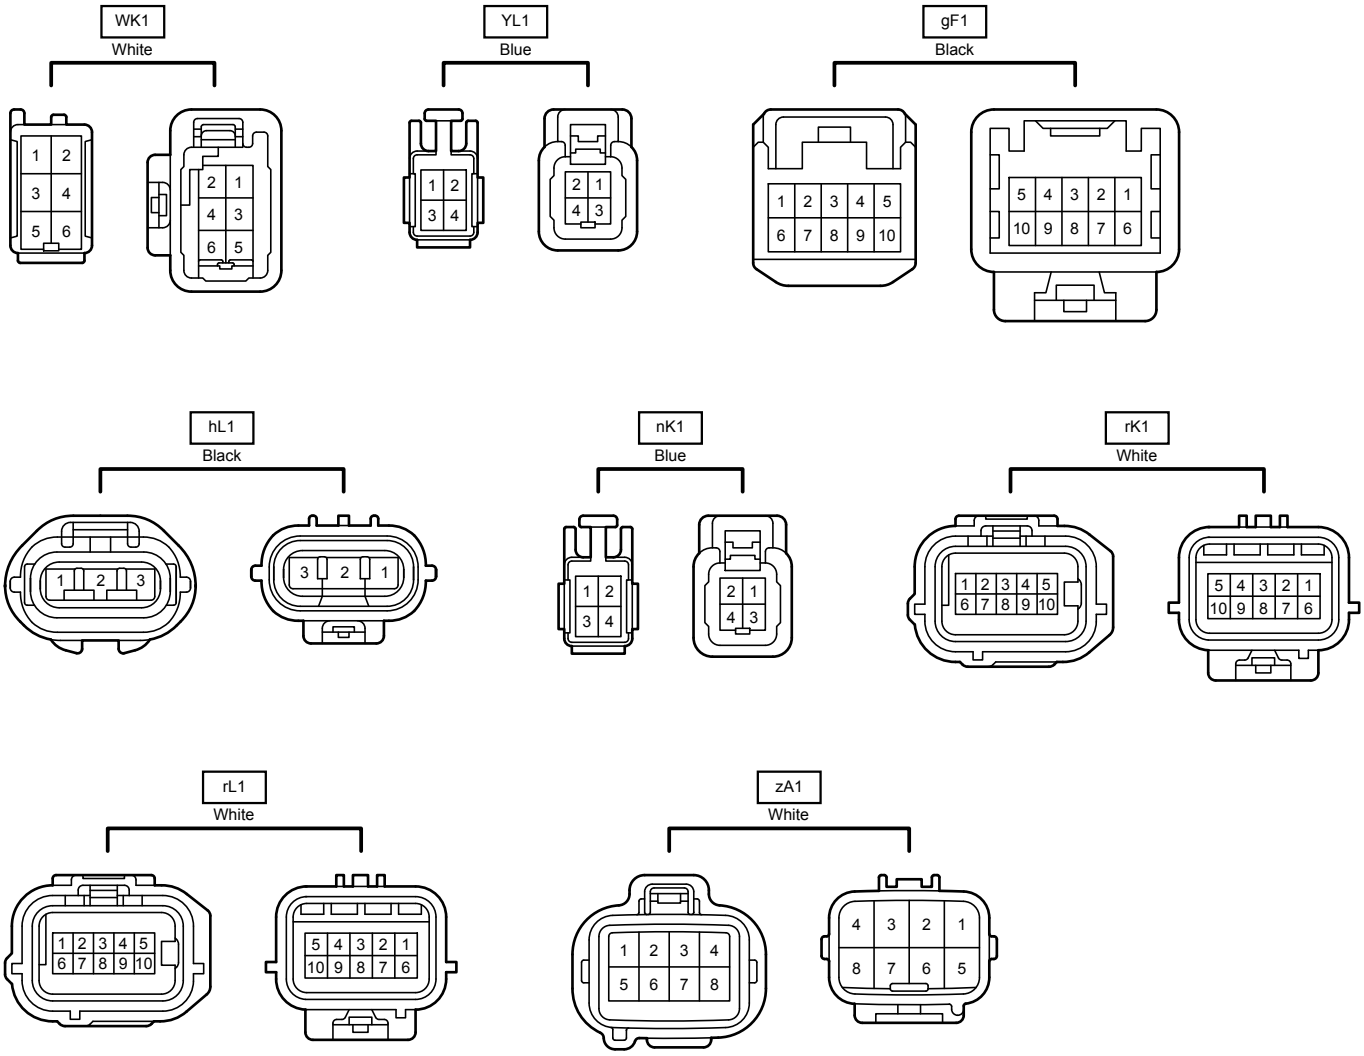
WK1
White
1 2
3 4
5 6
2 1
4 3
6 5
YL1
Blue
1 2
3 4
2 1
4 3
gF1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
hL1
Black
1 2 3
3 2 1
nK1
Blue
1 2
3 4
2 1
4 3
rK1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
rL1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zA1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5