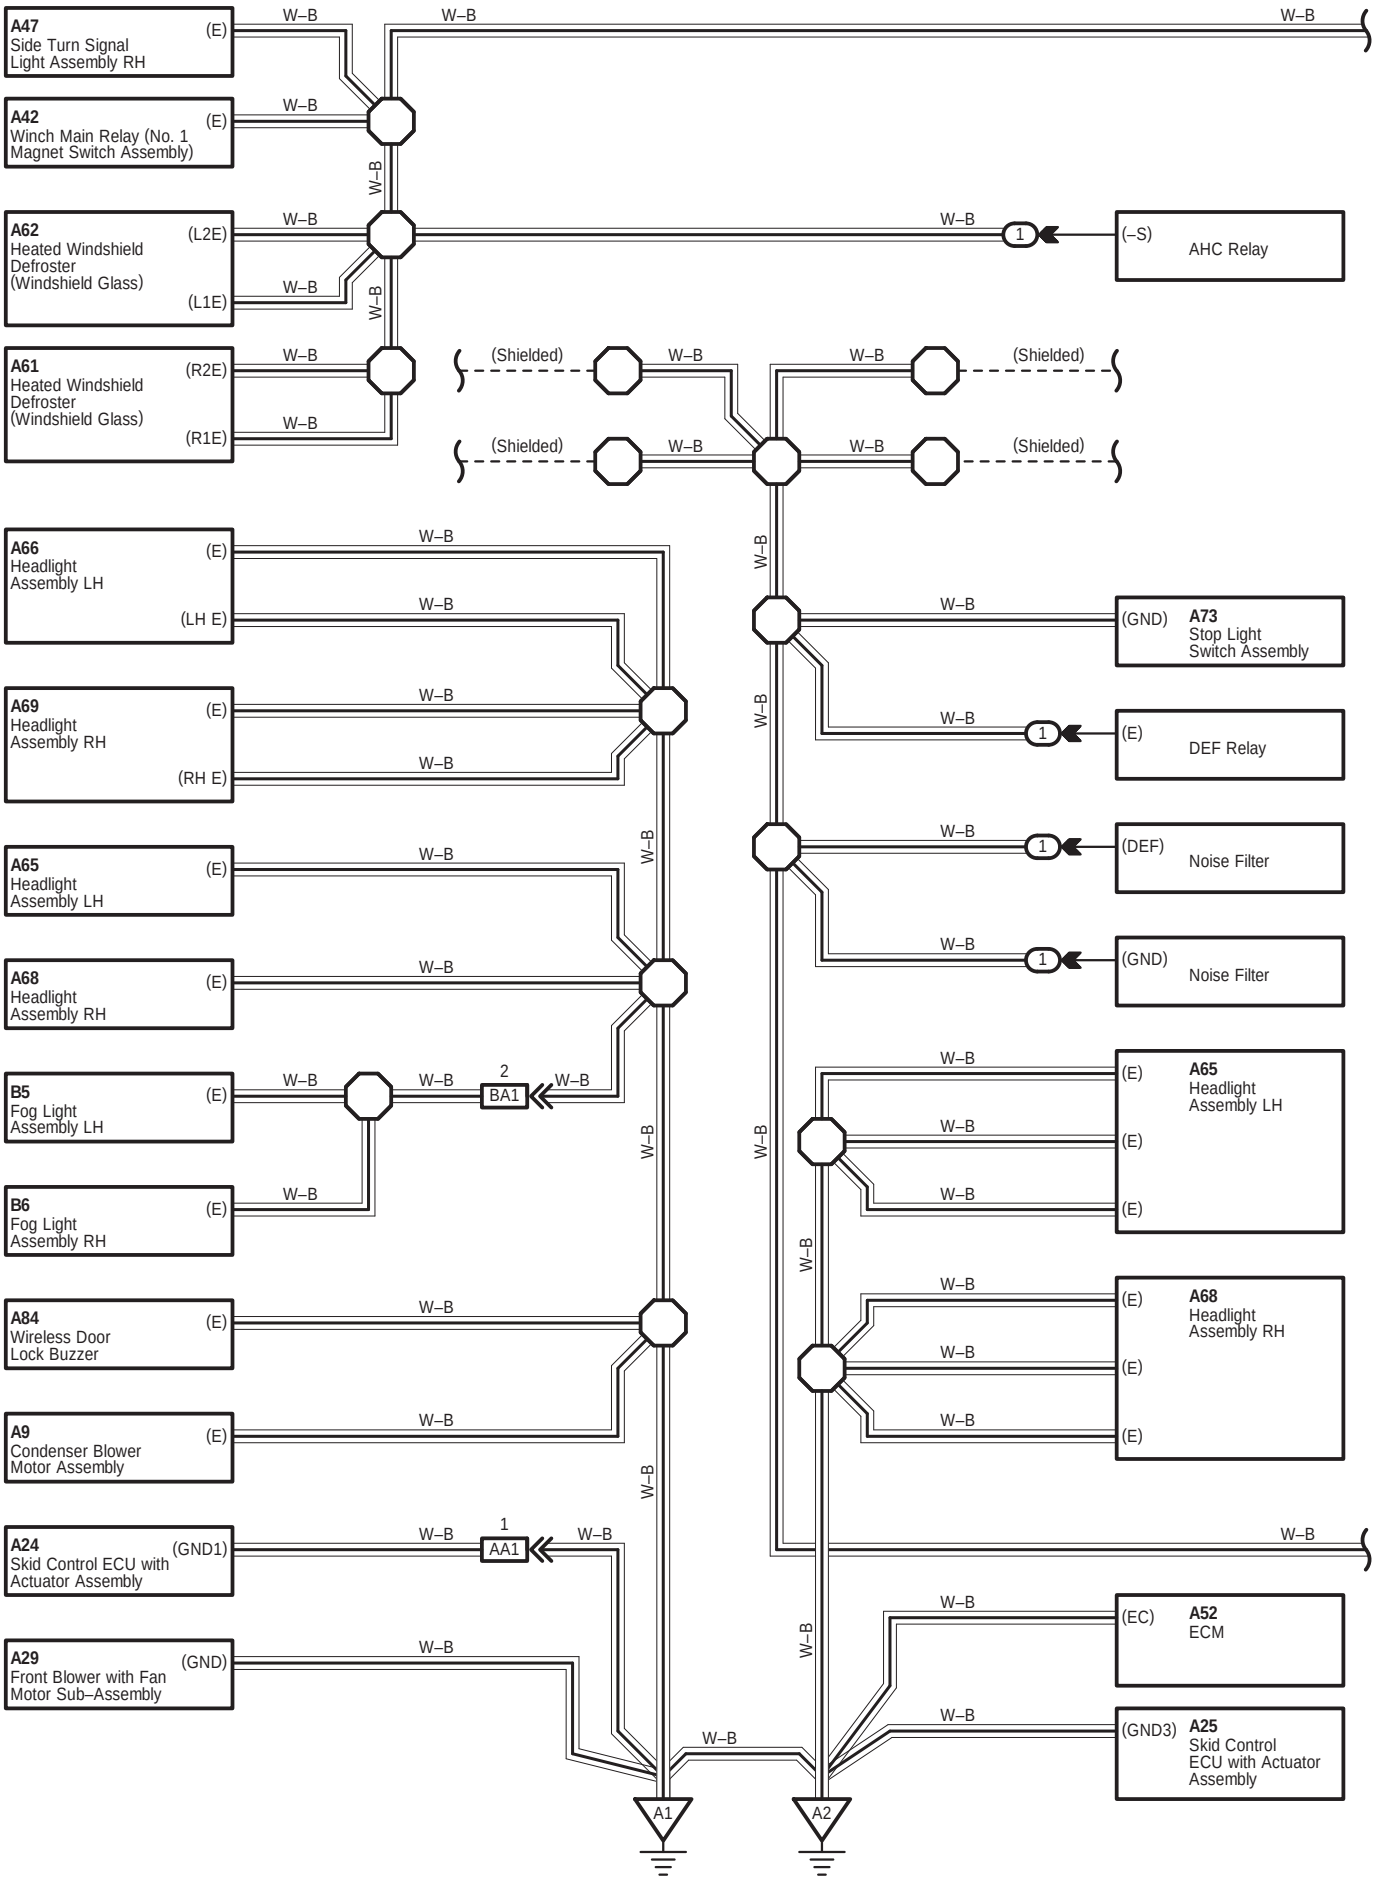
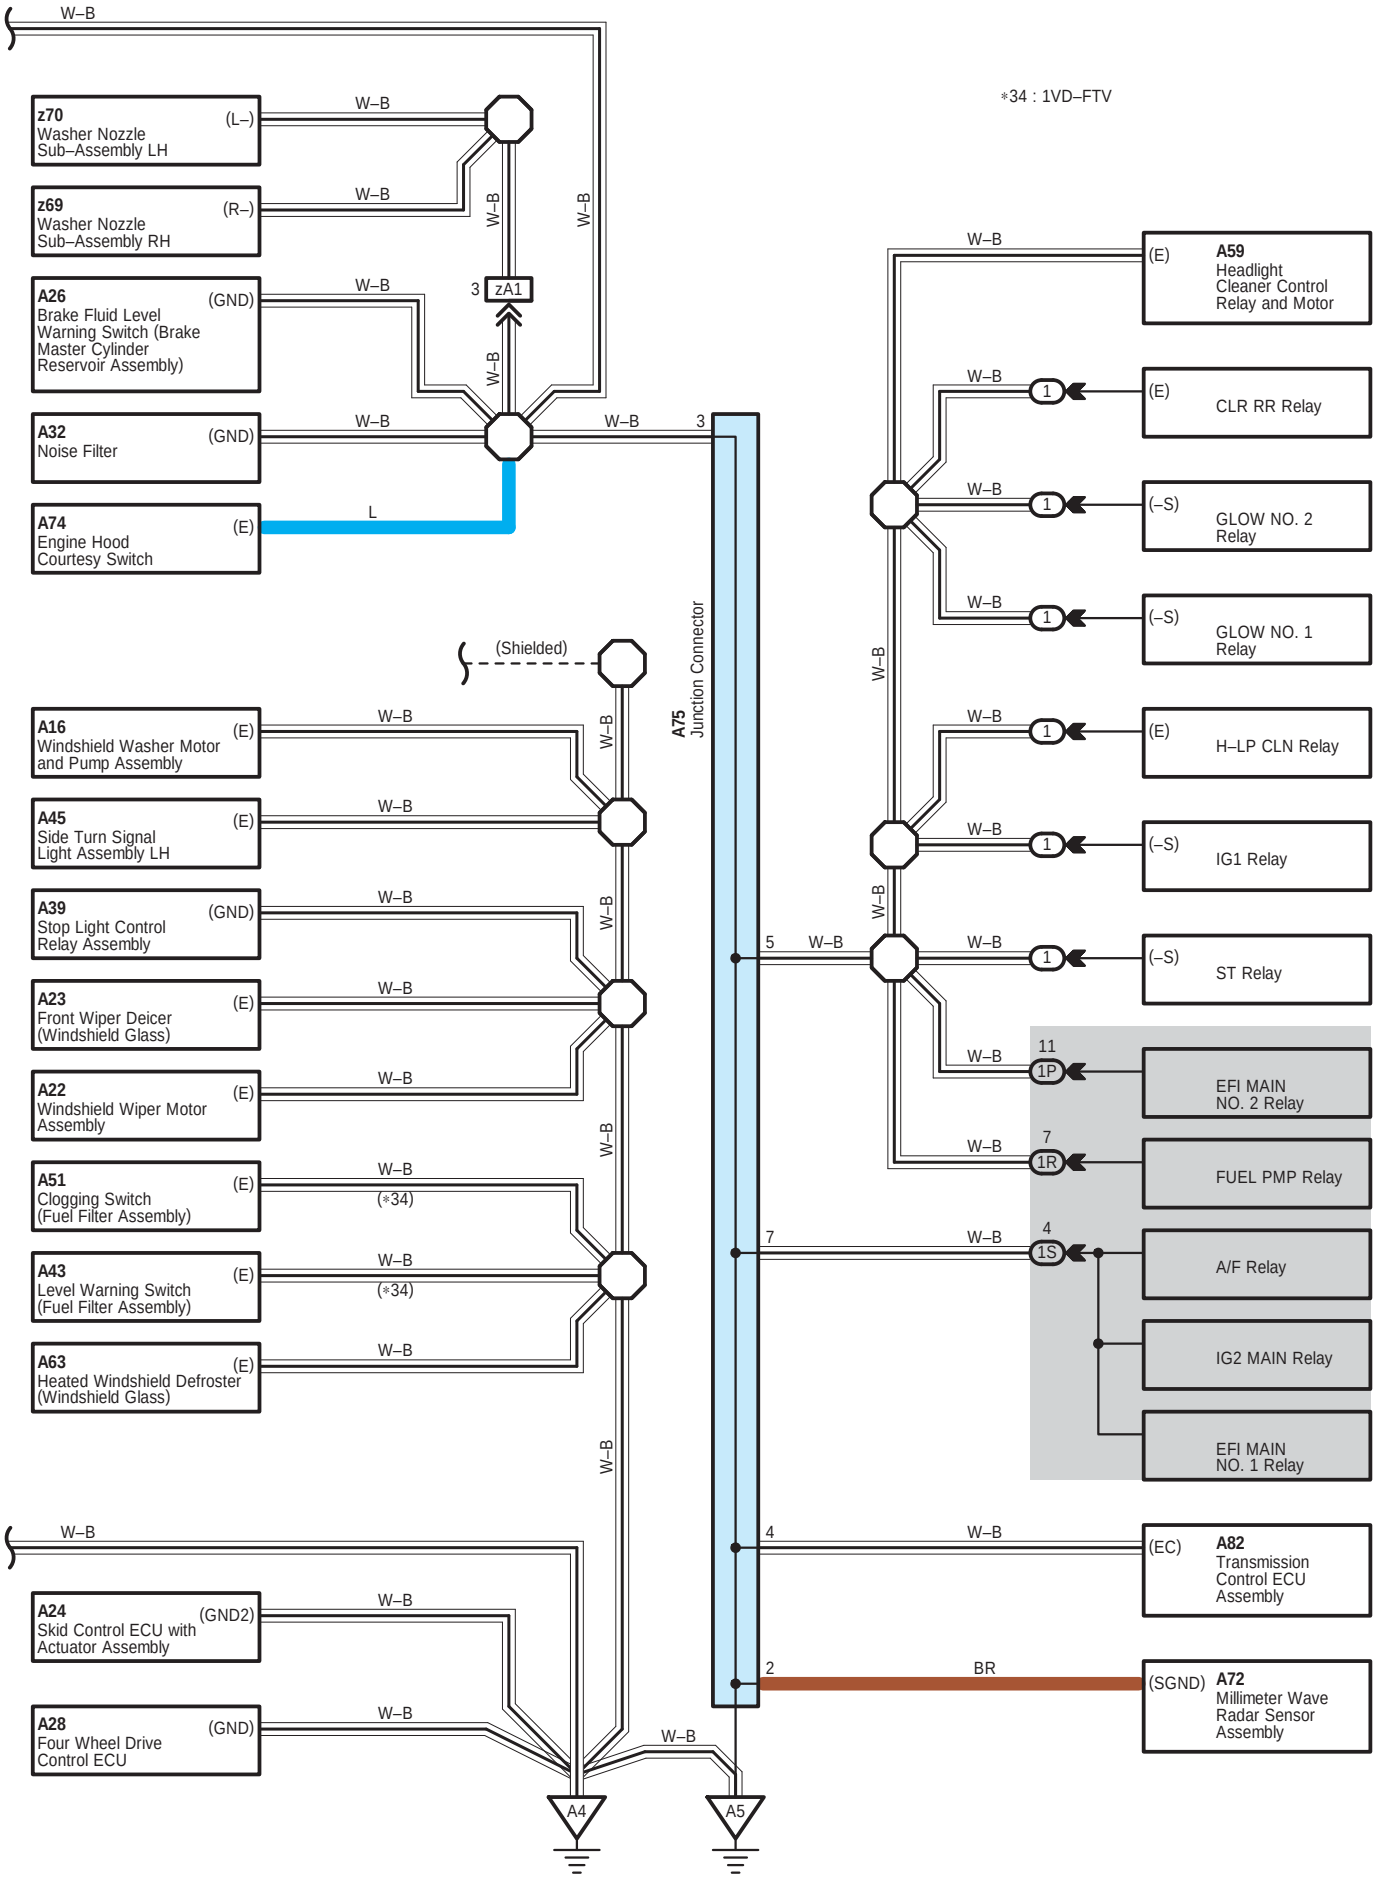
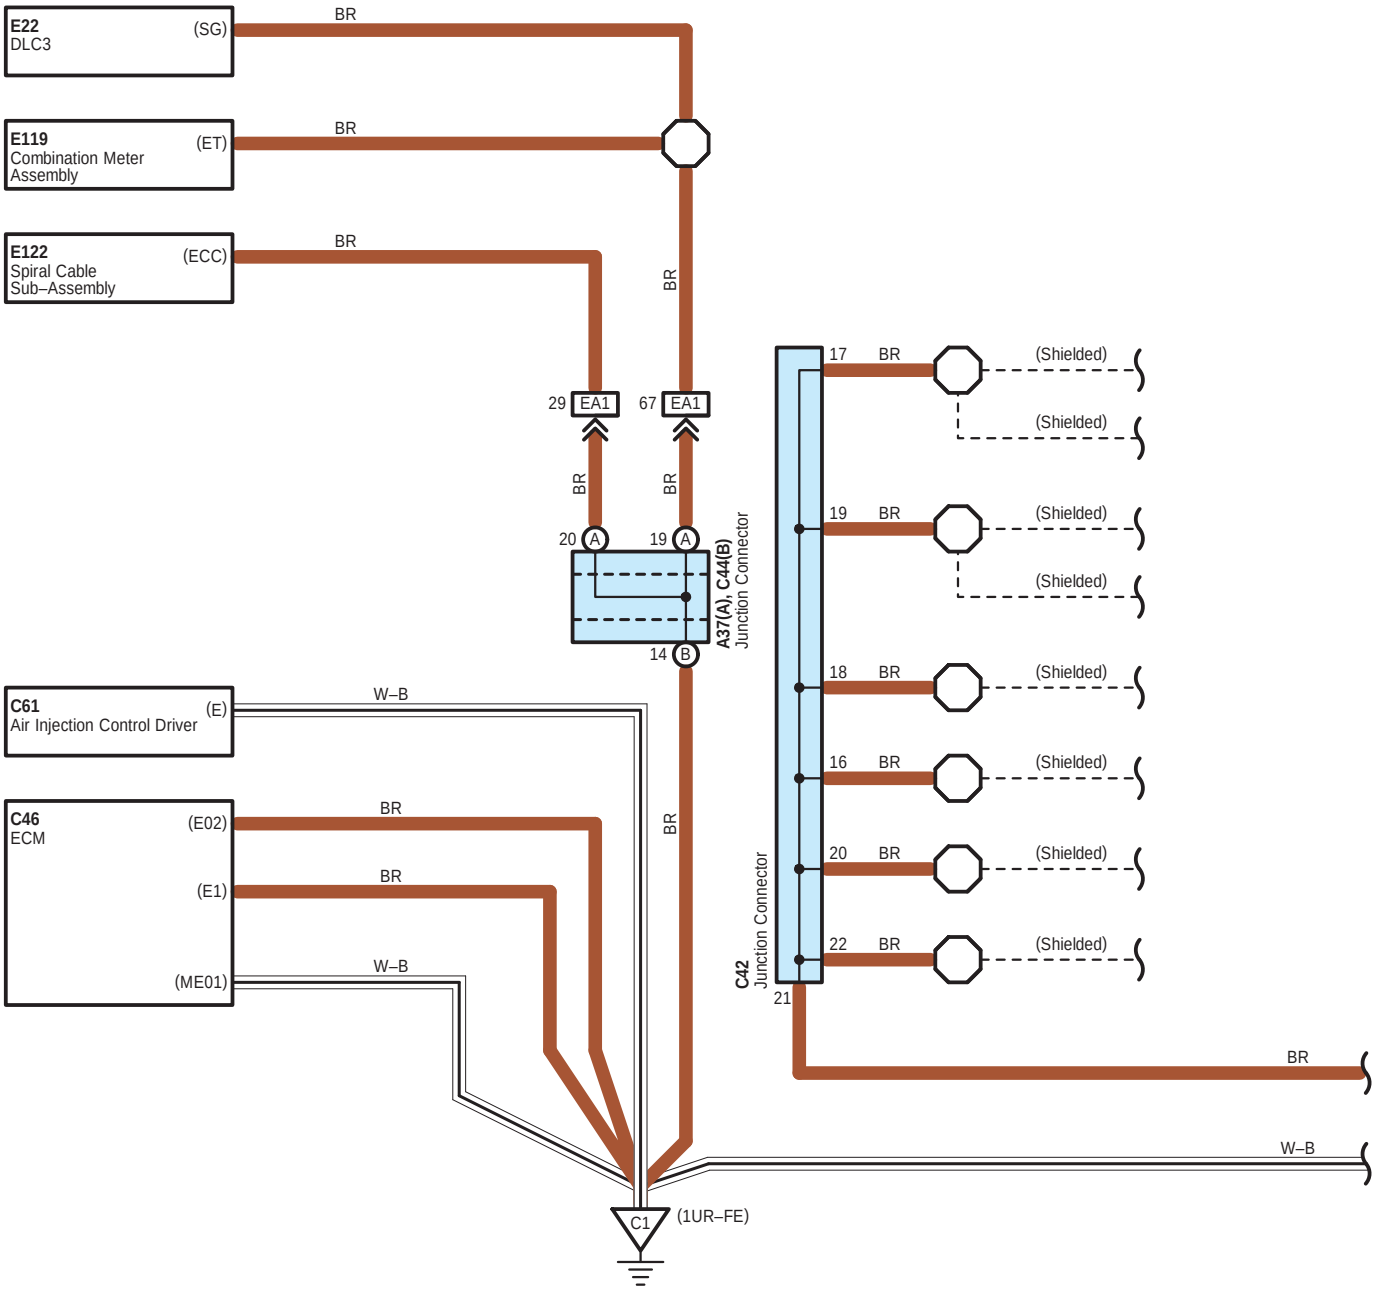
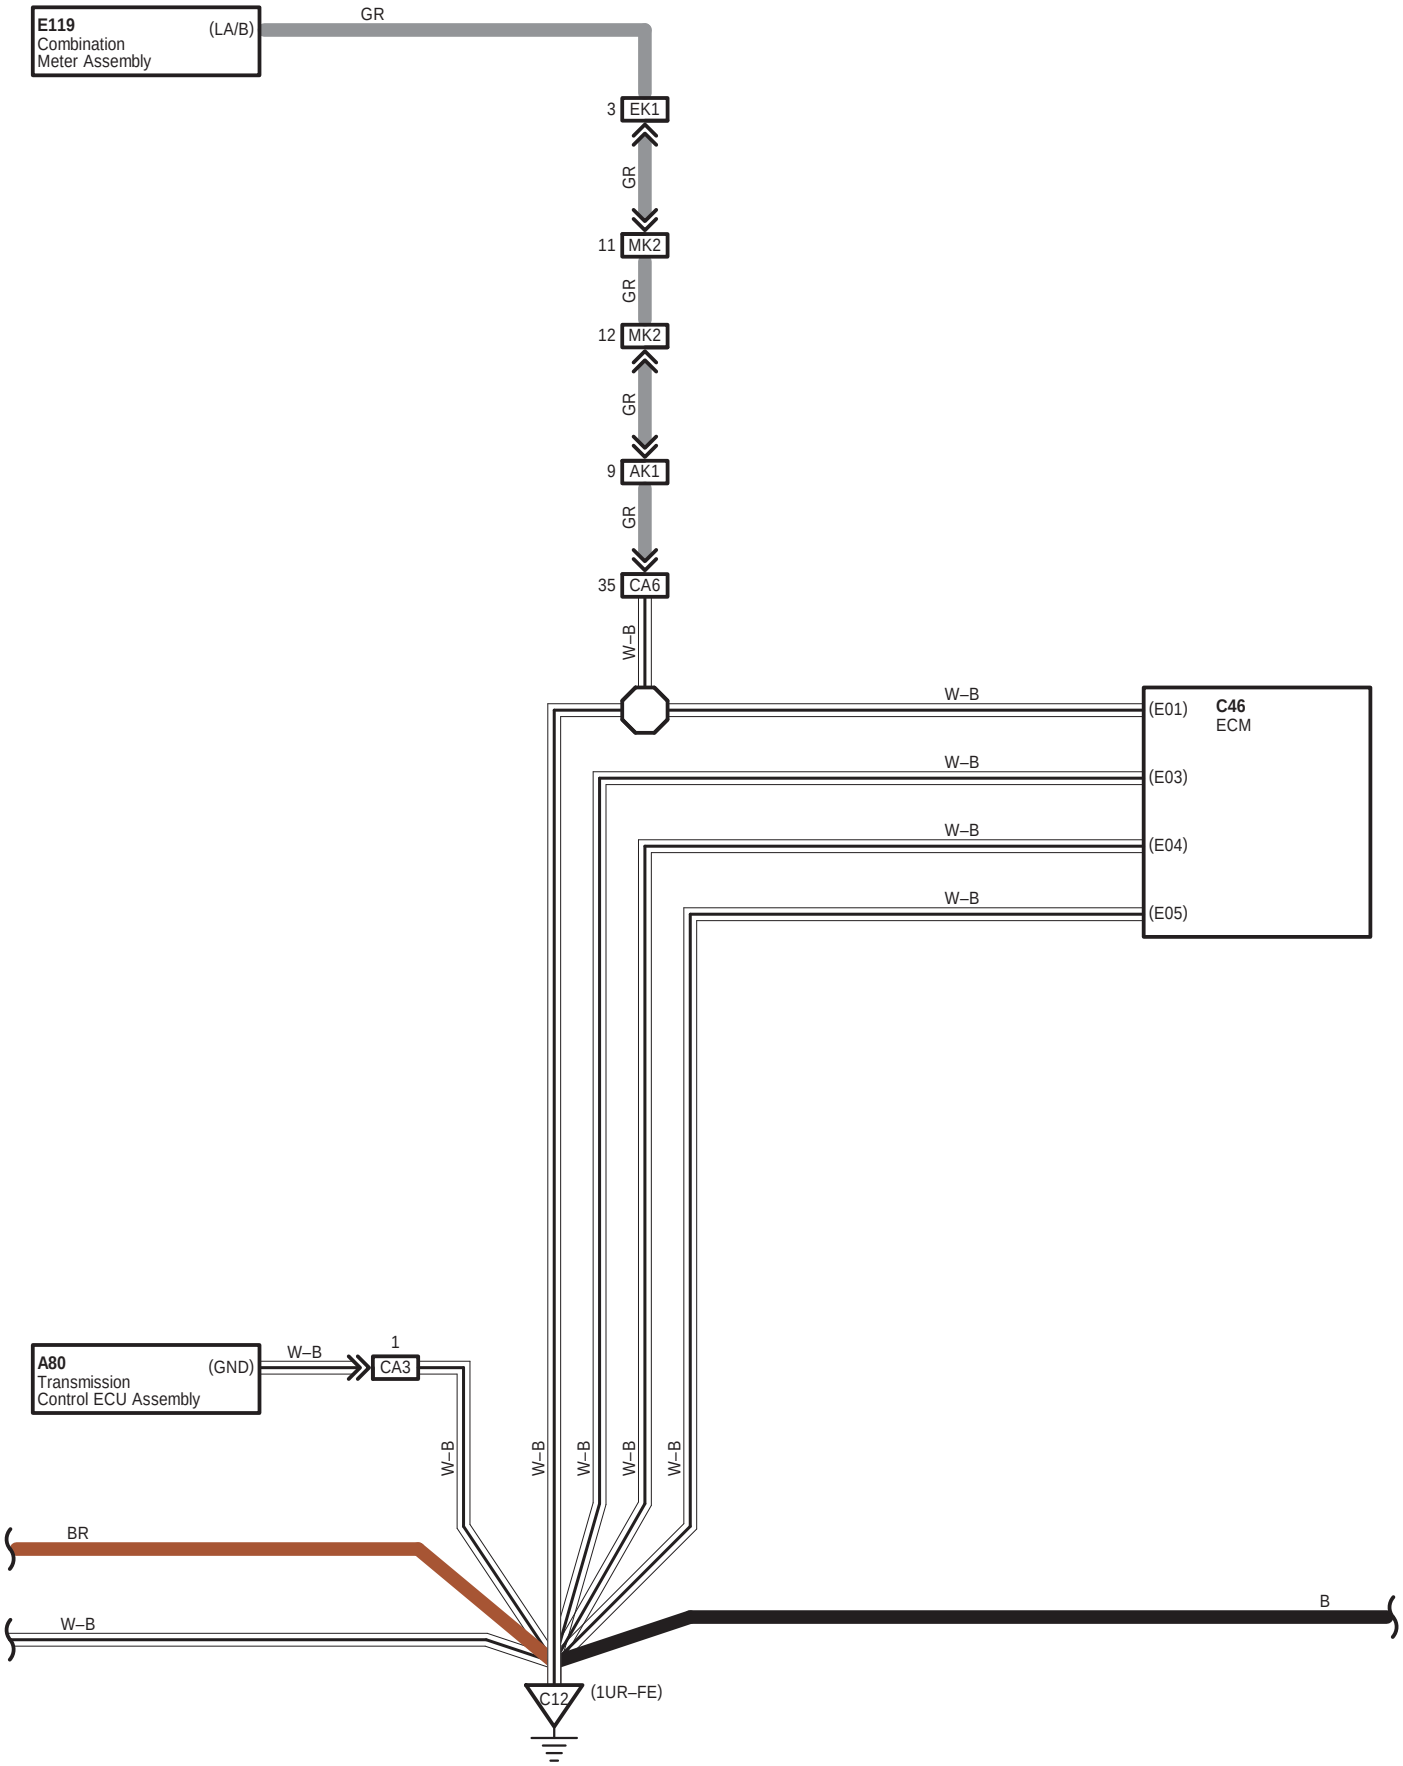
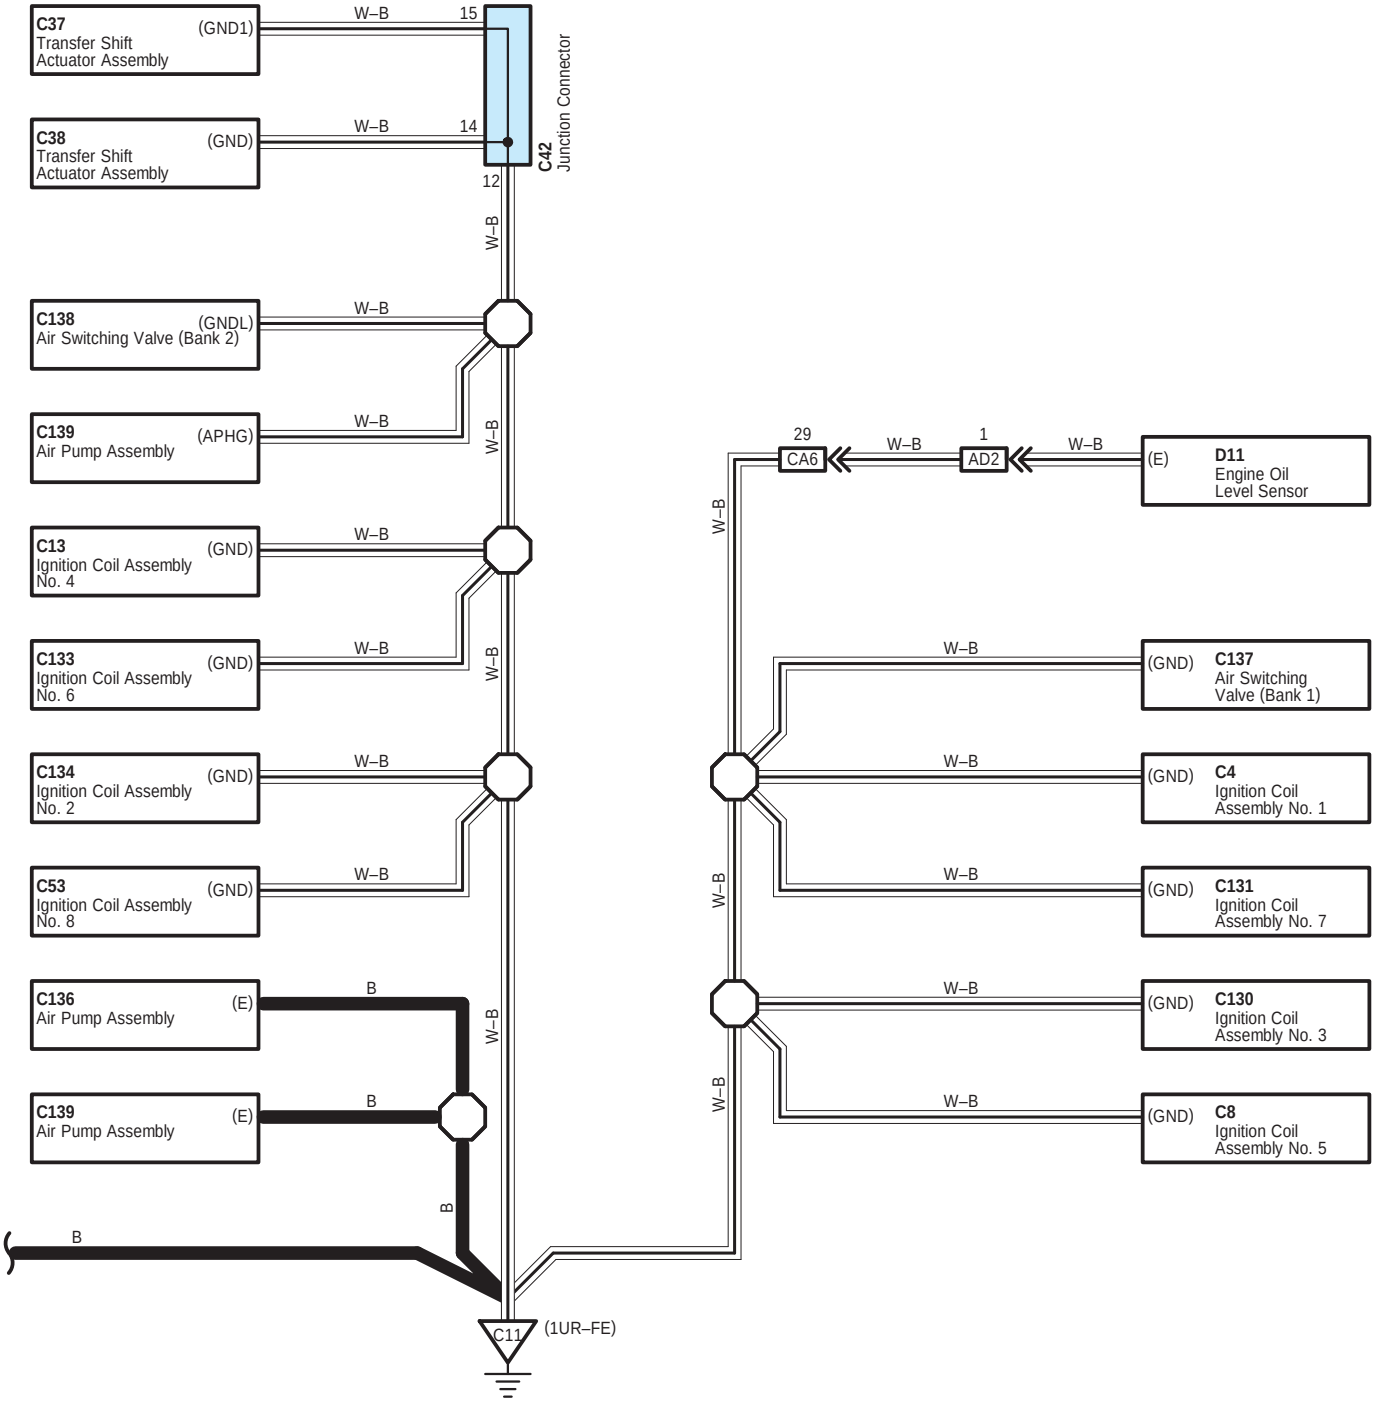
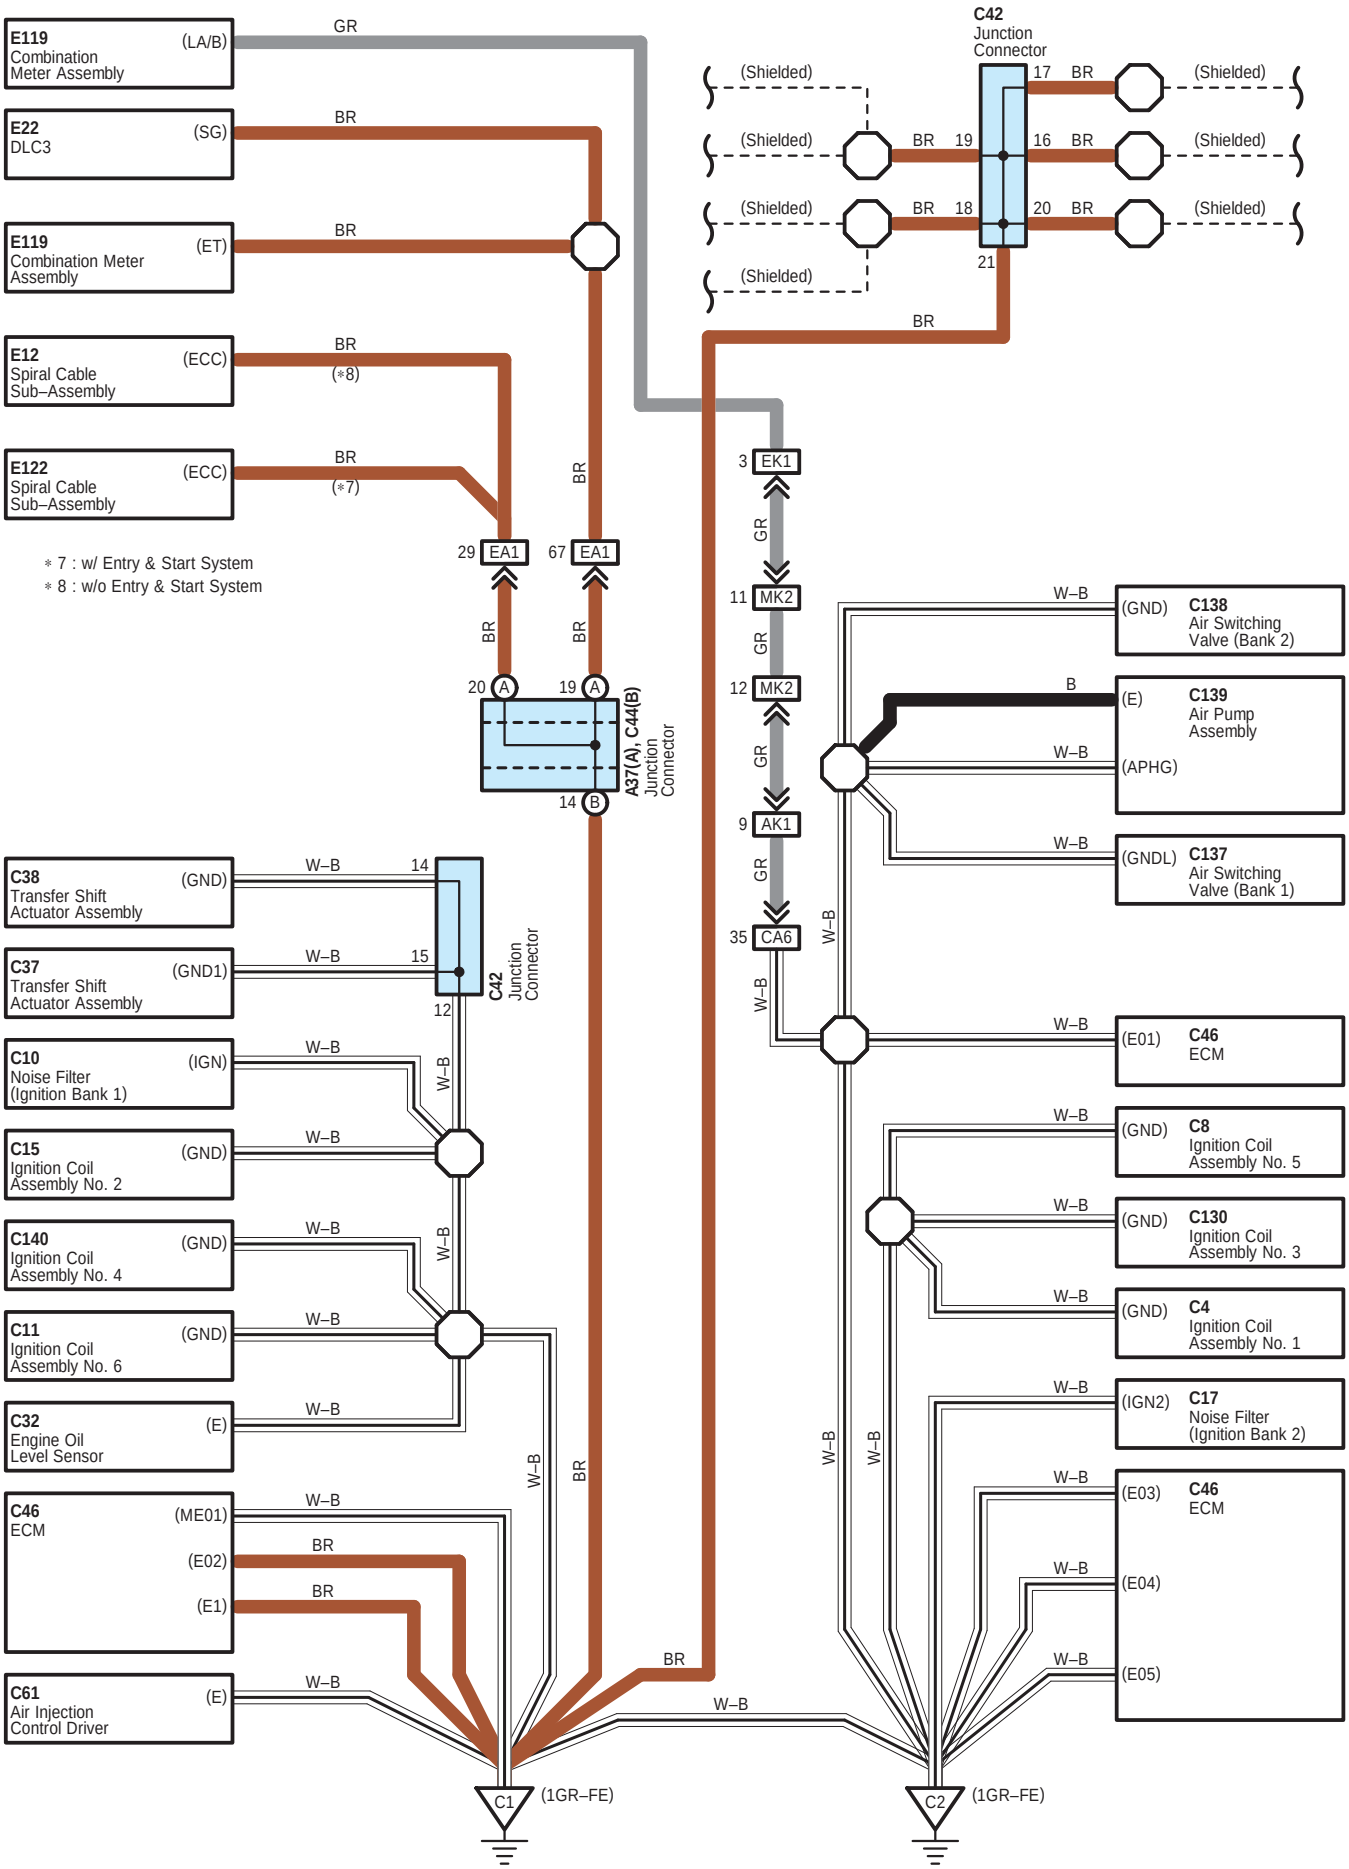

A47
Side Turn Signal Light Assembly RH
(E)
A42
Winch Main Relay (No. 1 Magnet Switch Assembly)
(E)
A62
Heated Windshield Defroster (Windshield Glass)
(L2E)
(L1E)
A61
Heated Windshield Defroster (Windshield Glass)
(R2E)
(R1E)
A66
Headlight Assembly LH
(E)
(LH E)
A69
Headlight Assembly RH
(E)
(RH E)
A65
Headlight Assembly LH
(E)
A68
Headlight Assembly RH
(E)
B5
Fog Light Assembly LH
(E)
B6
Fog Light Assembly RH
(E)
A84
Wireless Door Lock Buzzer
(E)
A9
Condenser Blower Motor Assembly
(E)
A24
Skid Control ECU with Actuator Assembly
(GND1)
A29
Front Blower with Fan Motor Sub–Assembly
(GND)
W–B
(Shielded)
BA1
AA1
A1
A2
(–S)
AHC Relay
(GND)
A73
Stop Light Switch Assembly
(E)
DEF Relay
(DEF)
Noise Filter
(GND)
Noise Filter
(E)
A65
Headlight Assembly LH
(E)
A68
Headlight Assembly RH
(EC)
A52
ECM
(GND3)
A25
Skid Control ECU with Actuator Assembly



W–B
z70 (L–) Washer Nozzle Sub–Assembly LH
z69 (R–) Washer Nozzle Sub–Assembly RH
A26 (GND) Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A32 (GND) Noise Filter
A74 (E) Engine Hood Courtesy Switch
L
3 zA1
(Shielded)
A75 Junction Connector
A16 (E) Windshield Washer Motor and Pump Assembly
A45 (E) Side Turn Signal Light Assembly LH
A39 (GND) Stop Light Control Relay Assembly
A23 (E) Front Wiper Deicer (Windshield Glass)
A22 (E) Windshield Wiper Motor Assembly
A51 (E) Clogging Switch (Fuel Filter Assembly)
A43 (E) Level Warning Switch (Fuel Filter Assembly)
A63 (E) Heated Windshield Defroster (Windshield Glass)
(*34)
A24 (GND2) Skid Control ECU with Actuator Assembly
A28 (GND) Four Wheel Drive Control ECU
A4
A5
*34 : 1VD–FTV
A59 (E) Headlight Cleaner Control Relay and Motor
CLR RR Relay
GLOW NO. 2 Relay
GLOW NO. 1 Relay
H–LP CLN Relay
IG1 Relay
ST Relay
EFI MAIN NO. 2 Relay
FUEL PMP Relay
A/F Relay
IG2 MAIN Relay
EFI MAIN NO. 1 Relay
A82 (EC) Transmission Control ECU Assembly
A72 (SGND) Millimeter Wave Radar Sensor Assembly
BR


E22
DLC3
(SG)
BR
E119
Combination Meter
Assembly
(ET)
BR
E122
Spiral Cable
Sub–Assembly
(ECC)
BR
BR
29 EA1
67 EA1
BR
BR
20 A
19 A
14 B
A37(A), C44(B)
Junction Connector
C61
Air Injection Control Driver
(E)
W–B
C46
ECM
(E02)
BR
(E1)
BR
(ME01)
W–B
BR
C1
(1UR–FE)
C42
Junction Connector
17 BR
(Shielded)
(Shielded)
19 BR
(Shielded)
(Shielded)
18 BR
(Shielded)
16 BR
(Shielded)
20 BR
(Shielded)
22 BR
(Shielded)
21
BR
W–B



E119
Combination
Meter Assembly
(LA/B)
GR
3 EK1
GR
11 MK2
GR
12 MK2
GR
9 AK1
GR
35 CA6
W–B
W–B
(E01)
C46
ECM
W–B
(E03)
W–B
(E04)
W–B
(E05)
A80
Transmission
Control ECU Assembly
(GND)
W–B
1
CA3
W–B
W–B
W–B
W–B
W–B
BR
W–B
B
C12
(1UR–FE)



C37
Transfer Shift
Actuator Assembly
(GND1)
W–B
15
C38
Transfer Shift
Actuator Assembly
(GND)
W–B
14
C42
Junction Connector
12
W–B
C138
Air Switching Valve (Bank 2)
(GNDL)
W–B
C139
Air Pump Assembly
(APHG)
W–B
W–B
C13
Ignition Coil Assembly
No. 4
(GND)
W–B
C133
Ignition Coil Assembly
No. 6
(GND)
W–B
W–B
C134
Ignition Coil Assembly
No. 2
(GND)
W–B
C53
Ignition Coil Assembly
No. 8
(GND)
W–B
C136
Air Pump Assembly
(E)
B
W–B
C139
Air Pump Assembly
(E)
B
B
B
C11
(1UR–FE)
29
CA6
W–B
1
AD2
W–B
(E)
D11
Engine Oil
Level Sensor
W–B
W–B
(GND)
C137
Air Switching
Valve (Bank 1)
W–B
(GND)
C4
Ignition Coil
Assembly No. 1
W–B
W–B
(GND)
C131
Ignition Coil
Assembly No. 7
W–B
W–B
(GND)
C130
Ignition Coil
Assembly No. 3
W–B
W–B
(GND)
C8
Ignition Coil
Assembly No. 5



E119 (LA/B) Combination Meter Assembly
E22 (SG) DLC3
E119 (ET) Combination Meter Assembly
E12 (ECC) Spiral Cable Sub–Assembly
E122 (ECC) Spiral Cable Sub–Assembly
∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
C42 Junction Connector
(Shielded)
29 EA1
67 EA1
20 A
19 A
14 B
A37(A), C44(B) Junction Connector
3 EK1
11 MK2
12 MK2
9 AK1
35 CA6
C38 (GND) Transfer Shift Actuator Assembly
C37 (GND1) Transfer Shift Actuator Assembly
C10 (IGN) Noise Filter (Ignition Bank 1)
C15 (GND) Ignition Coil Assembly No. 2
C140 (GND) Ignition Coil Assembly No. 4
C11 (GND) Ignition Coil Assembly No. 6
C32 (E) Engine Oil Level Sensor
C46 (ME01) (E02) (E1) ECM
C61 (E) Air Injection Control Driver
C138 (GND) Air Switching Valve (Bank 2)
C139 (E) (APHG) Air Pump Assembly
C137 (GNDL) Air Switching Valve (Bank 1)
C46 (E01) ECM
C8 (GND) Ignition Coil Assembly No. 5
C130 (GND) Ignition Coil Assembly No. 3
C4 (GND) Ignition Coil Assembly No. 1
C17 (IGN2) Noise Filter (Ignition Bank 2)
C46 (E03) (E04) (E05) ECM
C1 (1GR–FE)
C2 (1GR–FE)

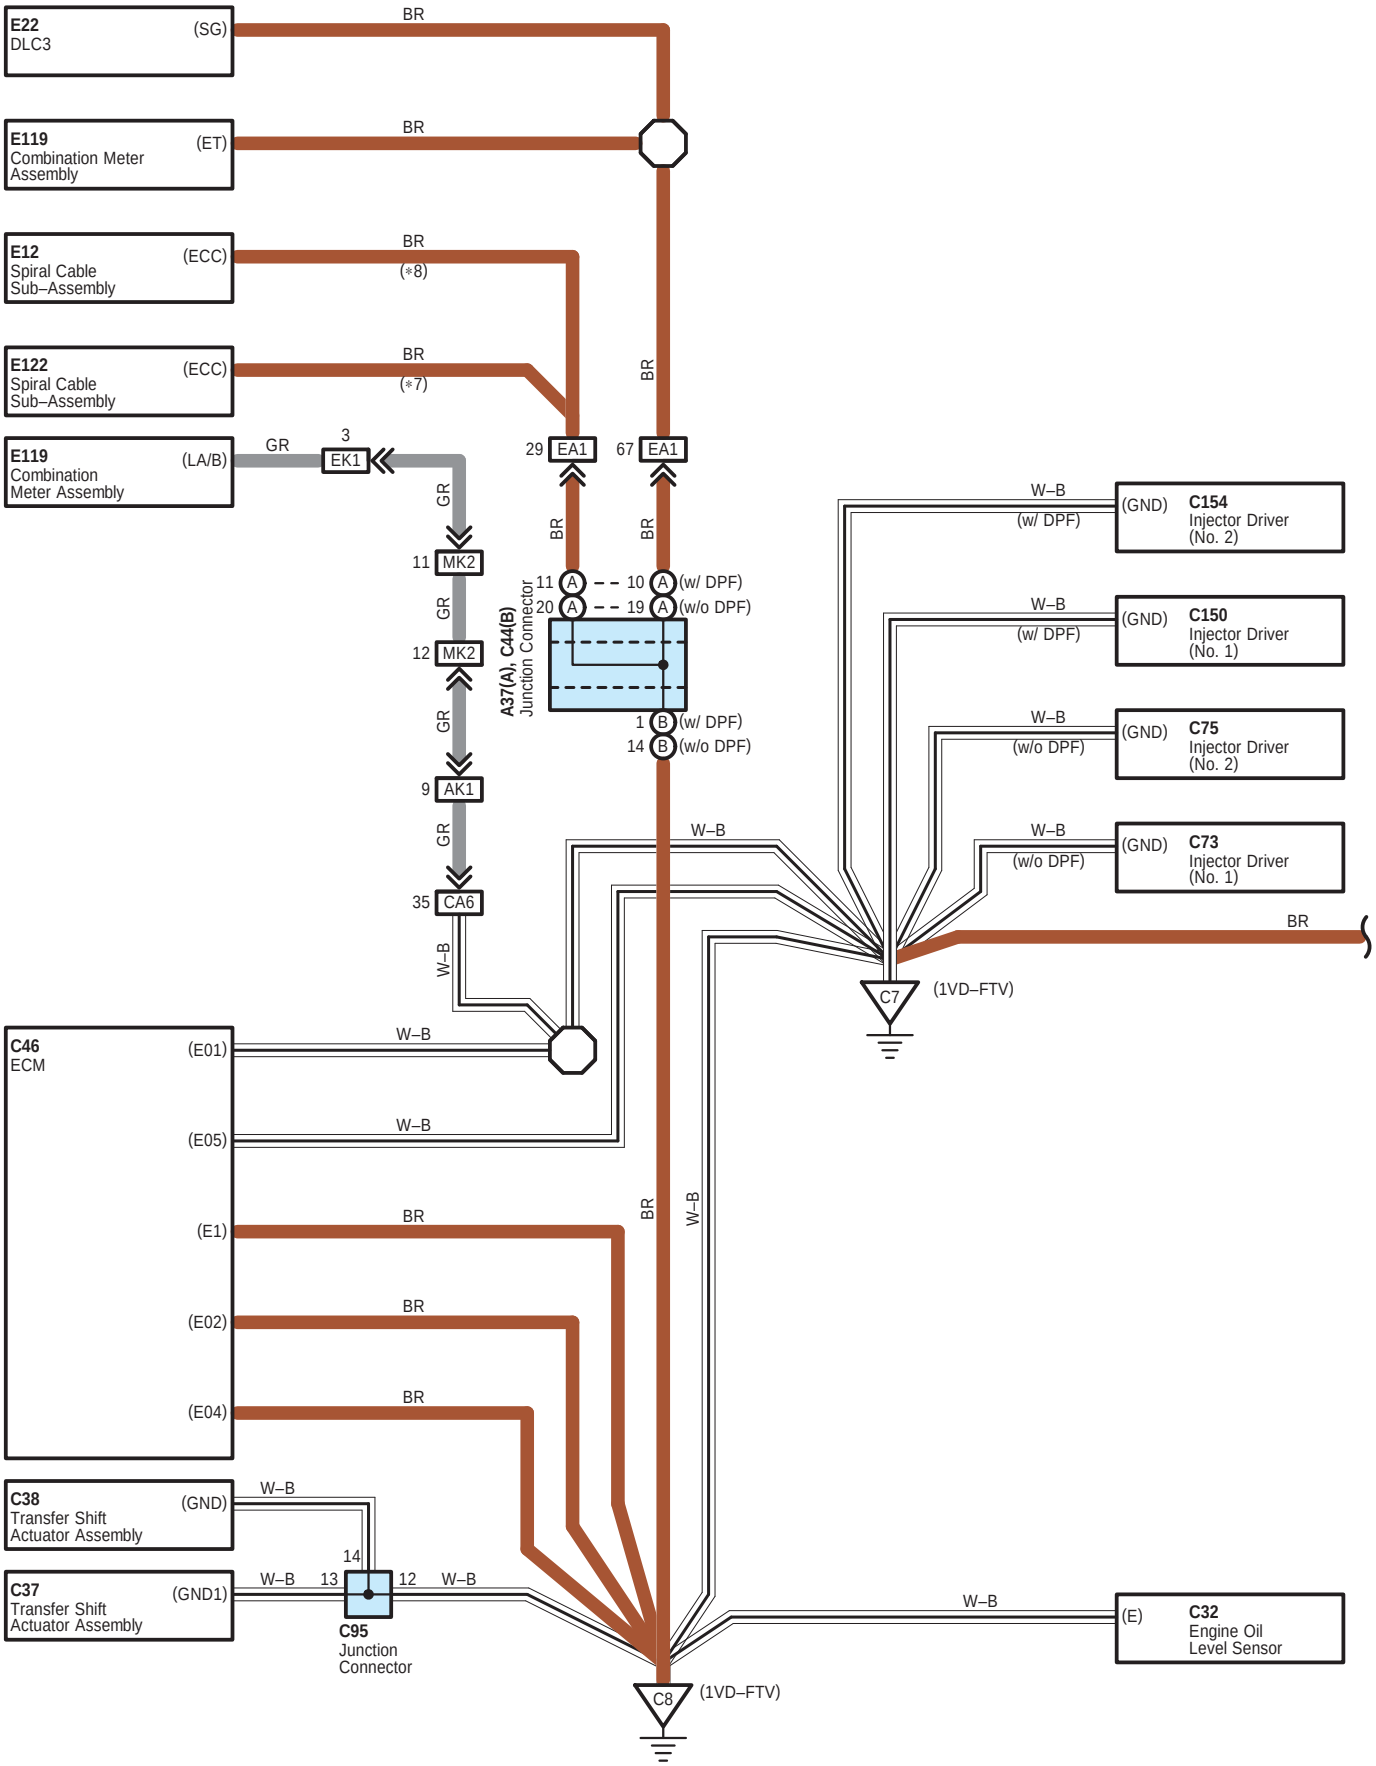

E22
DLC3
(SG)
BR
E119
Combination Meter Assembly
(ET)
BR
E12
Spiral Cable Sub–Assembly
(ECC)
BR
(*8)
E122
Spiral Cable Sub–Assembly
(ECC)
BR
(*7)
E119
Combination Meter Assembly
(LA/B)
GR
3
EK1
GR
11
MK2
GR
12
MK2
GR
9
AK1
GR
35
CA6
W–B
29
EA1
67
EA1
BR
BR
A37(A), C44(B)
Junction Connector
11
20
10
19
(w/ DPF)
(w/o DPF)
1
14
(w/ DPF)
(w/o DPF)
W–B
(w/ DPF)
(GND)
C154
Injector Driver (No. 2)
W–B
(w/ DPF)
(GND)
C150
Injector Driver (No. 1)
W–B
(w/o DPF)
(GND)
C75
Injector Driver (No. 2)
W–B
(w/o DPF)
(GND)
C73
Injector Driver (No. 1)
BR
C7
(1VD–FTV)
C46
ECM
(E01)
W–B
(E05)
W–B
(E1)
BR
(E02)
BR
(E04)
BR
BR
W–B
C38
Transfer Shift Actuator Assembly
(GND)
W–B
14
C37
Transfer Shift Actuator Assembly
(GND1)
W–B
13
12
W–B
C95
Junction Connector
W–B
(E)
C32
Engine Oil Level Sensor
C8
(1VD–FTV)


* 7 : w/ Entry & Start System
* 8 : w/o Entry & Start System

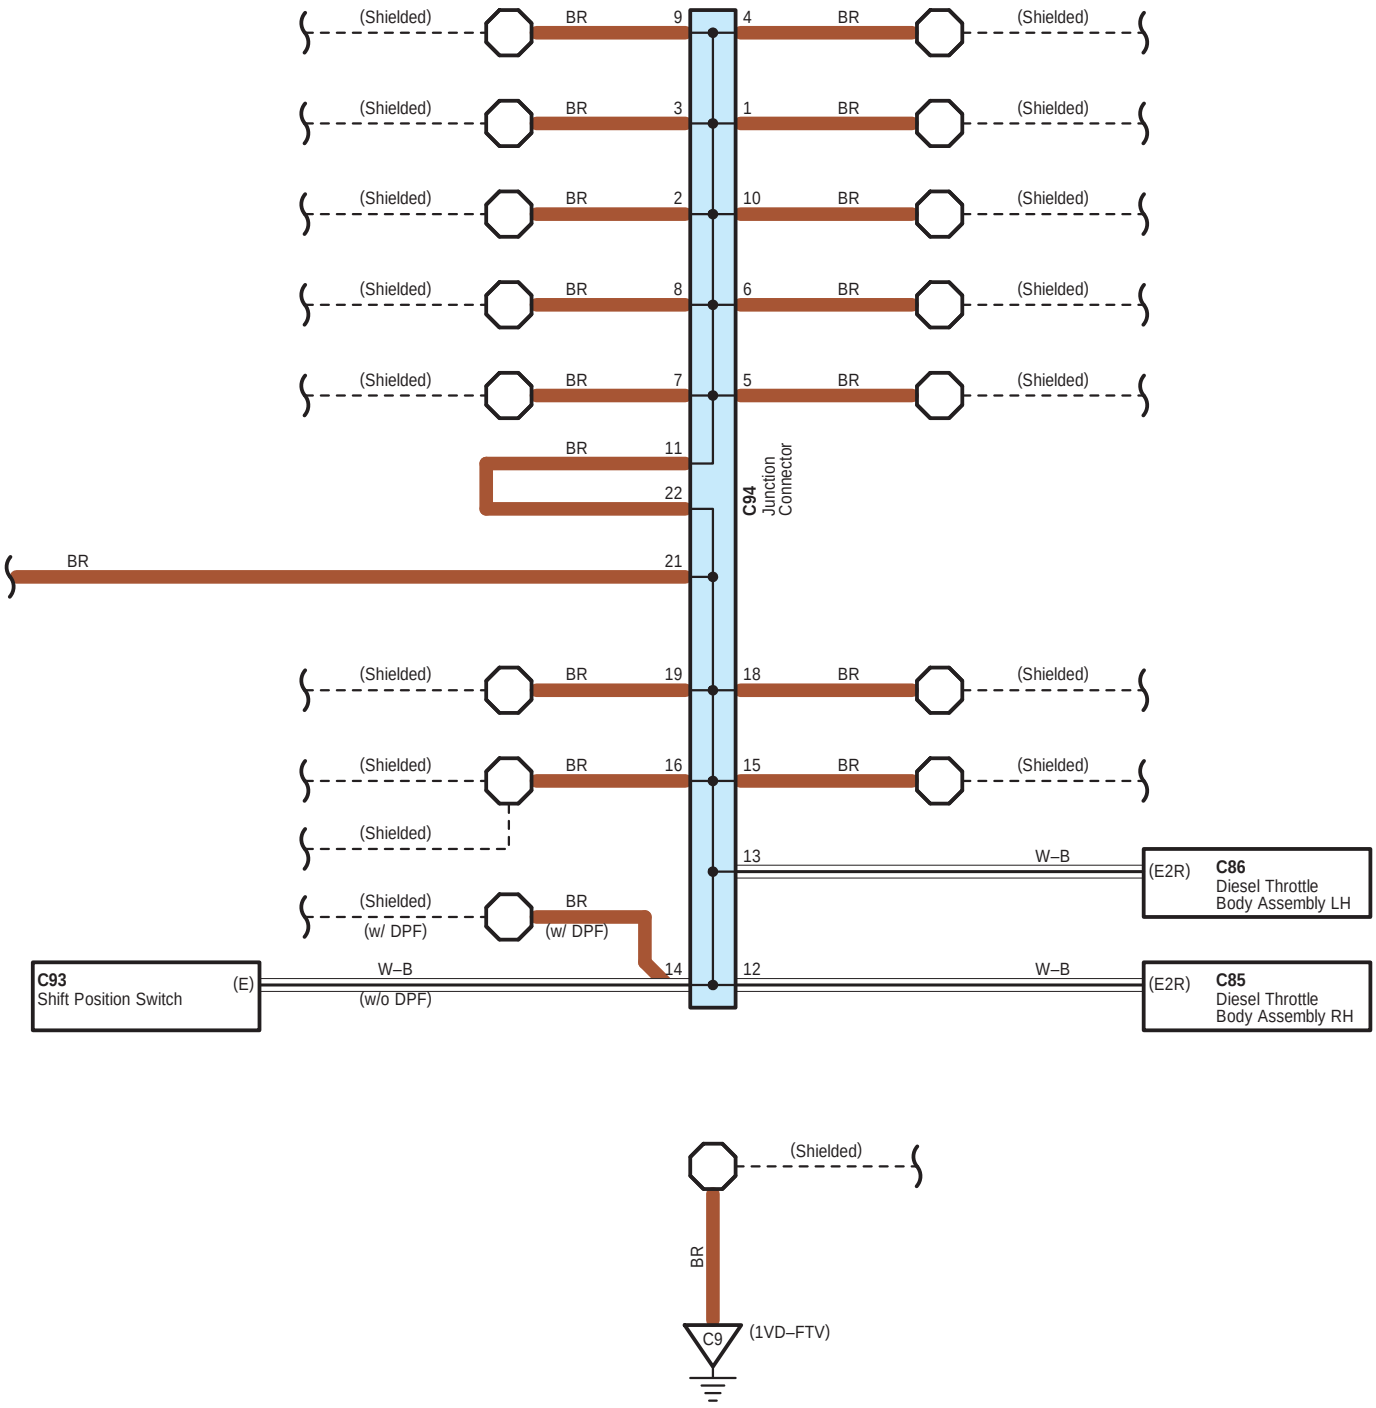


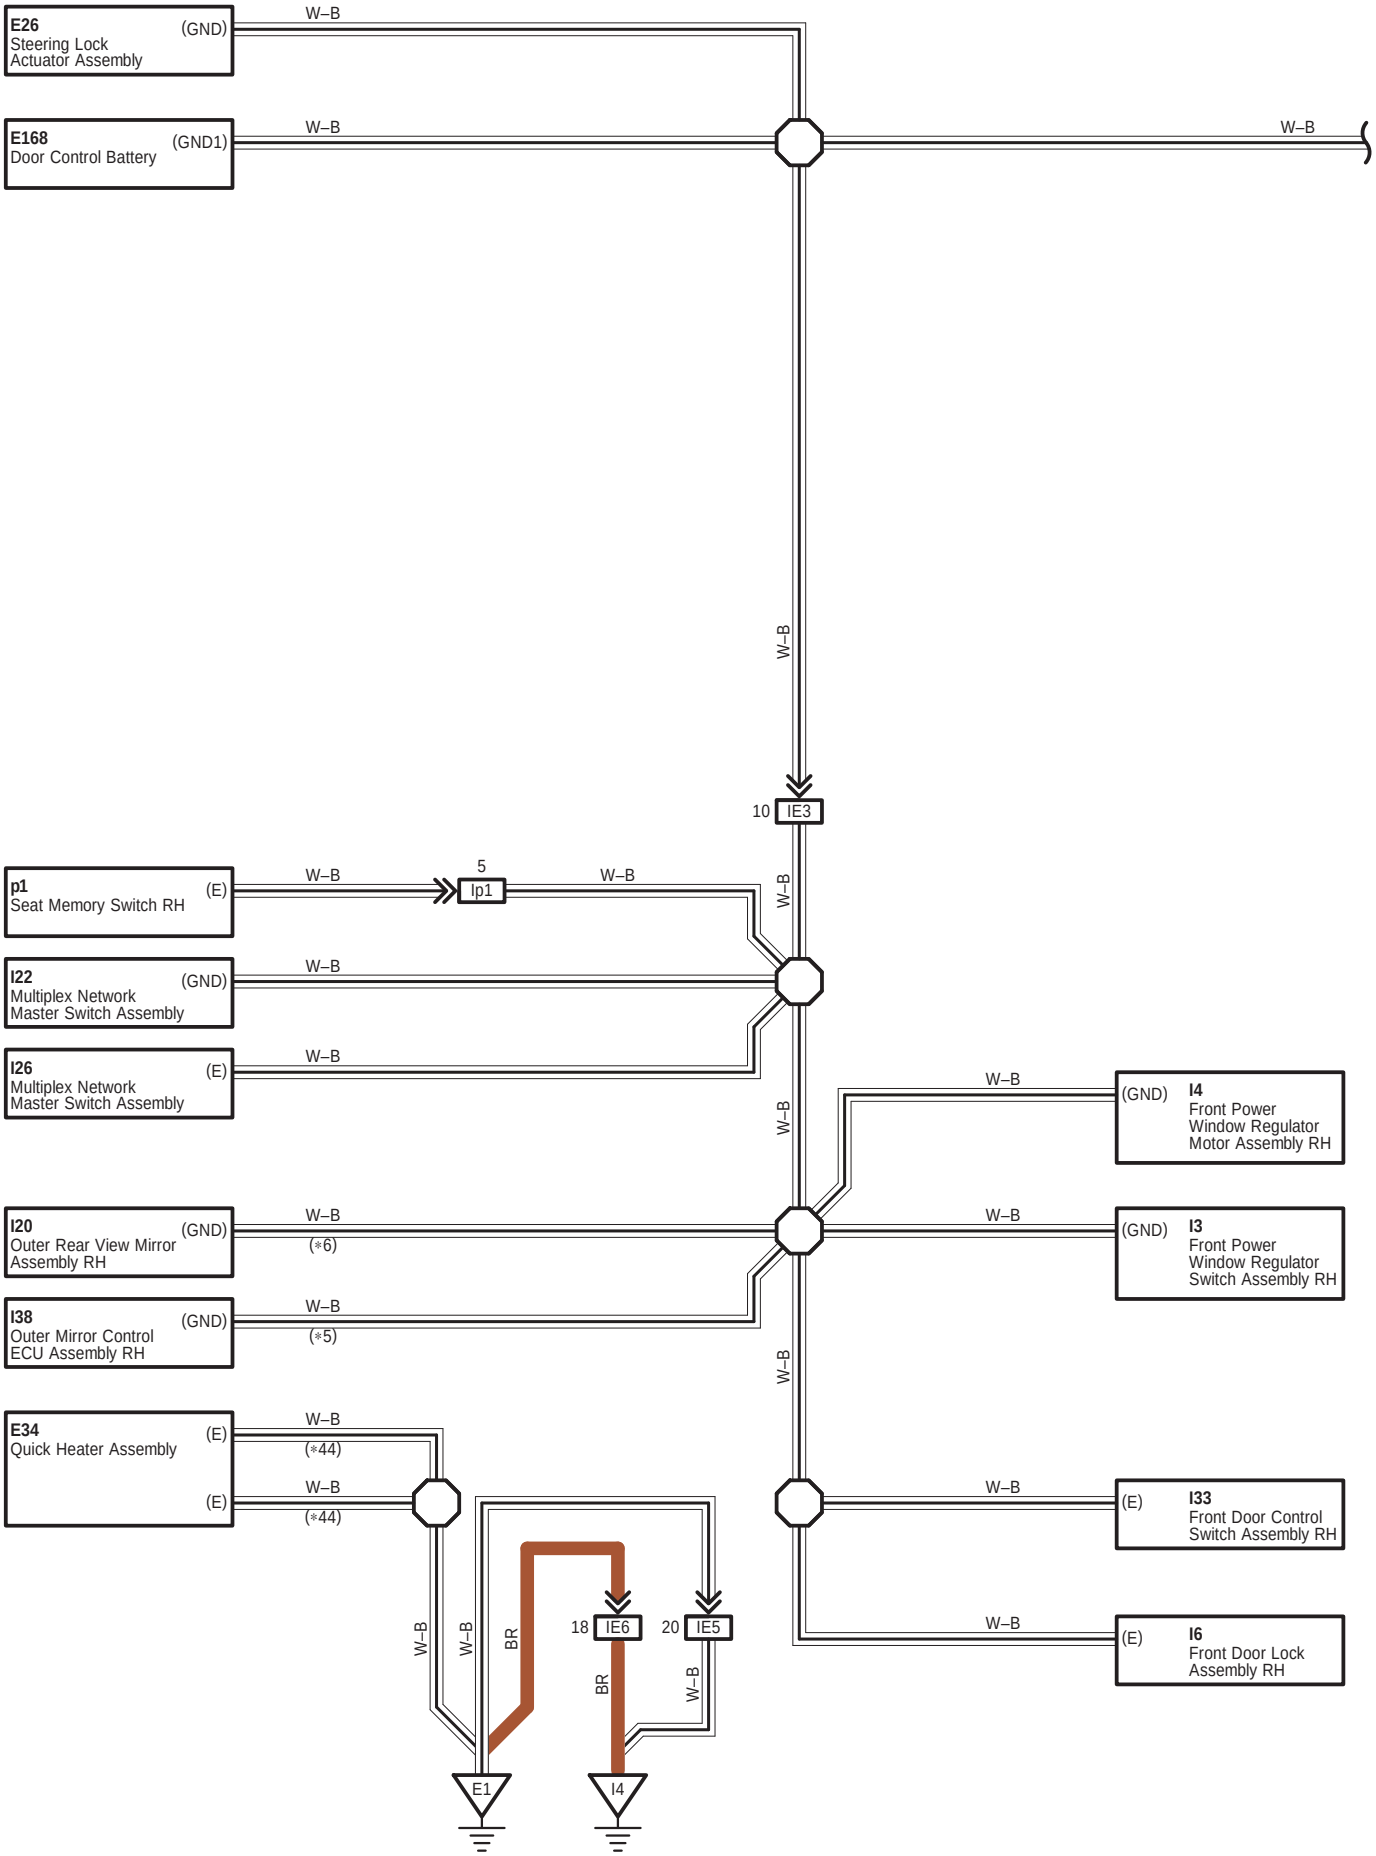

E26
Steering Lock
Actuator Assembly
(GND)
W–B
E168
Door Control Battery
(GND1)
W–B
W–B
W–B
10
IE3
p1
Seat Memory Switch RH
(E)
W–B
5
Ip1
W–B
W–B
I22
Multiplex Network
Master Switch Assembly
(GND)
W–B
I26
Multiplex Network
Master Switch Assembly
(E)
W–B
W–B
(GND)
I4
Front Power
Window Regulator
Motor Assembly RH
I20
Outer Rear View Mirror
Assembly RH
(GND)
W–B
(*6)
W–B
(GND)
I3
Front Power
Window Regulator
Switch Assembly RH
I38
Outer Mirror Control
ECU Assembly RH
(GND)
W–B
(*5)
W–B
E34
Quick Heater Assembly
(E)
W–B
(*44)
(E)
W–B
(*44)
W–B
(E)
I33
Front Door Control
Switch Assembly RH
W–B
W–B
BR
18
IE6
20
IE5
BR
W–B
W–B
(E)
I6
Front Door Lock
Assembly RH
E1
I4

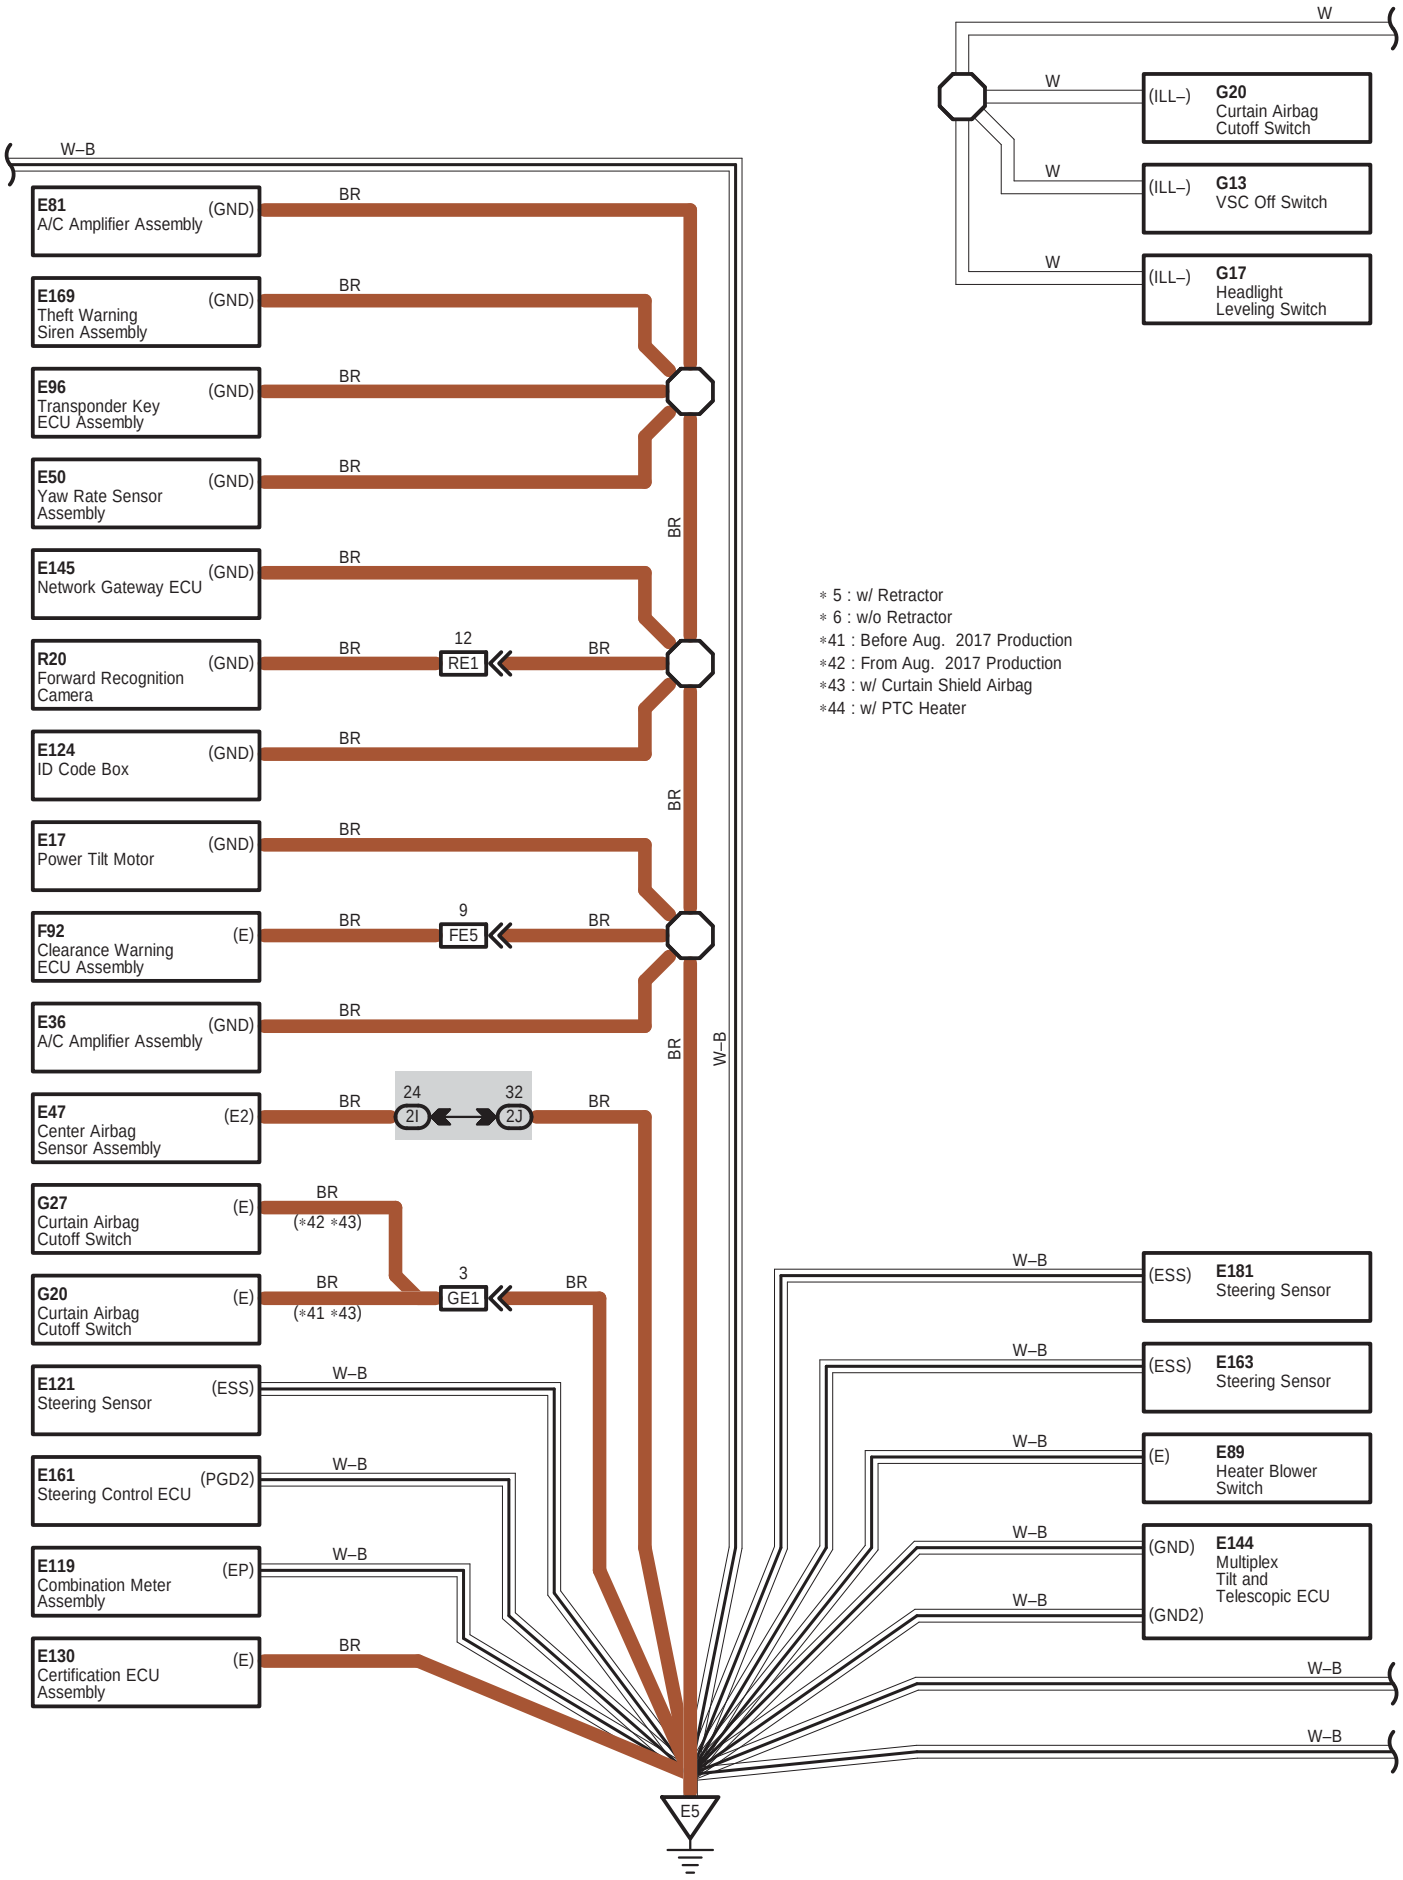

W
W
(ILL–) G20 Curtain Airbag Cutoff Switch
W
(ILL–) G13 VSC Off Switch
W
(ILL–) G17 Headlight Leveling Switch
W–B
E81 (GND) A/C Amplifier Assembly
E169 (GND) Theft Warning Siren Assembly
E96 (GND) Transponder Key ECU Assembly
E50 (GND) Yaw Rate Sensor Assembly
E145 (GND) Network Gateway ECU
R20 (GND) Forward Recognition Camera
E124 (GND) ID Code Box
E17 (GND) Power Tilt Motor
F92 (E) Clearance Warning ECU Assembly
E36 (GND) A/C Amplifier Assembly
E47 (E2) Center Airbag Sensor Assembly
G27 (E) Curtain Airbag Cutoff Switch
G20 (E) Curtain Airbag Cutoff Switch
E121 (ESS) Steering Sensor
E161 (PGD2) Steering Control ECU
E119 (EP) Combination Meter Assembly
E130 (E) Certification ECU Assembly
BR
12 RE1
9 FE5
24 2I
32 2J
3 GE1
(∗42 ∗43)
(∗41 ∗43)
W–B
E5
(ESS) E181 Steering Sensor
(ESS) E163 Steering Sensor
(E) E89 Heater Blower Switch
(GND) E144 Multiplex Tilt and Telescopic ECU
(GND2)
∗ 5 : w/ Retractor
∗ 6 : w/o Retractor
∗41 : Before Aug. 2017 Production
∗42 : From Aug. 2017 Production
∗43 : w/ Curtain Shield Airbag
∗44 : w/ PTC Heater

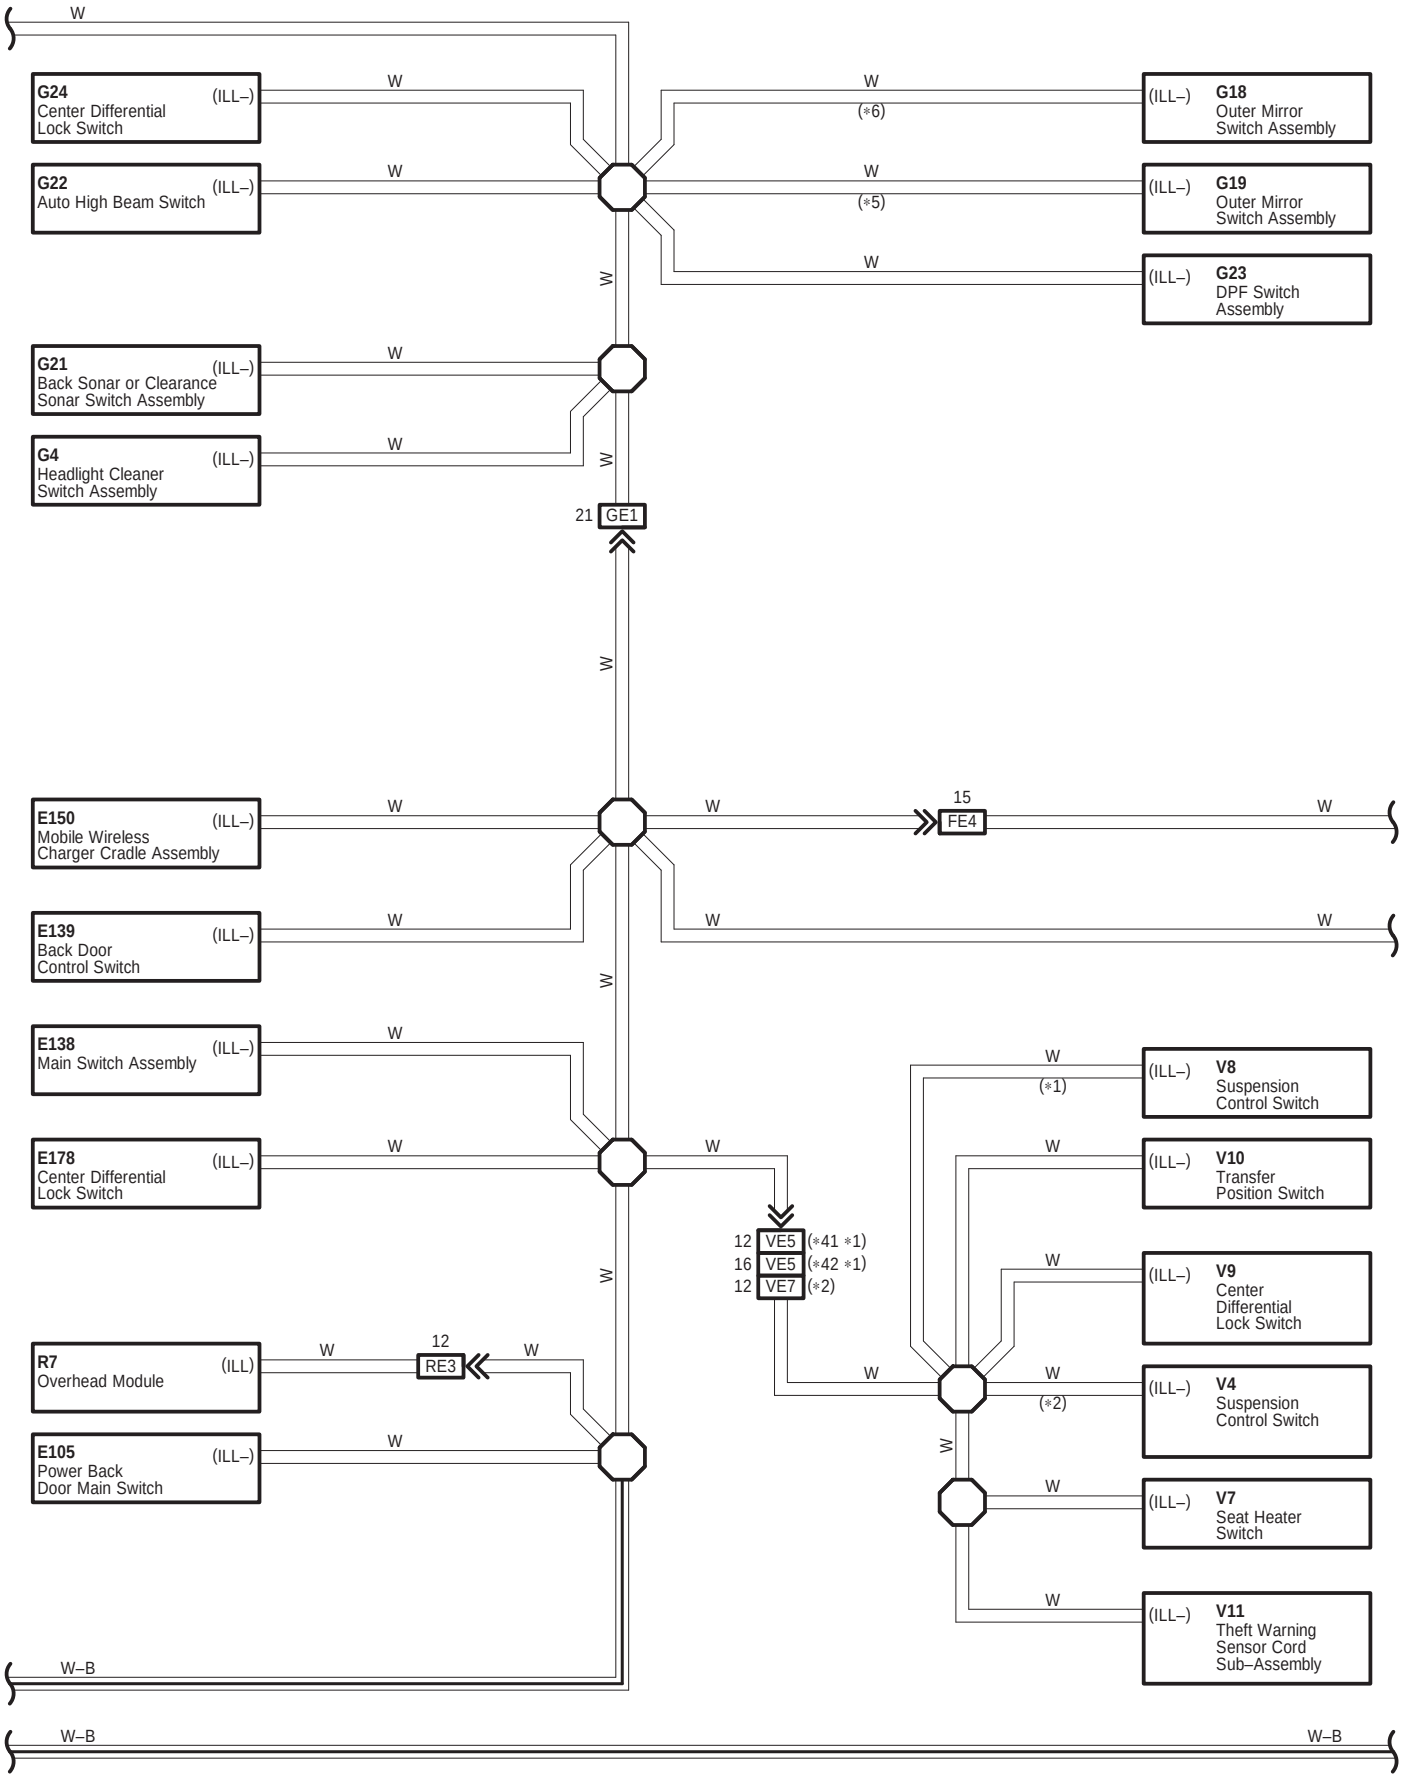

W
G24 (ILL–) Center Differential Lock Switch
G22 (ILL–) Auto High Beam Switch
G21 (ILL–) Back Sonar or Clearance Sonar Switch Assembly
G4 (ILL–) Headlight Cleaner Switch Assembly
21 GE1
(∗6)
(∗5)
(ILL–) G18 Outer Mirror Switch Assembly
(ILL–) G19 Outer Mirror Switch Assembly
(ILL–) G23 DPF Switch Assembly
E150 (ILL–) Mobile Wireless Charger Cradle Assembly
E139 (ILL–) Back Door Control Switch
E138 (ILL–) Main Switch Assembly
E178 (ILL–) Center Differential Lock Switch
15 FE4
12 VE5 (∗41 ∗1)
16 VE5 (∗42 ∗1)
12 VE7 (∗2)
R7 (ILL) Overhead Module
12 RE3
E105 (ILL–) Power Back Door Main Switch
(∗1)
(∗2)
(ILL–) V8 Suspension Control Switch
(ILL–) V10 Transfer Position Switch
(ILL–) V9 Center Differential Lock Switch
(ILL–) V4 Suspension Control Switch
(ILL–) V7 Seat Heater Switch
(ILL–) V11 Theft Warning Sensor Cord Sub–Assembly
W–B
W–B
W–B

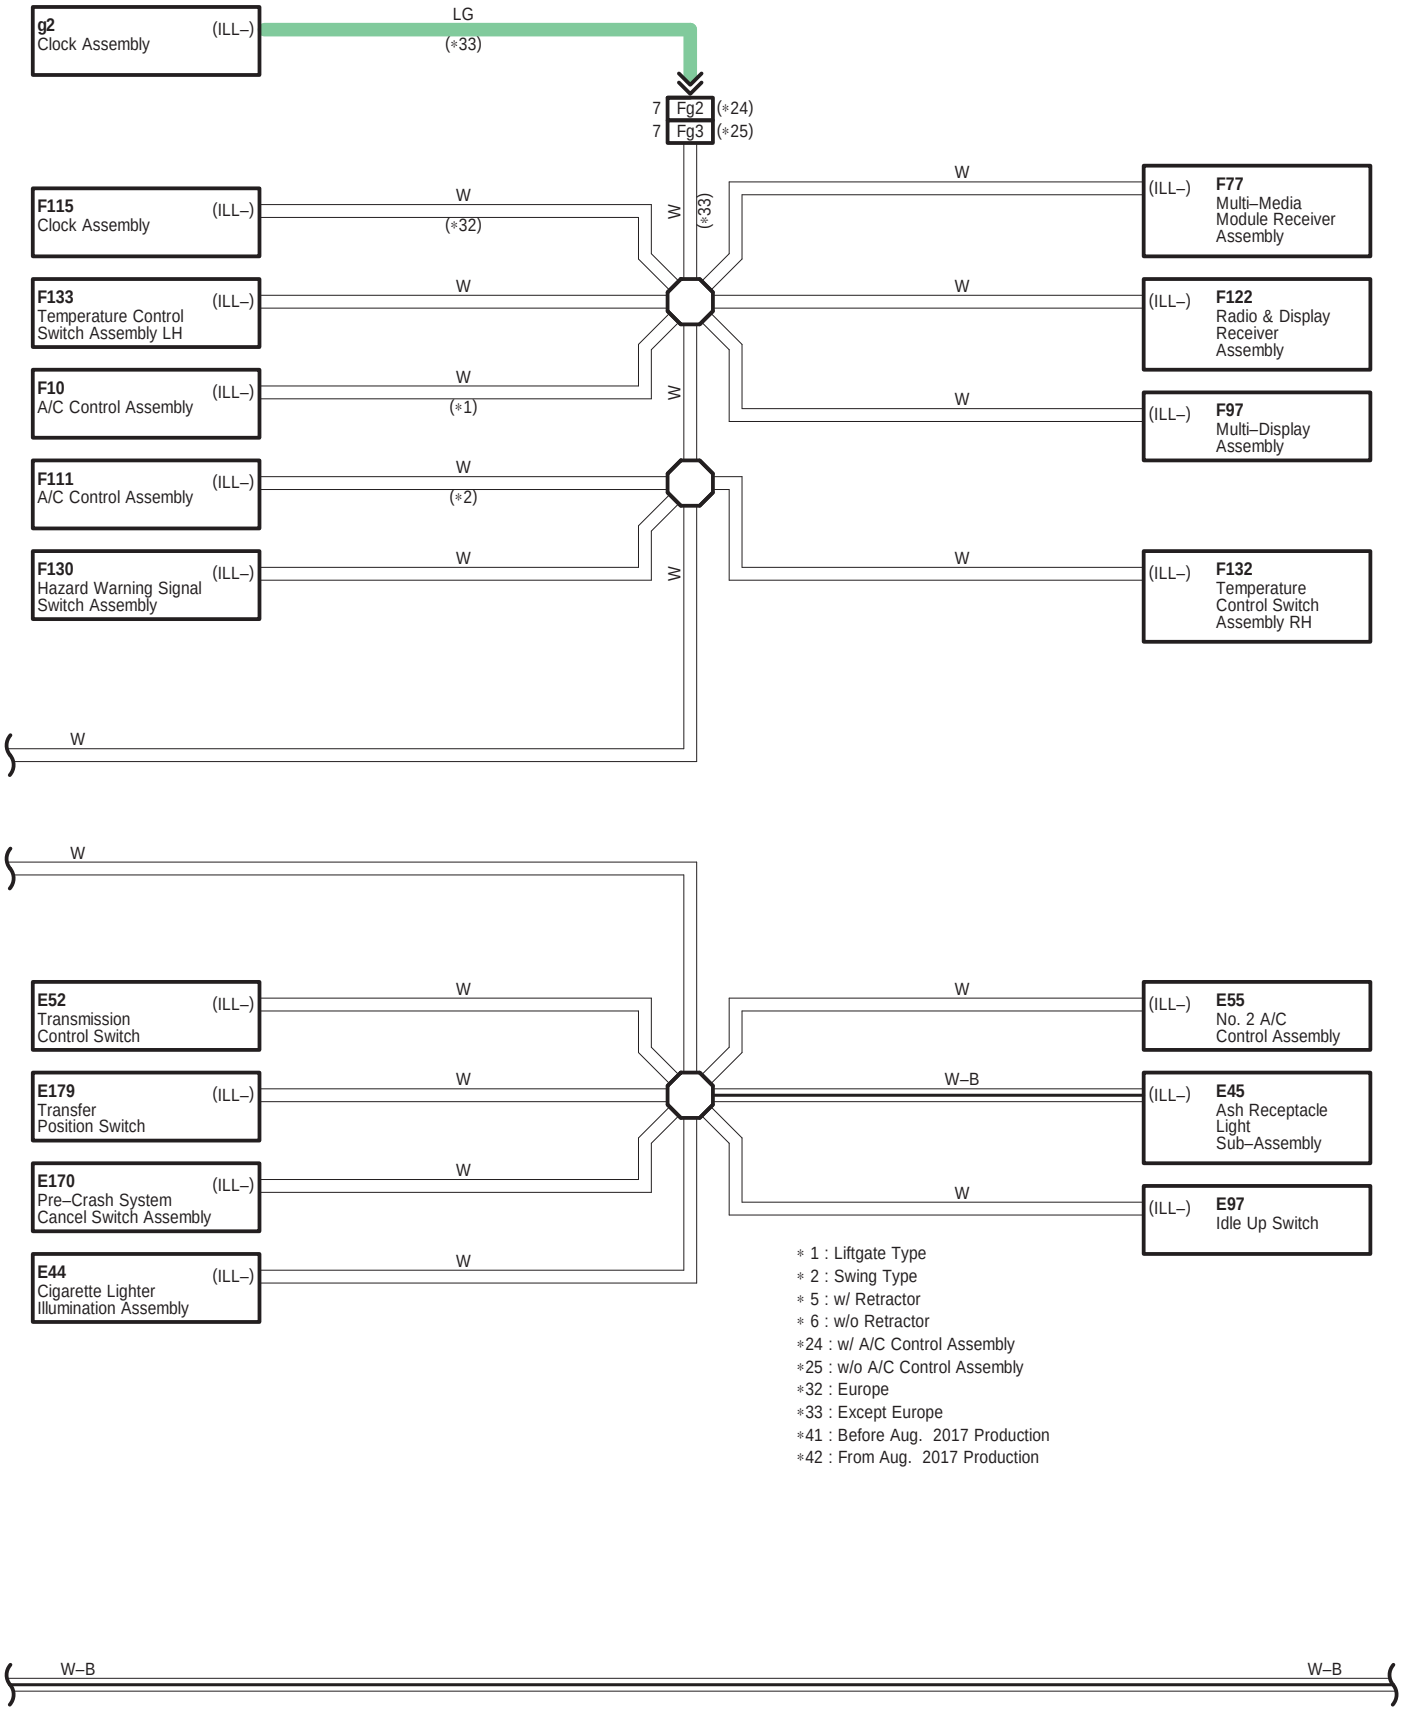

g2
Clock Assembly
(ILL–)
LG
(∗33)
7 Fg2 (∗24)
7 Fg3 (∗25)
F115
Clock Assembly
(ILL–)
W
(∗32)
F133
Temperature Control Switch Assembly LH
(ILL–)
W
F10
A/C Control Assembly
(ILL–)
W
(∗1)
F111
A/C Control Assembly
(ILL–)
W
(∗2)
F130
Hazard Warning Signal Switch Assembly
(ILL–)
W
W
W
(∗33)
W
F77
Multi–Media Module Receiver Assembly
(ILL–)
W
F122
Radio & Display Receiver Assembly
(ILL–)
W
F97
Multi–Display Assembly
(ILL–)
W
F132
Temperature Control Switch Assembly RH
(ILL–)
W
W
W
E52
Transmission Control Switch
(ILL–)
W
E179
Transfer Position Switch
(ILL–)
W
E170
Pre–Crash System Cancel Switch Assembly
(ILL–)
W
E44
Cigarette Lighter Illumination Assembly
(ILL–)
W
W
W–B
W
E55
No. 2 A/C Control Assembly
(ILL–)
E45
Ash Receptacle Light Sub–Assembly
(ILL–)
E97
Idle Up Switch
(ILL–)
∗ 1 : Liftgate Type
∗ 2 : Swing Type
∗ 5 : w/ Retractor
∗ 6 : w/o Retractor
∗24 : w/ A/C Control Assembly
∗25 : w/o A/C Control Assembly
∗32 : Europe
∗33 : Except Europe
∗41 : Before Aug. 2017 Production
∗42 : From Aug. 2017 Production
W–B
W–B

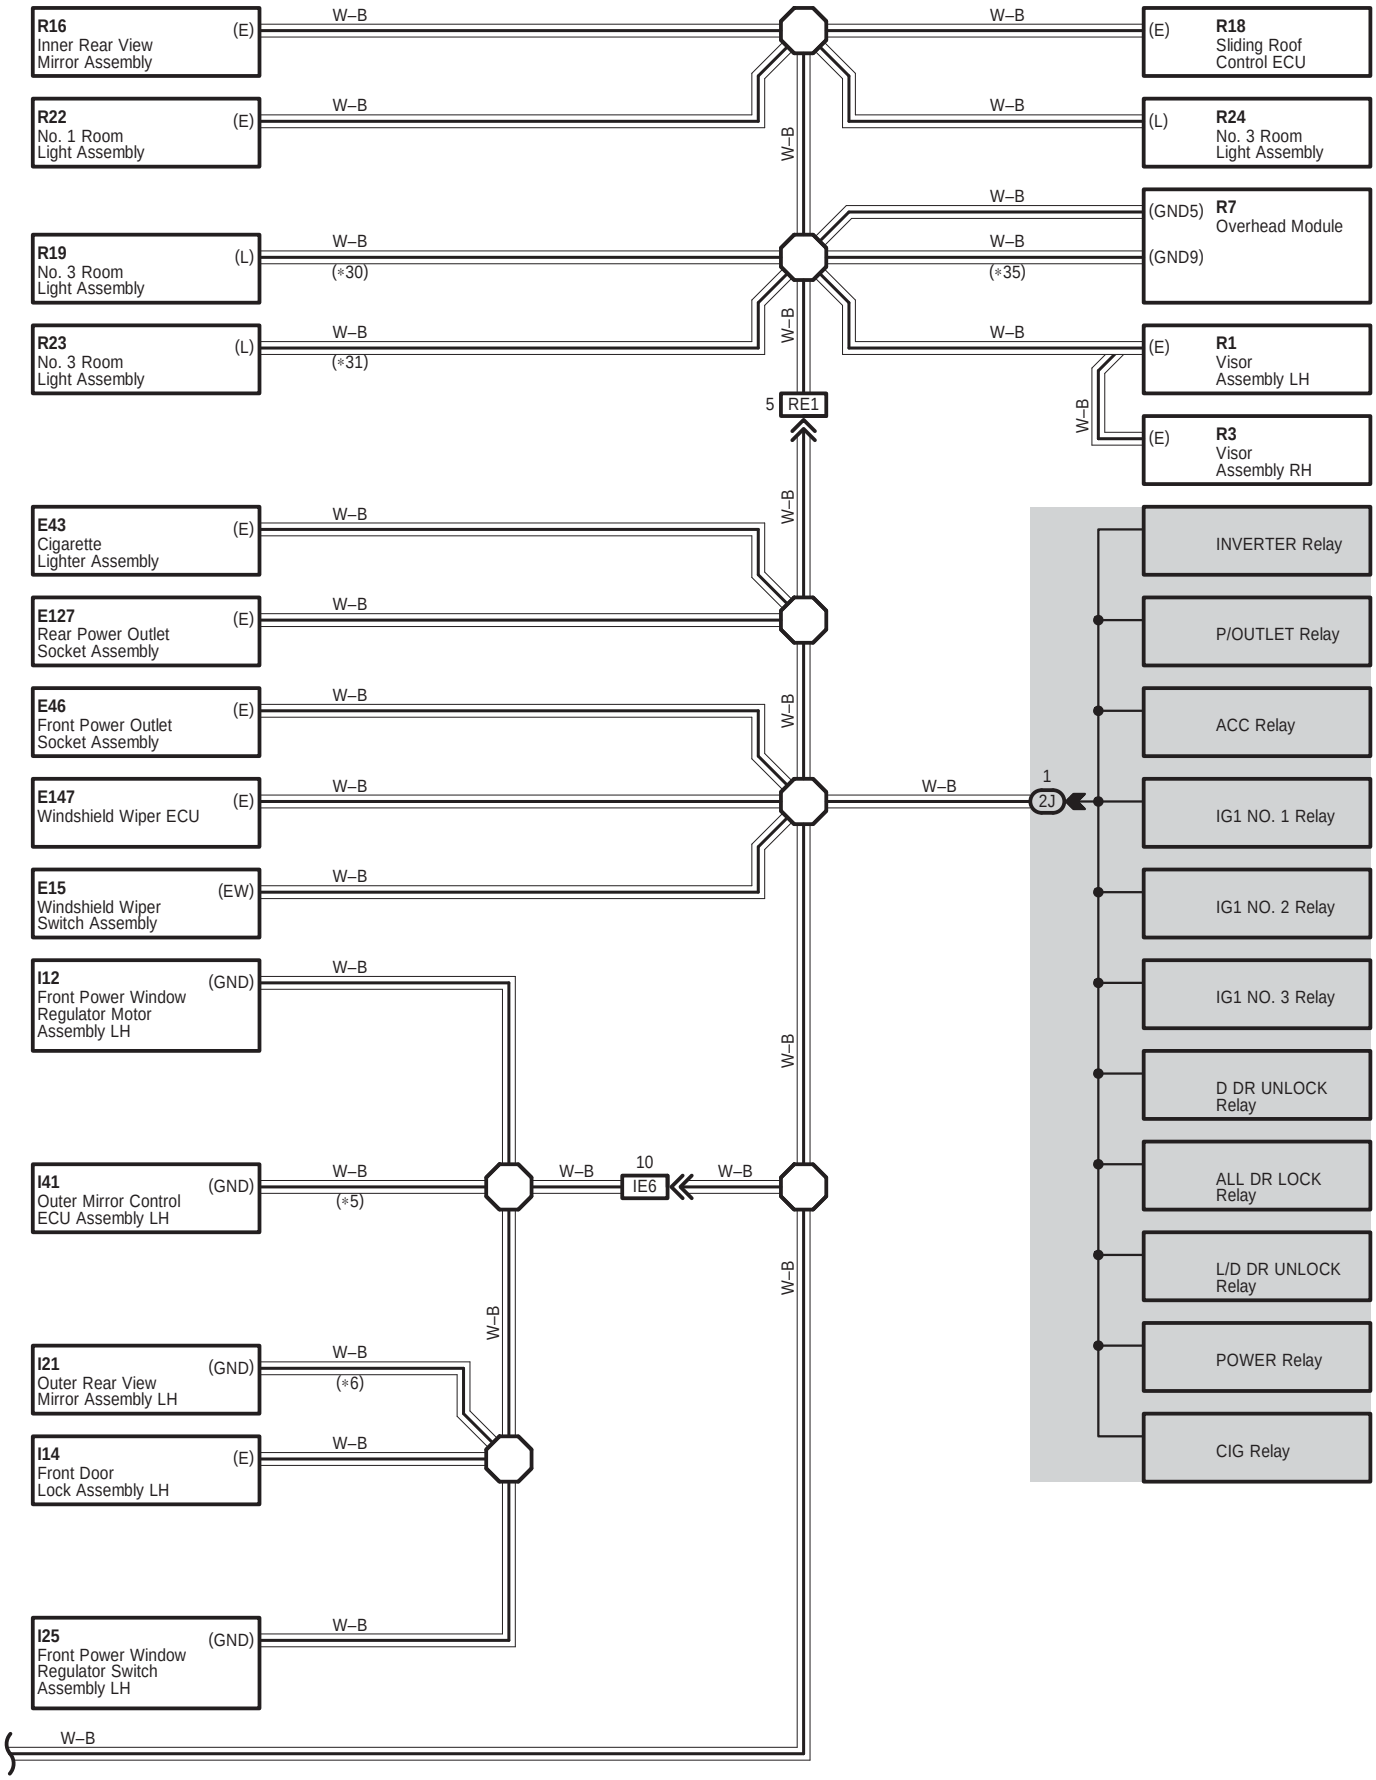
R16
Inner Rear View Mirror Assembly
(E)
W–B
R22
No. 1 Room Light Assembly
(E)
R19
No. 3 Room Light Assembly
(L)
(*30)
R23
No. 3 Room Light Assembly
(L)
(*31)
R18
Sliding Roof Control ECU
(E)
R24
No. 3 Room Light Assembly
(L)
R7
Overhead Module
(GND5)
(GND9)
(*35)
R1
Visor Assembly LH
(E)
R3
Visor Assembly RH
(E)
5 RE1
E43
Cigarette Lighter Assembly
(E)
E127
Rear Power Outlet Socket Assembly
(E)
E46
Front Power Outlet Socket Assembly
(E)
E147
Windshield Wiper ECU
(E)
E15
Windshield Wiper Switch Assembly
(EW)
I12
Front Power Window Regulator Motor Assembly LH
(GND)
I41
Outer Mirror Control ECU Assembly LH
(GND)
(*5)
10 IE6
I21
Outer Rear View Mirror Assembly LH
(GND)
(*6)
I14
Front Door Lock Assembly LH
(E)
I25
Front Power Window Regulator Switch Assembly LH
(GND)
1 2J
INVERTER Relay
P/OUTLET Relay
ACC Relay
IG1 NO. 1 Relay
IG1 NO. 2 Relay
IG1 NO. 3 Relay
D DR UNLOCK Relay
ALL DR LOCK Relay
L/D DR UNLOCK Relay
POWER Relay
CIG Relay

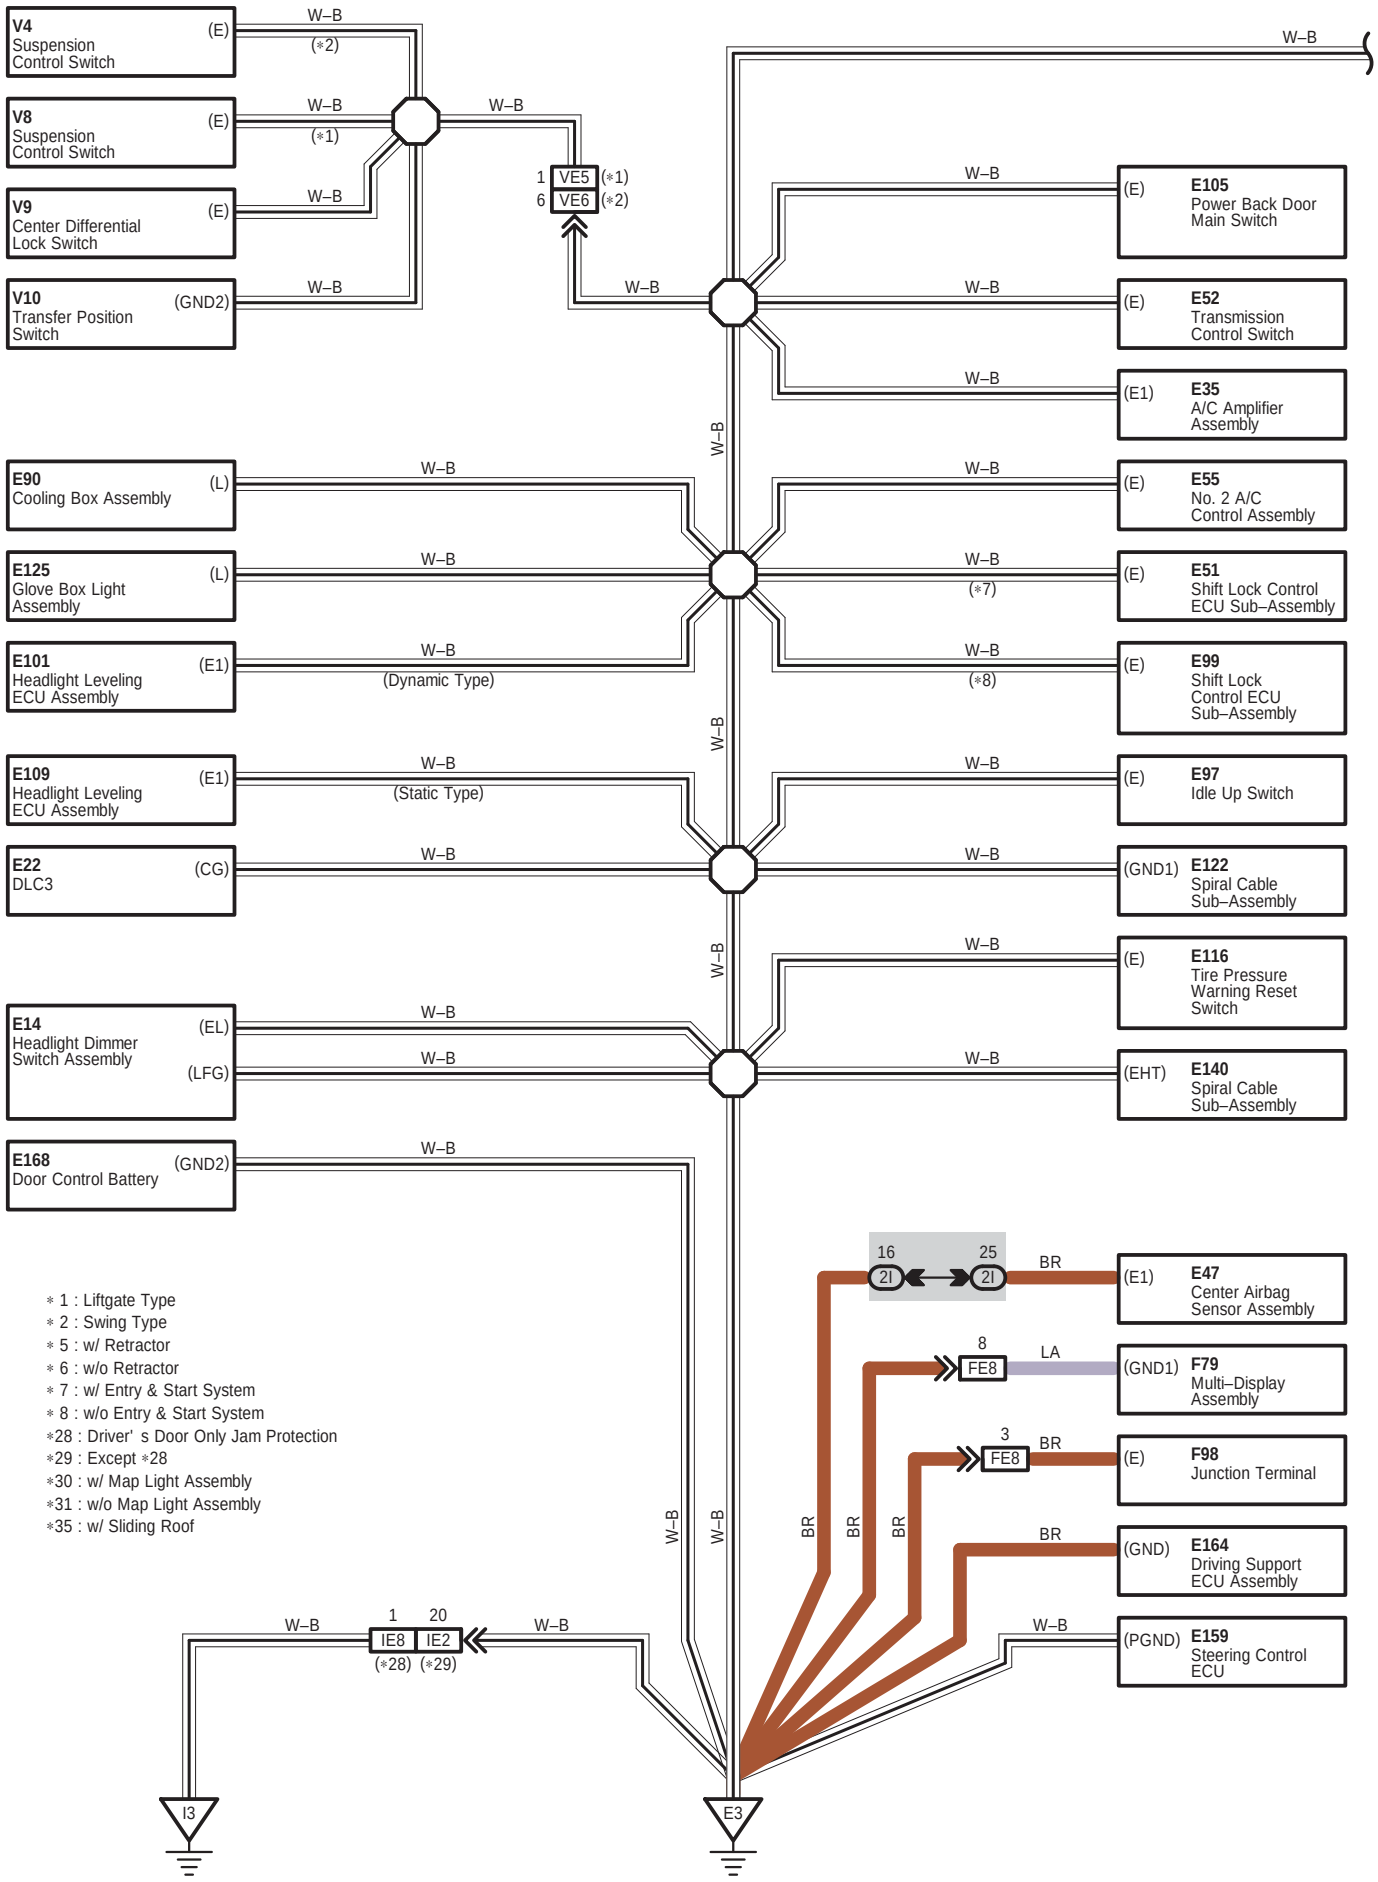

V4 Suspension Control Switch (E)
V8 Suspension Control Switch (E)
V9 Center Differential Lock Switch (E)
V10 Transfer Position Switch (GND2)
W–B
(*2)
(*1)
1 VE5 (*1)
6 VE6 (*2)
E105 Power Back Door Main Switch (E)
E52 Transmission Control Switch (E)
E35 A/C Amplifier Assembly (E1)
E90 Cooling Box Assembly (L)
E125 Glove Box Light Assembly (L)
E101 Headlight Leveling ECU Assembly (E1)
(Dynamic Type)
E109 Headlight Leveling ECU Assembly (E1)
(Static Type)
E22 DLC3 (CG)
E14 Headlight Dimmer Switch Assembly (EL) (LFG)
E168 Door Control Battery (GND2)
E55 No. 2 A/C Control Assembly (E)
E51 Shift Lock Control ECU Sub–Assembly (E)
(*7)
E99 Shift Lock Control ECU Sub–Assembly (E)
(*8)
E97 Idle Up Switch (E)
E122 Spiral Cable Sub–Assembly (GND1)
E116 Tire Pressure Warning Reset Switch (E)
E140 Spiral Cable Sub–Assembly (EHT)
16 2I
25 2I
BR
E47 Center Airbag Sensor Assembly (E1)
8 FE8
LA
F79 Multi–Display Assembly (GND1)
3 FE8
BR
F98 Junction Terminal (E)
E164 Driving Support ECU Assembly (GND)
E159 Steering Control ECU (PGND)
1 IE8
20 IE2
(*28) (*29)
I3
E3
*1 : Liftgate Type
*2 : Swing Type
*5 : w/ Retractor
*6 : w/o Retractor
*7 : w/ Entry & Start System
*8 : w/o Entry & Start System
*28 : Driver' s Door Only Jam Protection
*29 : Except *28
*30 : w/ Map Light Assembly
*31 : w/o Map Light Assembly
*35 : w/ Sliding Roof

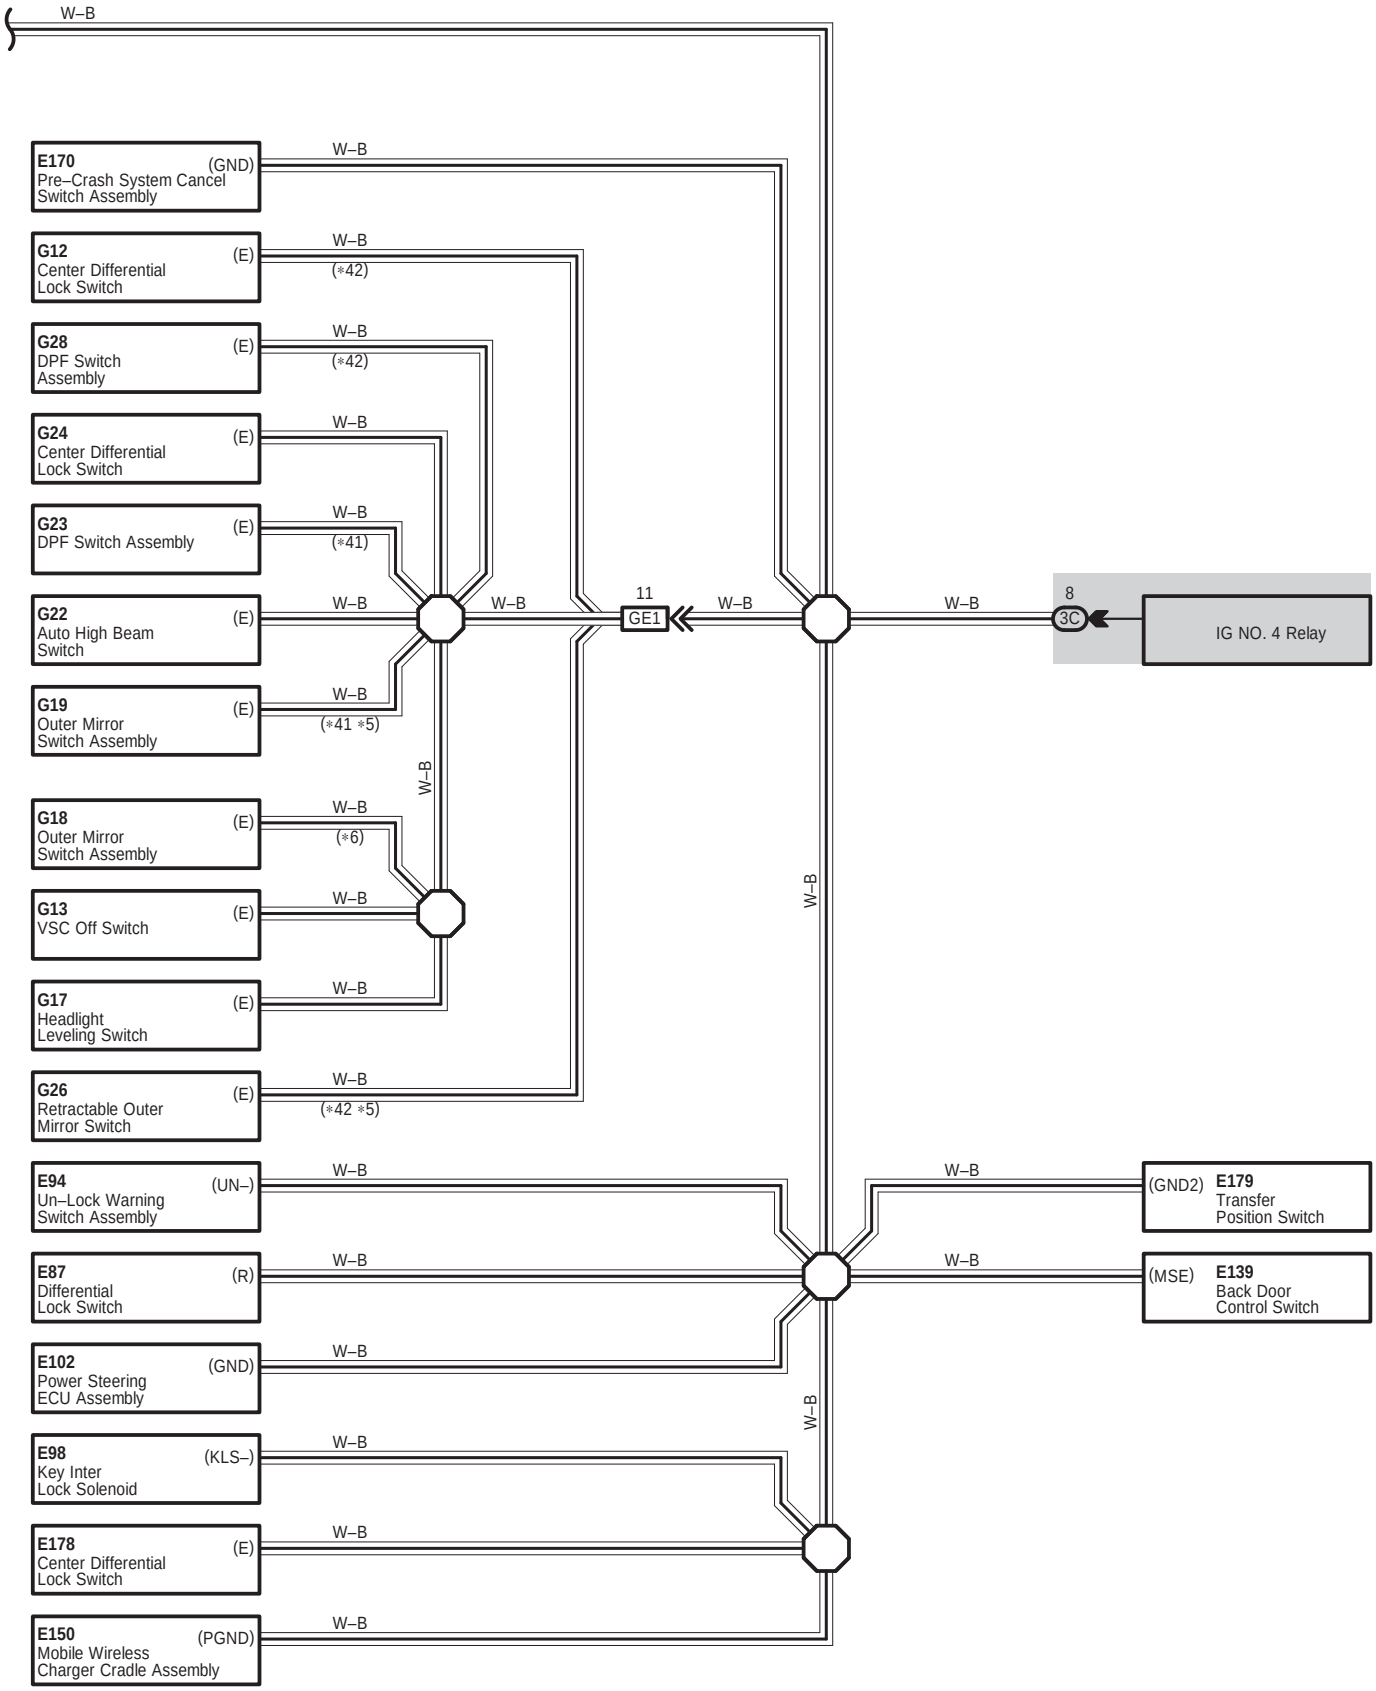

W–B
E170 (GND)
Pre–Crash System Cancel Switch Assembly
G12 (E)
Center Differential Lock Switch
(*42)
G28 (E)
DPF Switch Assembly
G24 (E)
Center Differential Lock Switch
G23 (E)
DPF Switch Assembly
(*41)
G22 (E)
Auto High Beam Switch
G19 (E)
Outer Mirror Switch Assembly
(*41 *5)
G18 (E)
Outer Mirror Switch Assembly
(*6)
G13 (E)
VSC Off Switch
G17 (E)
Headlight Leveling Switch
G26 (E)
Retractable Outer Mirror Switch
(*42 *5)
11
GE1
8
3C
IG NO. 4 Relay
E94 (UN–)
Un–Lock Warning Switch Assembly
E87 (R)
Differential Lock Switch
E102 (GND)
Power Steering ECU Assembly
E98 (KLS–)
Key Inter Lock Solenoid
E178 (E)
Center Differential Lock Switch
E150 (PGND)
Mobile Wireless Charger Cradle Assembly
(GND2) E179
Transfer Position Switch
(MSE) E139
Back Door Control Switch

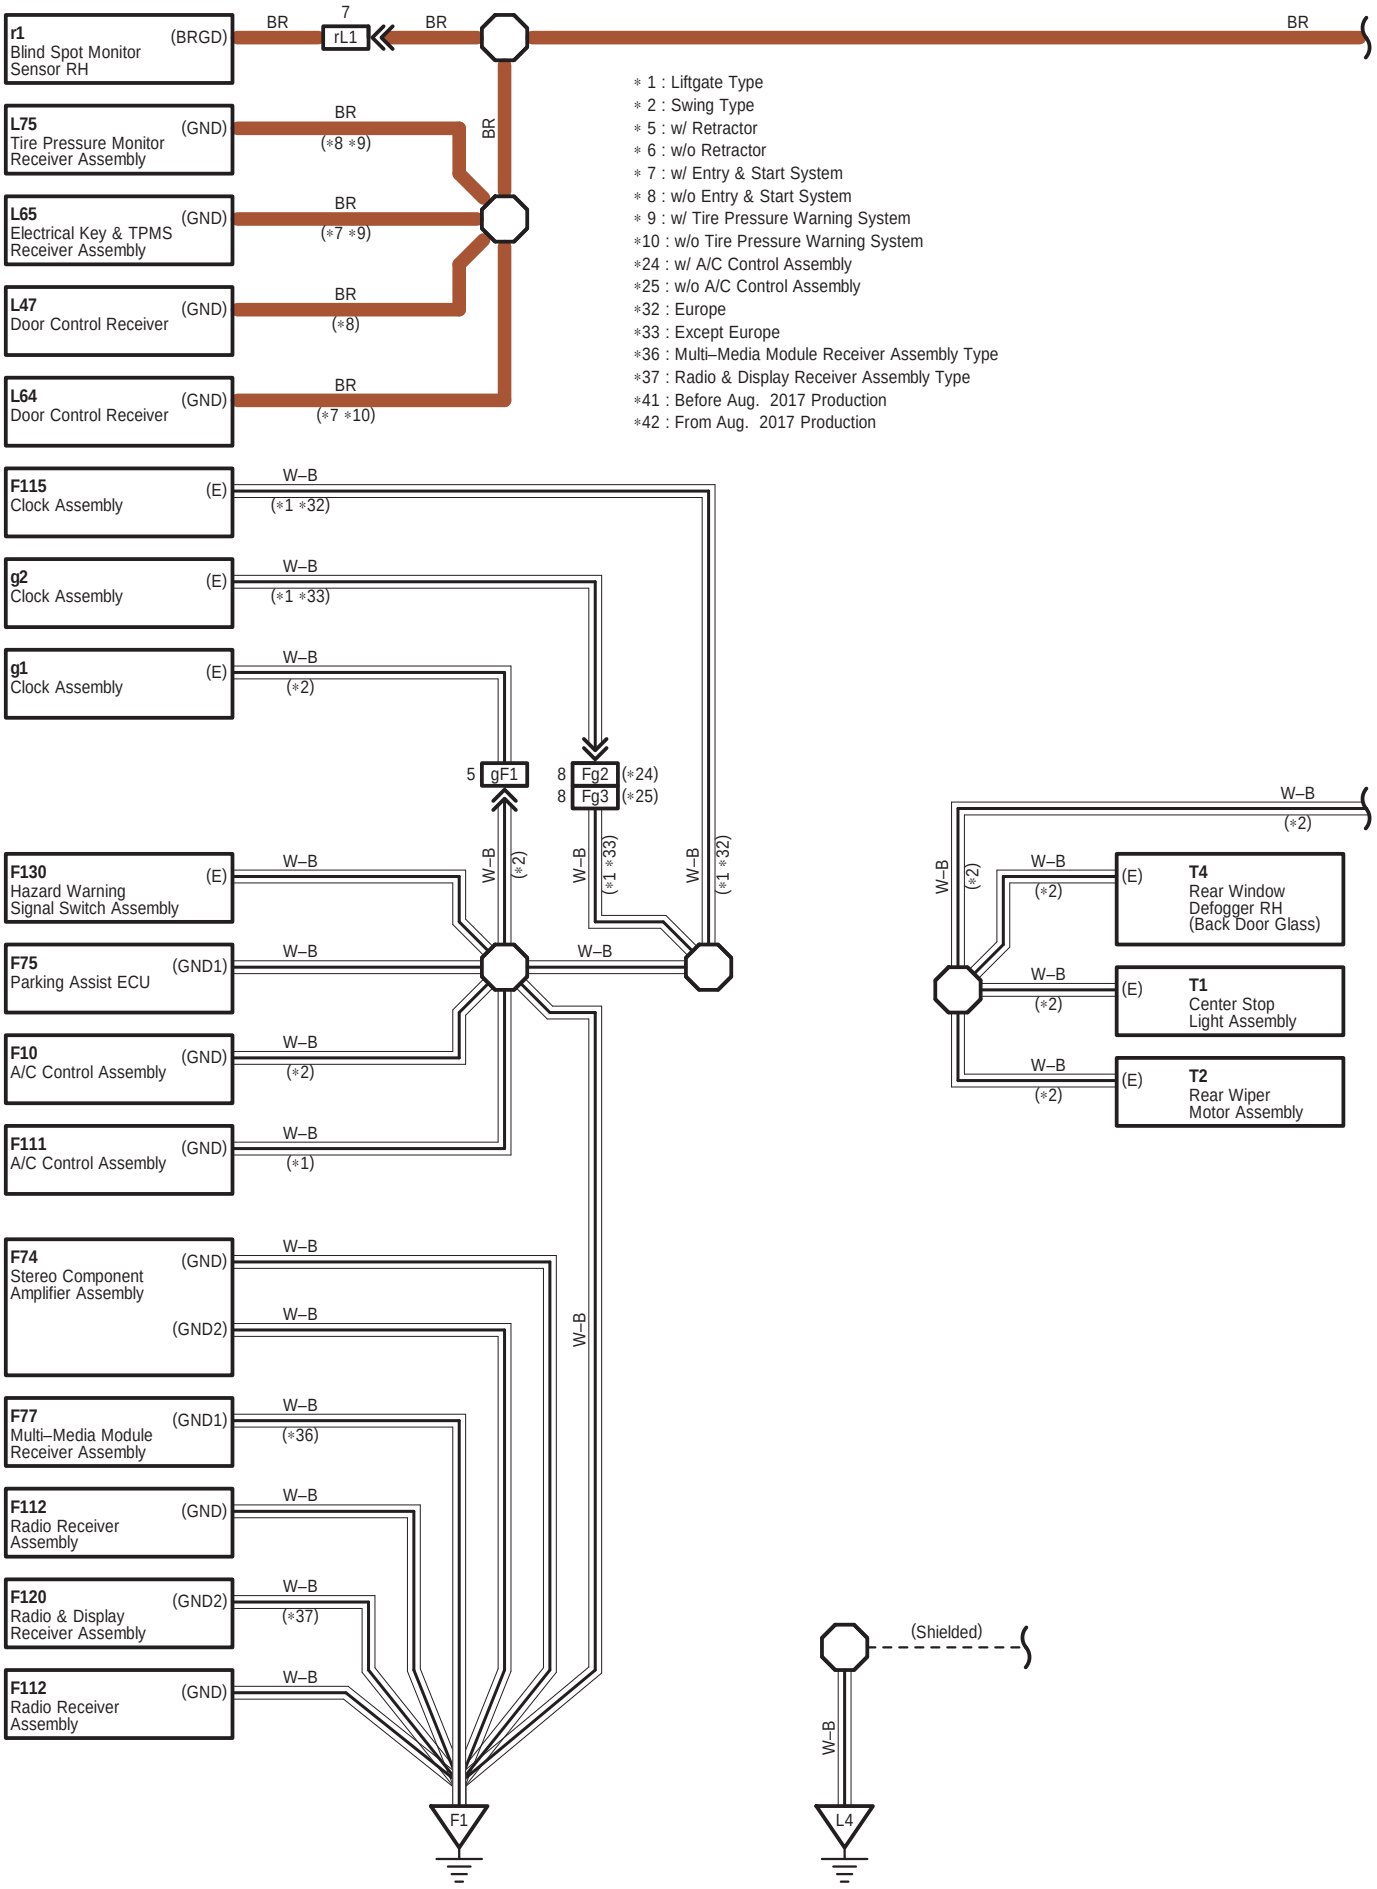

r1
Blind Spot Monitor Sensor RH
(BRGD)
BR
7
rL1
BR
BR
L75
Tire Pressure Monitor Receiver Assembly
(GND)
BR
(∗8 ∗9)
L65
Electrical Key & TPMS Receiver Assembly
(GND)
BR
(∗7 ∗9)
L47
Door Control Receiver
(GND)
BR
(∗8)
L64
Door Control Receiver
(GND)
BR
(∗7 ∗10)
∗ 1 : Liftgate Type
∗ 2 : Swing Type
∗ 5 : w/ Retractor
∗ 6 : w/o Retractor
∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
∗ 9 : w/ Tire Pressure Warning System
∗10 : w/o Tire Pressure Warning System
∗24 : w/ A/C Control Assembly
∗25 : w/o A/C Control Assembly
∗32 : Europe
∗33 : Except Europe
∗36 : Multi–Media Module Receiver Assembly Type
∗37 : Radio & Display Receiver Assembly Type
∗41 : Before Aug. 2017 Production
∗42 : From Aug. 2017 Production
F115
Clock Assembly
(E)
W–B
(∗1 ∗32)
g2
Clock Assembly
(E)
W–B
(∗1 ∗33)
g1
Clock Assembly
(E)
W–B
(∗2)
5 gF1
8 Fg2 (∗24)
8 Fg3 (∗25)
W–B
(∗2)
W–B
(∗1 ∗33)
W–B
(∗1 ∗32)
F130
Hazard Warning Signal Switch Assembly
(E)
W–B
F75
Parking Assist ECU
(GND1)
W–B
W–B
F10
A/C Control Assembly
(GND)
W–B
(∗2)
F111
A/C Control Assembly
(GND)
W–B
(∗1)
W–B
(∗2)
W–B
(E)
T4
Rear Window Defogger RH (Back Door Glass)
W–B
(∗2)
W–B
(E)
T1
Center Stop Light Assembly
W–B
(∗2)
W–B
(E)
T2
Rear Wiper Motor Assembly
W–B
(∗2)
F74
Stereo Component Amplifier Assembly
(GND)
W–B
(GND2)
W–B
W–B
F77
Multi–Media Module Receiver Assembly
(GND1)
W–B
(∗36)
F112
Radio Receiver Assembly
(GND)
W–B
F120
Radio & Display Receiver Assembly
(GND2)
W–B
(∗37)
F112
Radio Receiver Assembly
(GND)
W–B
F1
(Shielded)
W–B
L4

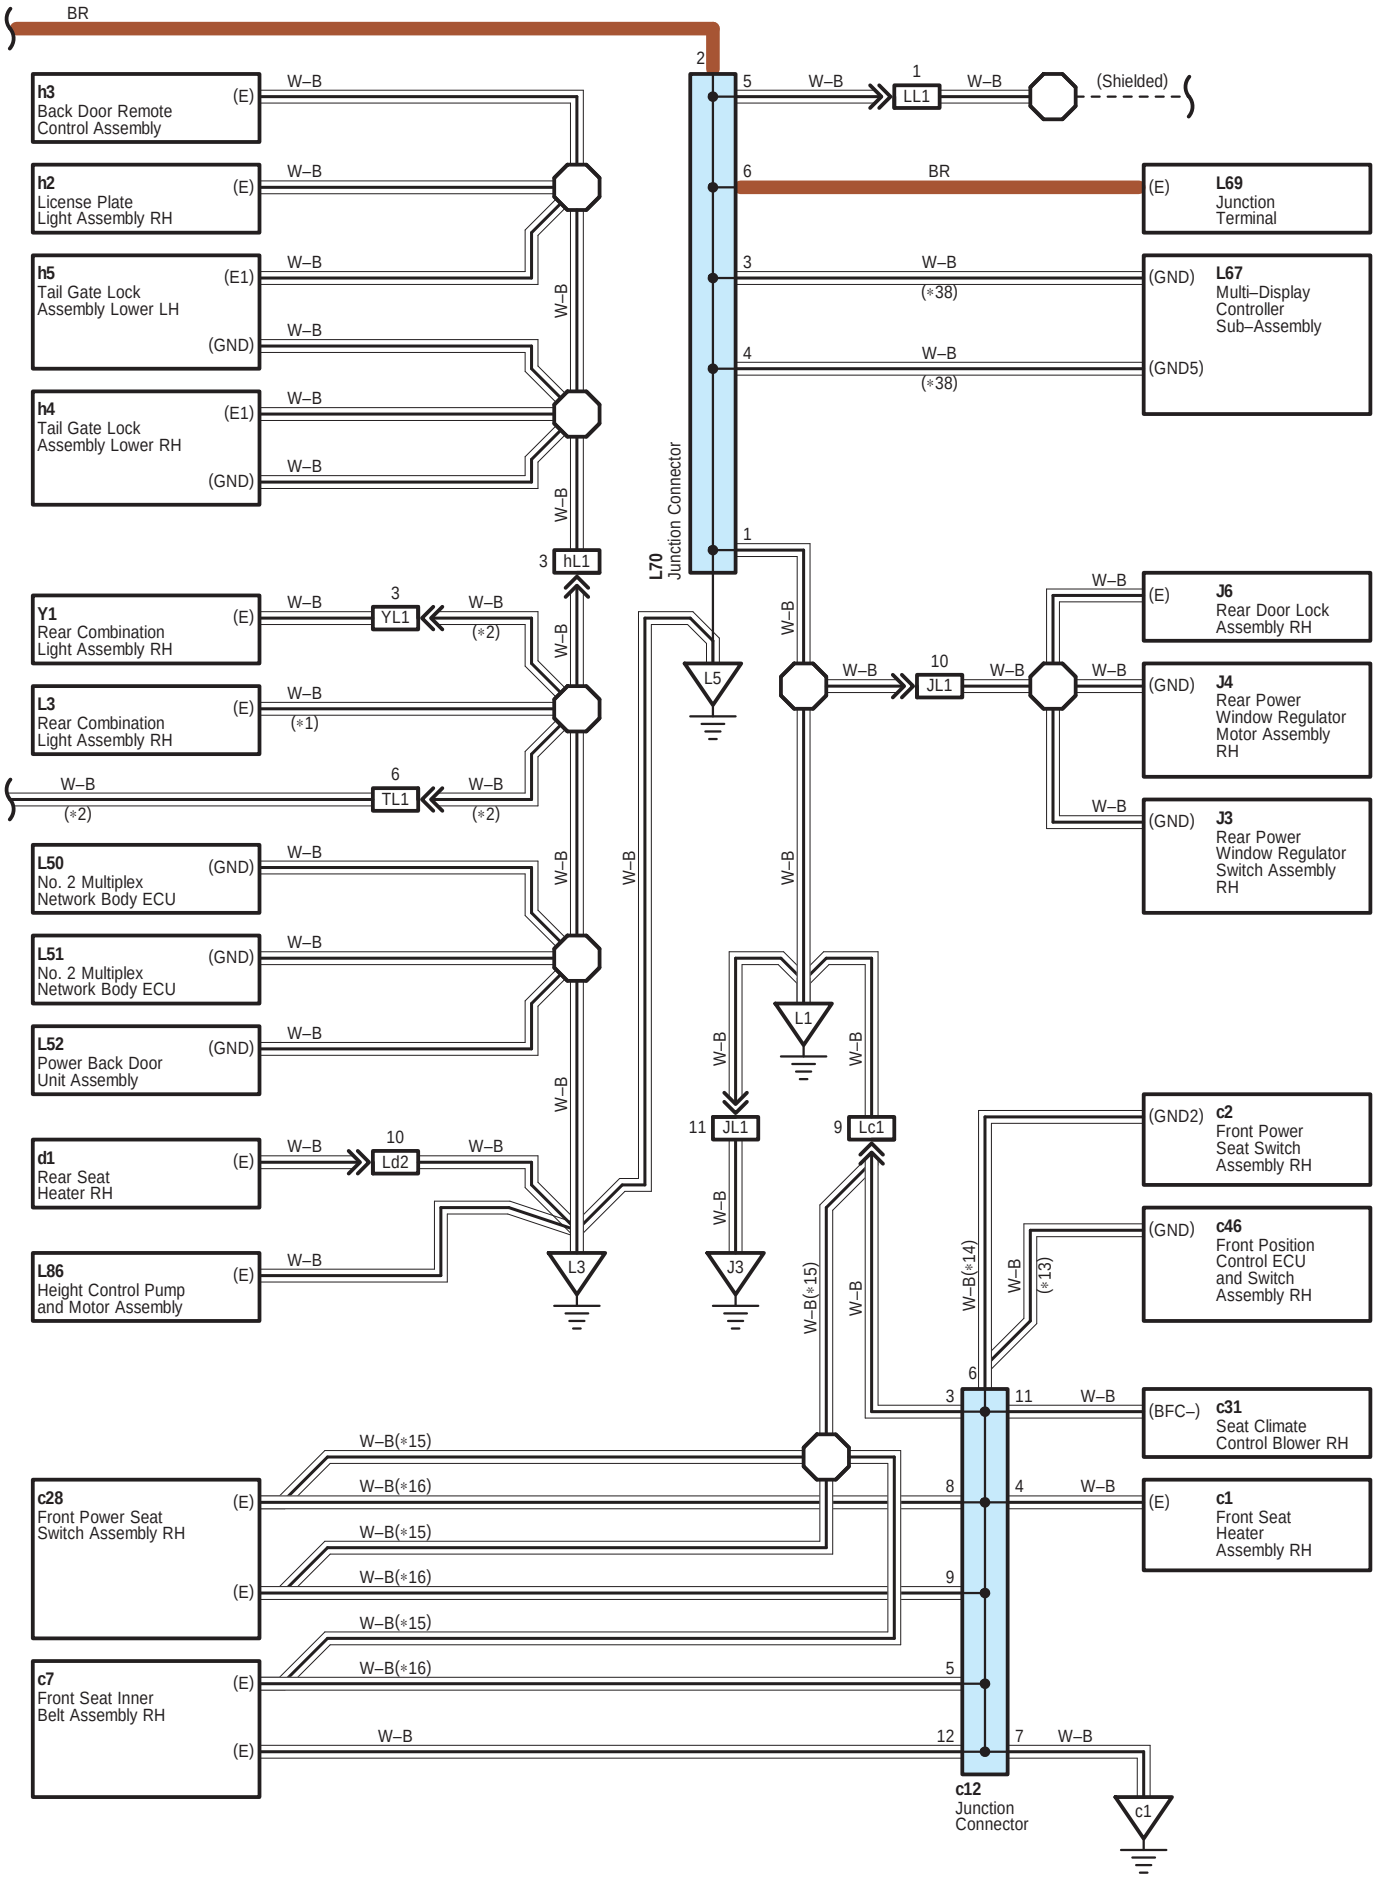
BR
h3
Back Door Remote Control Assembly
h2
License Plate Light Assembly RH
h5
Tail Gate Lock Assembly Lower LH
h4
Tail Gate Lock Assembly Lower RH
Y1
Rear Combination Light Assembly RH
L3
Rear Combination Light Assembly RH
L50
No. 2 Multiplex Network Body ECU
L51
No. 2 Multiplex Network Body ECU
L52
Power Back Door Unit Assembly
d1
Rear Seat Heater RH
L86
Height Control Pump and Motor Assembly
c28
Front Power Seat Switch Assembly RH
c7
Front Seat Inner Belt Assembly RH
L70
Junction Connector
LL1
(Shielded)
L69
Junction Terminal
L67
Multi–Display Controller Sub–Assembly
J6
Rear Door Lock Assembly RH
J4
Rear Power Window Regulator Motor Assembly RH
J3
Rear Power Window Regulator Switch Assembly RH
hL1
YL1
TL1
JL1
Ld2
Lc1
L5
L1
L3
J3
c2
Front Power Seat Switch Assembly RH
c46
Front Position Control ECU and Switch Assembly RH
c31
Seat Climate Control Blower RH
c1
Front Seat Heater Assembly RH
c12
Junction Connector
W–B
(E)
(GND)
(GND2)
(BFC–)
(*38)
(*1)
(*2)
(*13)
W–B(*14)
W–B(*15)
W–B(*16)


Ground Point <RHD From Aug. 2015 Production>

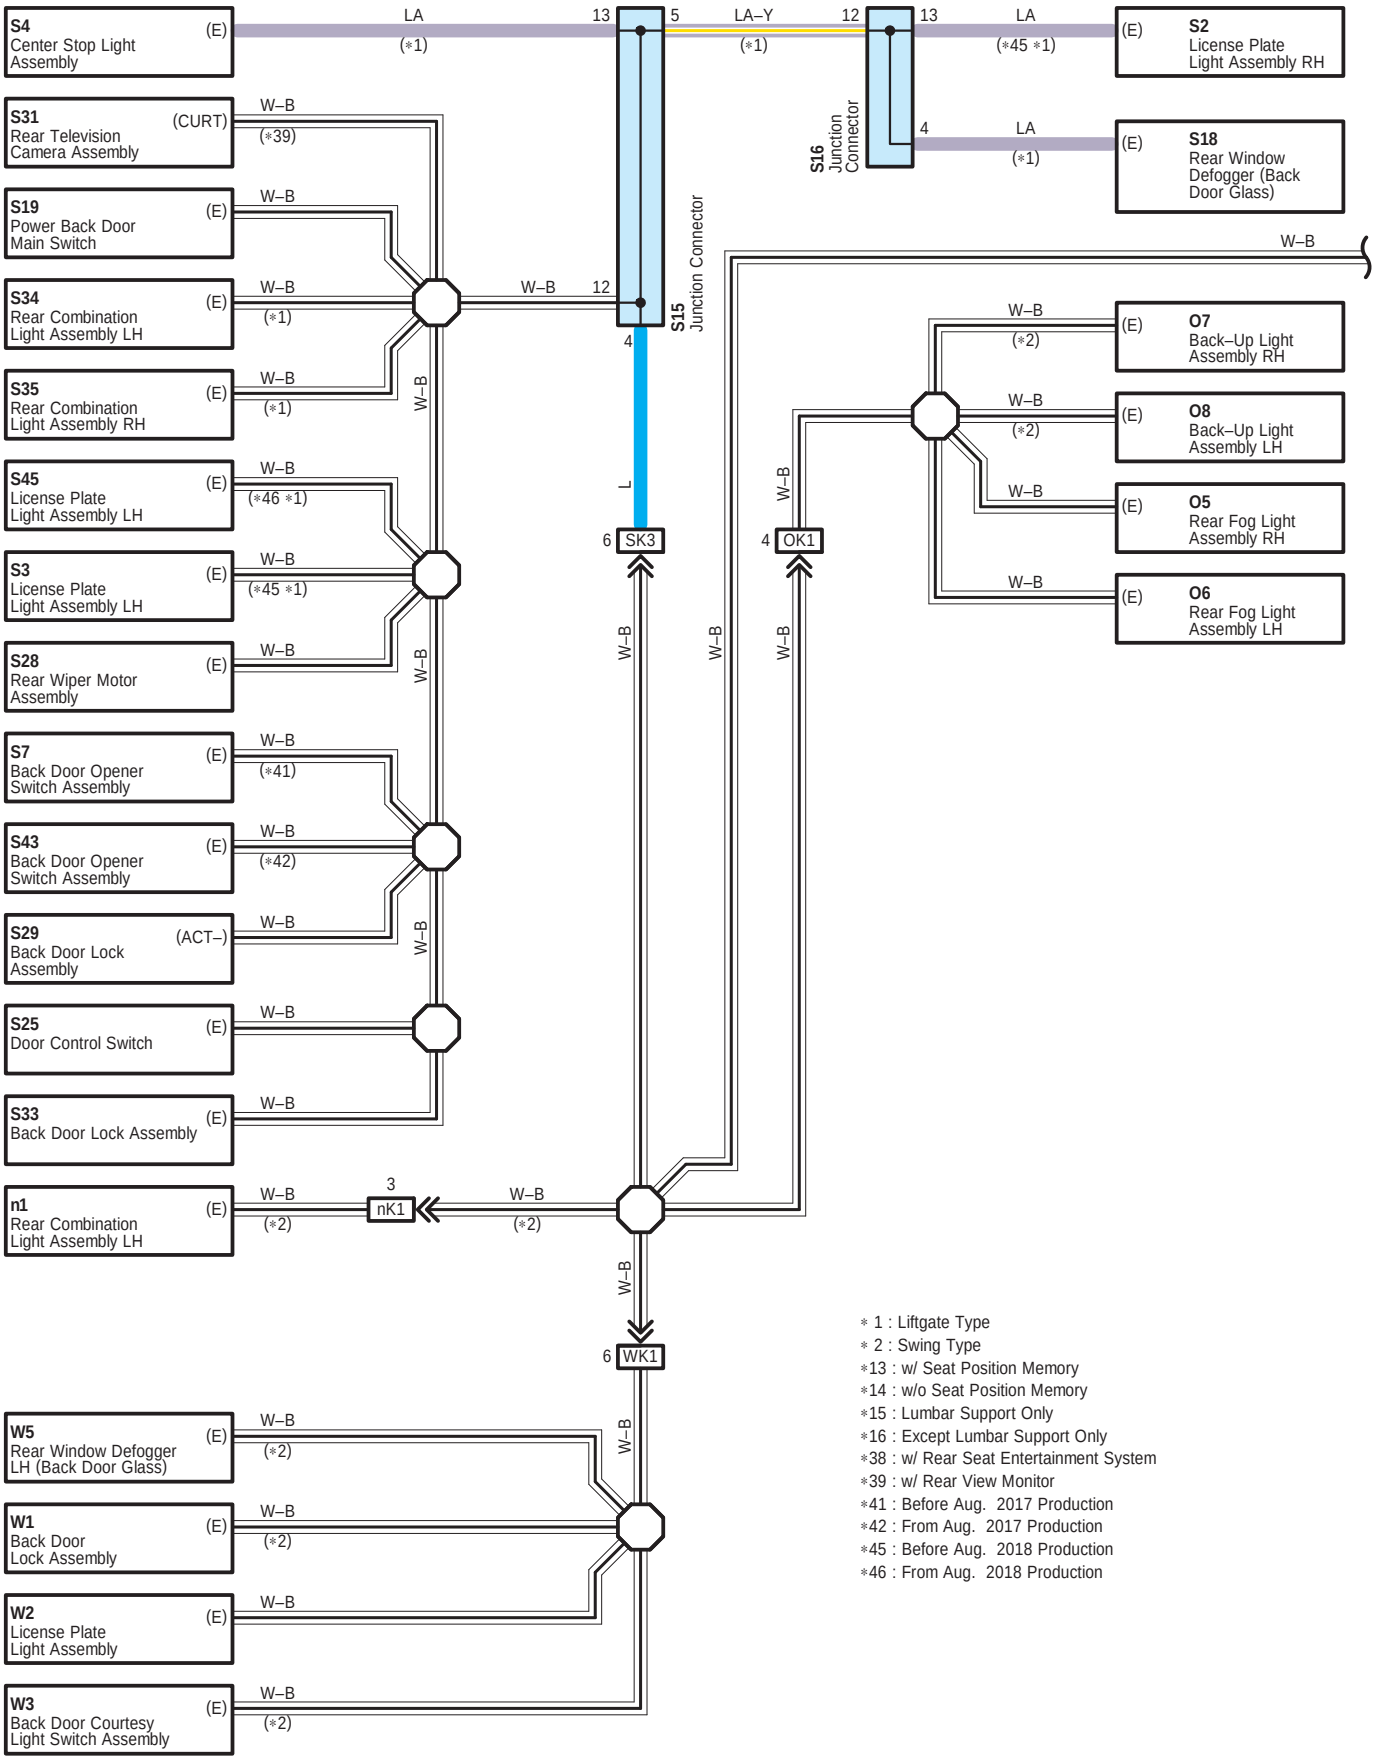
S4 Center Stop Light Assembly (E)
LA (∗1)
13
5
LA–Y (∗1)
12
13
LA (∗45 ∗1)
(E) S2 License Plate Light Assembly RH
S16 Junction Connector
4
LA (∗1)
(E) S18 Rear Window Defogger (Back Door Glass)
S31 Rear Television Camera Assembly (CURT)
W–B (∗39)
S19 Power Back Door Main Switch (E)
W–B
S34 Rear Combination Light Assembly LH (E)
W–B (∗1)
W–B 12
S15 Junction Connector
4
S35 Rear Combination Light Assembly RH (E)
W–B (∗1)
W–B
L
S45 License Plate Light Assembly LH (E)
W–B (∗46 ∗1)
6 SK3
S3 License Plate Light Assembly LH (E)
W–B (∗45 ∗1)
W–B
W–B
W–B
4 OK1
W–B
W–B
W–B

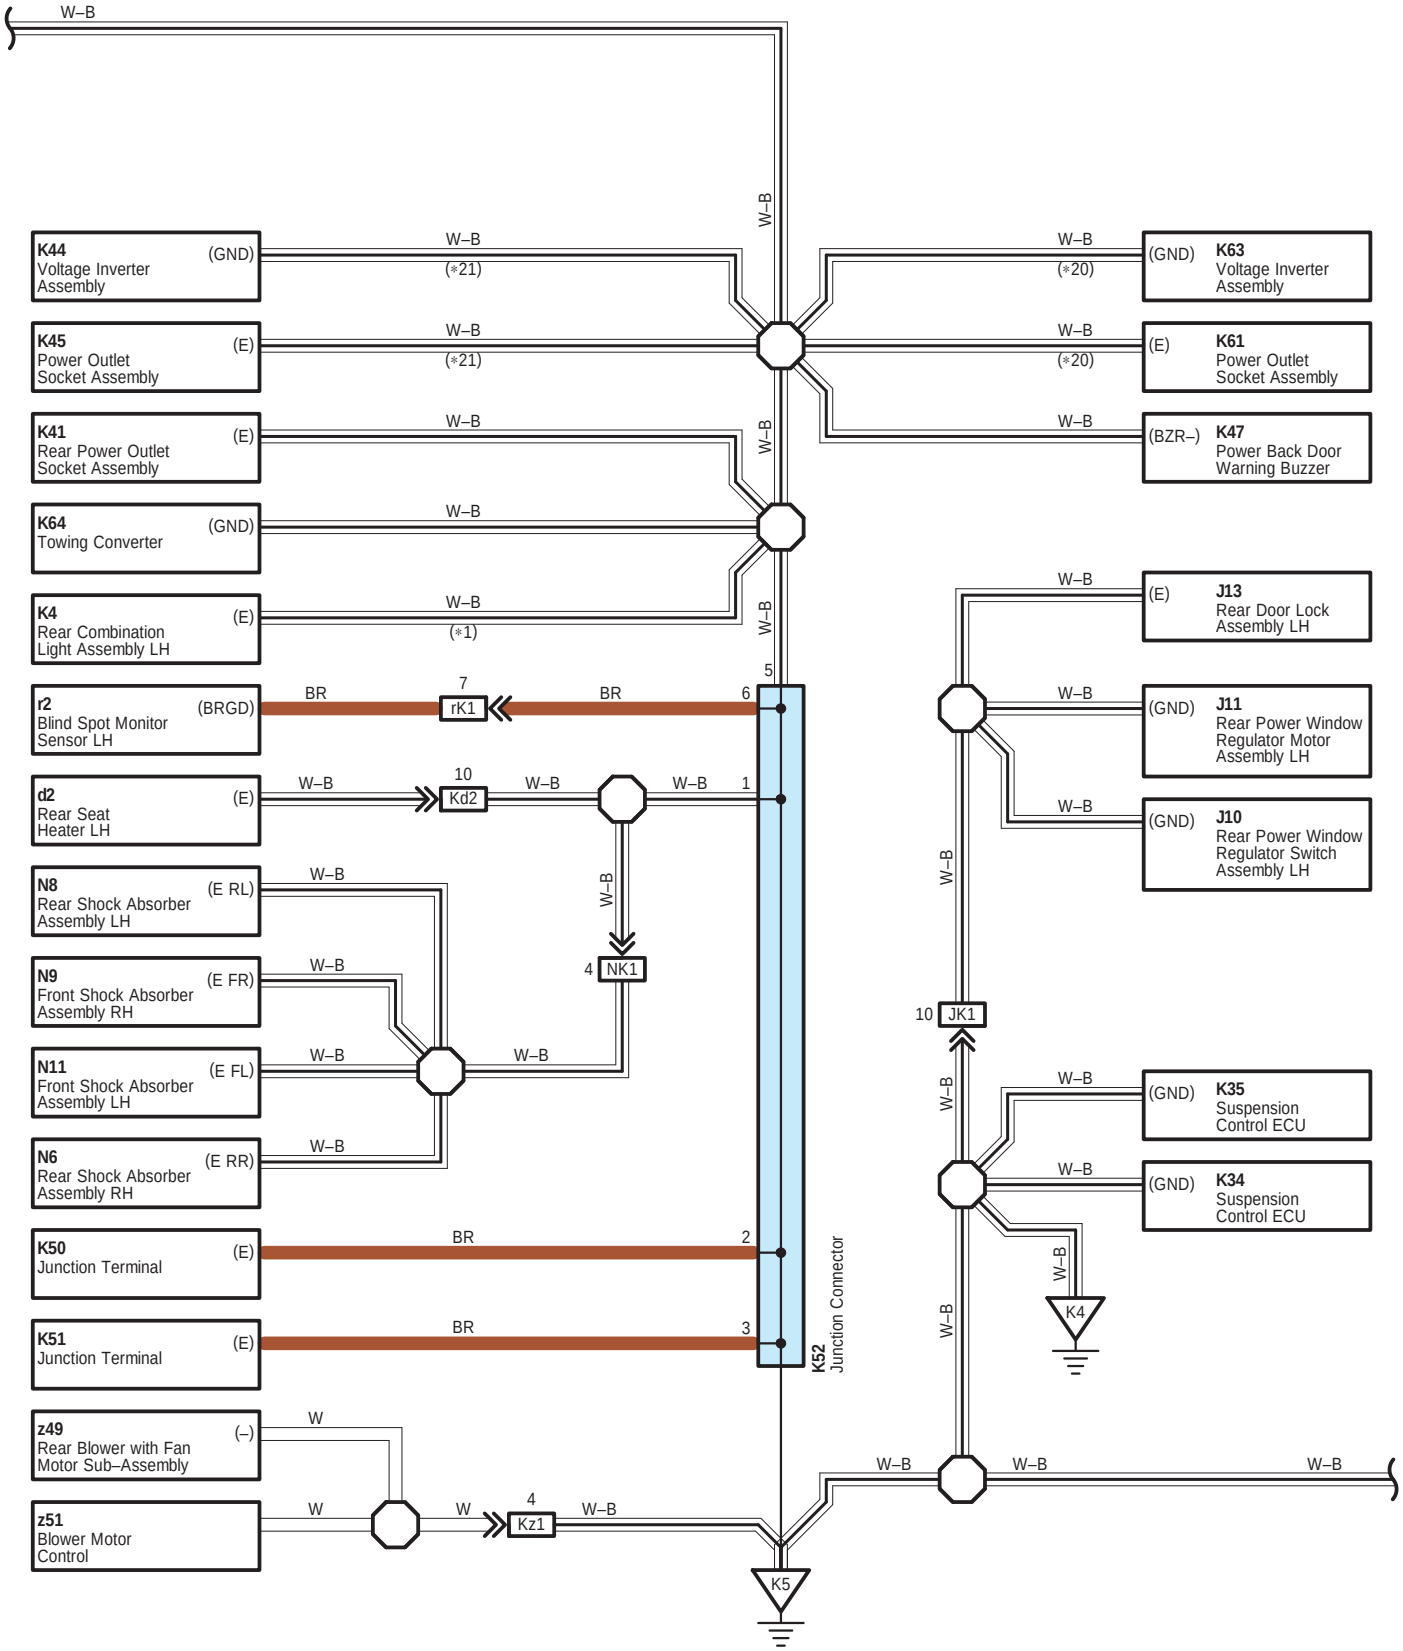

W–B
K44 Voltage Inverter Assembly (GND)
K45 Power Outlet Socket Assembly (E)
K41 Rear Power Outlet Socket Assembly (E)
K64 Towing Converter (GND)
K4 Rear Combination Light Assembly LH (E)
r2 Blind Spot Monitor Sensor LH (BRGD)
d2 Rear Seat Heater LH (E)
N8 Rear Shock Absorber Assembly LH (E RL)
N9 Front Shock Absorber Assembly RH (E FR)
N11 Front Shock Absorber Assembly LH (E FL)
N6 Rear Shock Absorber Assembly RH (E RR)
K50 Junction Terminal (E)
K51 Junction Terminal (E)
z49 Rear Blower with Fan Motor Sub–Assembly (–)
z51 Blower Motor Control
(∗21)
(∗20)
(∗1)
BR
W
rK1
Kd2
NK1
JK1
Kz1
K63 Voltage Inverter Assembly (GND)
K61 Power Outlet Socket Assembly (E)
K47 Power Back Door Warning Buzzer (BZR–)
J13 Rear Door Lock Assembly LH (E)
J11 Rear Power Window Regulator Motor Assembly LH (GND)
J10 Rear Power Window Regulator Switch Assembly LH (GND)
K35 Suspension Control ECU (GND)
K34 Suspension Control ECU (GND)
K52 Junction Connector
K4
K5

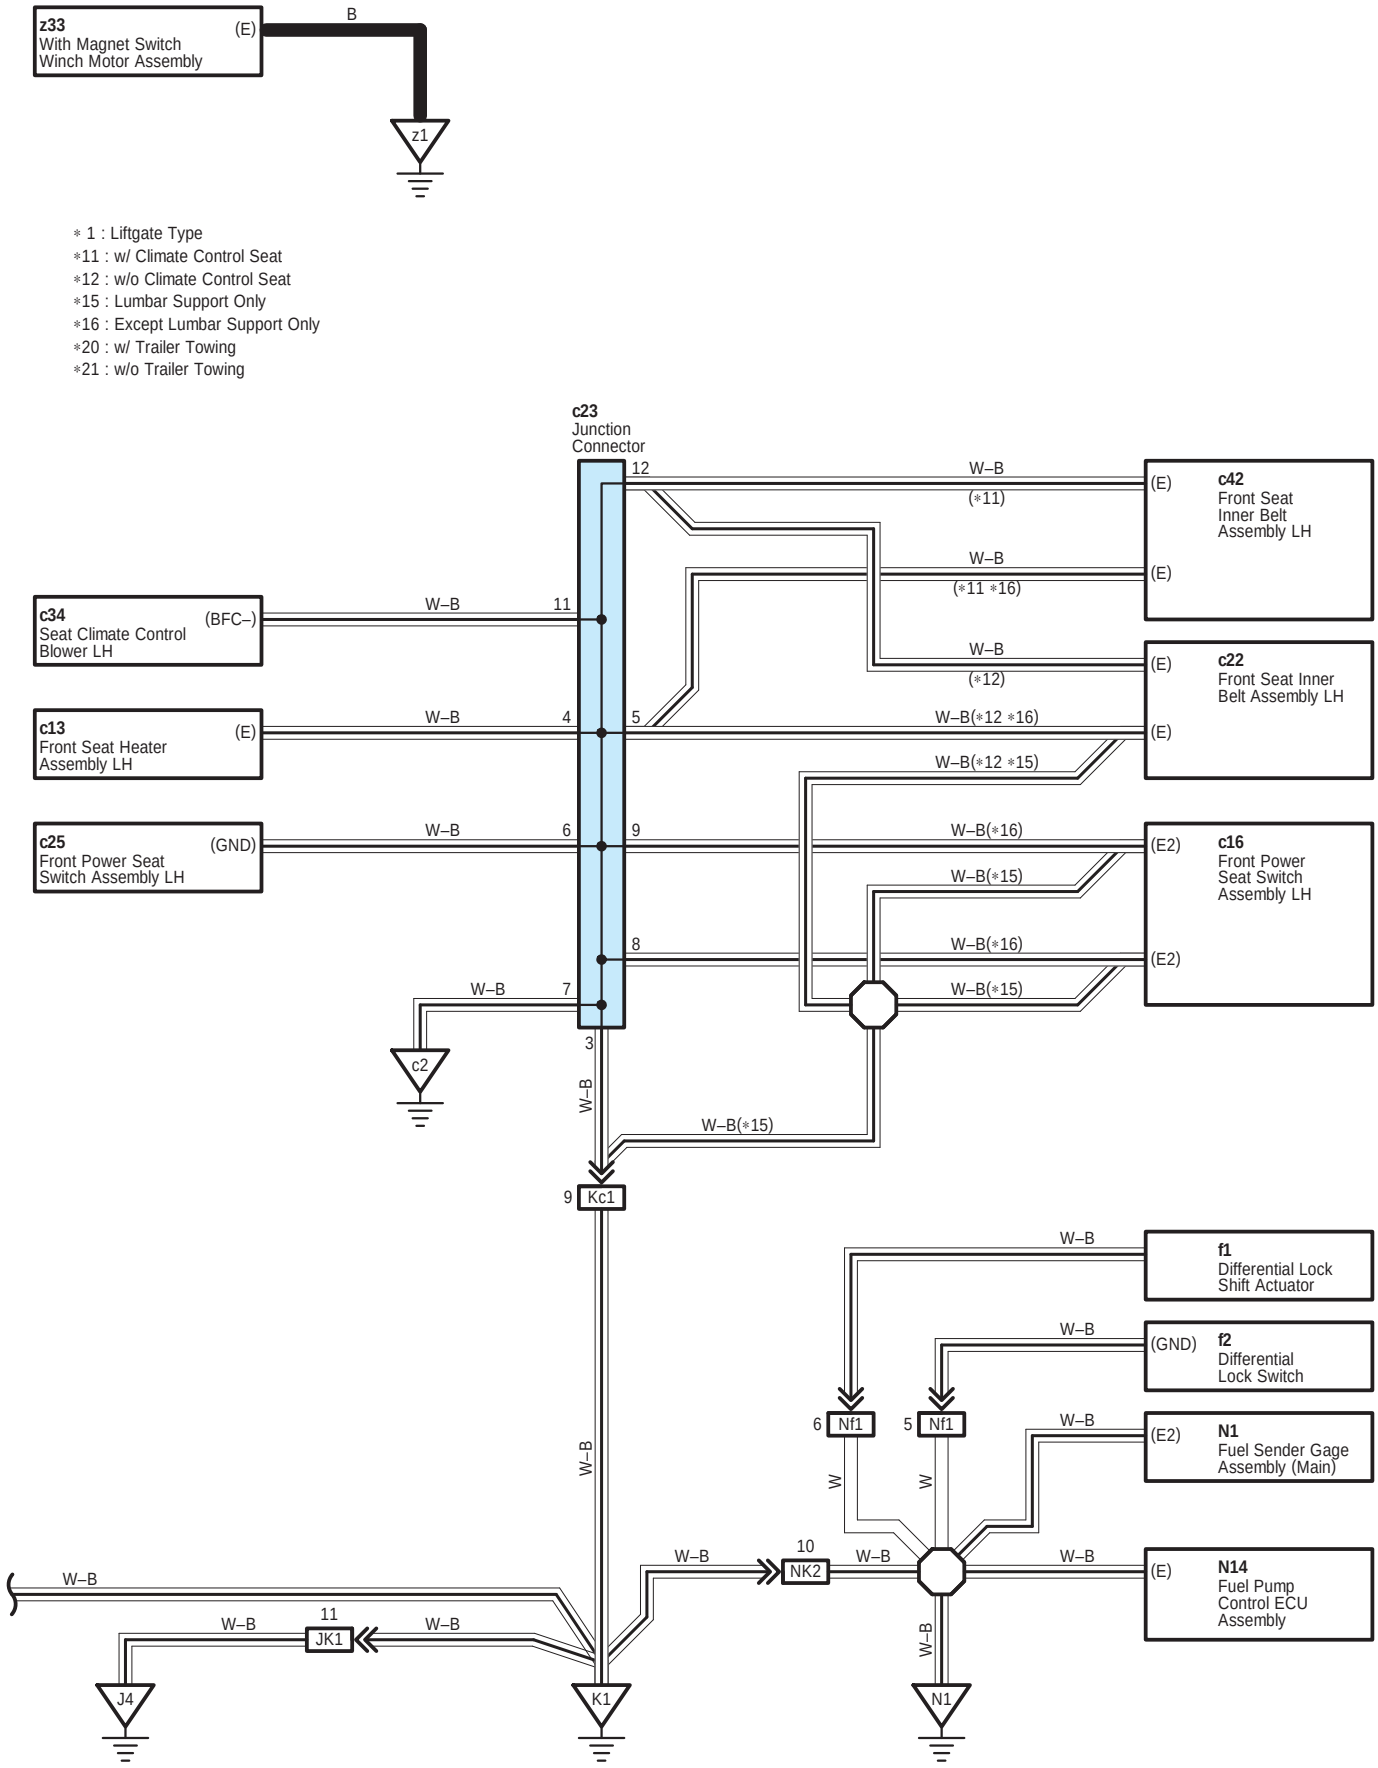
z33
With Magnet Switch
Winch Motor Assembly
(E)
B
z1
∗ 1 : Liftgate Type
∗11 : w/ Climate Control Seat
∗12 : w/o Climate Control Seat
∗15 : Lumbar Support Only
∗16 : Except Lumbar Support Only
∗20 : w/ Trailer Towing
∗21 : w/o Trailer Towing
c23
Junction
Connector
c34
Seat Climate Control
Blower LH
(BFC–)
c13
Front Seat Heater
Assembly LH
(E)
c25
Front Power Seat
Switch Assembly LH
(GND)
c2
c42
Front Seat
Inner Belt
Assembly LH
c22
Front Seat Inner
Belt Assembly LH
c16
Front Power
Seat Switch
Assembly LH
(E2)
Kc1
NK2
Nf1
JK1
J4
K1
N1
f1
Differential Lock
Shift Actuator
f2
Differential
Lock Switch
N1
Fuel Sender Gage
Assembly (Main)
N14
Fuel Pump
Control ECU
Assembly
W–B
W
W–B(∗11)
W–B(∗11 ∗16)
W–B(∗12)
W–B(∗12 ∗16)
W–B(∗12 ∗15)
W–B(∗16)
W–B(∗15)


A 37
Blue

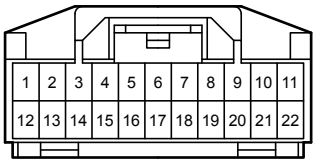


A 75
Black

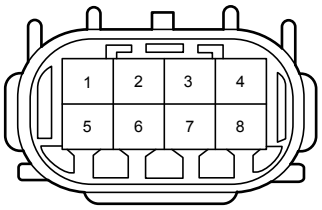


C 42
White

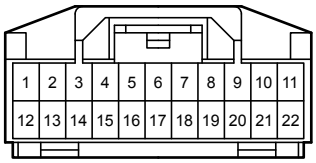


C 44
Blue

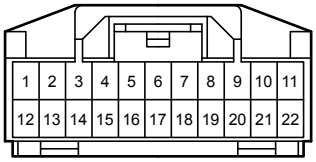


C 94
Gray

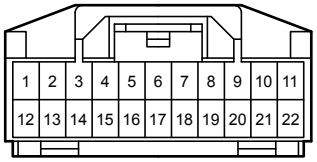


C 95
Black

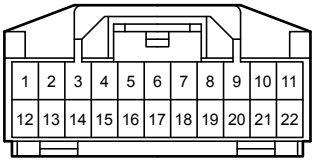


K 52
Black

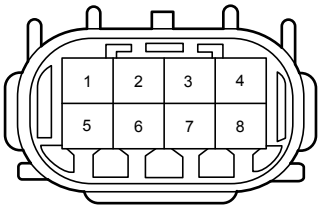


L 70
Black

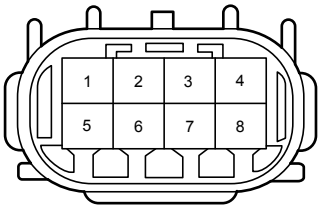


S 15
White

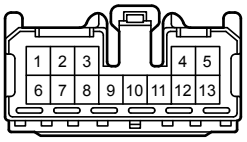


S 16
White

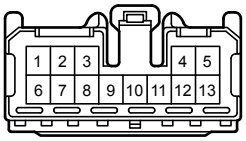


c 12
White



c 23
White




1P
White

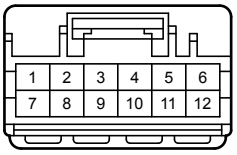


1R
Black




1S
White

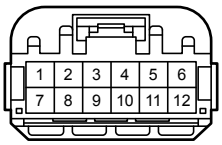


2I
White

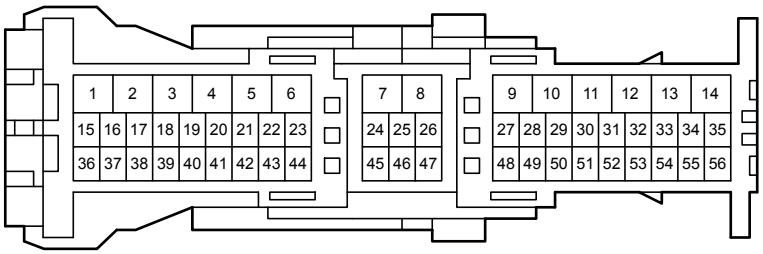


2J
White

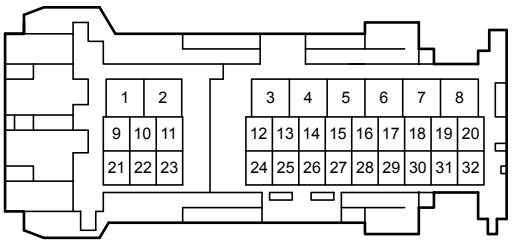


3C
White

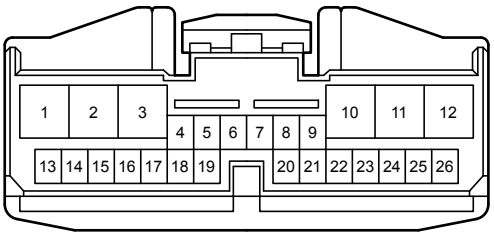


AA1
Gray

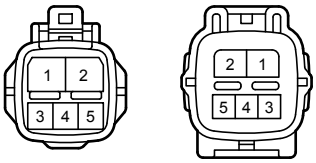


AD2
Black

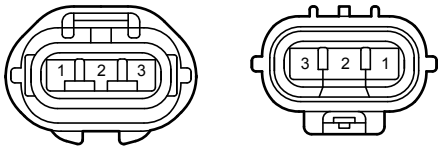


AK1
Blue

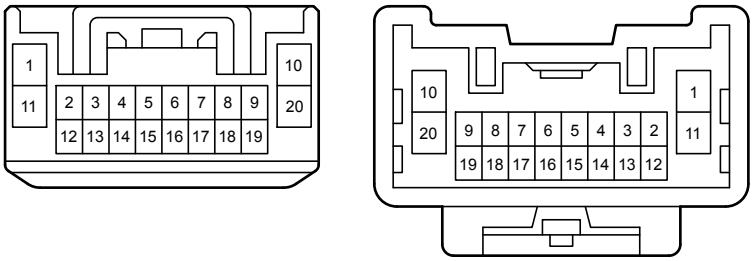


BA1
Black

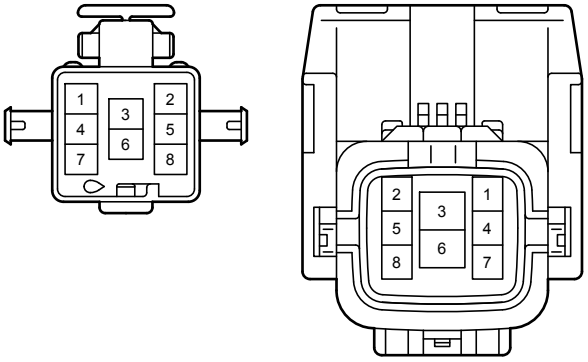


CA3
White

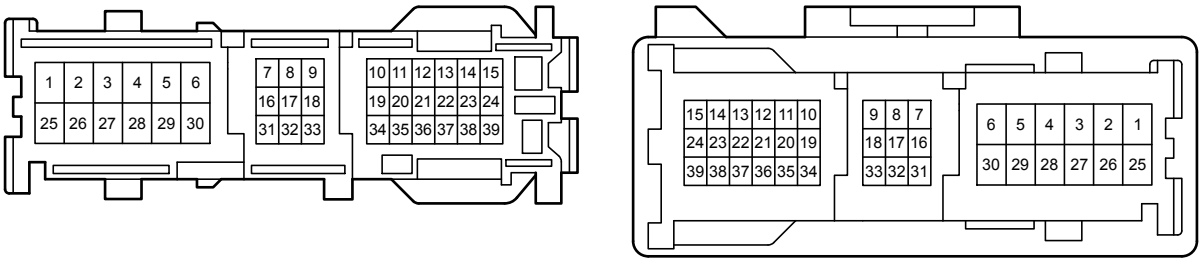

CA6
White

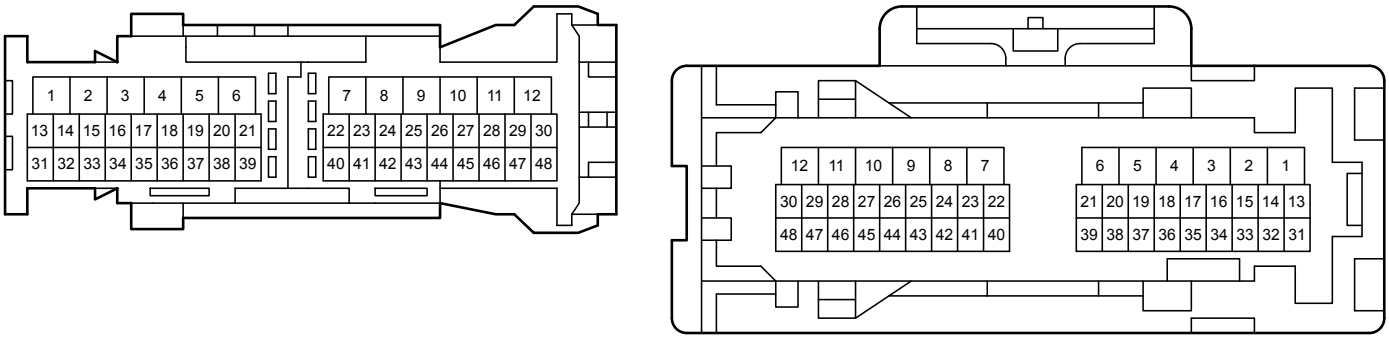


EA1
White

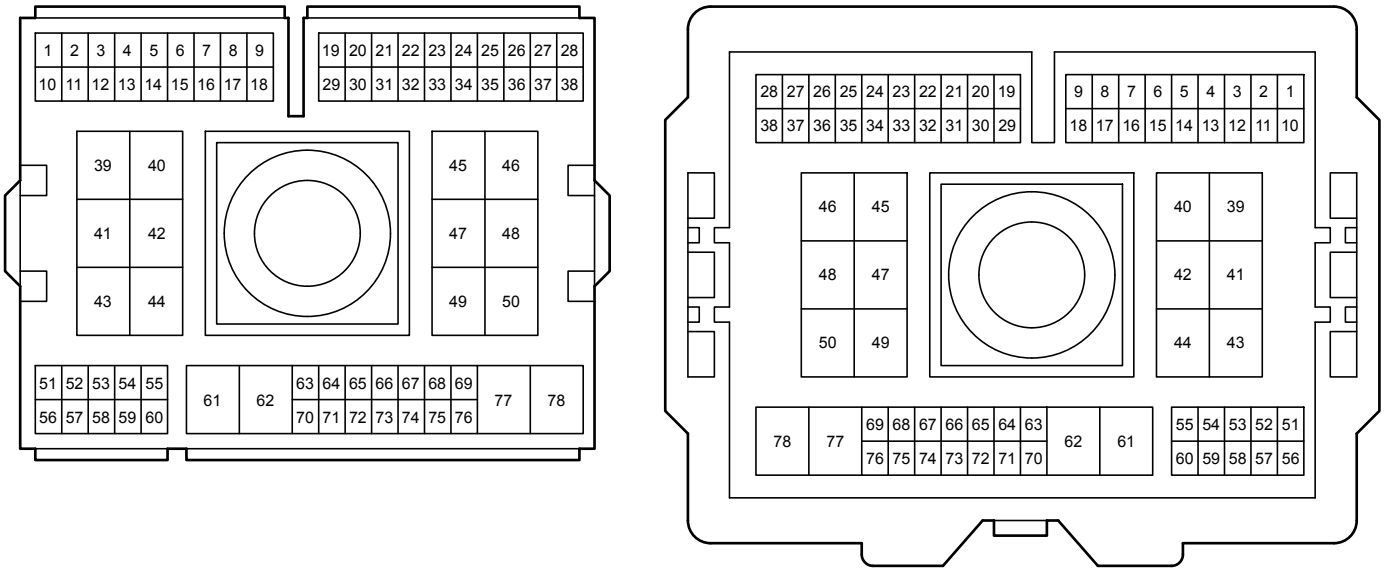

EK1


White

Blue

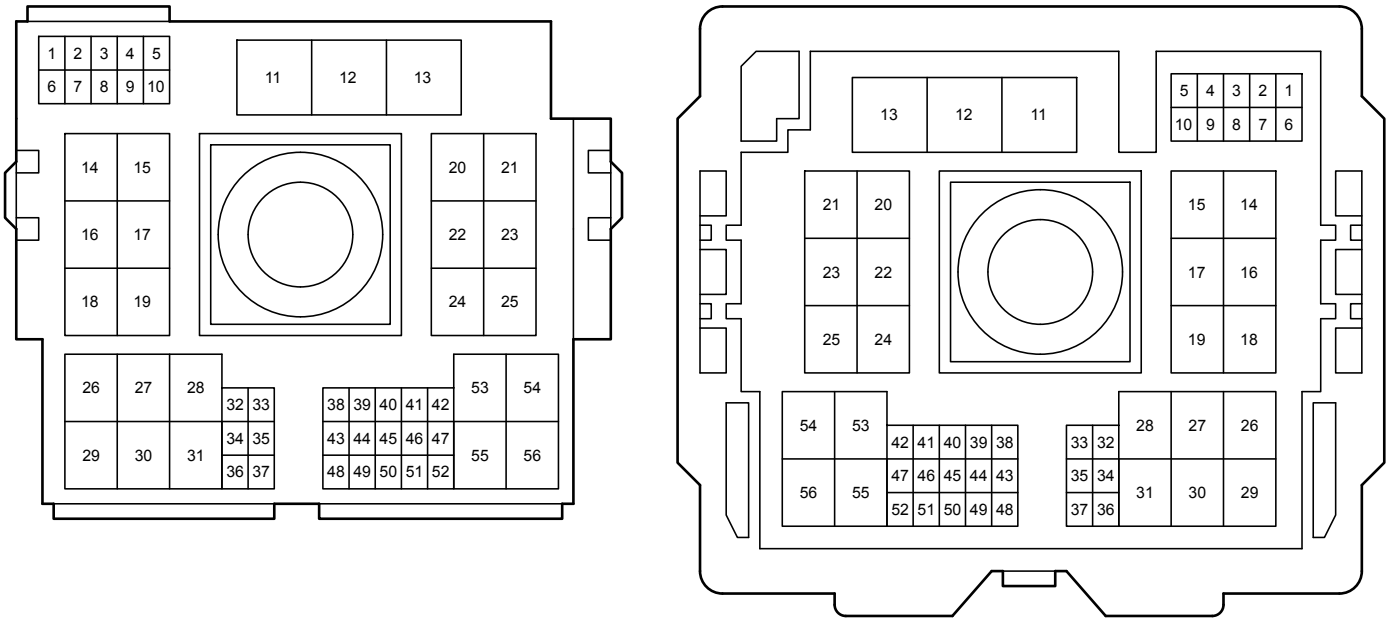


FE4

White

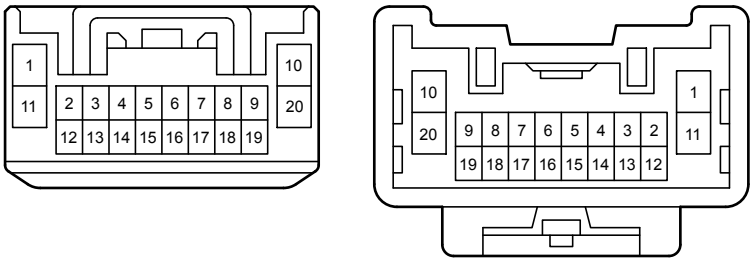


FE5

White

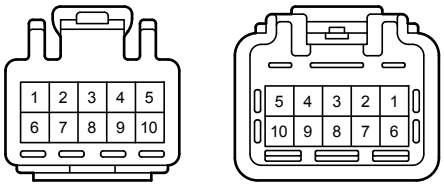


FE8

White

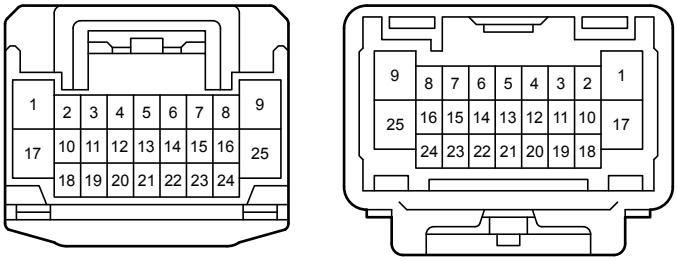


Fg2

White

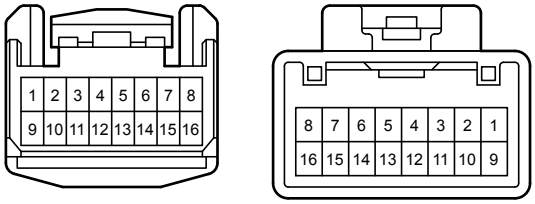


Fg3

Black White

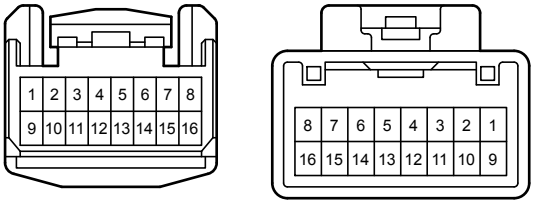


GE1

White

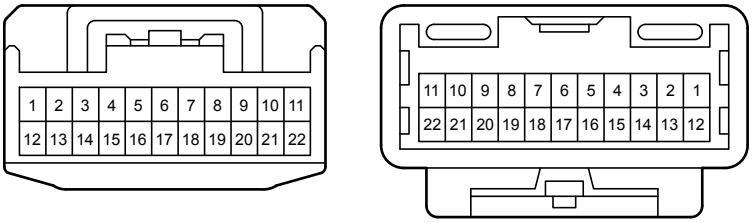


IE2

Blue

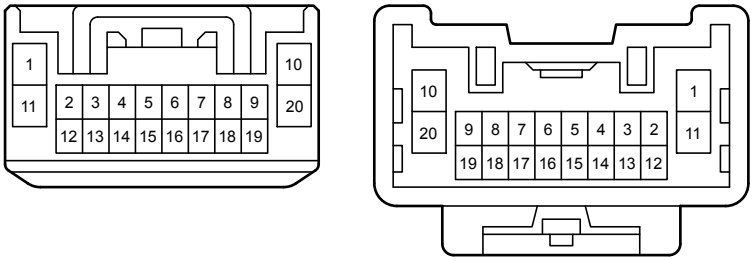


IE3

White

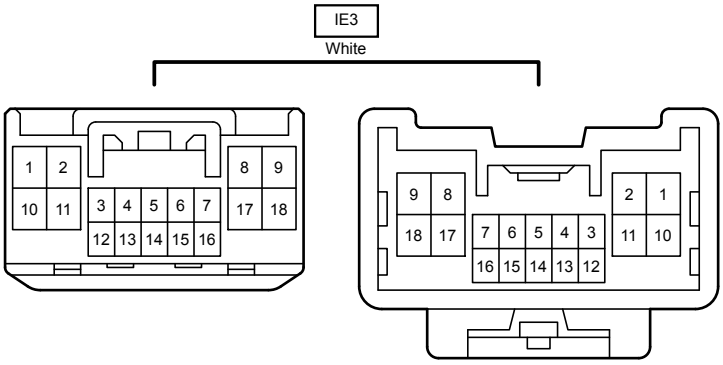


IE5


Blue

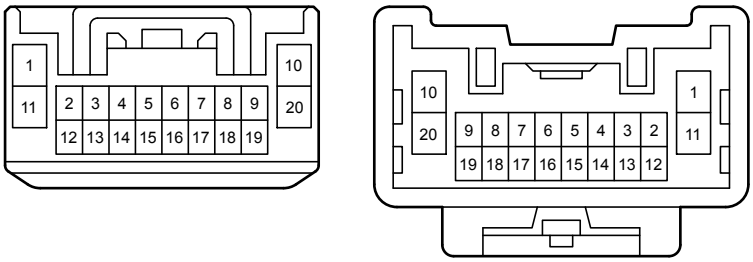


IE6
White

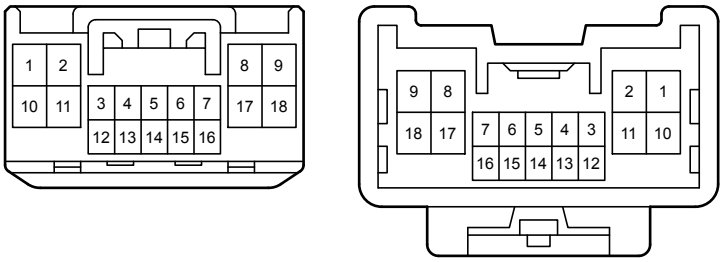


IE8
White

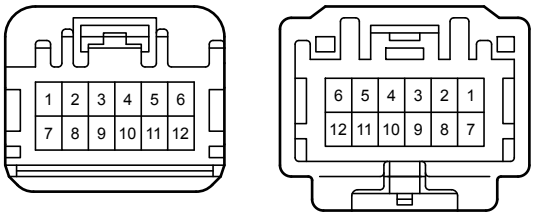


Ip1
White

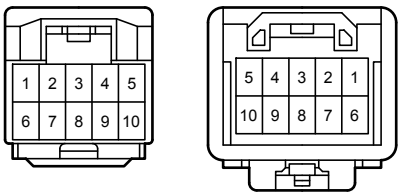


JK1
White

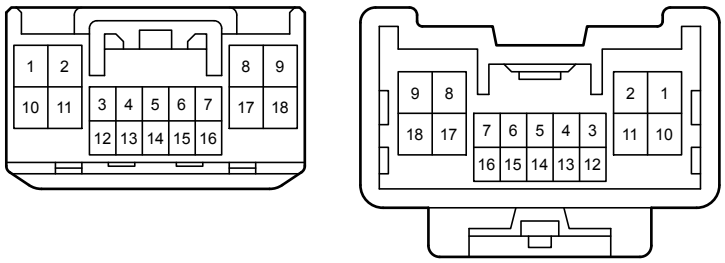



JL1
White

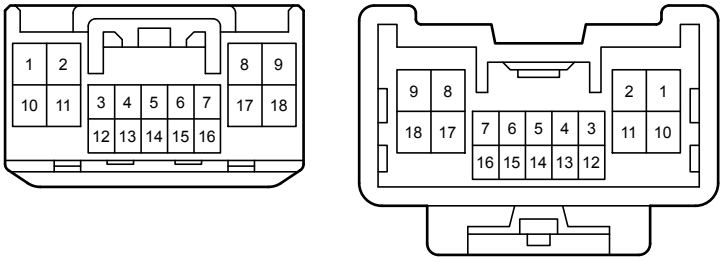



Kc1
White

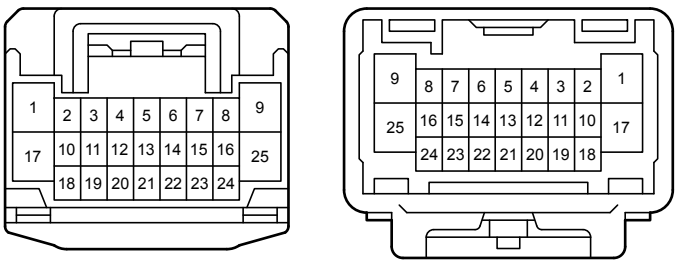

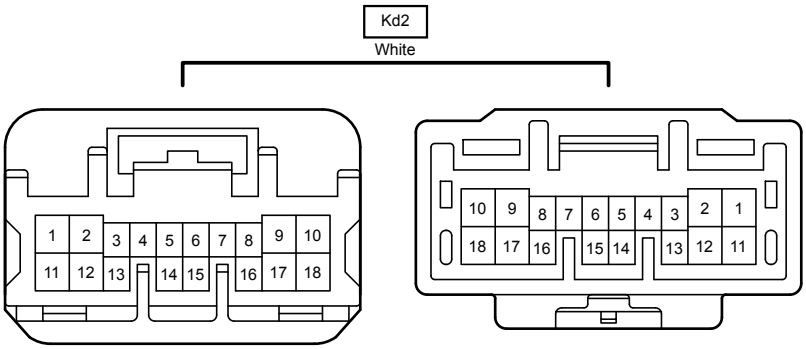

Kd2
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11

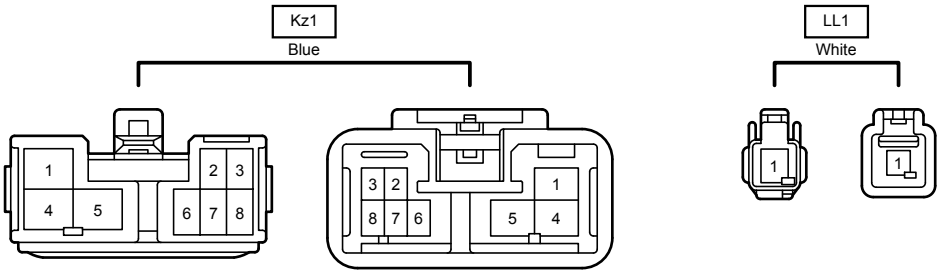
Kz1
Blue
1 2 3 4 5 6 7 8
3 2 1 8 7 6 5 4
LL1
White
1
1

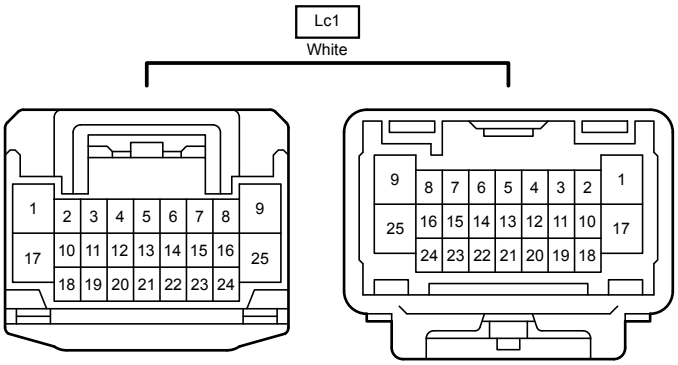

Lc1
White
1 2 3 4 5 6 7 8 9 17 10 11 12 13 14 15 16 25 18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1 25 16 15 14 13 12 11 10 17 24 23 22 21 20 19 18

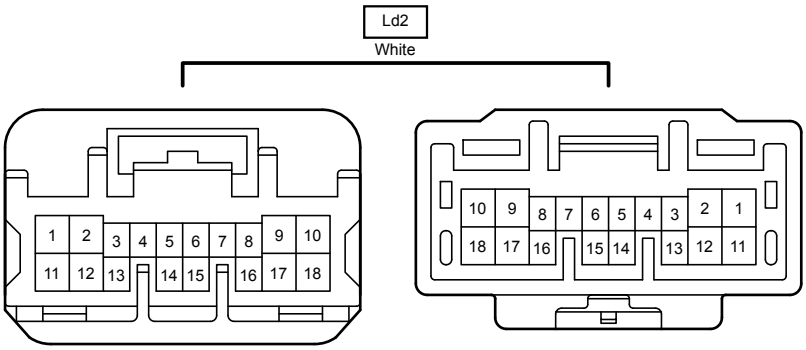
Ld2
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11


MK2
Gray

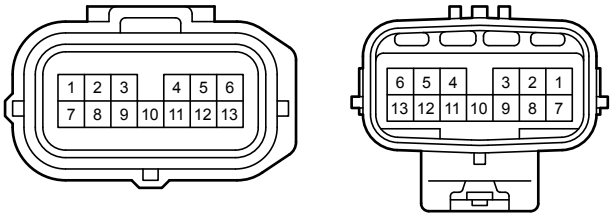


NK1
White

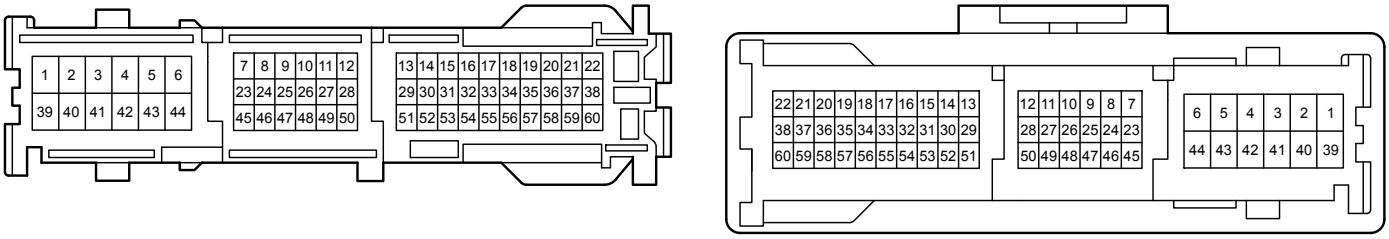


NK2
Black White

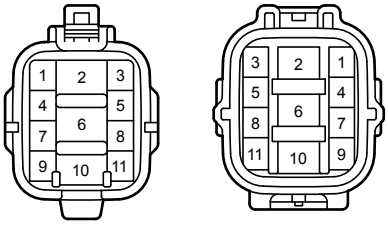


Nf1
White

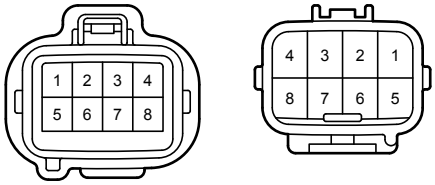


OK1
Black

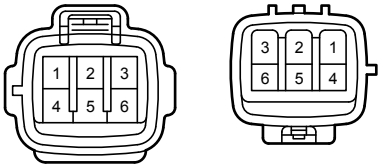


RE1
White

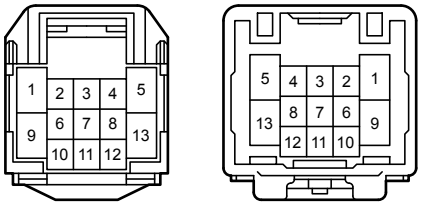


RE3
Blue

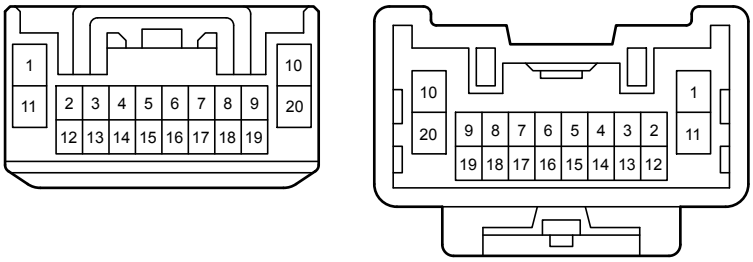


SK3
Blue

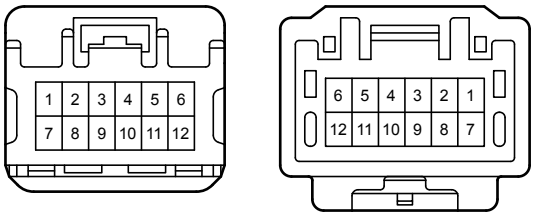


TL1
White

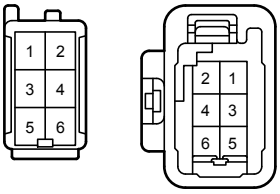


VE5
White

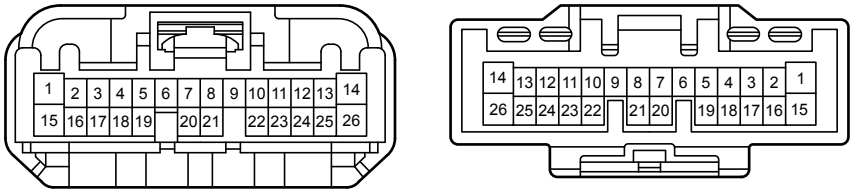


VE6
Gray

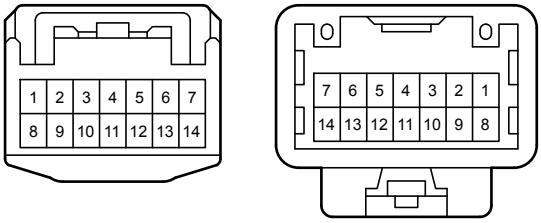


VE7
White

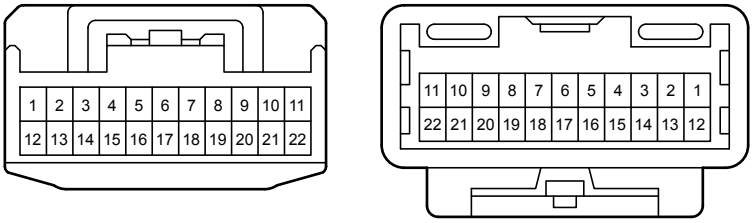


WK1
White

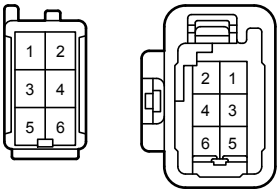


YL1
Blue

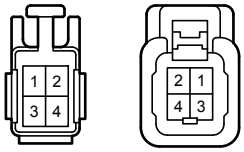

gF1
Black

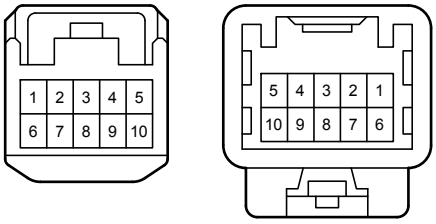

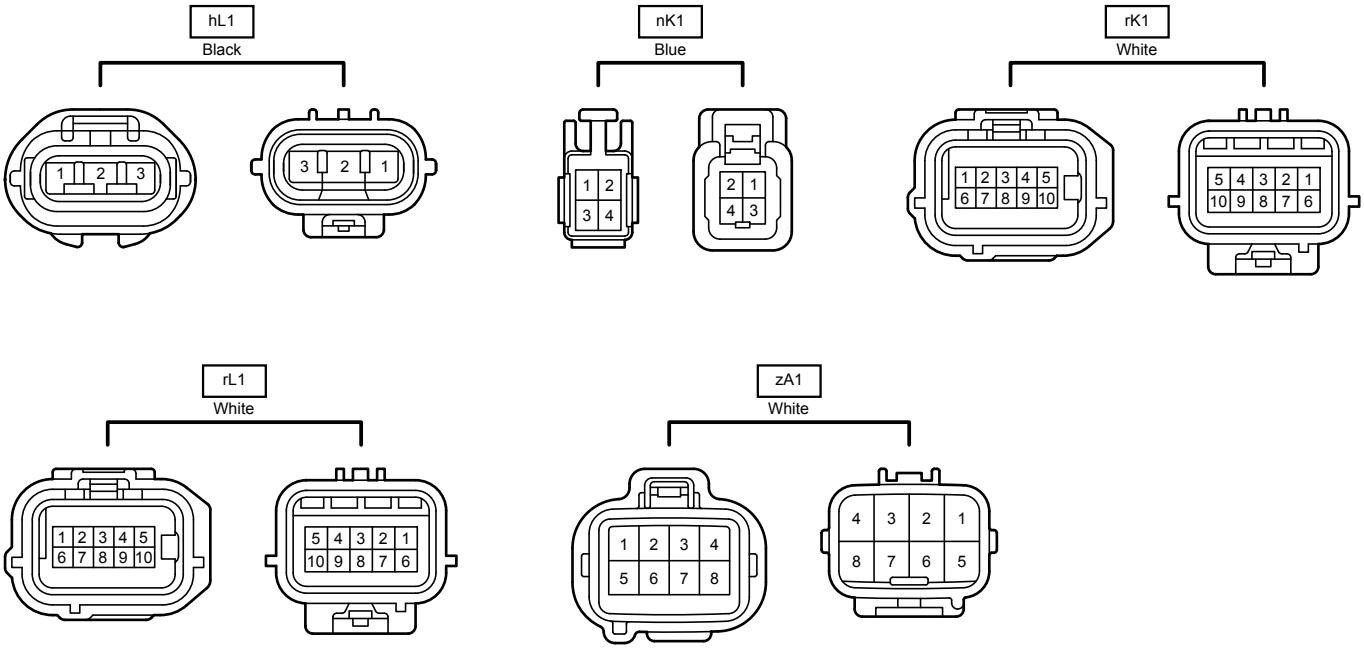
hL1
Black
1 2 3
3 2 1
nK1
Blue
1 2
3 4
2 1
4 3
rK1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
rL1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zA1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5