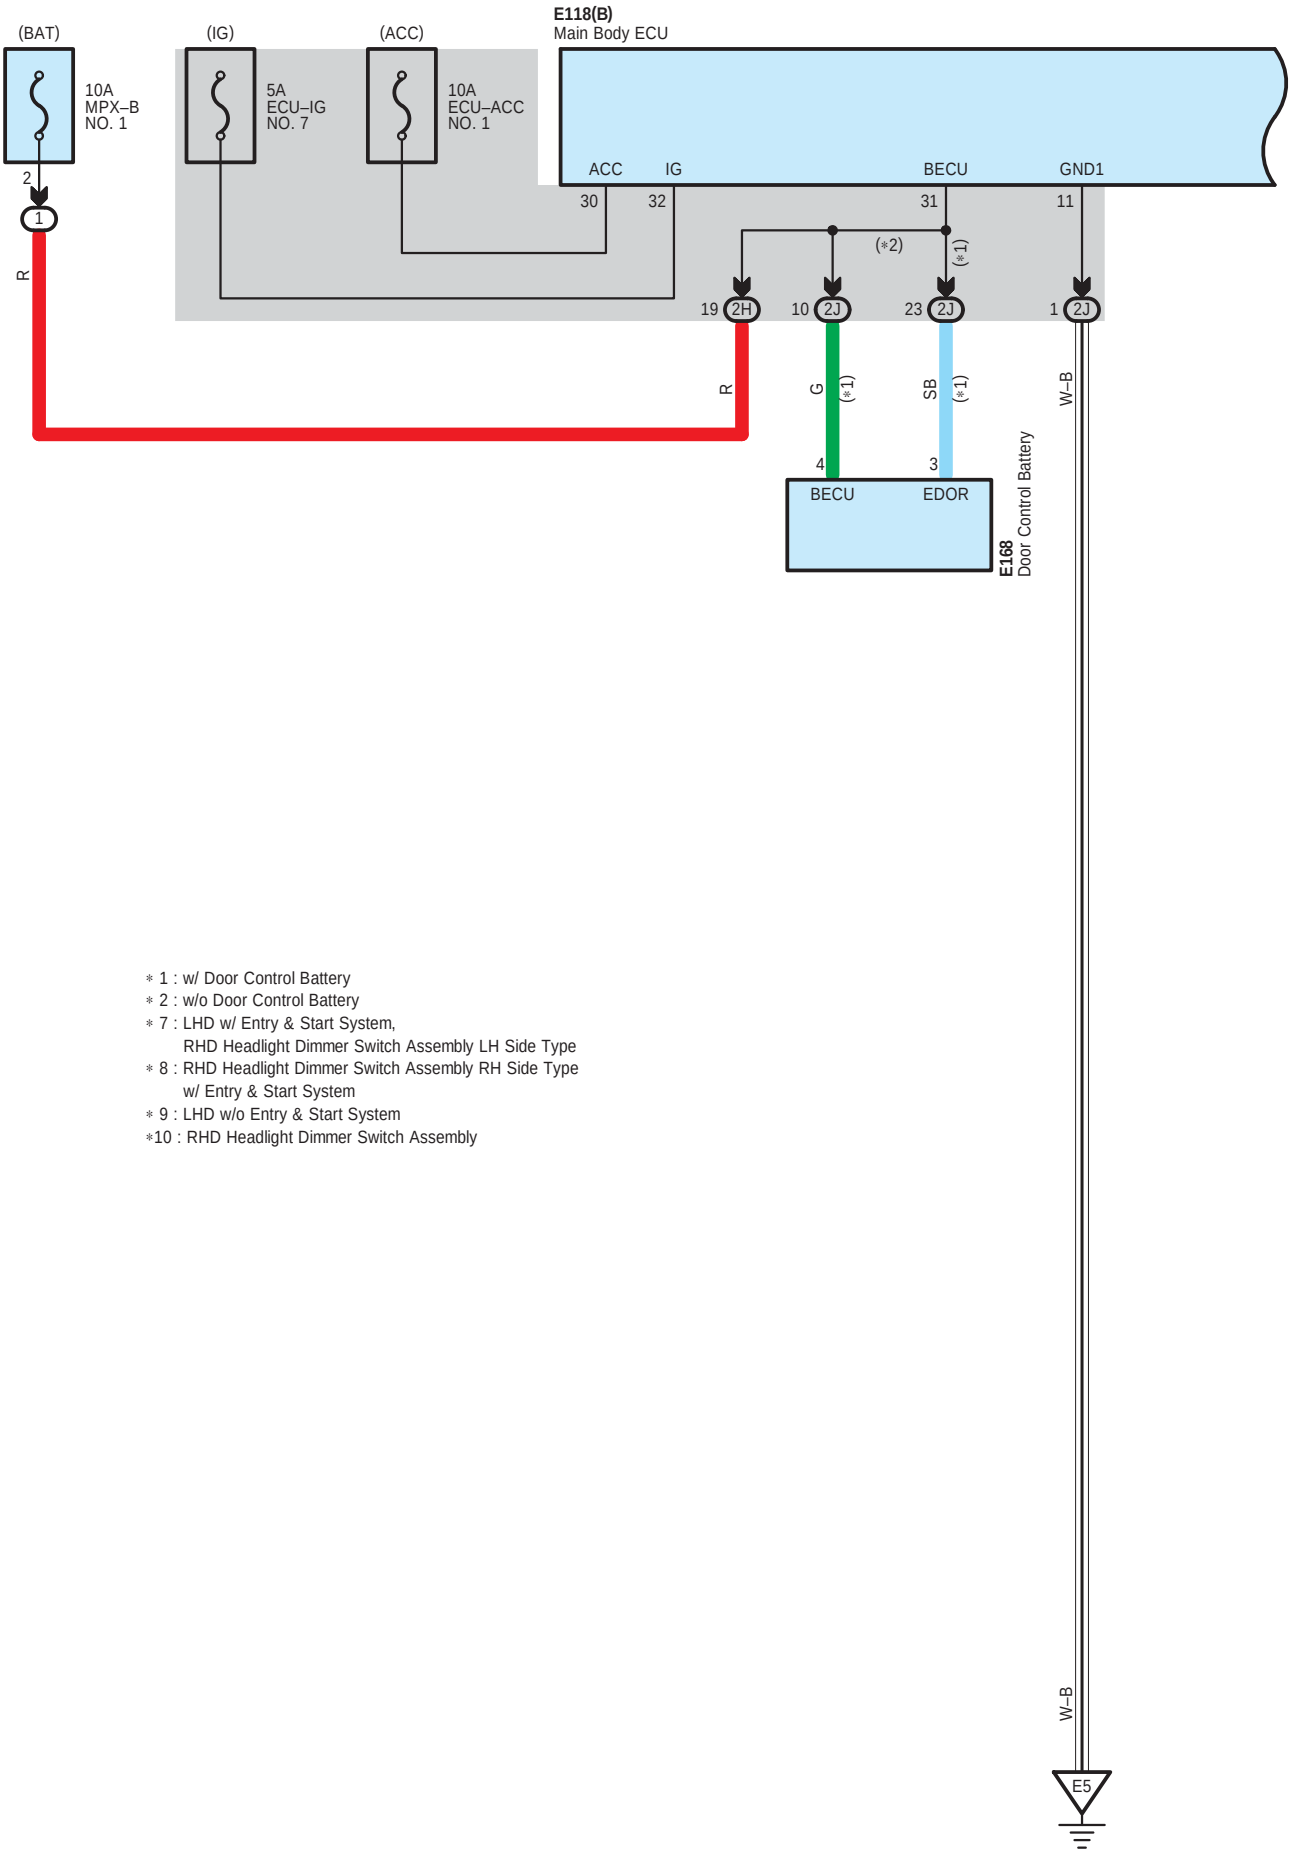
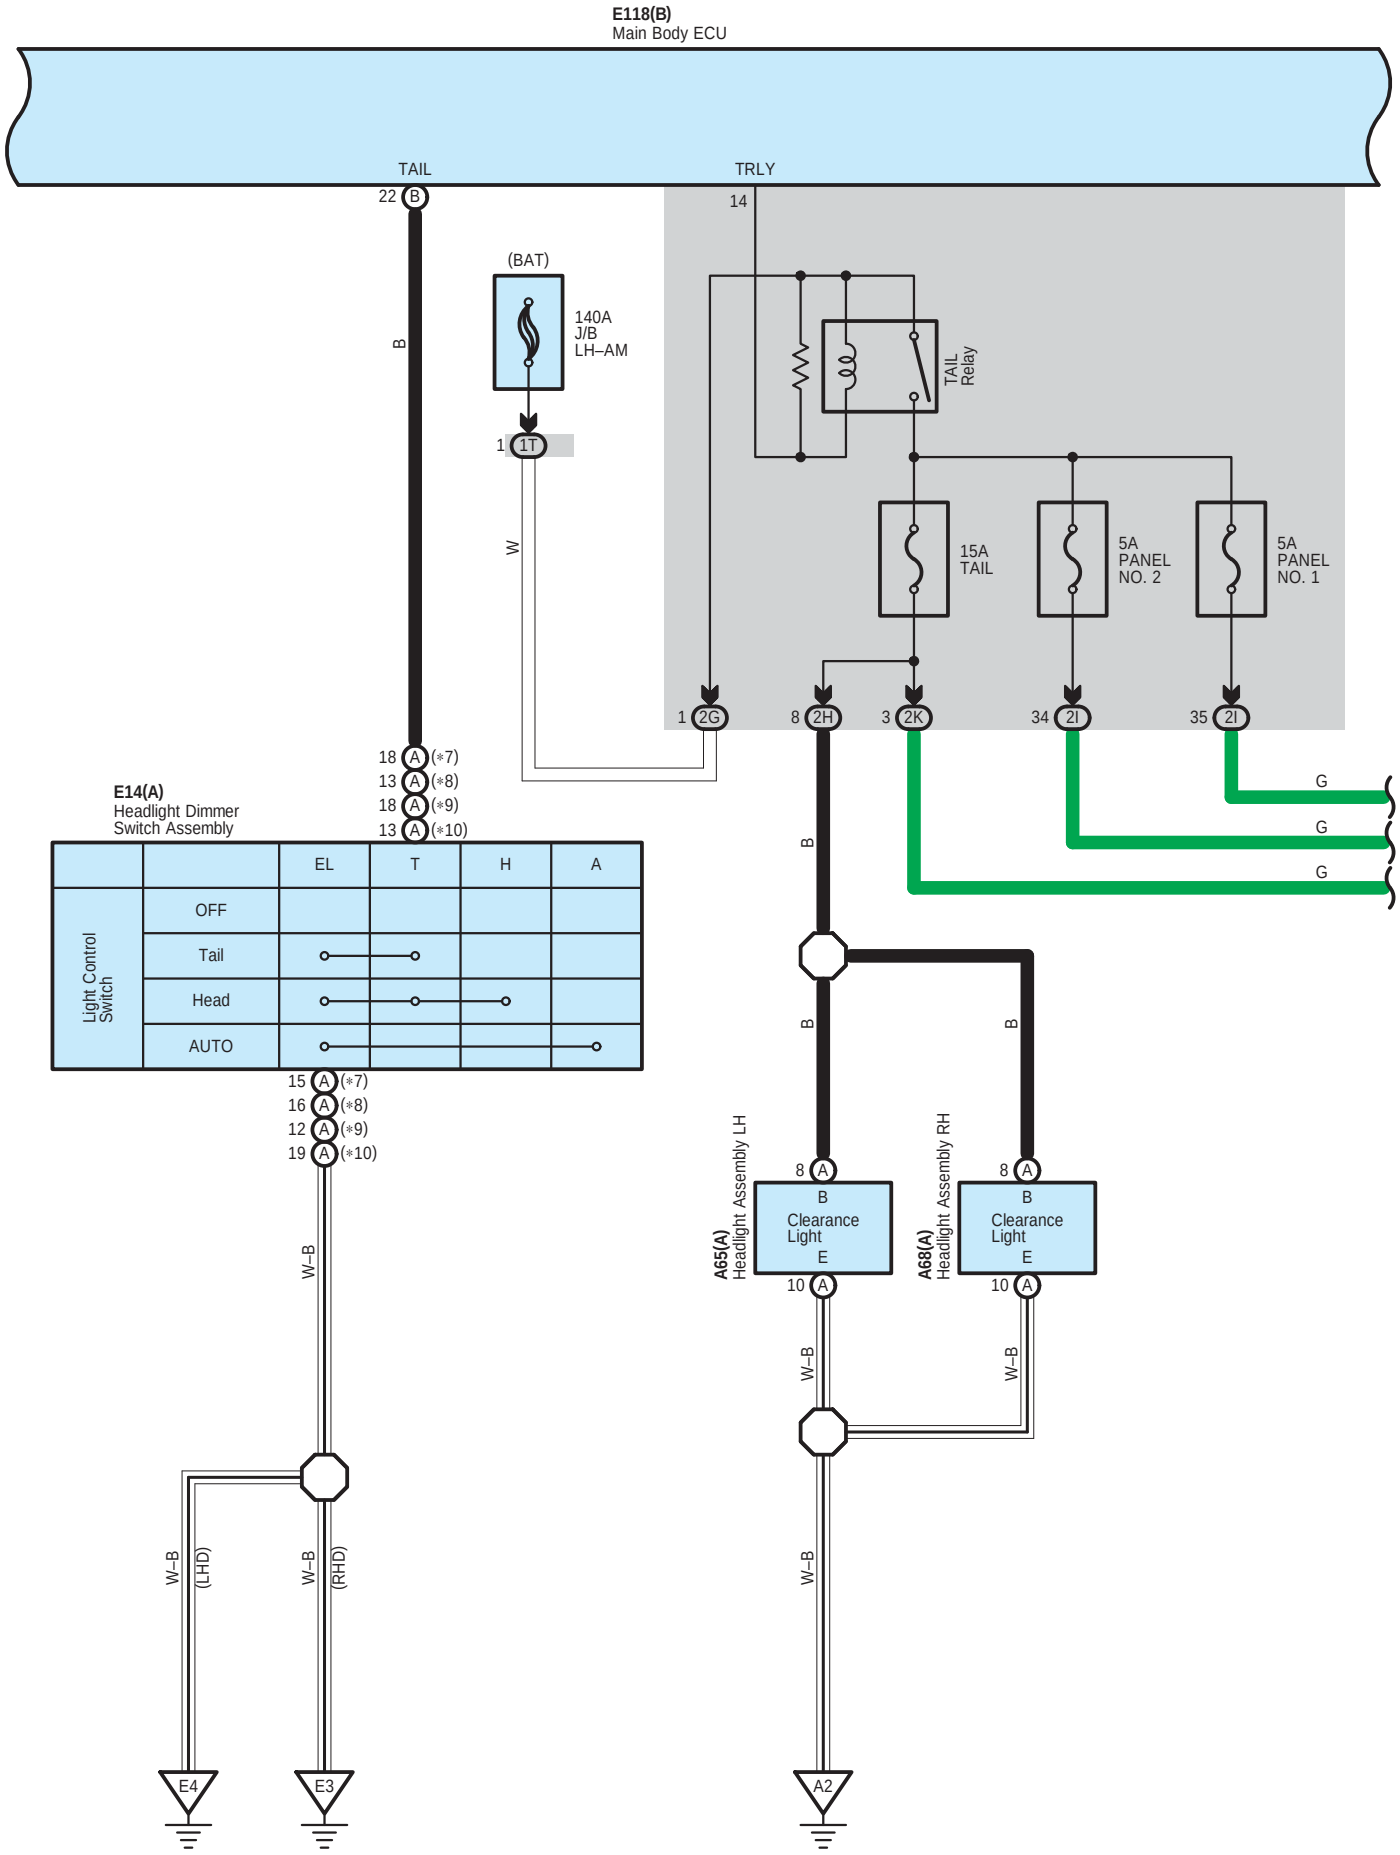
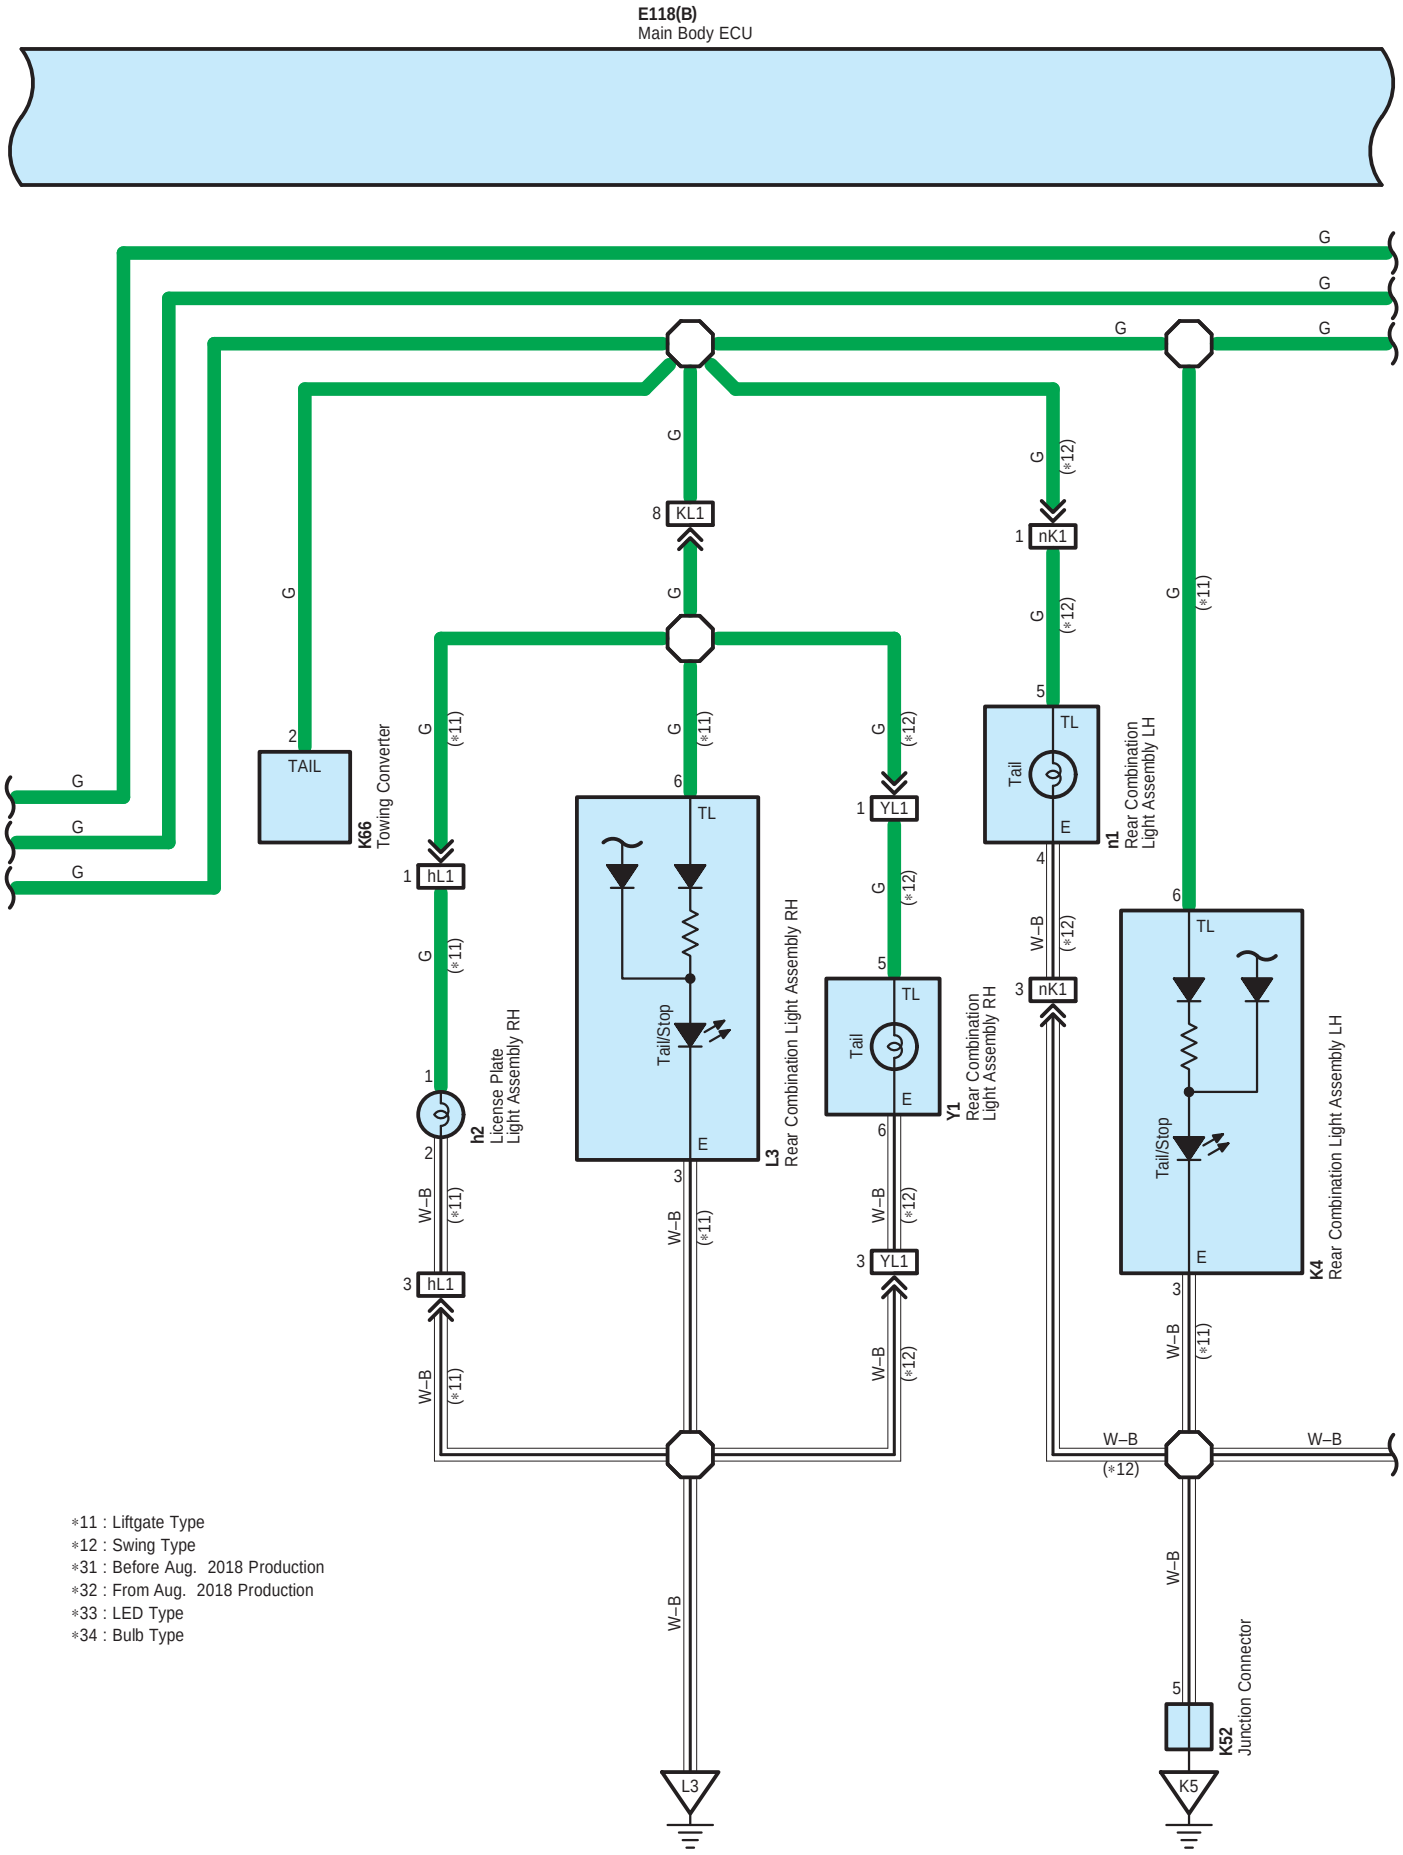
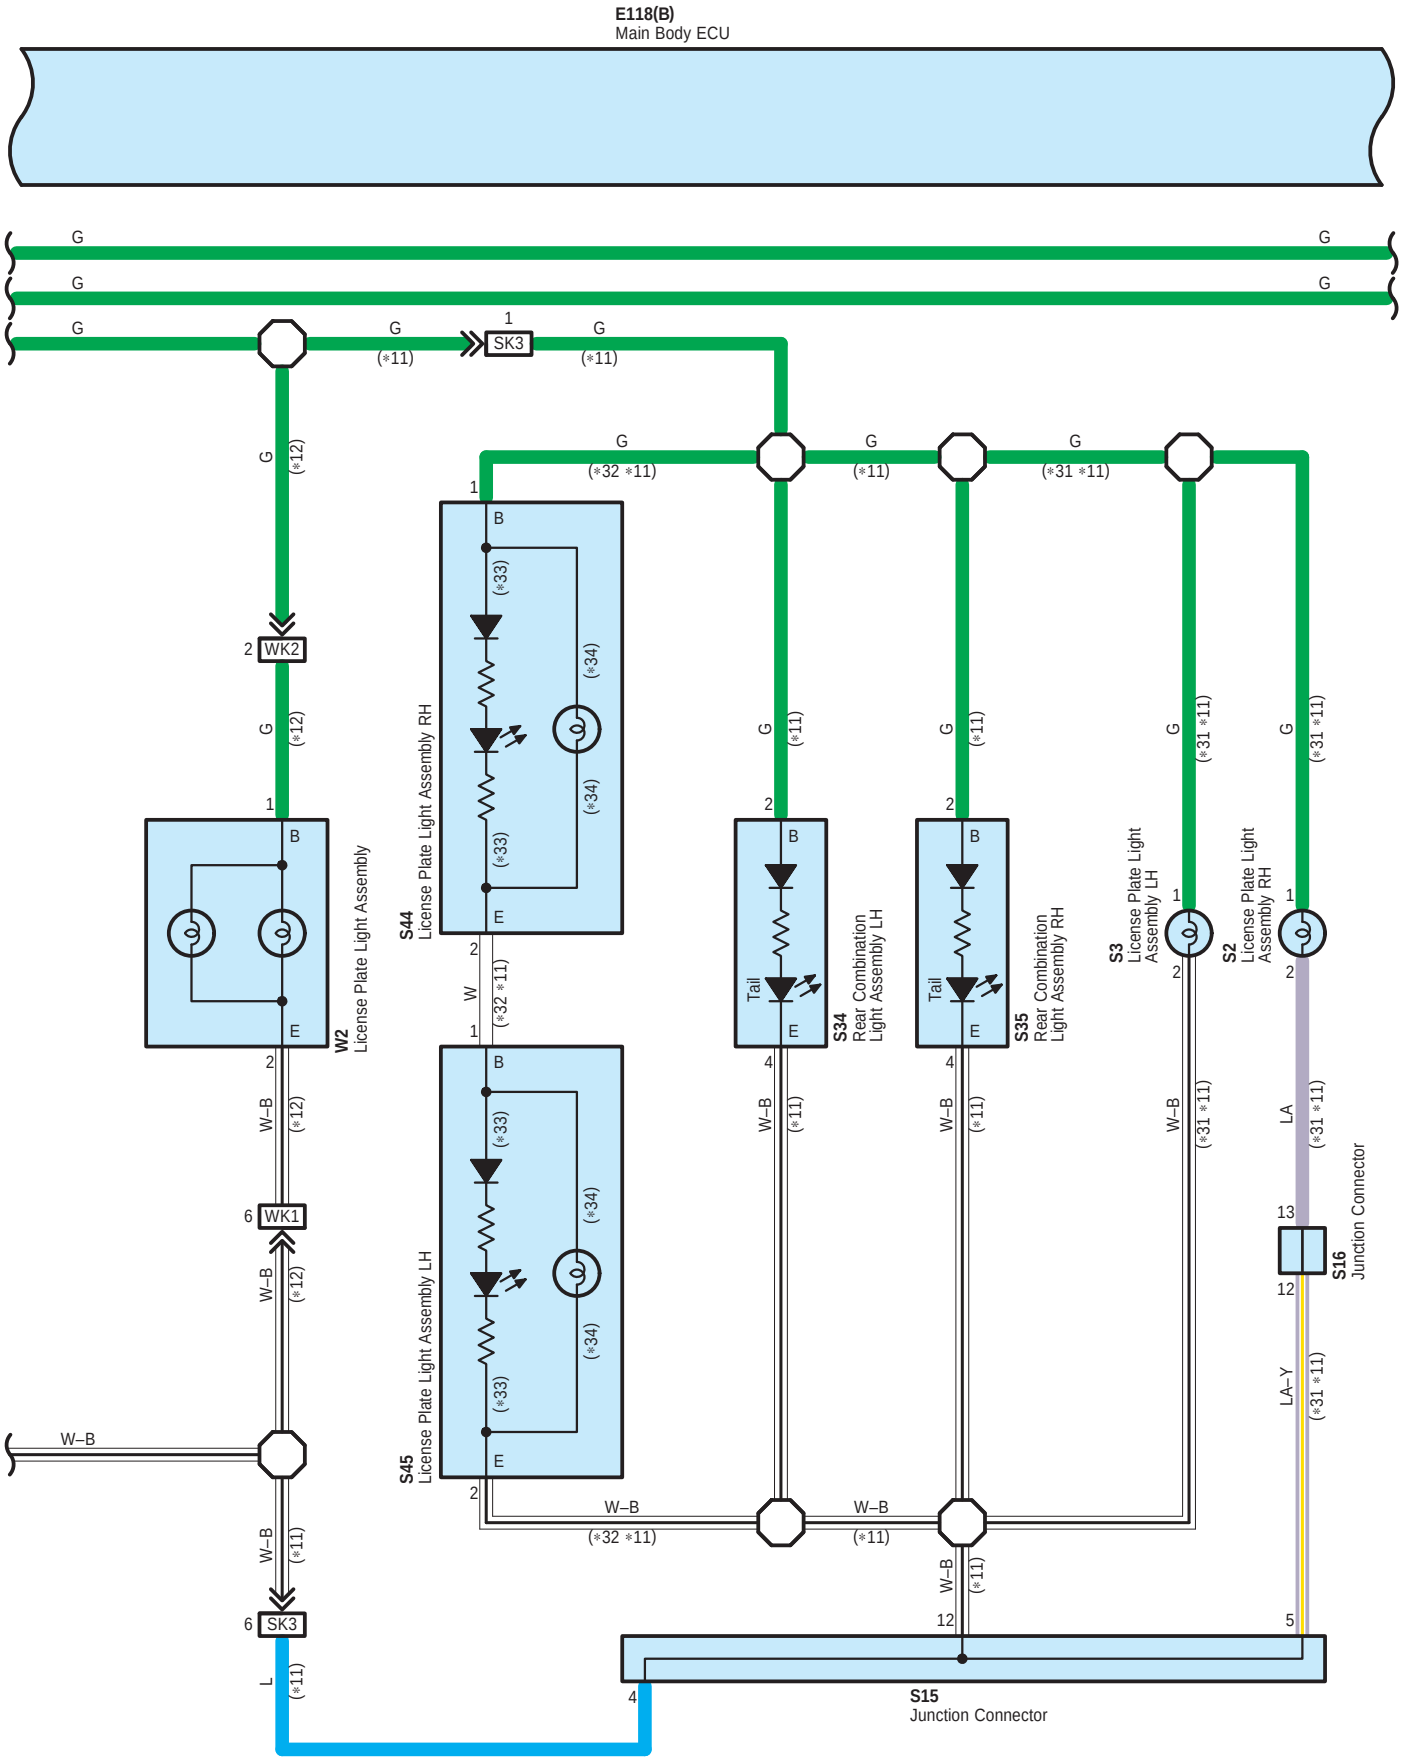
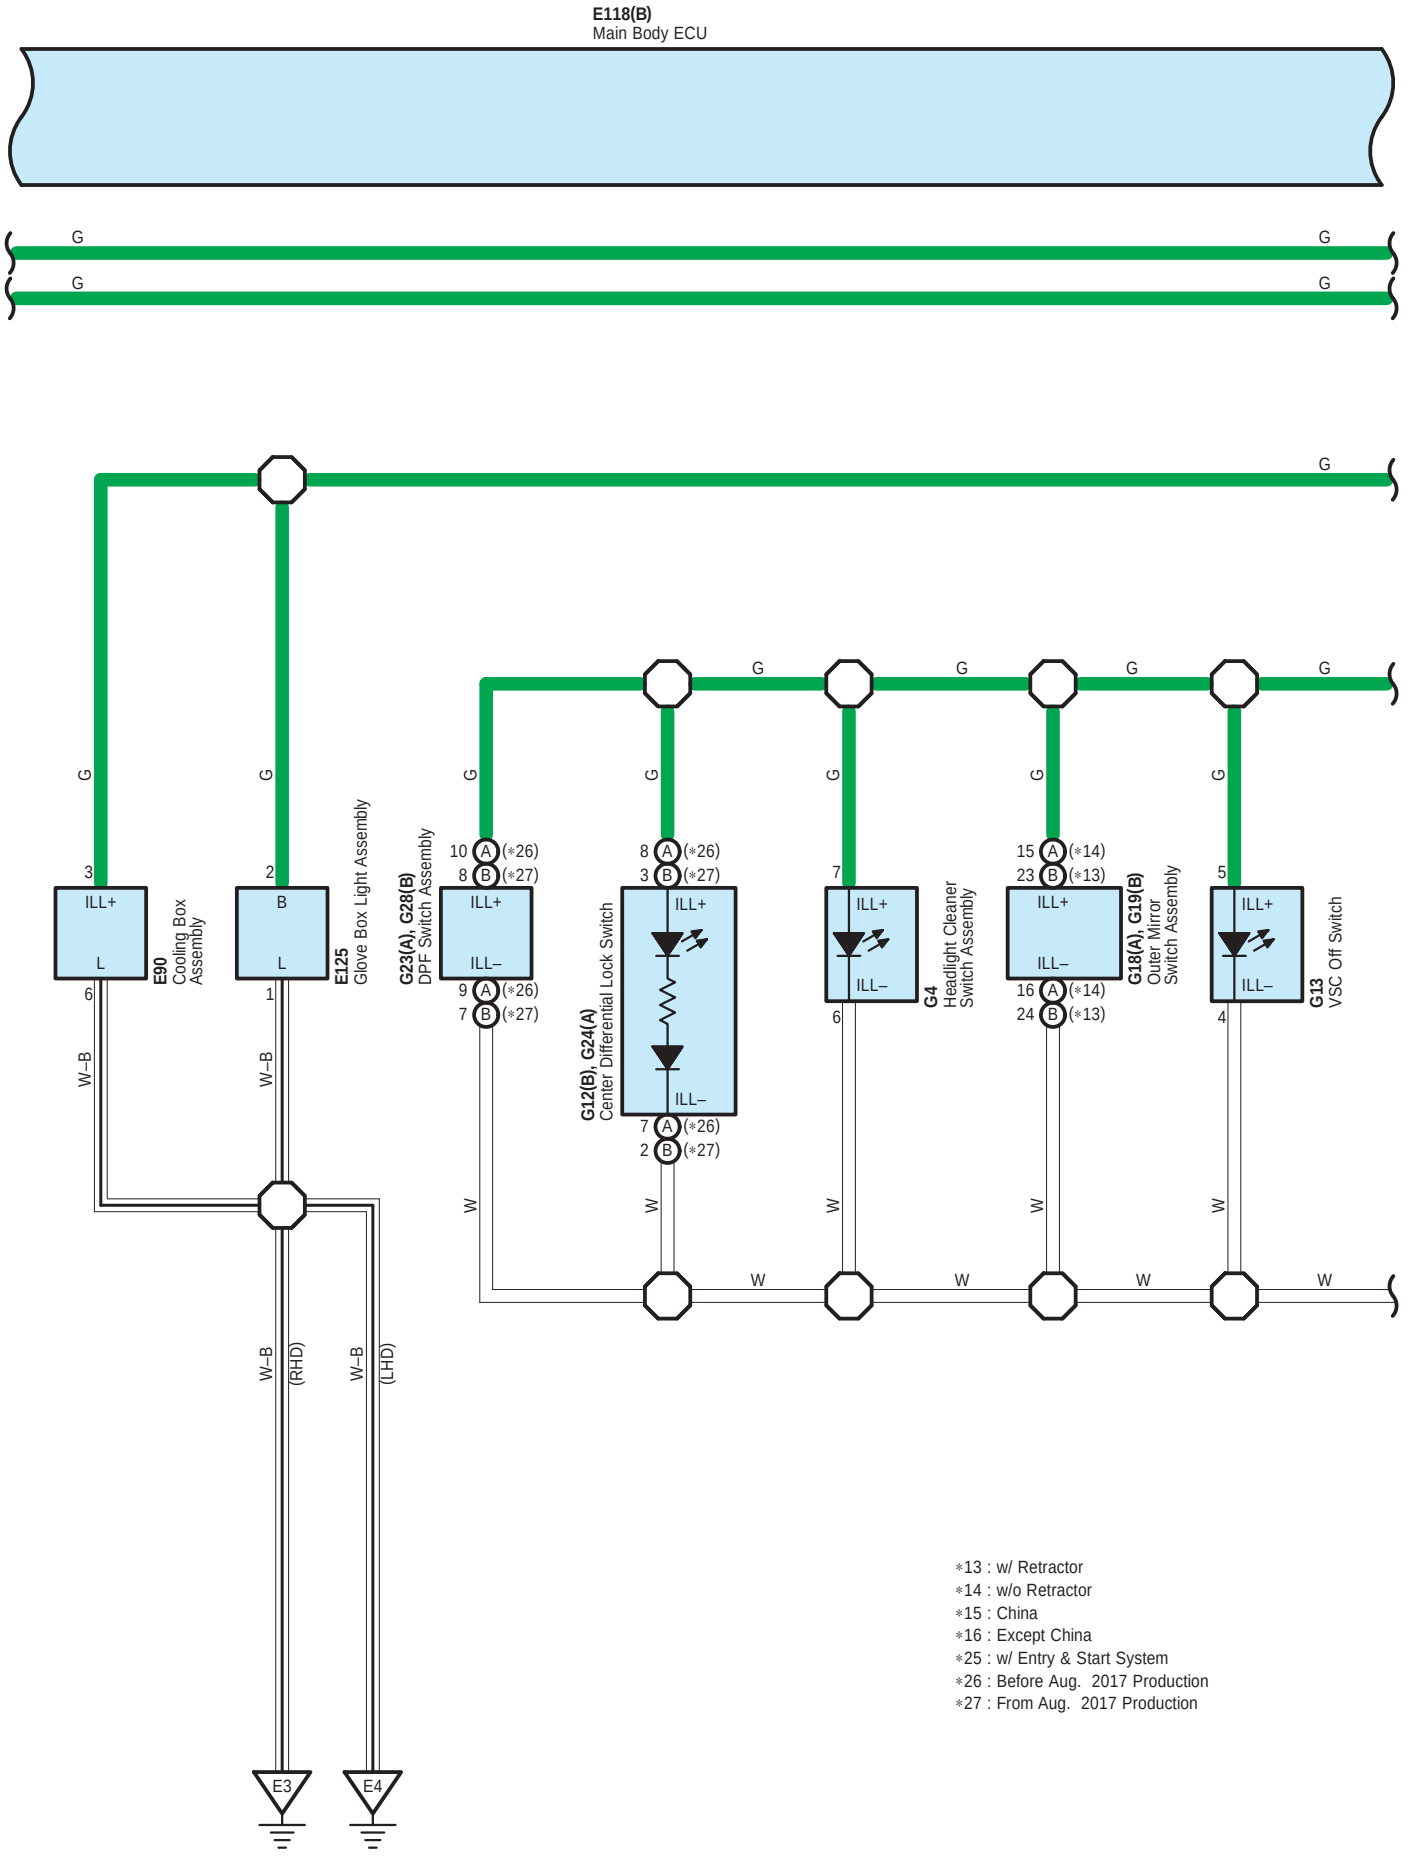



∗ 1 : w/ Door Control Battery
∗ 2 : w/o Door Control Battery
∗ 7 : LHD w/ Entry & Start System,
RHD Headlight Dimmer Switch Assembly LH Side Type
∗ 8 : RHD Headlight Dimmer Switch Assembly RH Side Type
w/ Entry & Start System
∗ 9 : LHD w/o Entry & Start System
∗10 : RHD Headlight Dimmer Switch Assembly



E118(B)
Main Body ECU
TAIL
TRLY
22 B
14
(BAT)
140A
J/B
LH–AM
B
1 1T
W
TAIL
Relay
15A
TAIL
5A
PANEL
NO. 2
5A
PANEL
NO. 1
1 2G
8 2H
3 2K
34 2I
35 2I
G
G
G
B
18 A (*7)
13 A (*8)
18 A (*9)
13 A (*10)
E14(A)
Headlight Dimmer
Switch Assembly
EL
T
H
A
Light Control
Switch
OFF
Tail
Head
AUTO
15 A (*7)
16 A (*8)
12 A (*9)
19 A (*10)
W–B
W–B
(LHD)
W–B
(RHD)
E4
E3
8 A
10 A
A65(A)
Headlight Assembly LH
A68(A)
Headlight Assembly RH
B
Clearance
Light
E
W–B
W–B
W–B
A2


E118(B)
Main Body ECU
G
G
G



E118(B)
Main Body ECU
G
(*11)
SK3
(*12)
WK2
(*32 *11)
(*31 *11)
B
(*33)
(*34)
E
W2
License Plate Light Assembly
S44
License Plate Light Assembly RH
S45
License Plate Light Assembly LH
Tail
S34
Rear Combination Light Assembly LH
S35
Rear Combination Light Assembly RH
S3
License Plate Light Assembly LH
S2
License Plate Light Assembly RH
W–B
W
WK1
L
LA
LA–Y
S16
Junction Connector
S15
Junction Connector


E118(B)
Main Body ECU
G
G
G
G
G
G
G
G
G
G
G
G
G
G
G
3
ILL+
L
E90
Cooling Box
Assembly
6
W–B
2
B
L
E125
Glove Box Light Assembly
1
W–B
W–B
(RHD)
W–B
(LHD)
E3
E4
G23(A), G28(B)
DPF Switch Assembly
10 A (*26)
8 B (*27)
ILL+
ILL–
9 A (*26)
7 B (*27)
G12(B), G24(A)
Center Differential Lock Switch
8 A (*26)
3 B (*27)
ILL+
ILL–
7 A (*26)
2 B (*27)
7
ILL+
ILL–
6
G4
Headlight Cleaner
Switch Assembly
15 A (*14)
23 B (*13)
ILL+
ILL–
16 A (*14)
24 B (*13)
G18(A), G19(B)
Outer Mirror
Switch Assembly
5
ILL+
ILL–
4
G13
VSC Off Switch
W
W
W
W
W
W
W
W
W
W
*13 : w/ Retractor
*14 : w/o Retractor
*15 : China
*16 : Except China
*25 : w/ Entry & Start System
*26 : Before Aug. 2017 Production
*27 : From Aug. 2017 Production

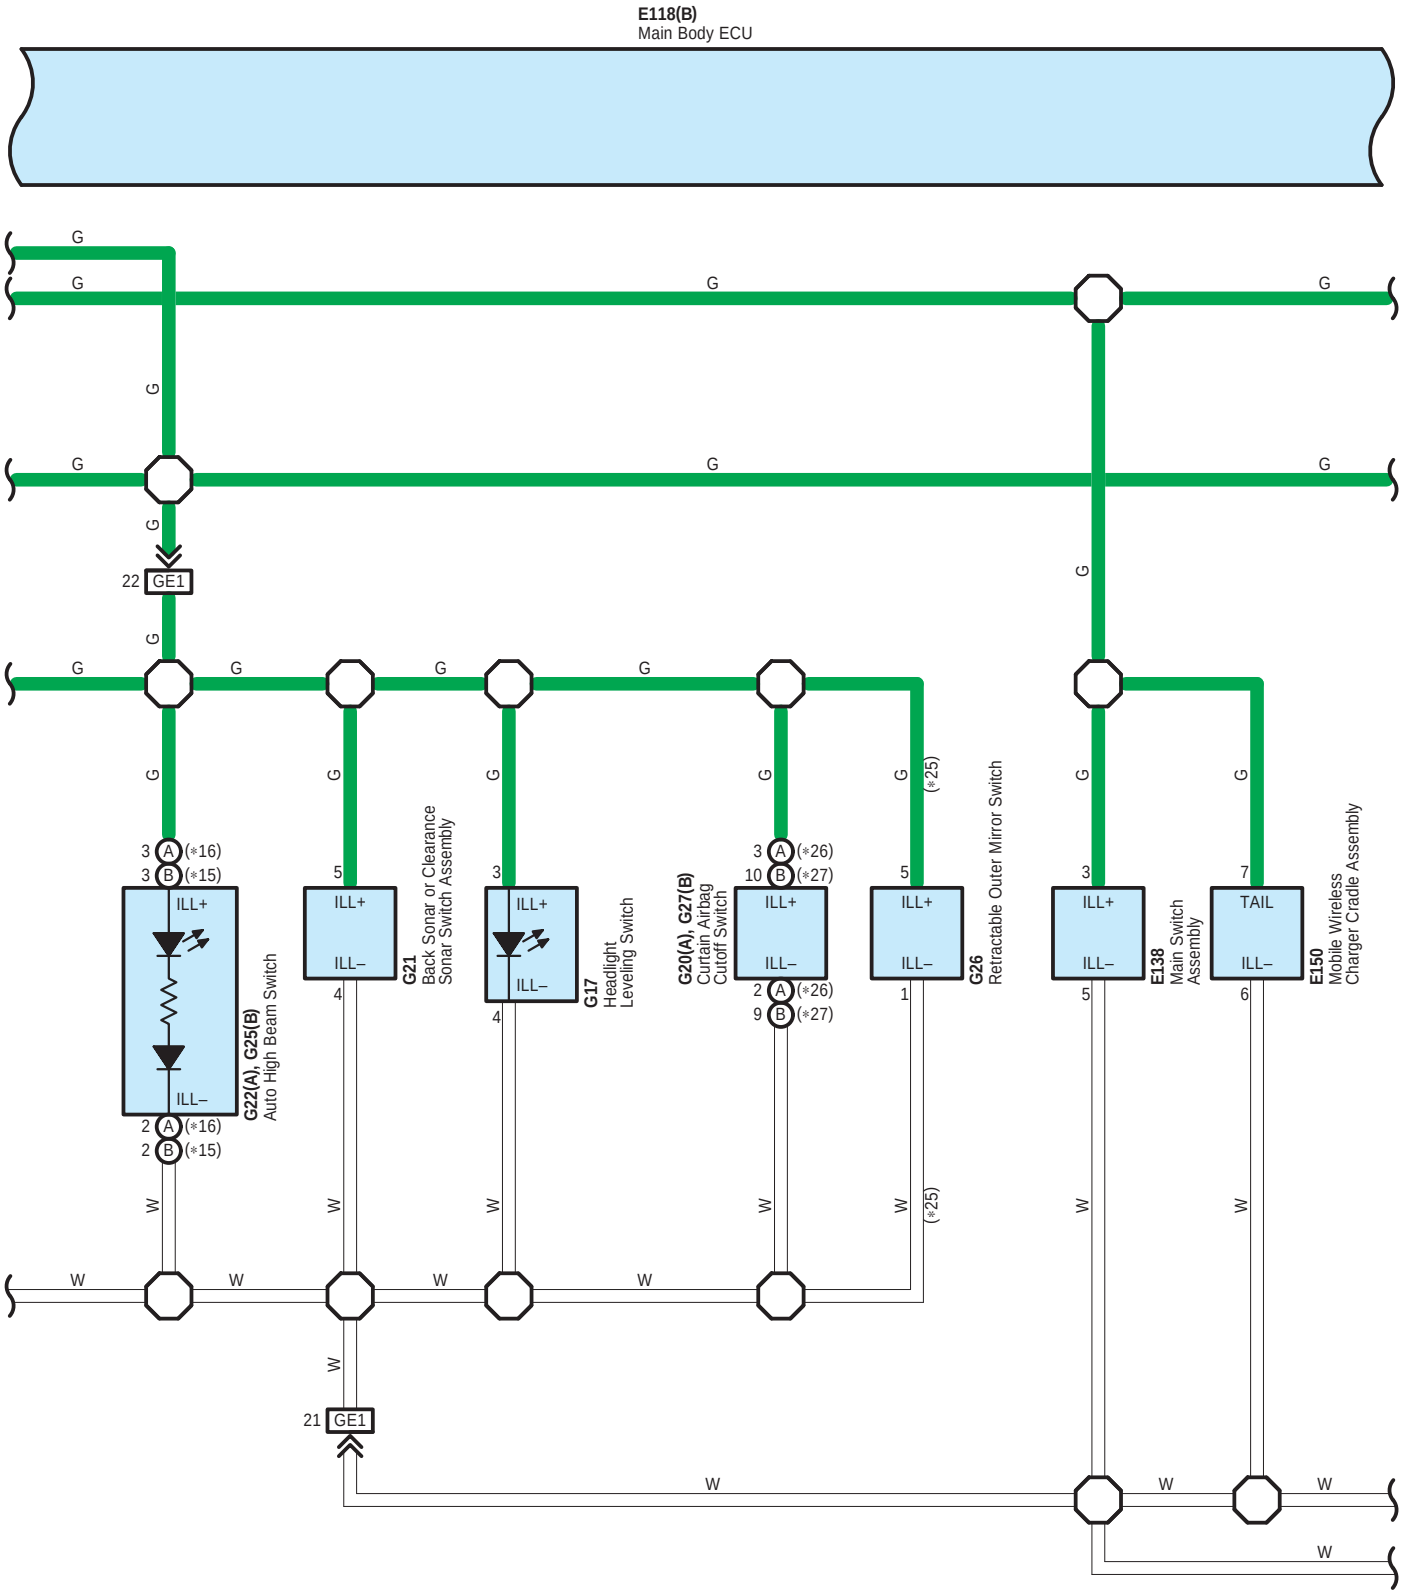
E118(B)
Main Body ECU
G
W
22 GE1
21 GE1
3 A (*16)
3 B (*15)
2 A (*16)
2 B (*15)
ILL+
ILL–
G22(A), G25(B)
Auto High Beam Switch
5
4
G21
Back Sonar or Clearance
Sonar Switch Assembly
3
4
G17
Headlight
Leveling Switch
3 A (*26)
10 B (*27)
2 A (*26)
9 B (*27)
G20(A), G27(B)
Curtain Airbag
Cutoff Switch
5
1
(*25)
G26
Retractable Outer Mirror Switch
3
5
E138
Main Switch
Assembly
7
6
TAIL
E150
Mobile Wireless
Charger Cradle Assembly

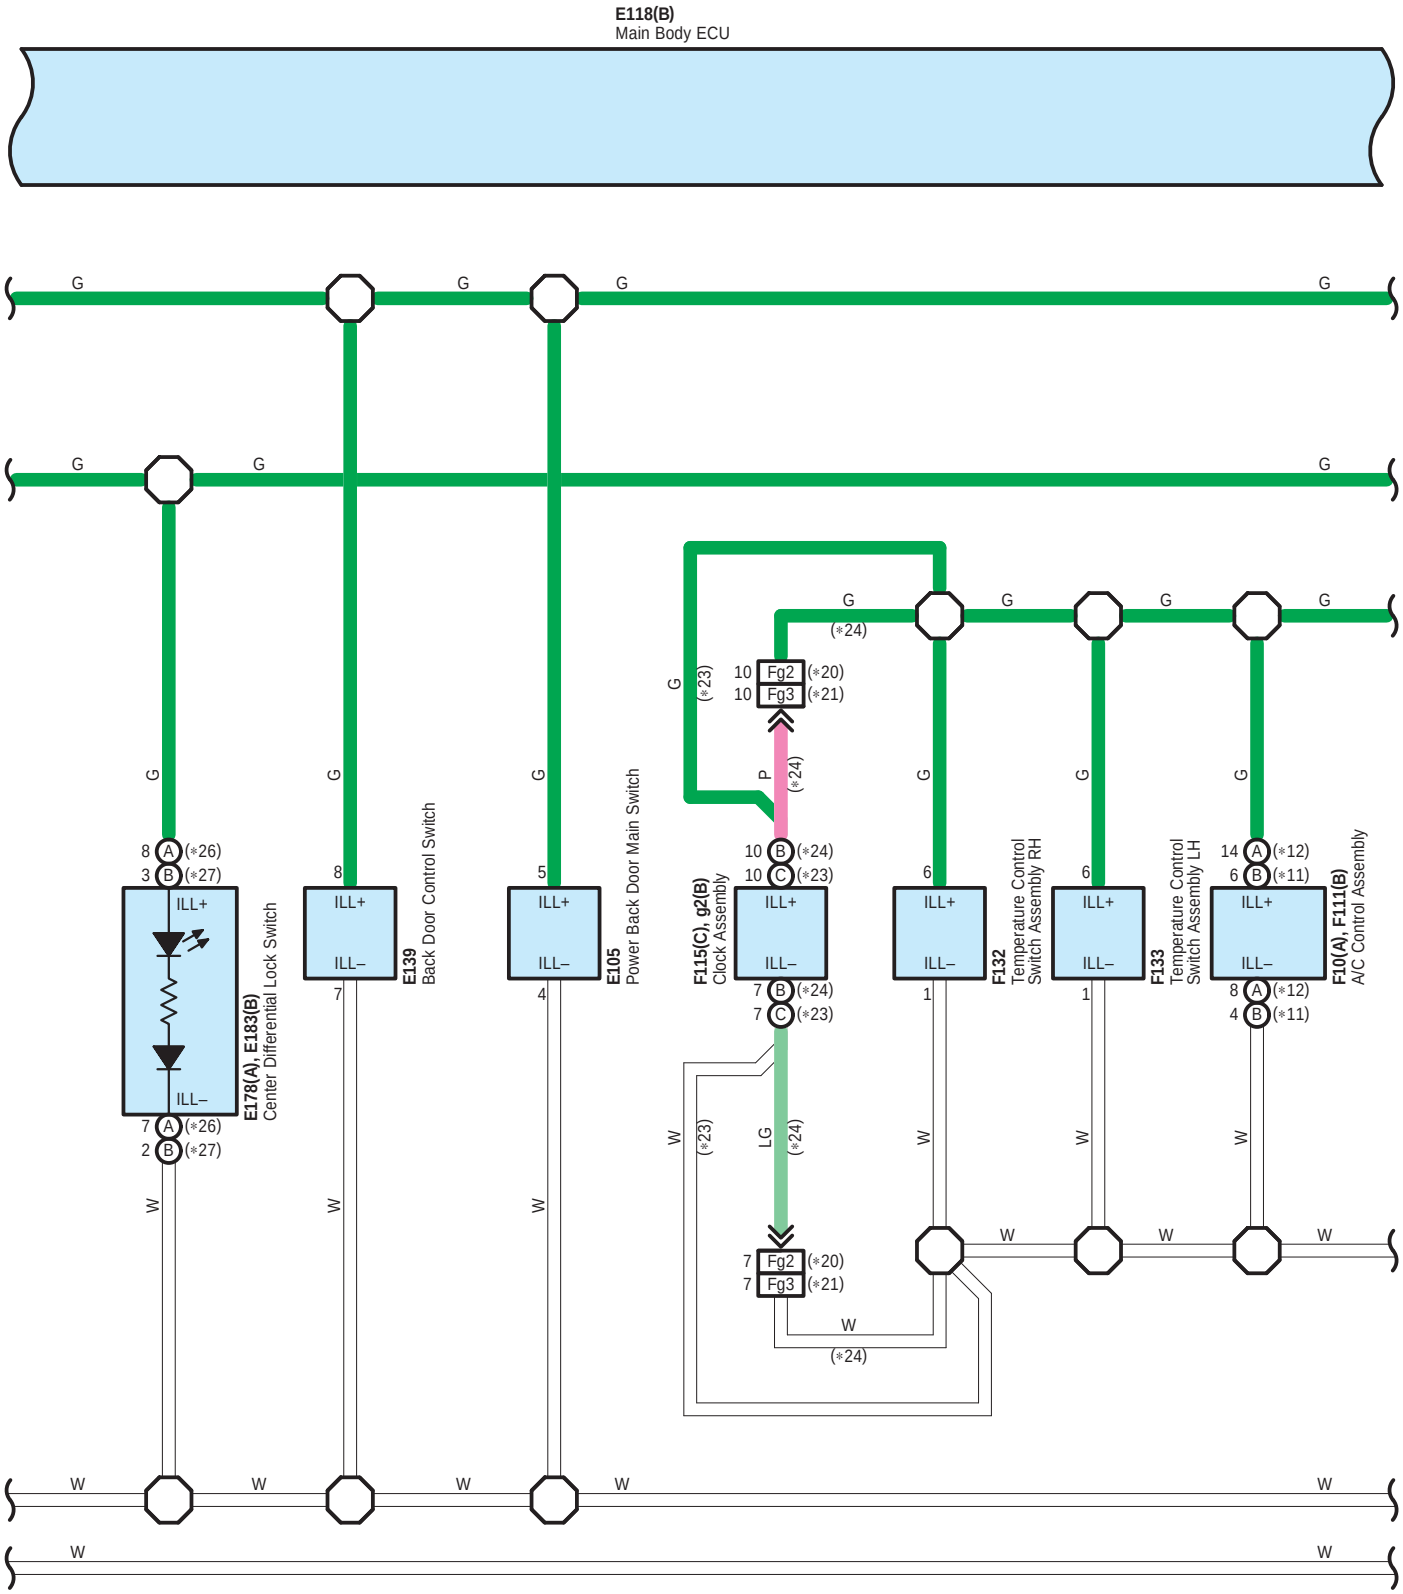


∗11 : Liftgate Type
∗12 : Swing Type
∗17 : Radio Receiver Assembly Type
∗18 : Radio & Display Receiver Assembly Type
∗19 : Multi–Media Module Receiver Assembly Type
∗20 : w/ A/C Control Assembly
∗21 : w/o A/C Control Assembly
∗23 : Europe
∗24 : Except Europe
∗26 : Before Aug. 2017 Production
∗27 : From Aug. 2017 Production

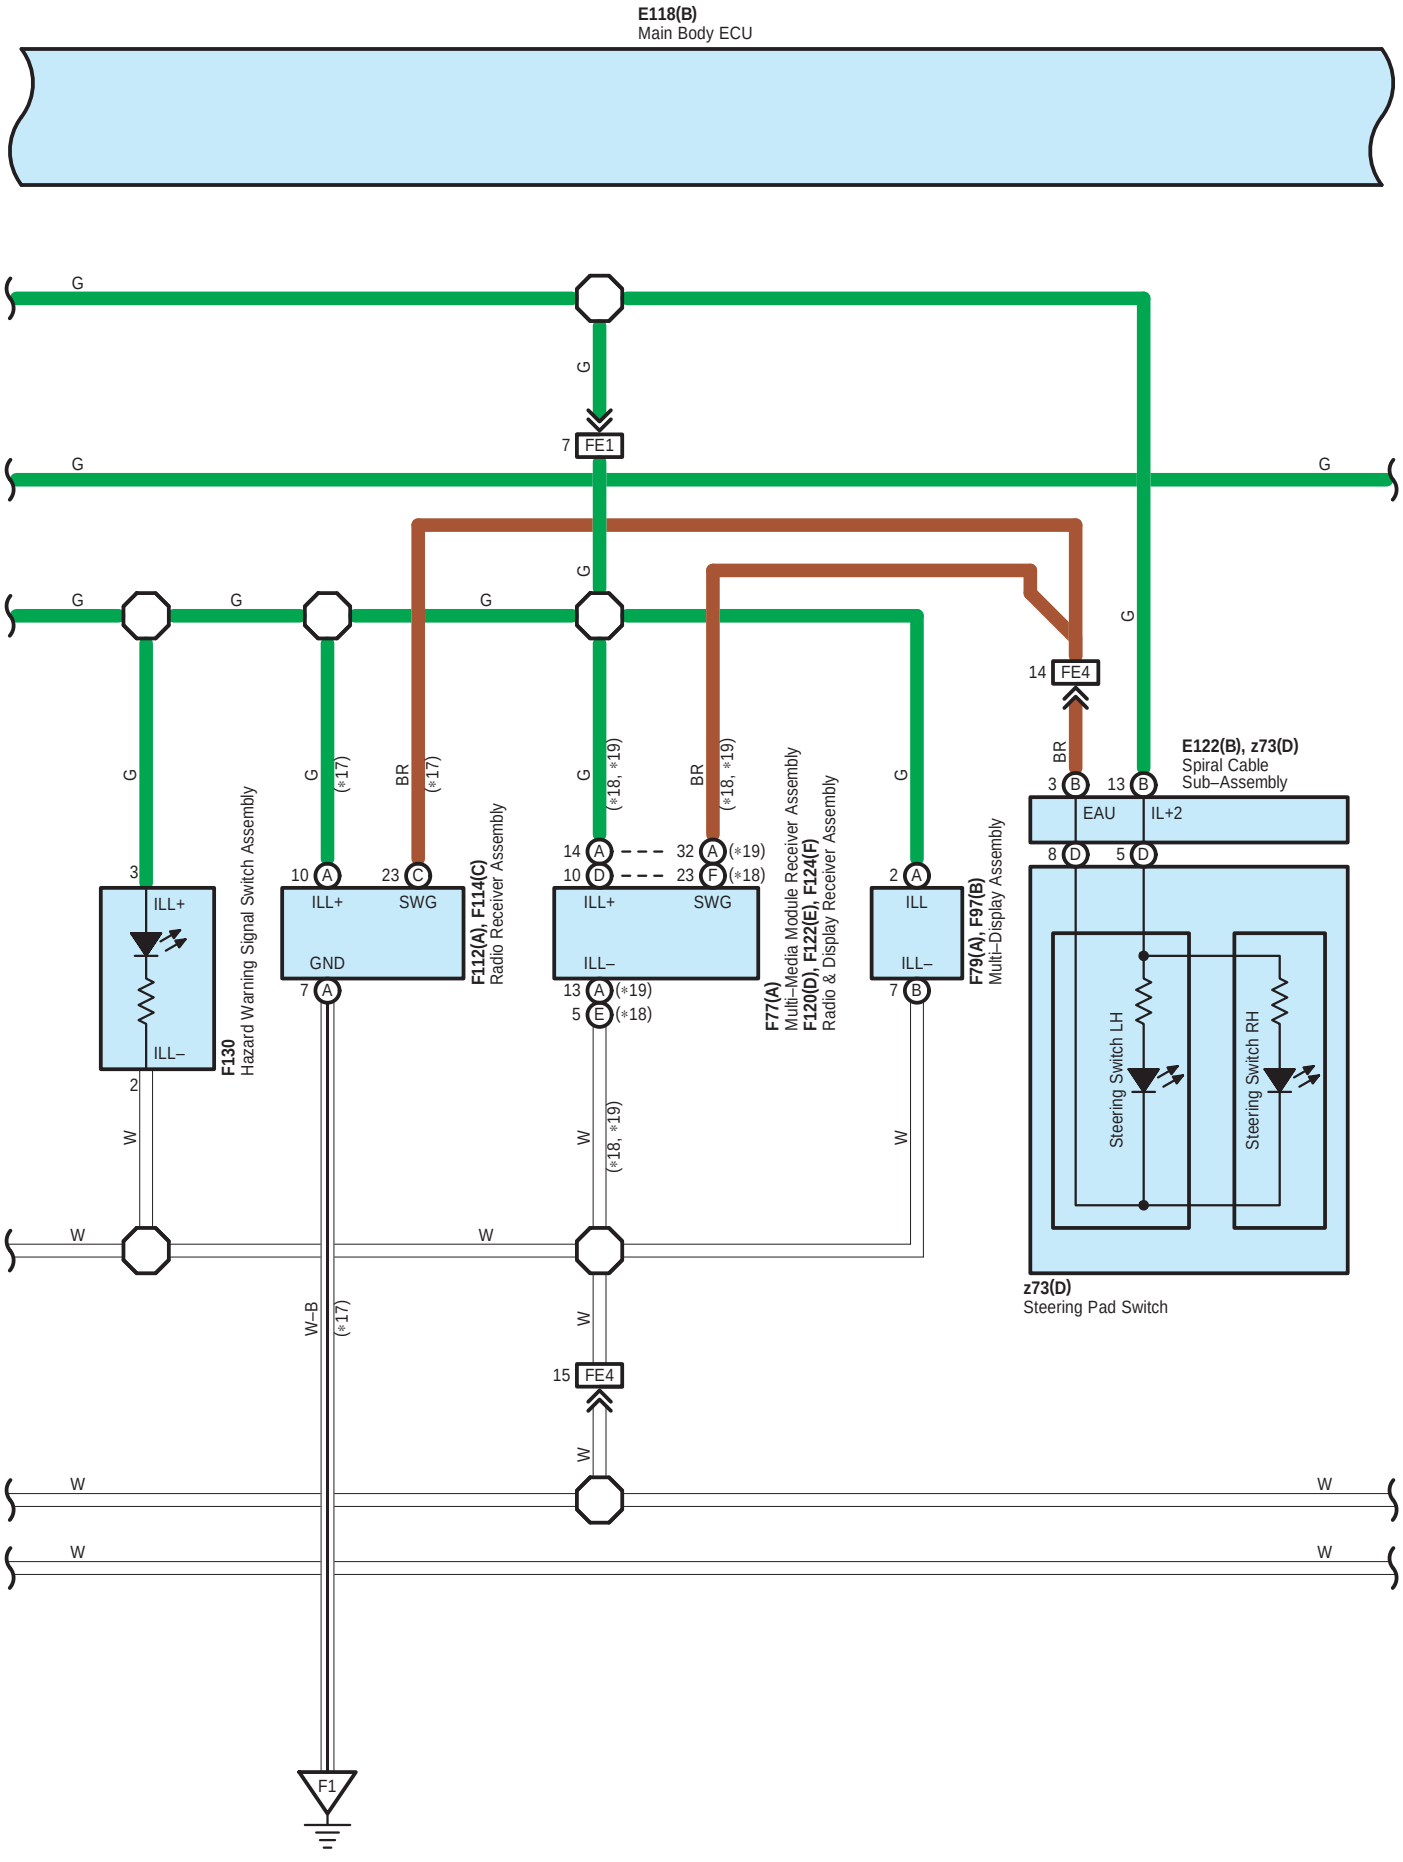

E118(B)
Main Body ECU
G
7 FE1
14 FE4
15 FE4
BR
W
W–B
(*17)
(*18, *19)
3 ILL+ ILL–
F130
Hazard Warning Signal Switch Assembly
10 A ILL+
23 C SWG
GND
7 A
F112(A), F114(C)
Radio Receiver Assembly
14 A
10 D
32 A (*19)
23 F (*18)
ILL+
SWG
ILL–
13 A (*19)
5 E (*18)
F77(A)
Multi–Media Module Receiver Assembly
F120(D), F122(E), F124(F)
Radio & Display Receiver Assembly
2 A ILL
7 B ILL–
F79(A), F97(B)
Multi–Display Assembly
E122(B), z73(D)
Spiral Cable
Sub–Assembly
3 B
13 B
EAU
IL+2
8 D
5 D
Steering Switch LH
Steering Switch RH
z73(D)
Steering Pad Switch
F1


E118(B)
Main Body ECU


∗11 : Liftgate Type
∗12 : Swing Type
∗26 : Before Aug. 2017 Production
∗27 : From Aug. 2017 Production

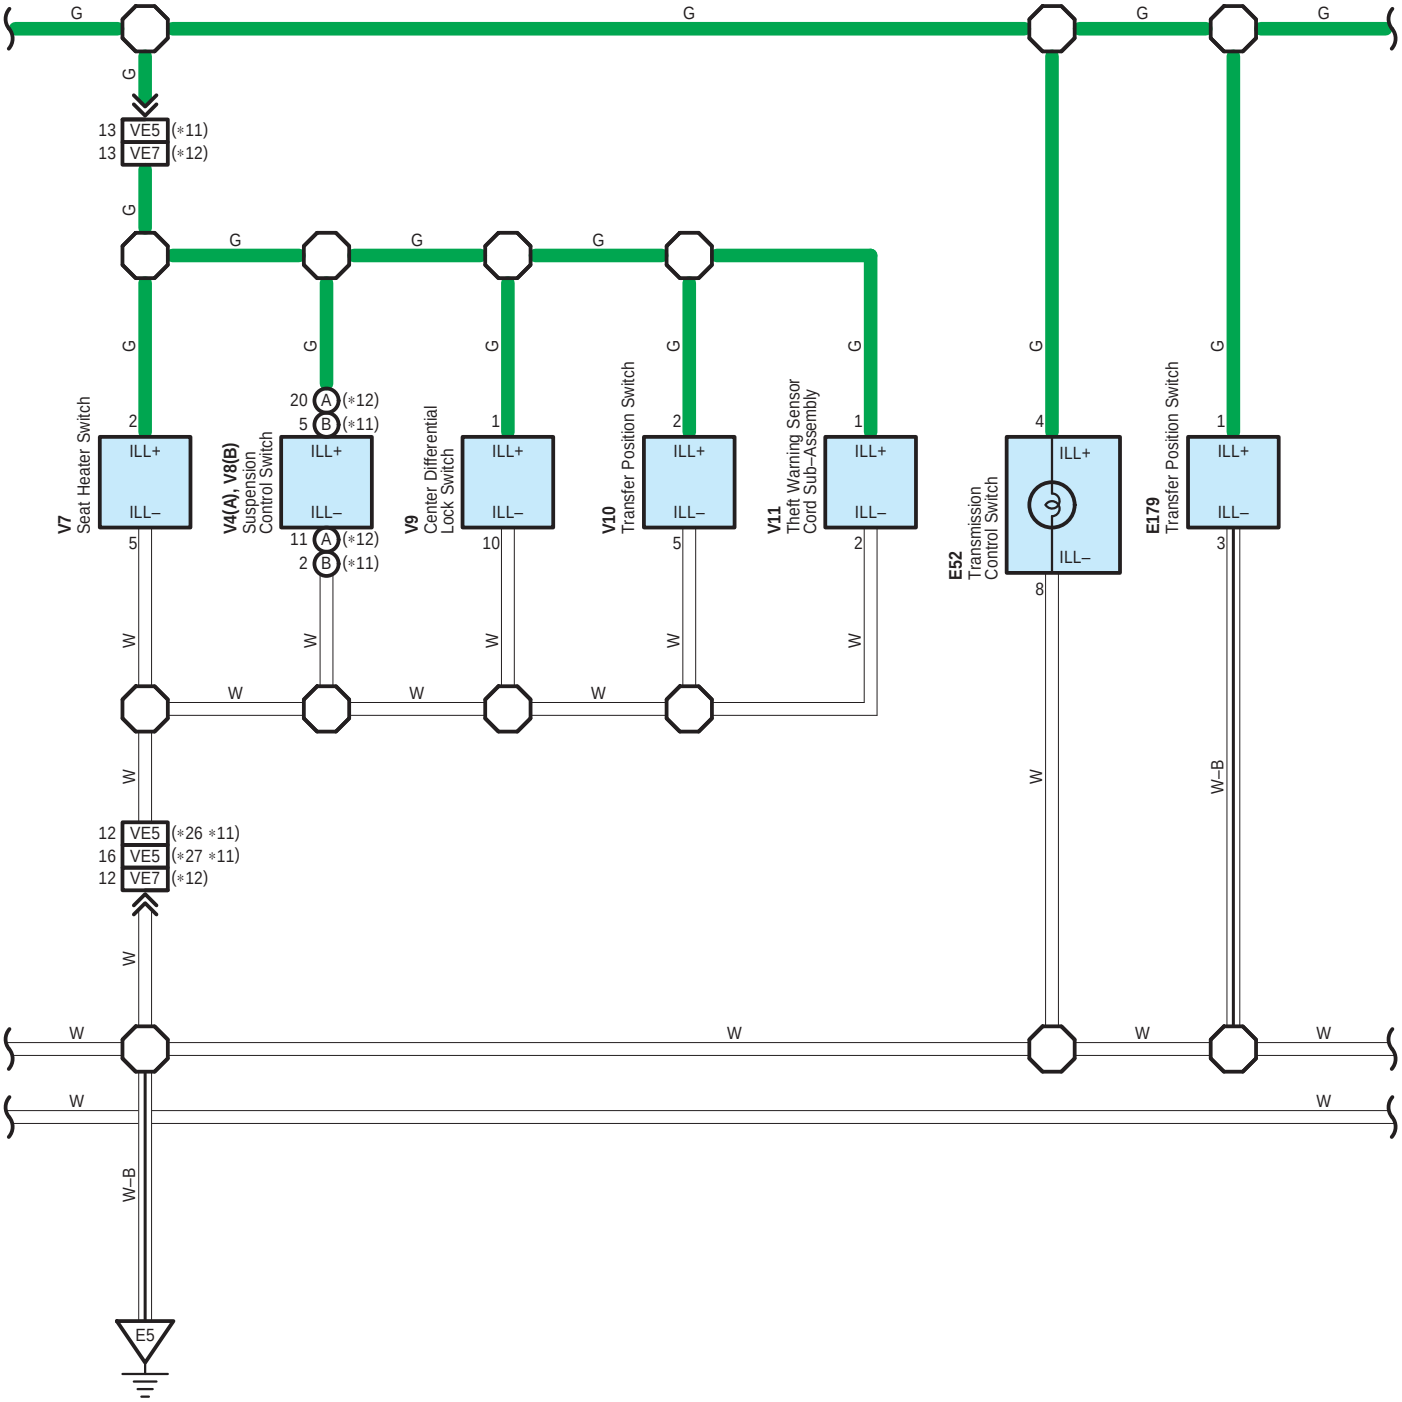


E118(B)
Main Body ECU

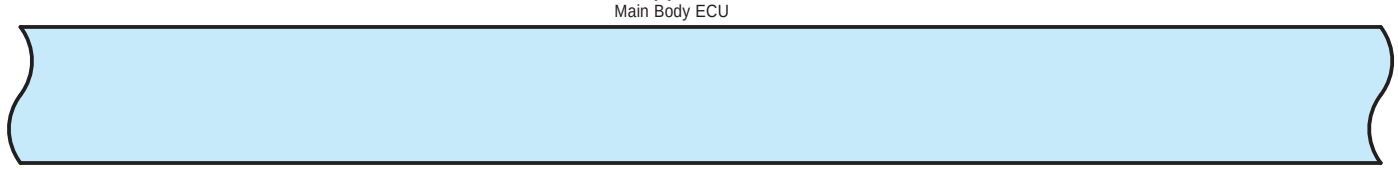


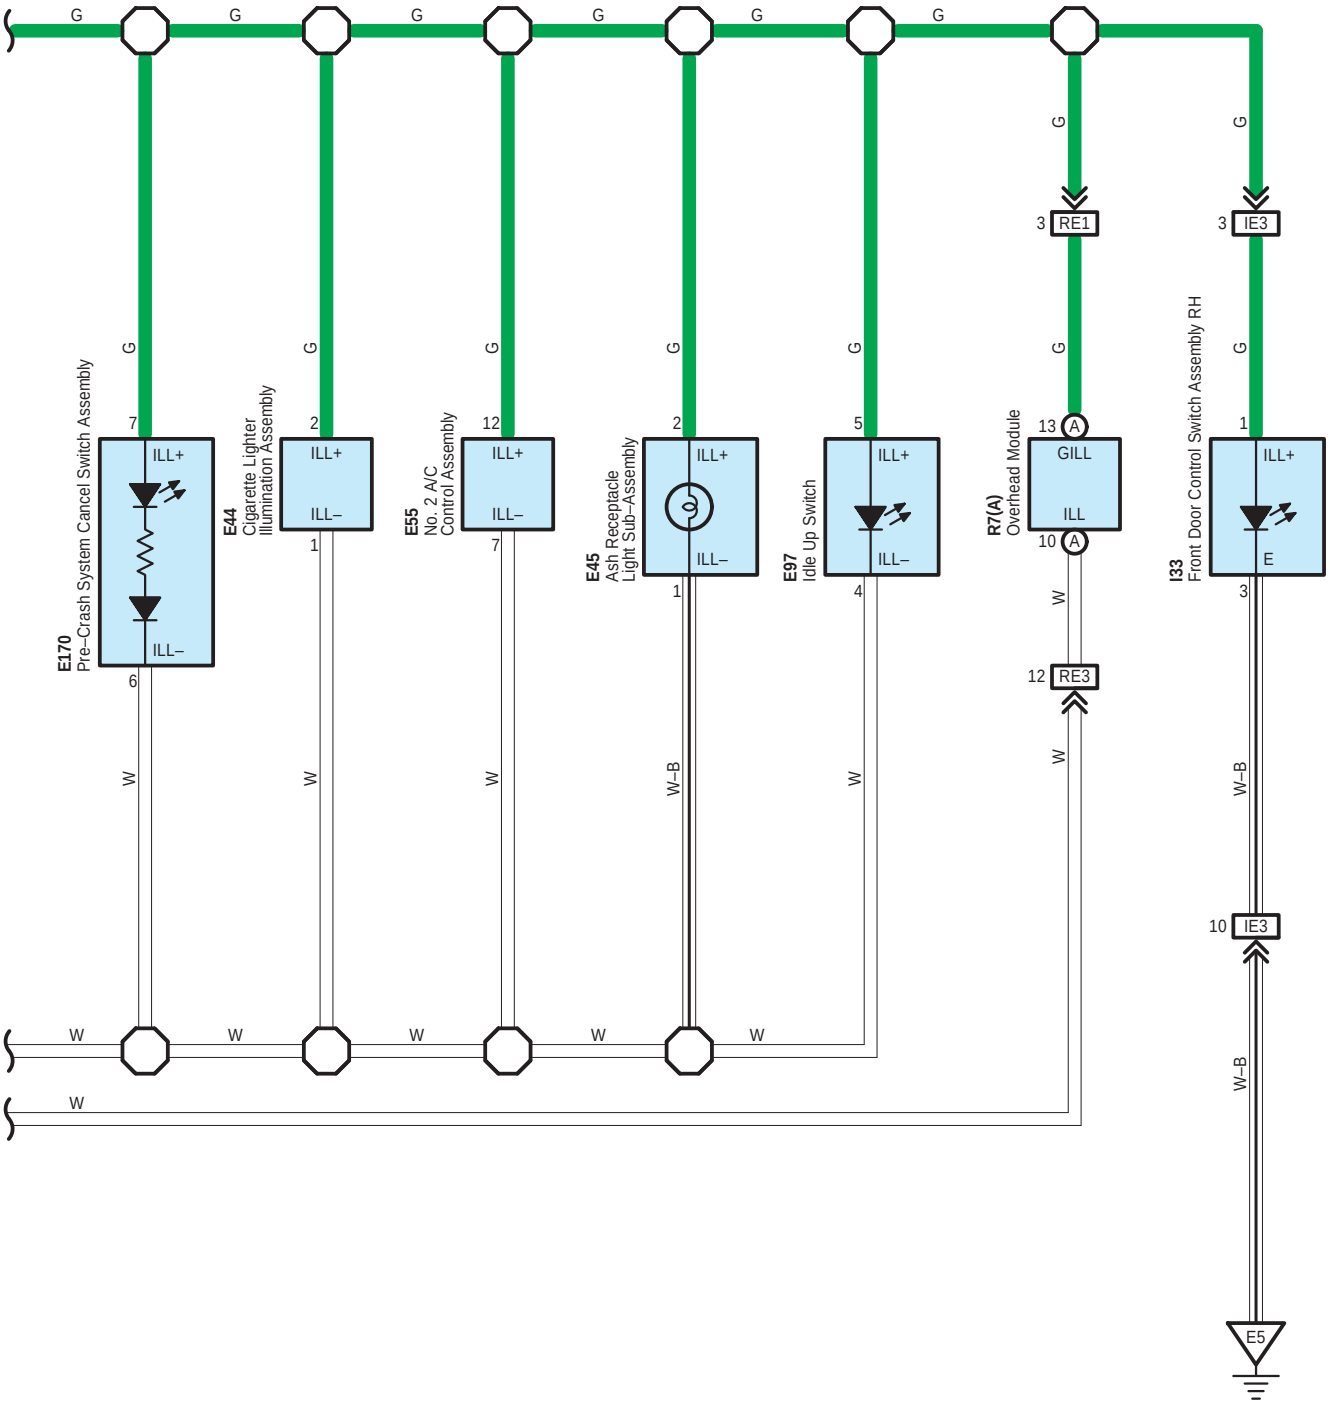

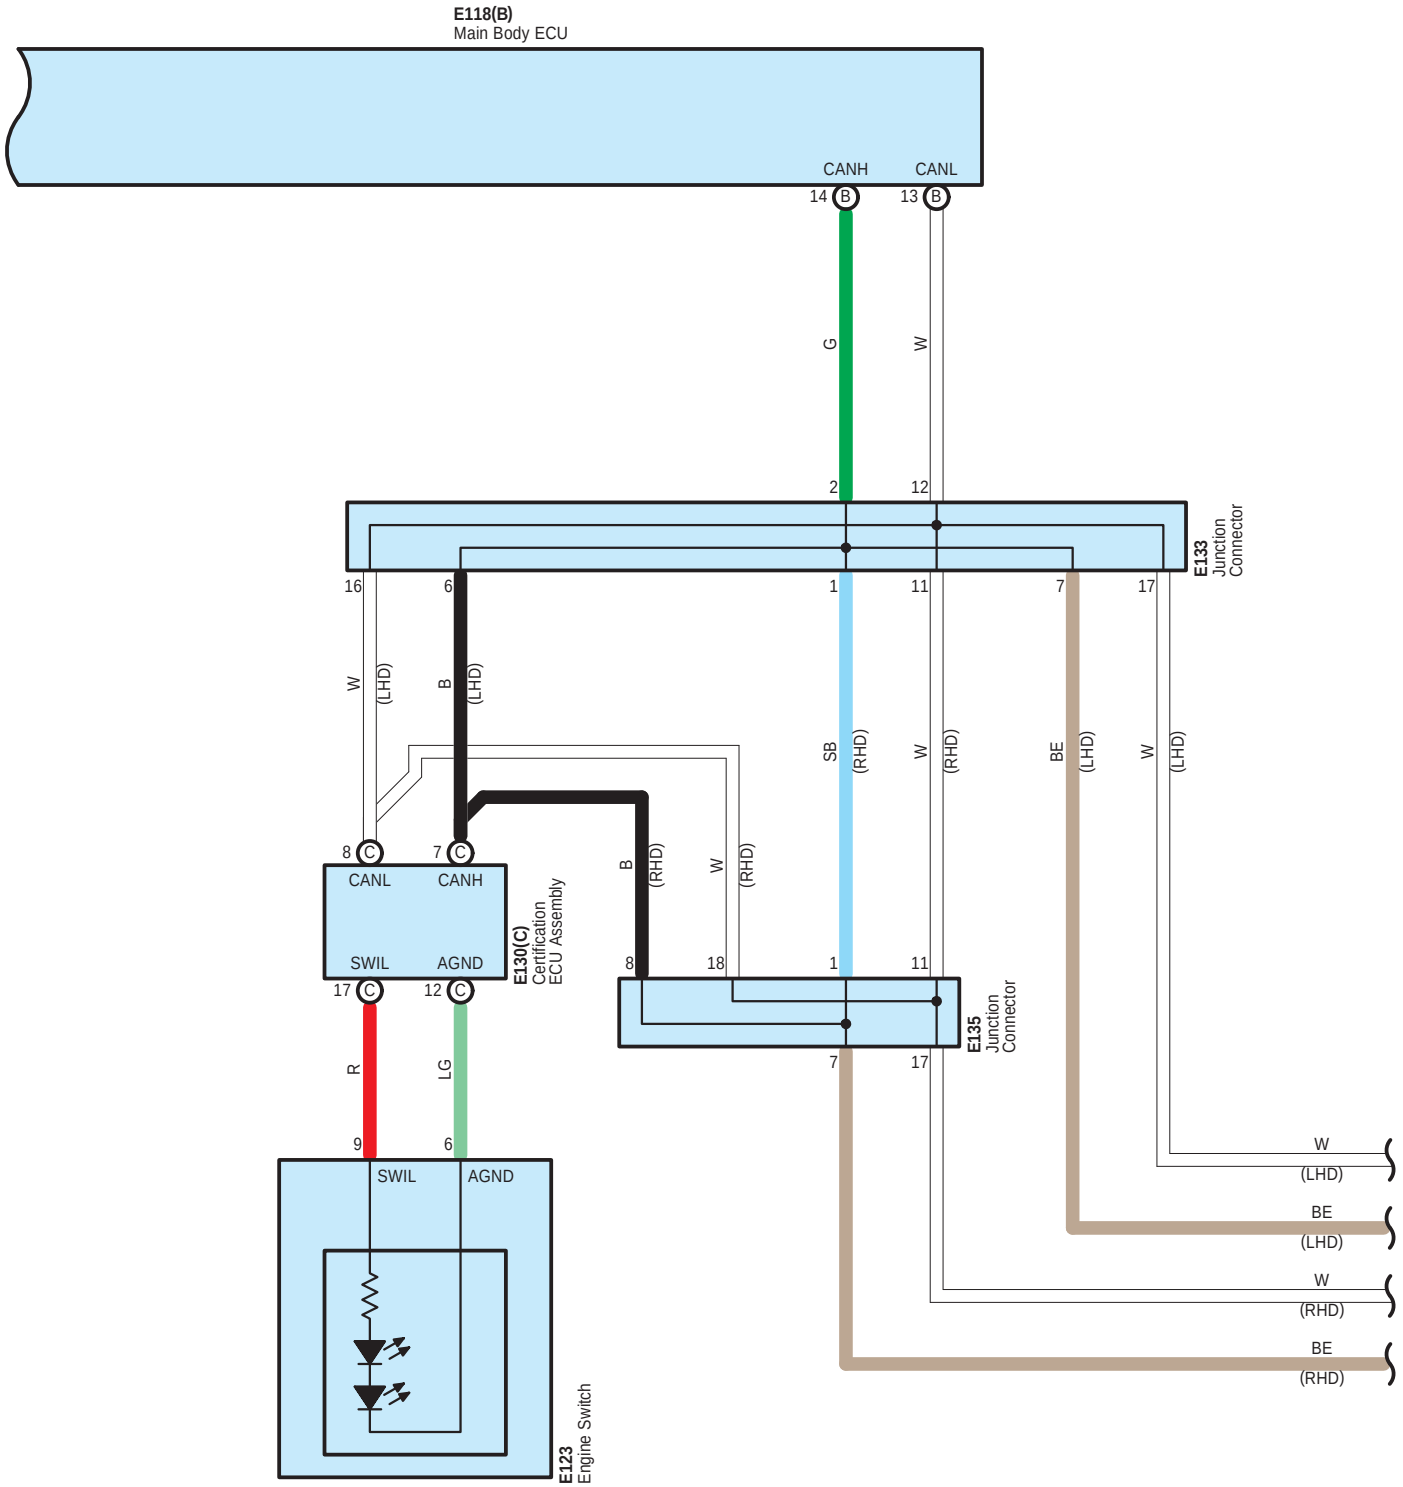

E118(B)
Main Body ECU
CANH
CANL
14 B
13 B
G
W
2
12
E133
Junction
Connector
16
6
1
11
7
17
W (LHD)
B (LHD)
SB (RHD)
W (RHD)
BE (LHD)
W (LHD)
8 C
7 C
CANL
CANH
SWIL
AGND
E130(C)
Certification
ECU Assembly
B (RHD)
W (RHD)
8
18
1
11
E135
Junction
Connector
17 C
12 C
7
17
R
LG
9
6
SWIL
AGND
E123
Engine Switch
W
(LHD)
BE
(LHD)
W
(RHD)
BE
(RHD)

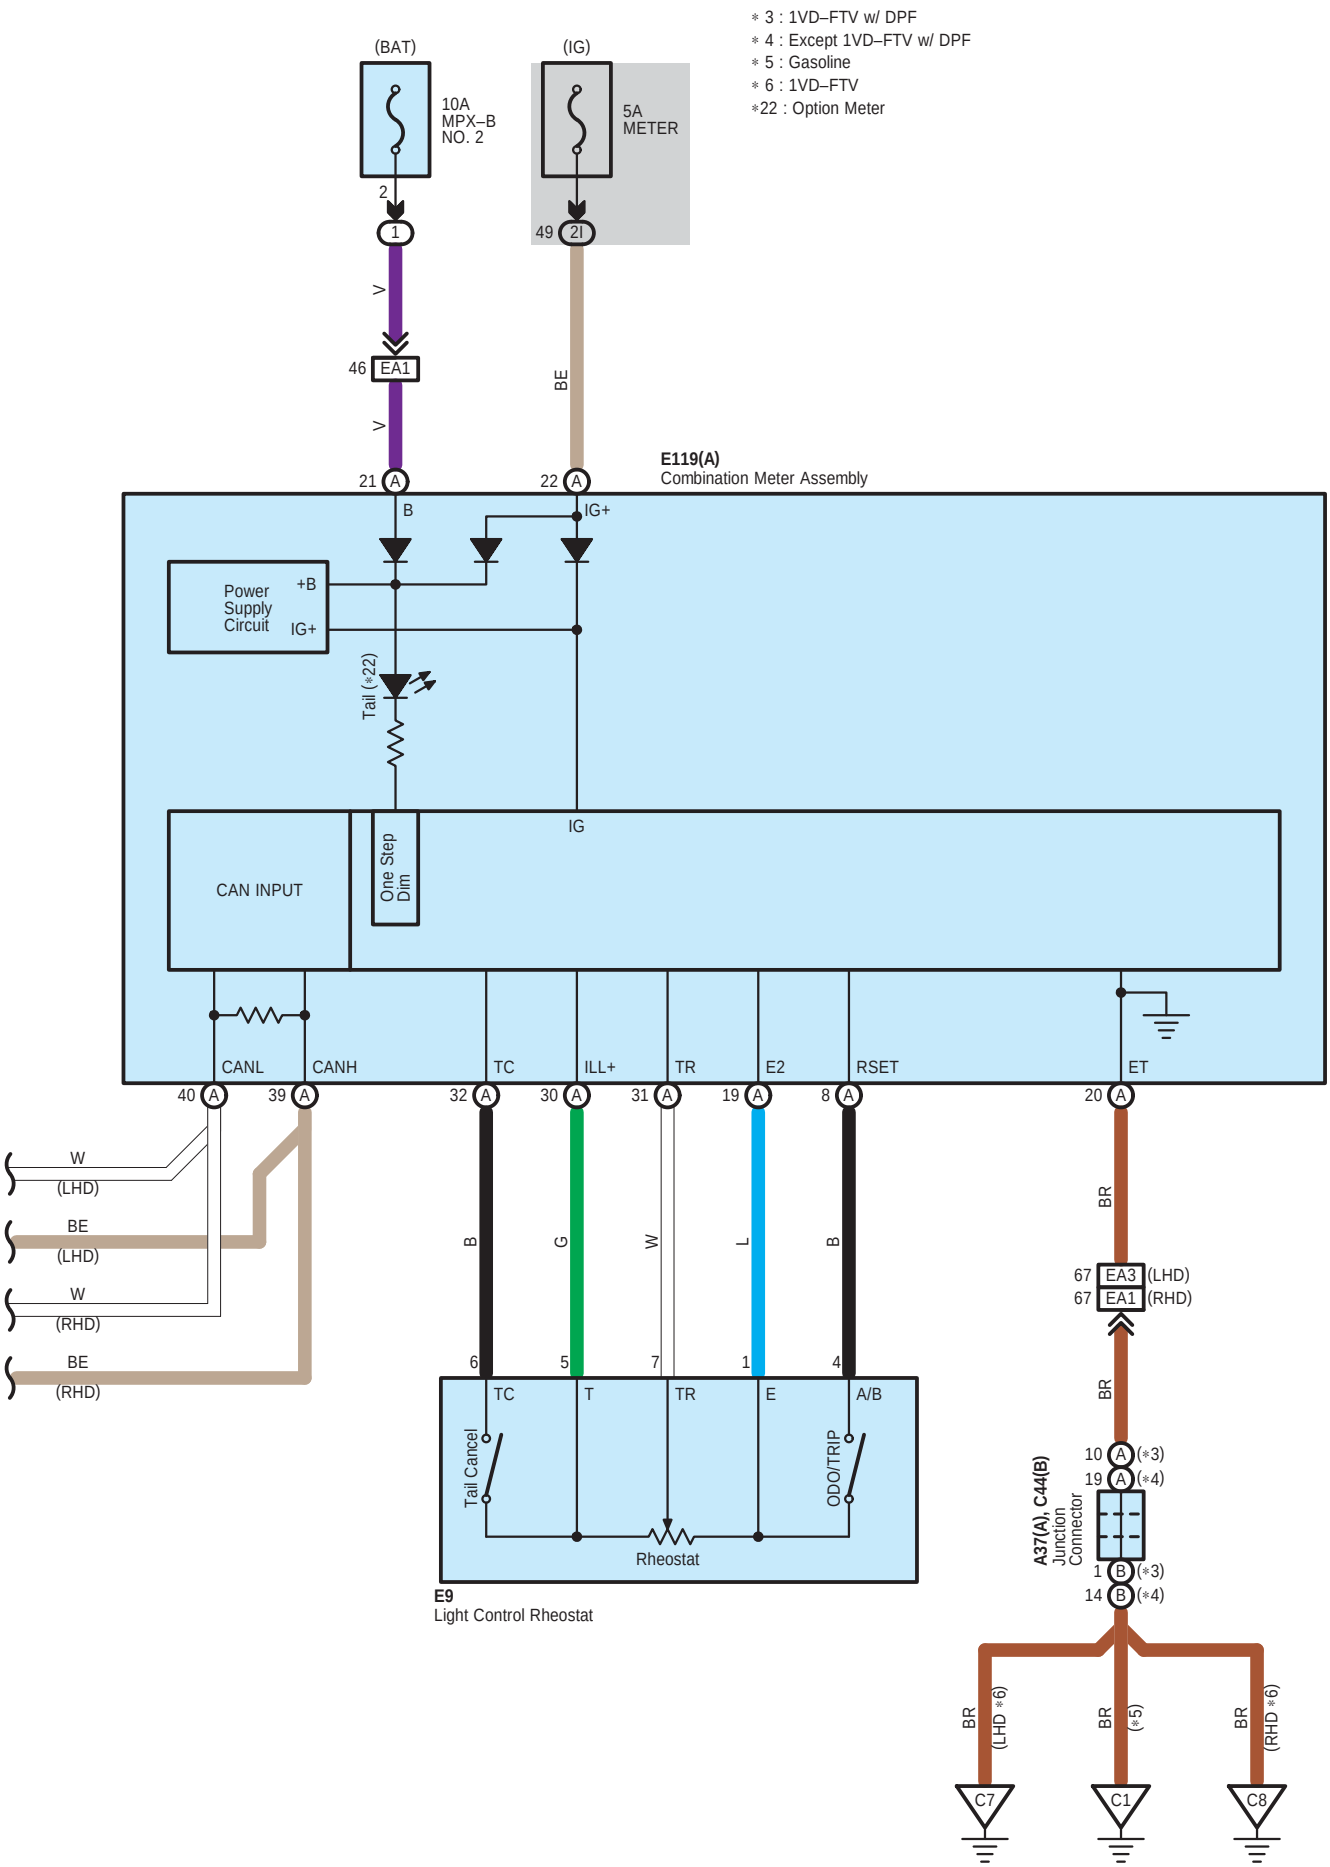
∗ 3 : 1VD–FTV w/ DPF
∗ 4 : Except 1VD–FTV w/ DPF
∗ 5 : Gasoline
∗ 6 : 1VD–FTV
∗22 : Option Meter
(BAT)
(IG)
10A MPX–B NO. 2
5A METER
2
1
49
2I
V
46 EA1
V
BE
21 A
22 A
E119(A)
Combination Meter Assembly
B
IG+
Power Supply Circuit
+B
IG+
Tail (∗22)
IG
CAN INPUT
One Step Dim
CANL
CANH
TC
ILL+
TR
E2
RSET
ET
40 A
39 A
32 A
30 A
31 A
19 A
8 A
20 A
W
(LHD)
BE
(LHD)
W
(RHD)
BE
(RHD)
B
G
W
L
B
6
5
7
1
4
TC
T
TR
E
A/B
Tail Cancel
ODO/TRIP
Rheostat
E9
Light Control Rheostat
BR
67 EA3 (LHD)
67 EA1 (RHD)
BR
10 A (∗3)
19 A (∗4)
A37(A), C44(B)
Junction Connector
1 B (∗3)
14 B (∗4)
BR
(LHD ∗6)
BR
(∗5)
BR
(RHD ∗6)
C7
C1
C8


A 37
Blue

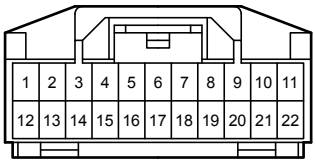


A 65
Black

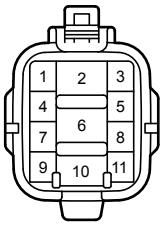


A 68
Black

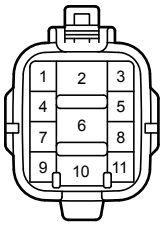


C 44
Blue

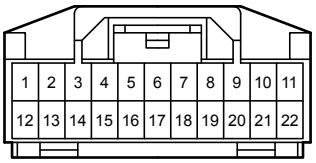


E 9
White

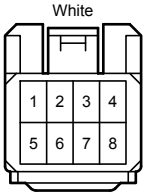


E 14
White

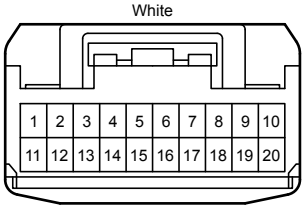


E 44
Gray




E 45
White




E 52
White

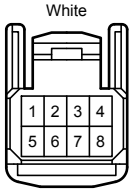


E 55
White

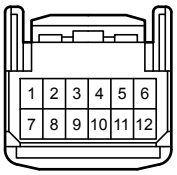


E 90
White




E 97
Black

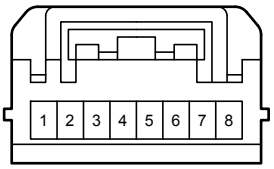


E105
Black

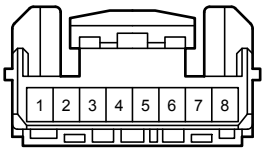


E118
White

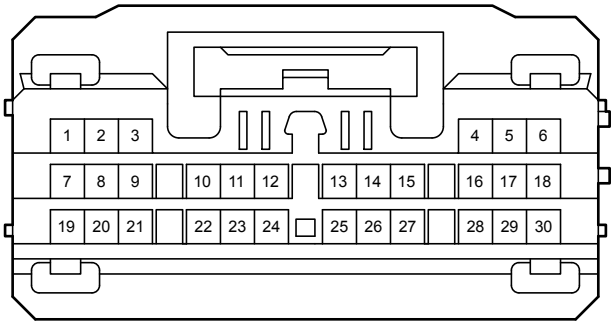


E119
Black

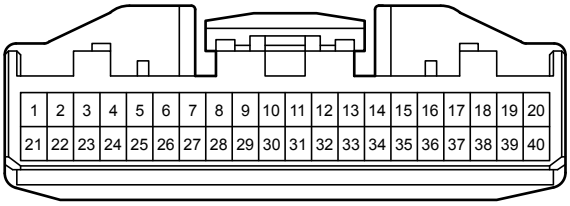


E122
Black

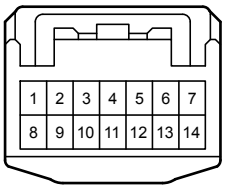


E123
Black

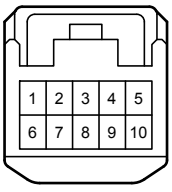


E125
White




E130
Black

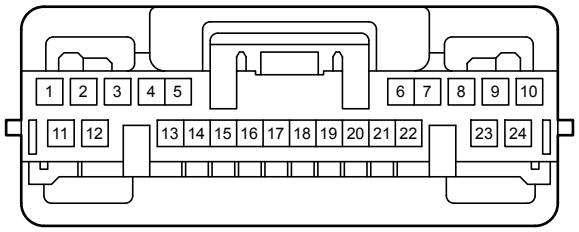


E133
White

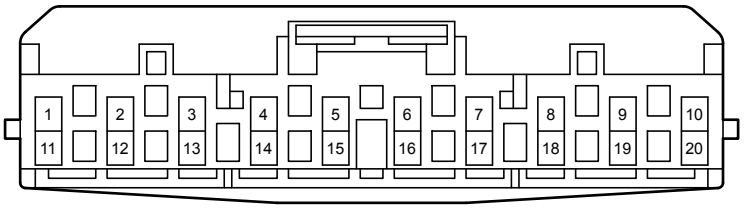


E135
White

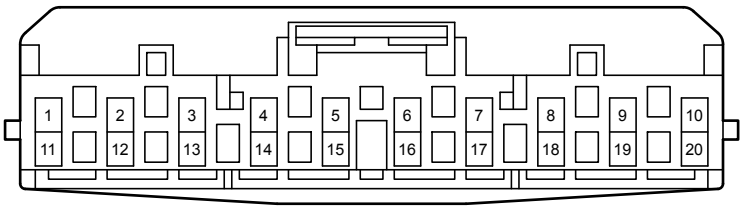


E138
White

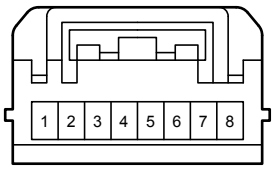


E139
Black

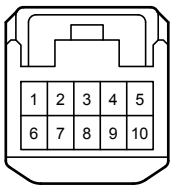


E150
White

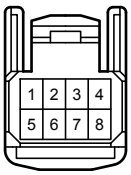


E168
Gray

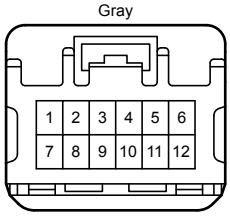


E170
Black

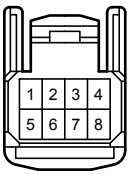


E178
Black

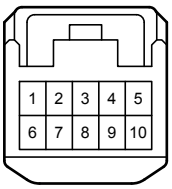


E179
White

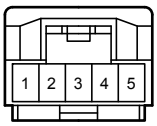


E183
Black

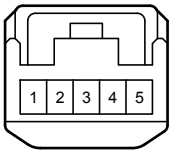


F 10
White

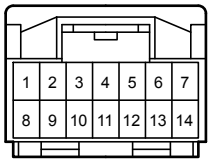


F 77
White

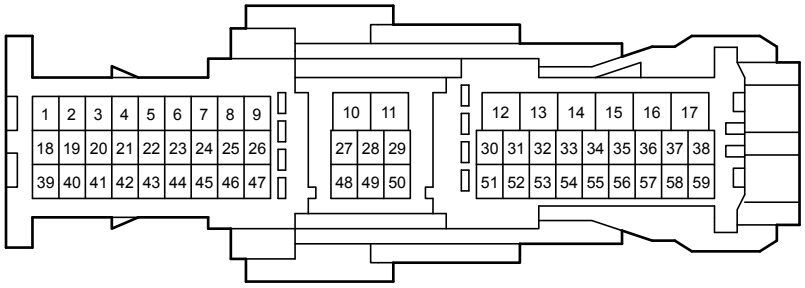


F 79
White

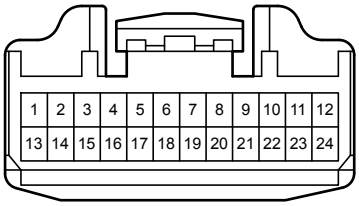


F 97
White

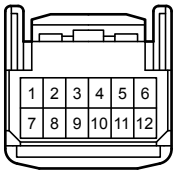


F111
Black

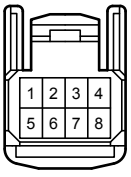


F112
White

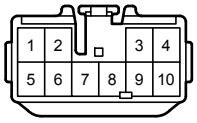


F114
White

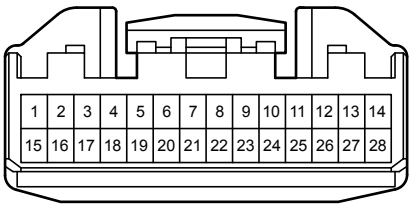

F115
Black

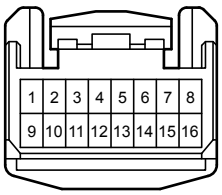


F120
White

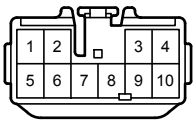


F122
White




F124
White

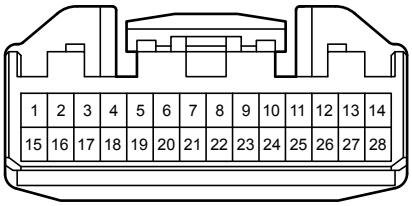


F130
Gray

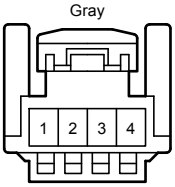


F132
White




F133
White




G 4
Black

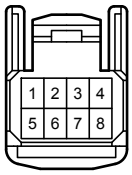


G 12
White

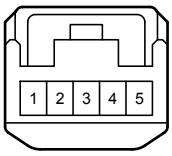


G 13
Black

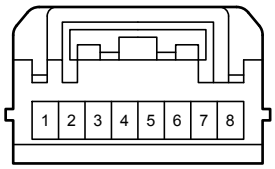


G 17
Black

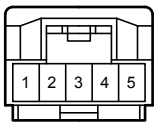


G 18
Black

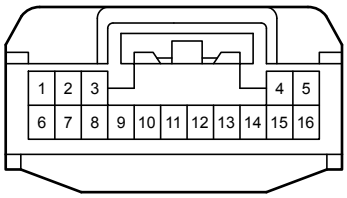


G 19
White

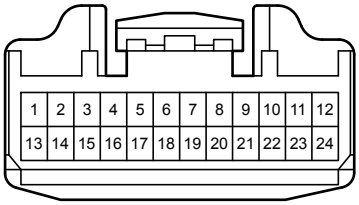


G 20
Black

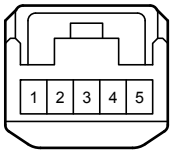


G 21
Black

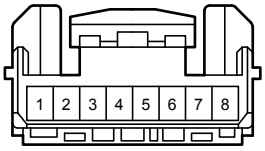


G 22
Gray

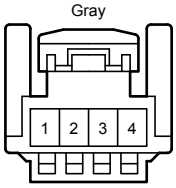


G 23
Black

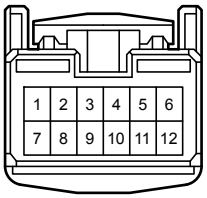


G 24
Gray

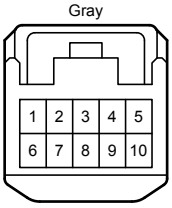


G 25
White

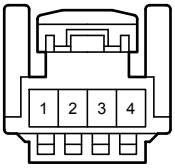


G 26
Black

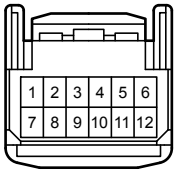


G 27
White

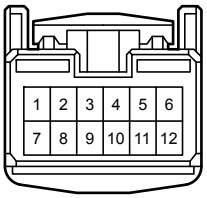


G 28
White

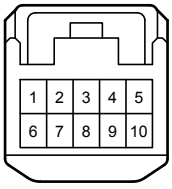


I 33
Blue




K 4
White

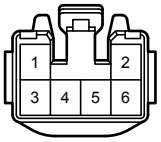


K 52
Black

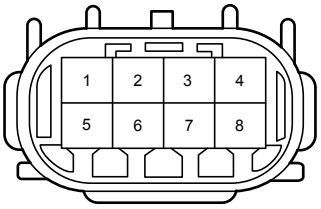


K 66
White



L 3
White

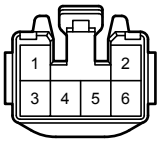

R 7
White

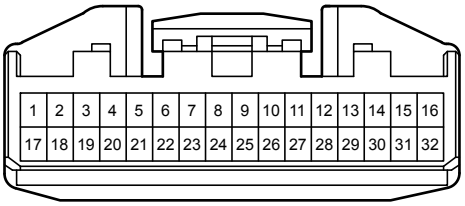


S 2
Gray




S 3
Gray




S 15
White

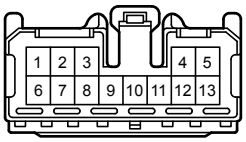


S 16
White

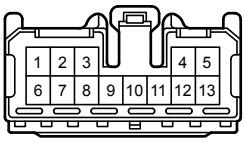


S 34
White

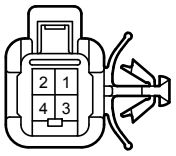


S 35
White

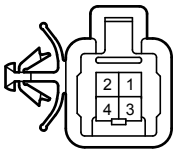


S 44
Gray

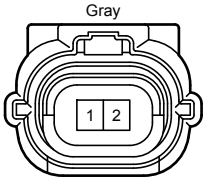


S 45
Gray

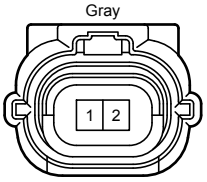


V 4
White

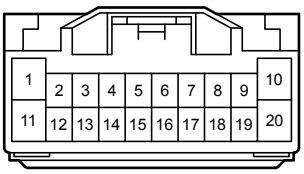


V 7
Black

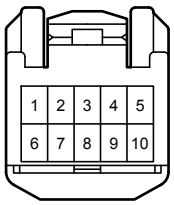


V 8
White

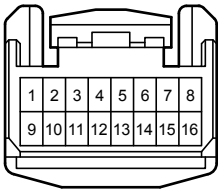


V 9
White

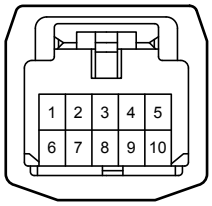

V 10
White

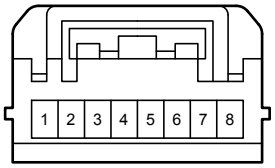


V 11
White




W 2
White




Y 1
Gray

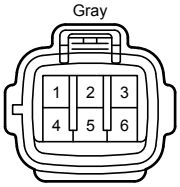

g 2
Black

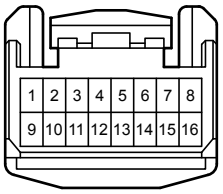


h 2
White




n 1
Gray




z 73
Black

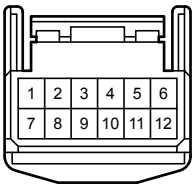


1T
White




2G
Gray

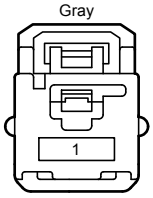


2H
White

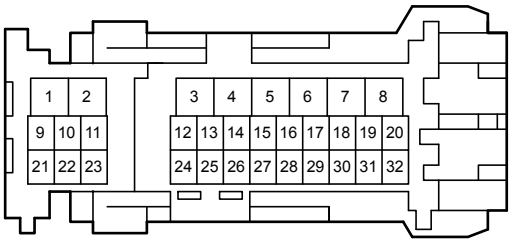


2I
White

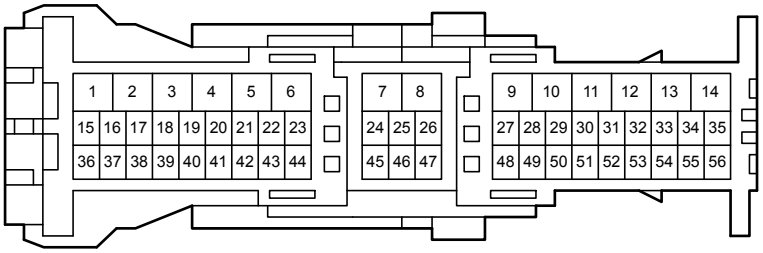


2J
White

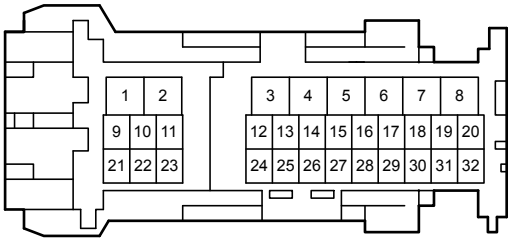


2K
White

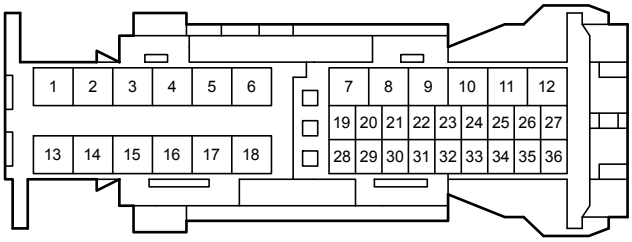


EA1
White

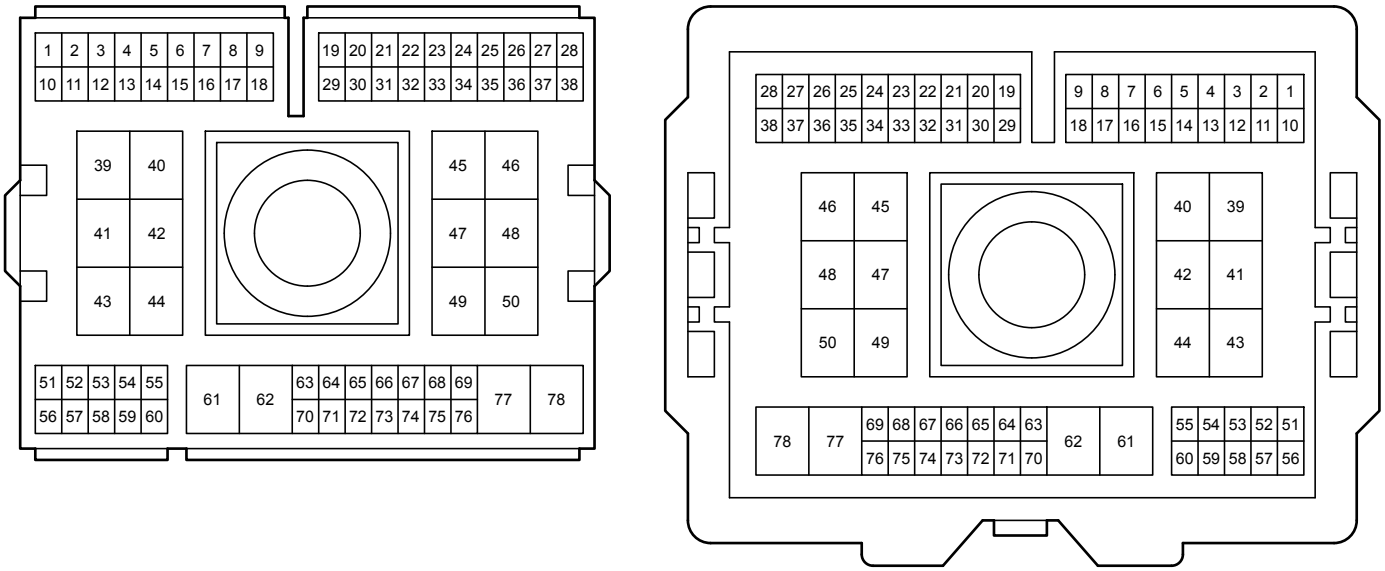


EA3
White

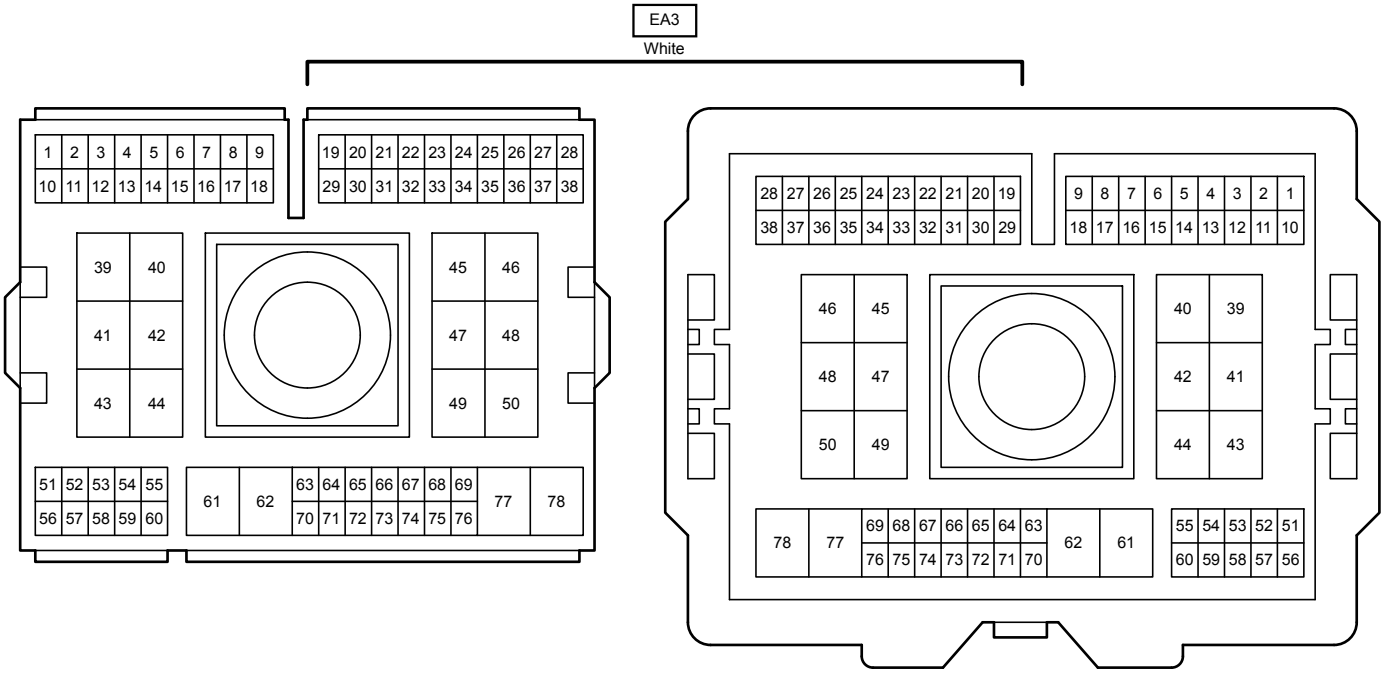


FE1
White

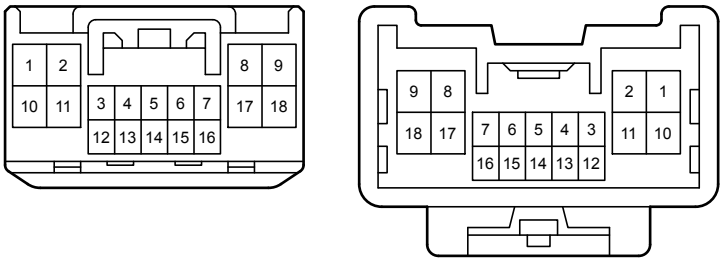


FE4
White

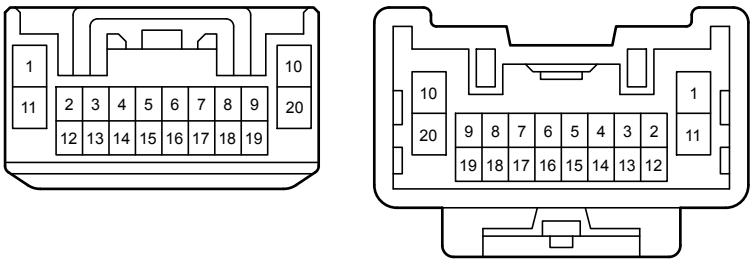


Fg2
White

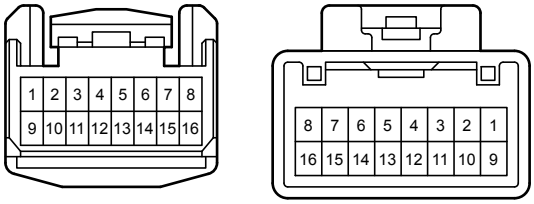


Fg3
Black White

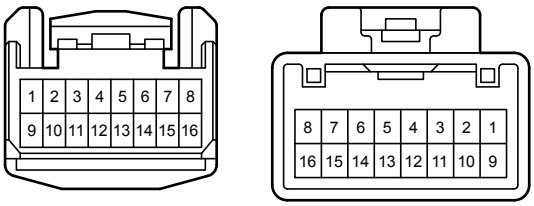


GE1
White

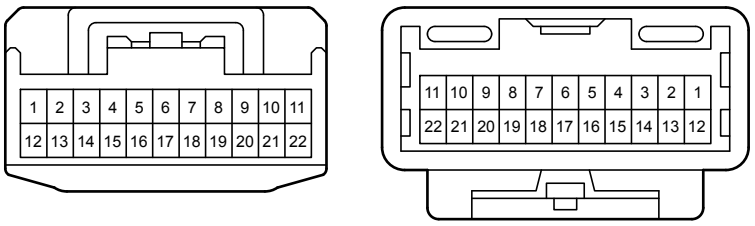


IE3
White

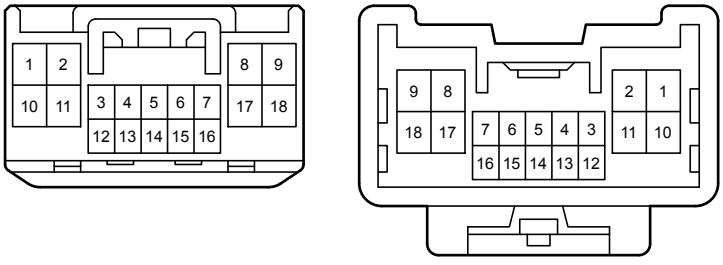


KL1
White

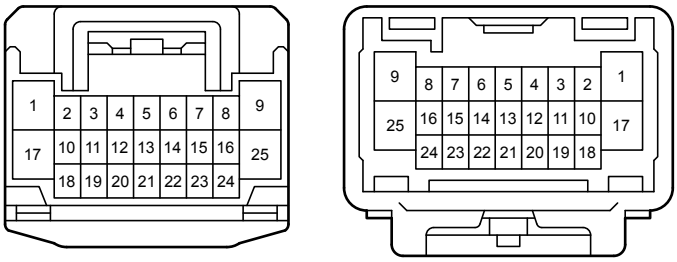


RE1
White

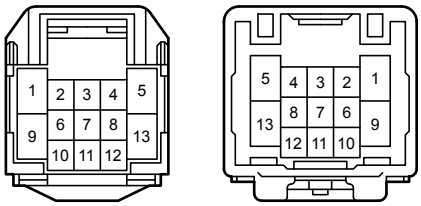


RE3
Blue

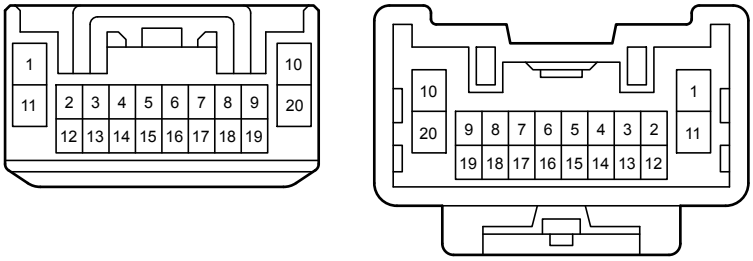


SK3
Blue

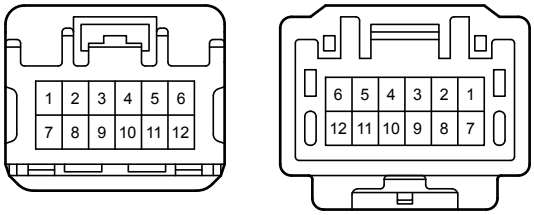


VE5
White

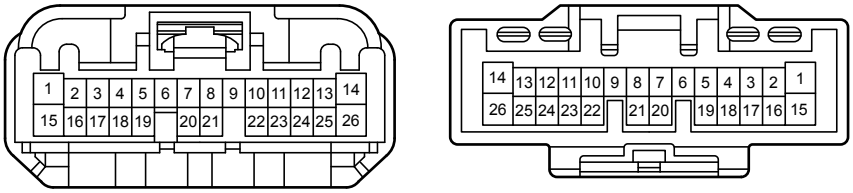



VE7
White

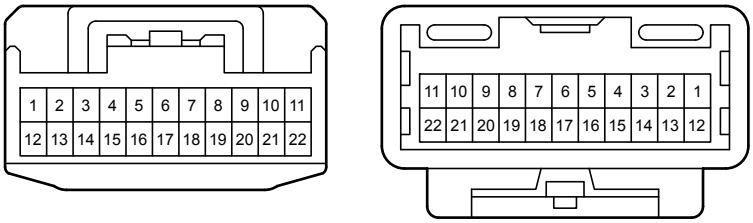



WK1
White

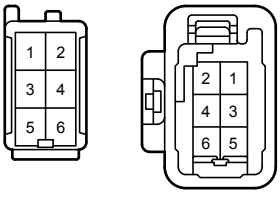

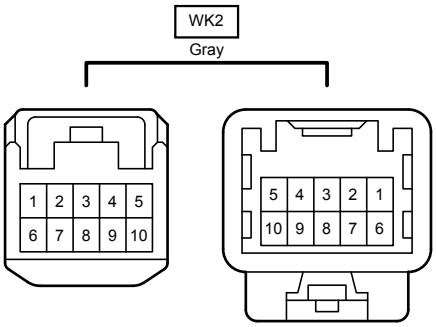
WK2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

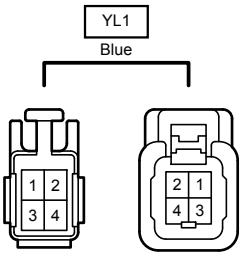
YL1
Blue
1 2
3 4
2 1
4 3

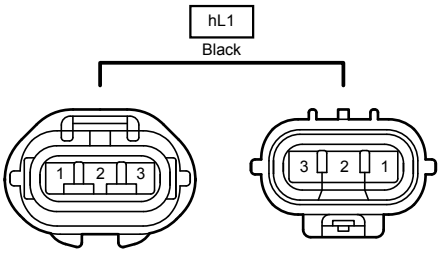
hL1
Black
1 2 3
3 2 1

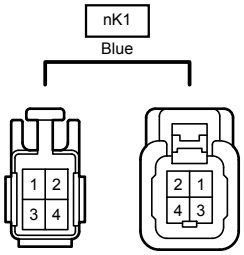
nK1
Blue
1 2
3 4
2 1
4 3