




(IG)
10A
INJ
2
1
B
10
CA6
W–B
C17
Noise Filter
(Ignition Bank 2)
C10
Noise Filter
(Ignition Bank 1)
+B
GND
IGT1
IGF
IGT2
C4
Ignition Coil
Assembly No. 1
C15
Ignition Coil
Assembly No. 2
R–B
G–Y
G
40
39
(LHD)
(RHD)
C45(B), C46(C)
ECM
C2
C1


B
W–B
C130(B)
Ignition Coil Assembly No. 3
C140(B)
Ignition Coil Assembly No. 4
C8
Ignition Coil Assembly No. 5
C11
Ignition Coil Assembly No. 6
+B
GND
IGT3
IGT4
IGT5
IGT6
IGF
R–W
L
L–Y
R–Y
G–W
G
G–B
L–Y
G–W
G–B
C43
Junction Connector
(LHD)
(RHD)
IGF1
C45(B), C46(C)
ECM


C 4
Black

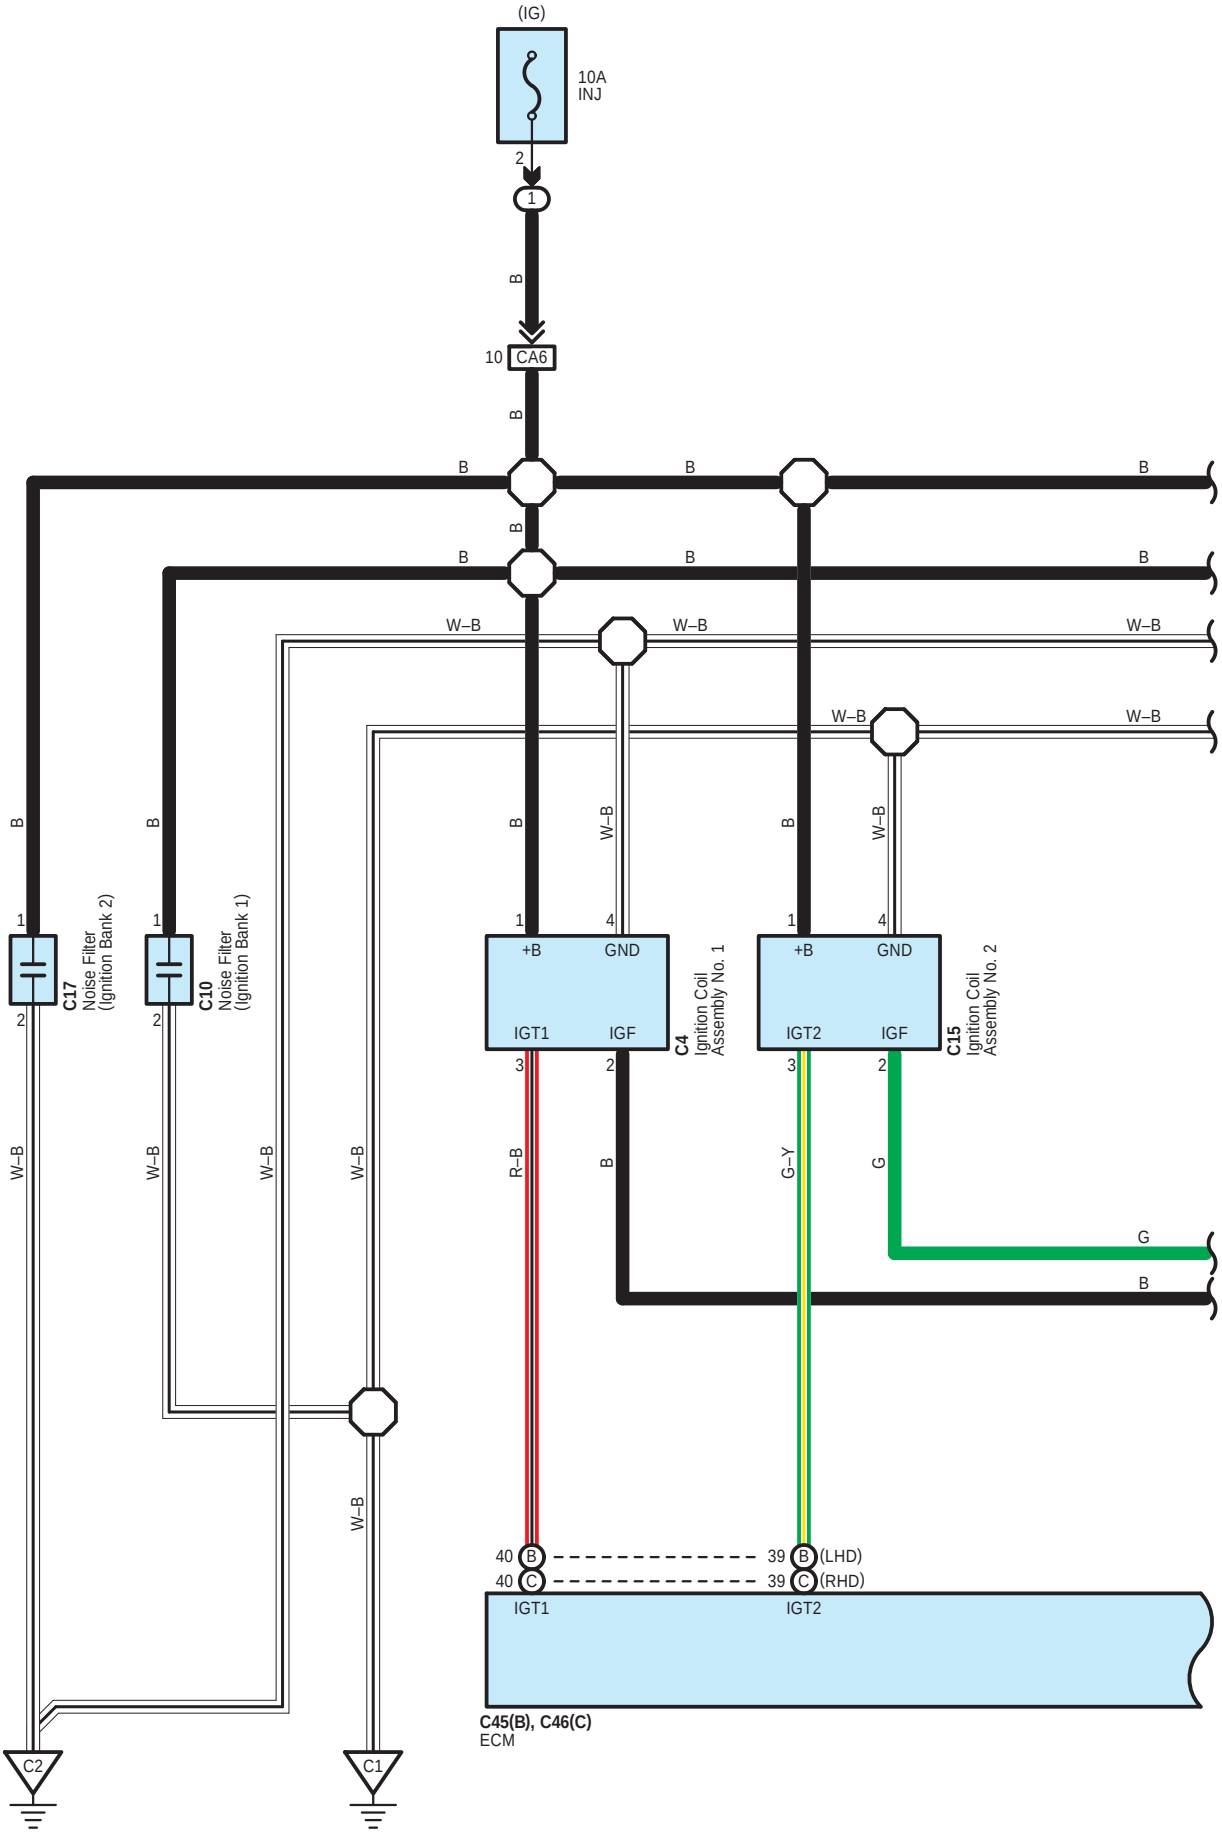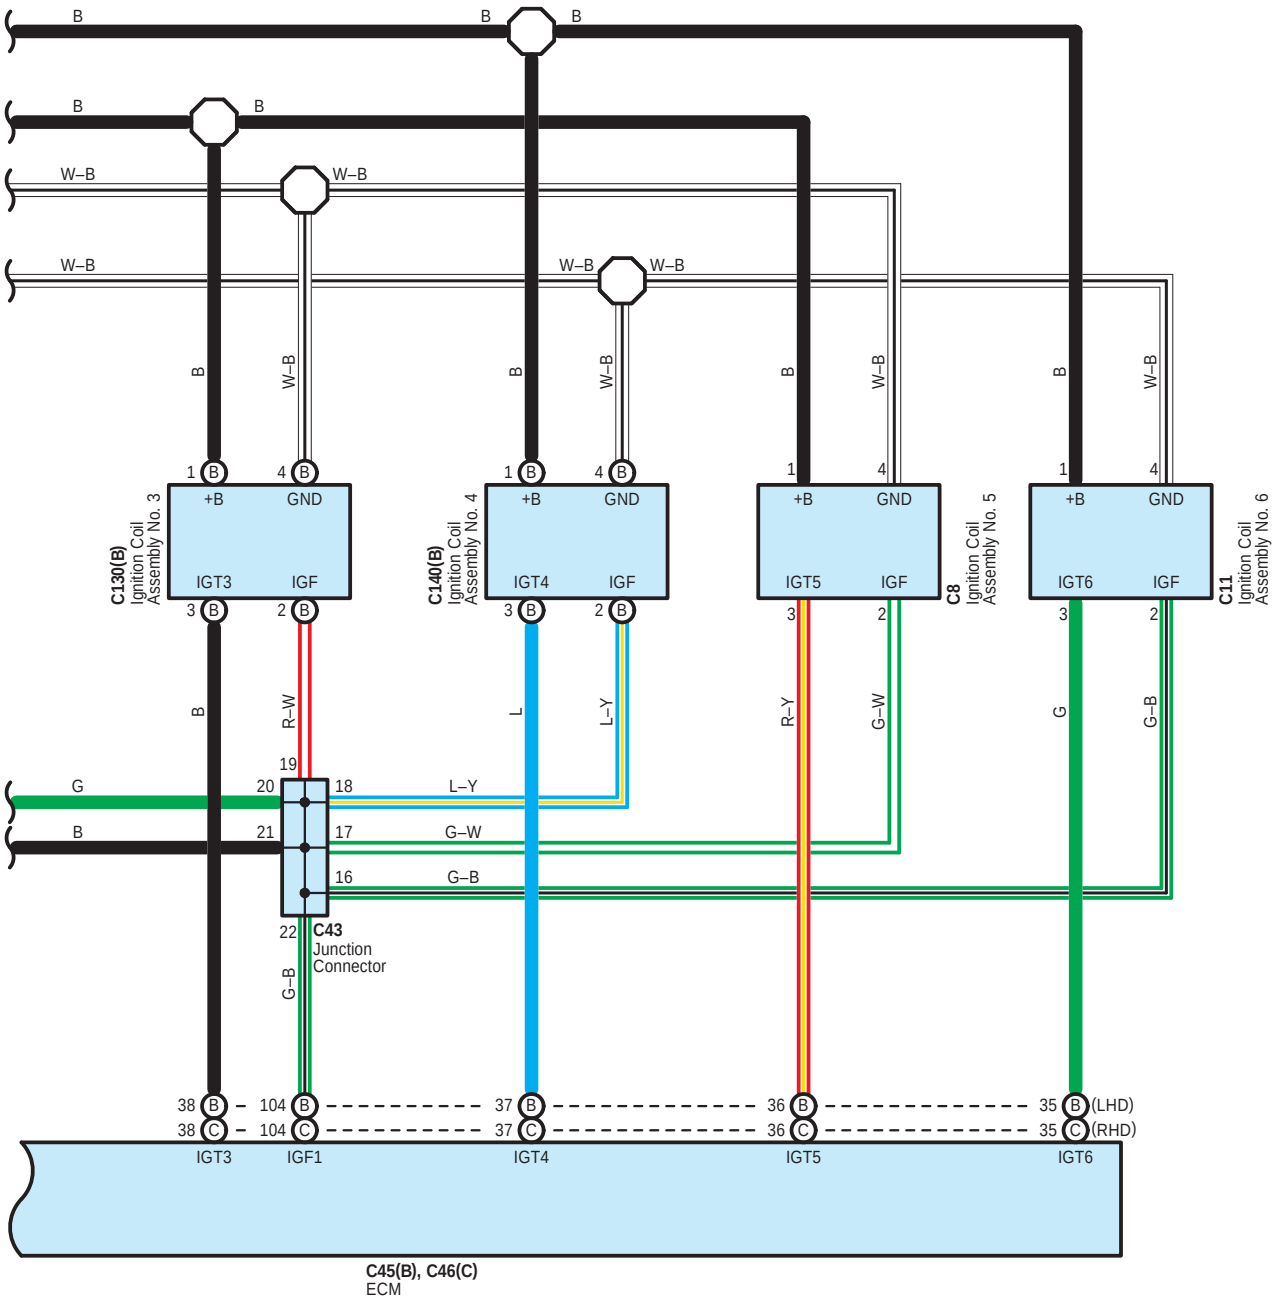


C 8
Black




C 10
Gray

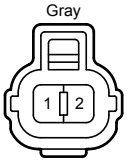

C 11
Black




C 15
Black




C 17
Gray




C 43
White

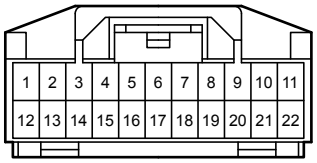


C 45
Black

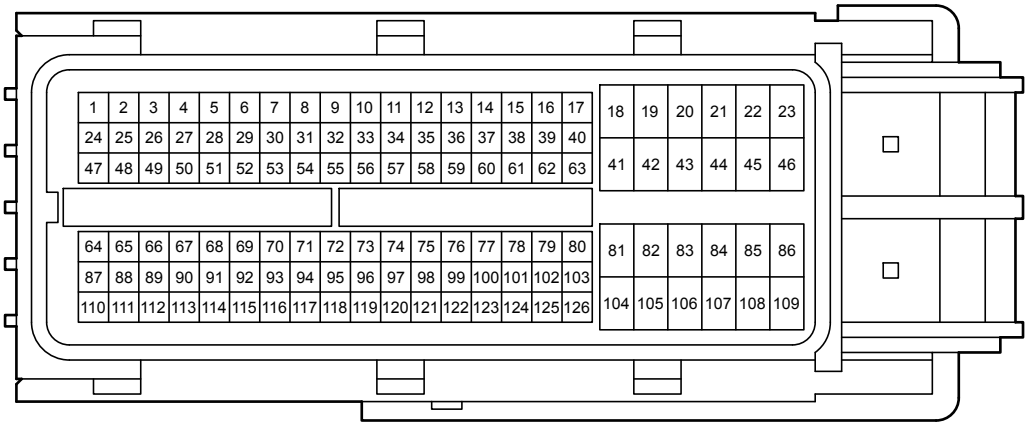


C 46
Black

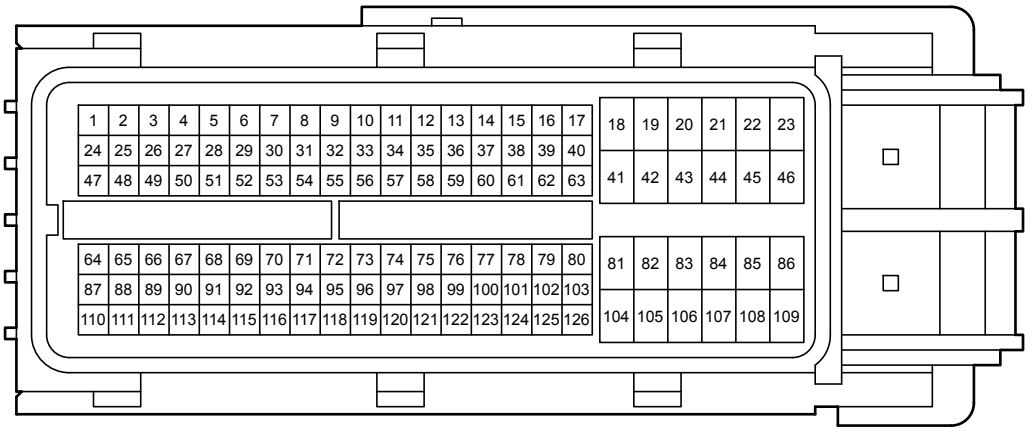


C130
Gray

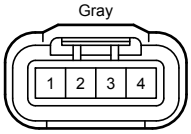

C140
Gray

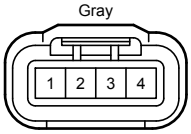

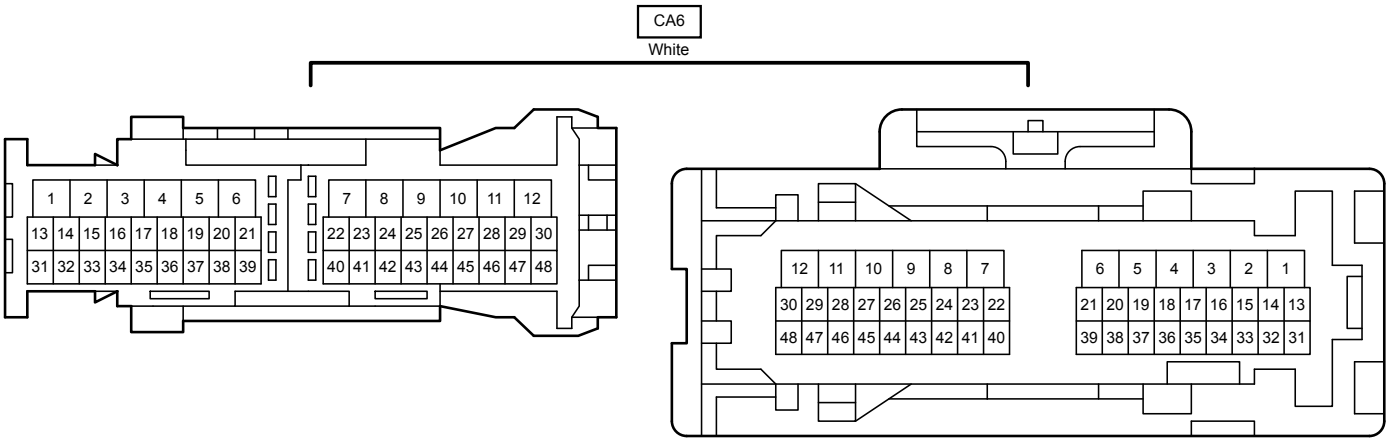
CA6
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
12 11 10 9 8 7 6 5 4 3 2 1
30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31