




(IG)
10A
INJ
2
1
B
10
CA6
B
B
B
B
B
B
B
W–B
W–B
W–B
W–B
C135
Noise Filter
(Ignition Bank 2)
1
C4
Ignition Coil
Assembly No. 1
+B
GND
IGT1
IGF1
C13
Ignition Coil
Assembly No. 4
IGT4
C133
Ignition Coil
Assembly No. 6
IGT6
C131
Ignition Coil
Assembly No. 7
IGT7
3
2
Y
G
L
P
W
20
19
21
22
18
C43
Junction
Connector
40
34
105
36
38
(LHD)
(RHD)
C45(B), C46(C)
ECM


B
W–B
C134
Ignition Coil
Assembly No. 2
C130
Ignition Coil
Assembly No. 3
C8
Ignition Coil
Assembly No. 5
C53
Ignition Coil
Assembly No. 8
+B
GND
IGT2
IGF2
IGT3
IGT5
IGT8
C132
Noise Filter
(Ignition Bank 1)
C43
Junction
Connector
(LHD)
(RHD)
C45(B), C46(C)
ECM
C11


C 4
Black

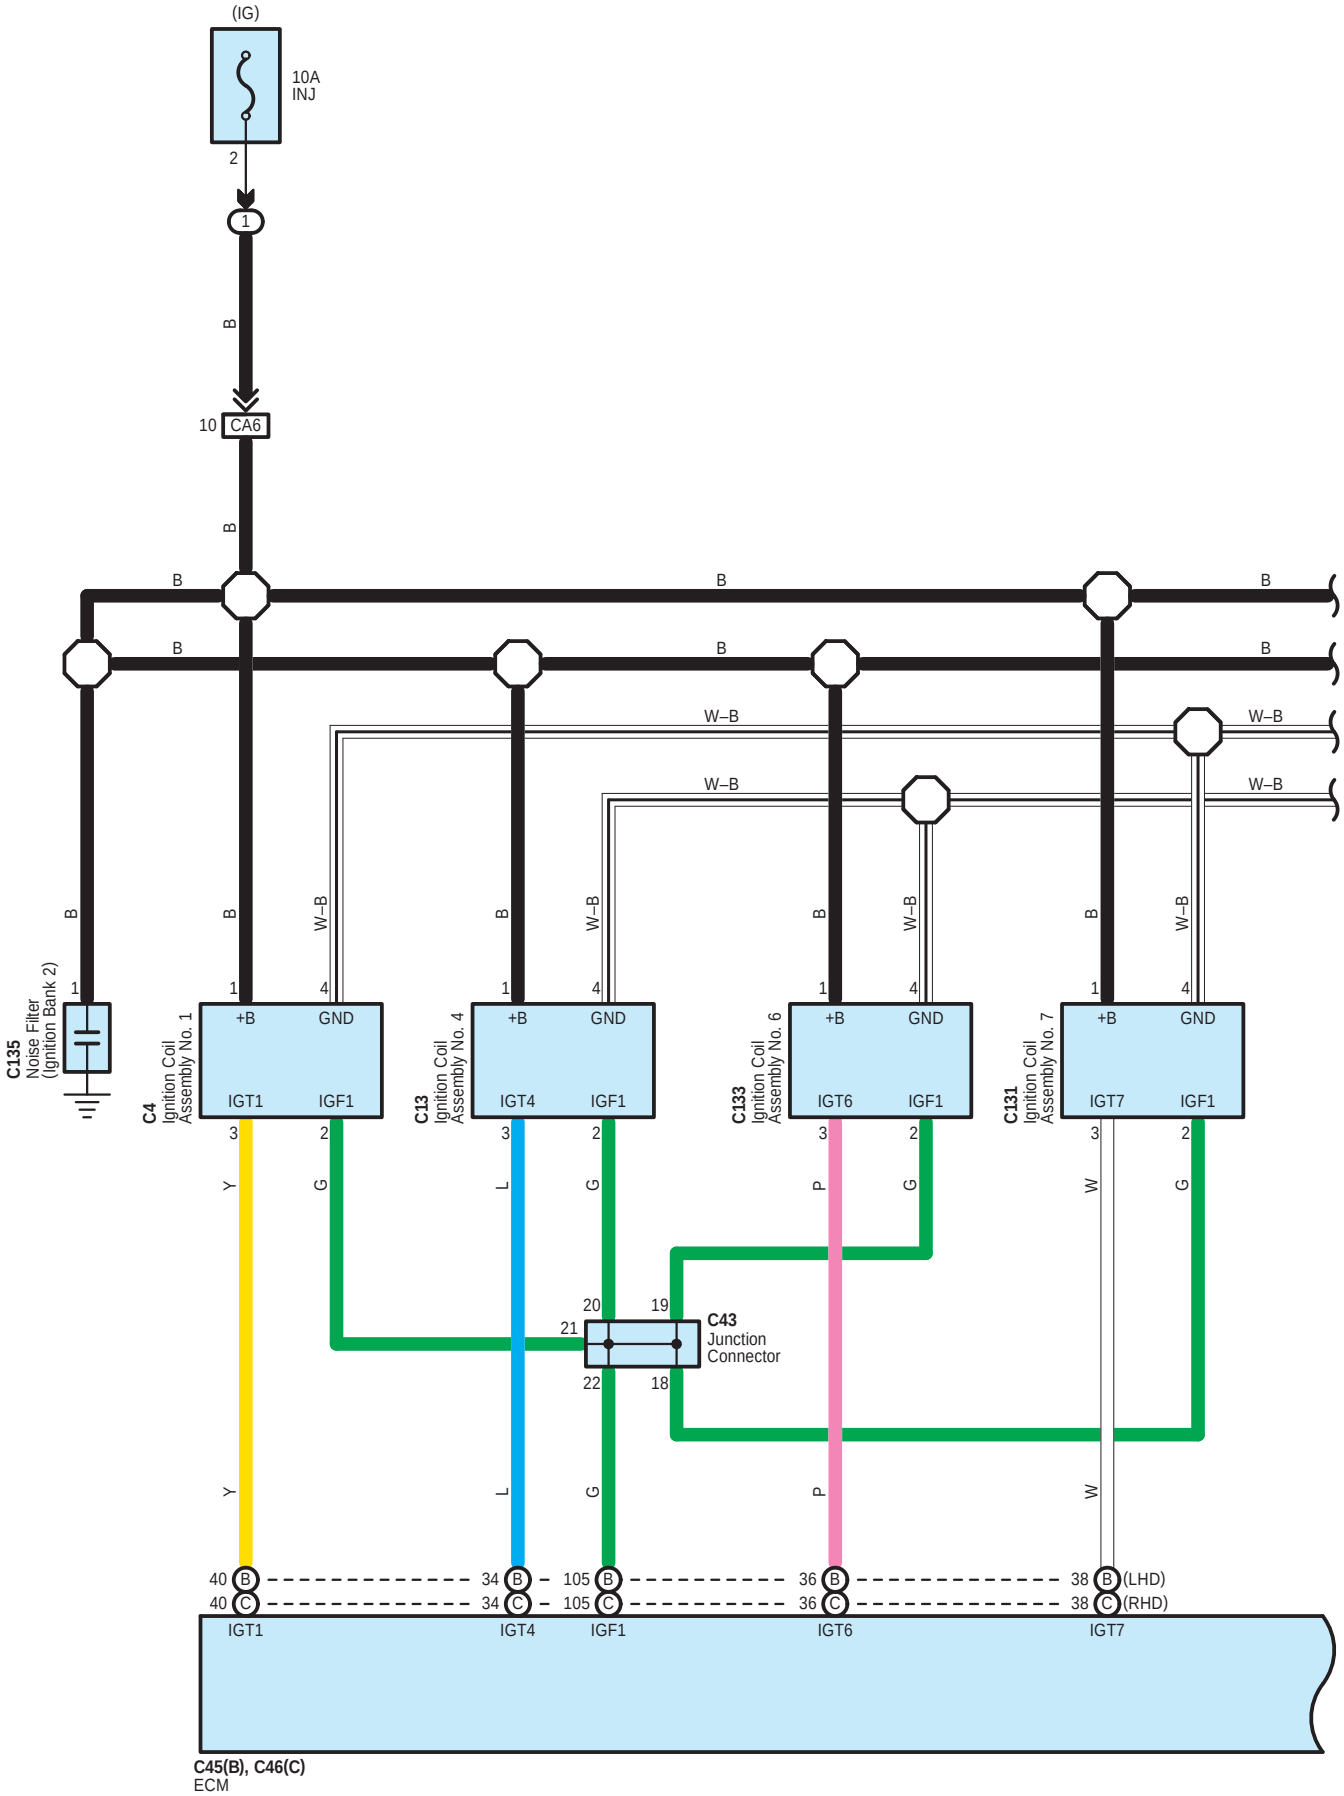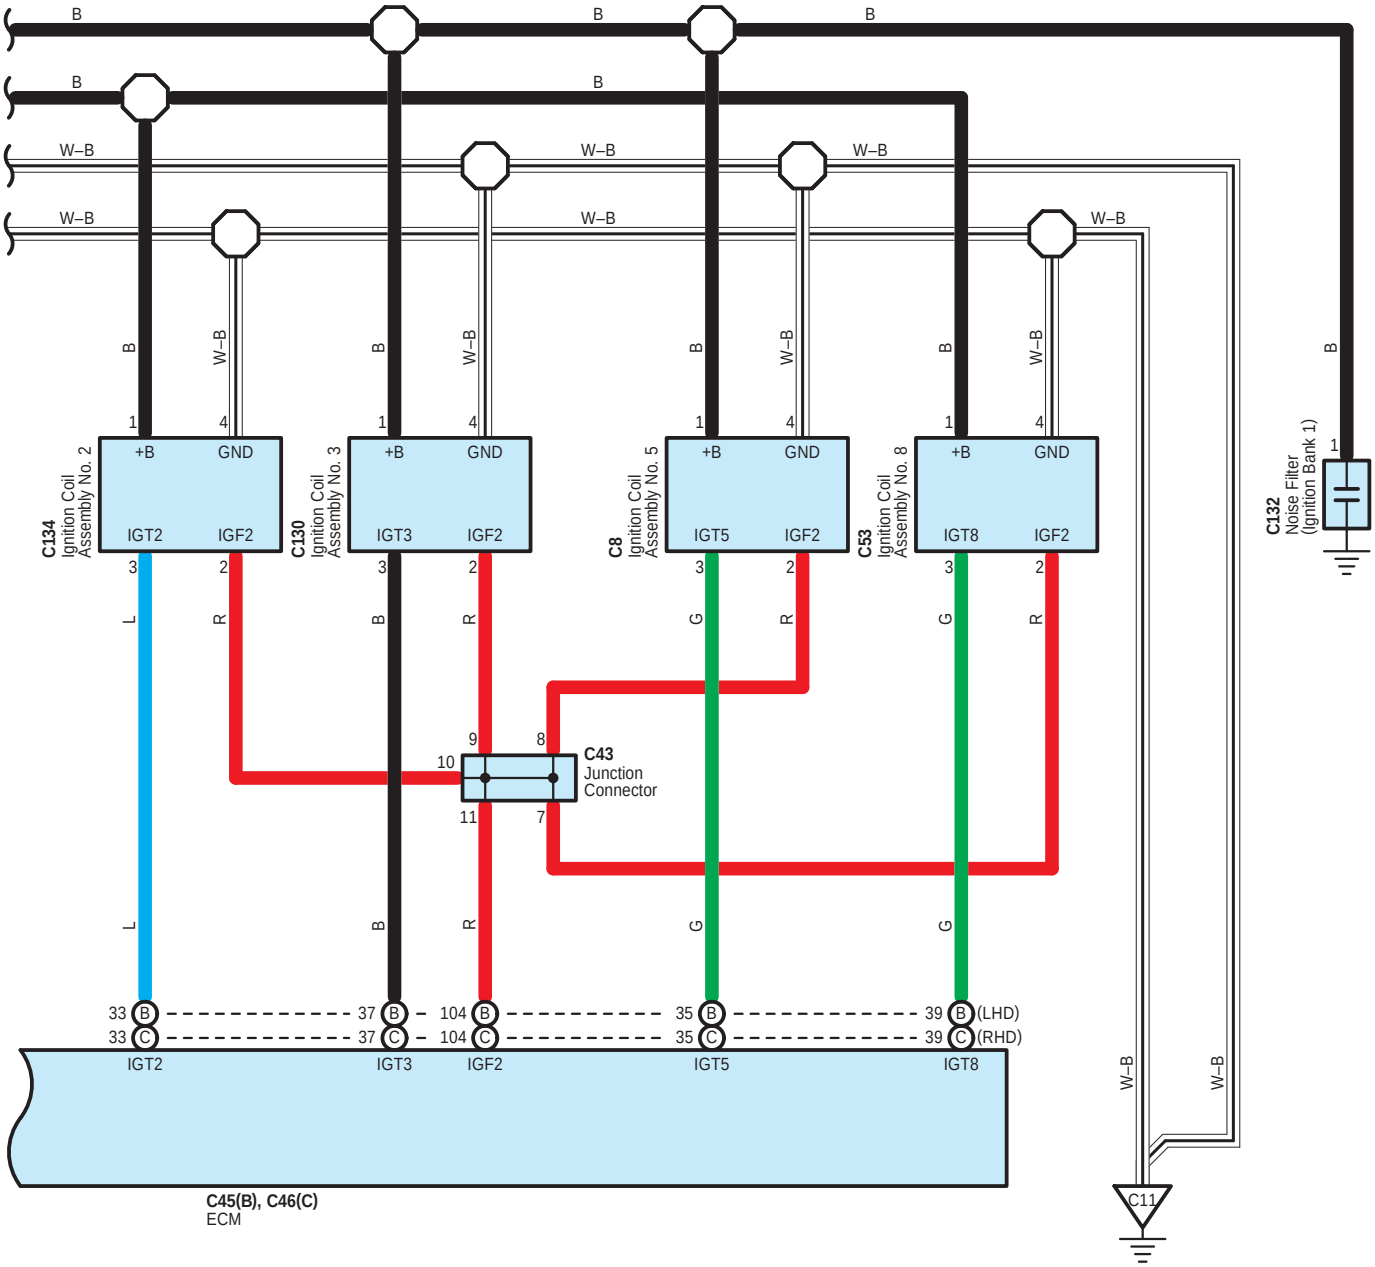


C 8
Black




C 13
Black




C 43
White

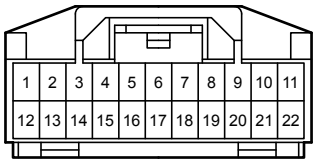


C 45
Black

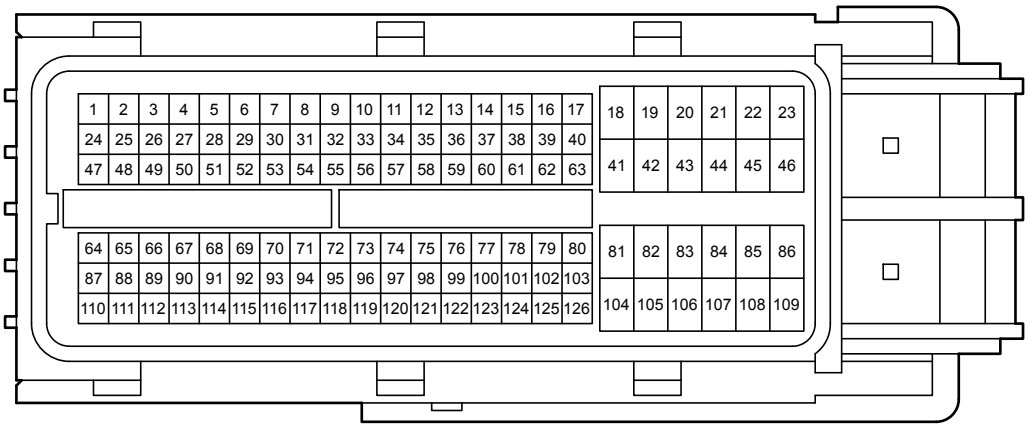


C 46
Black

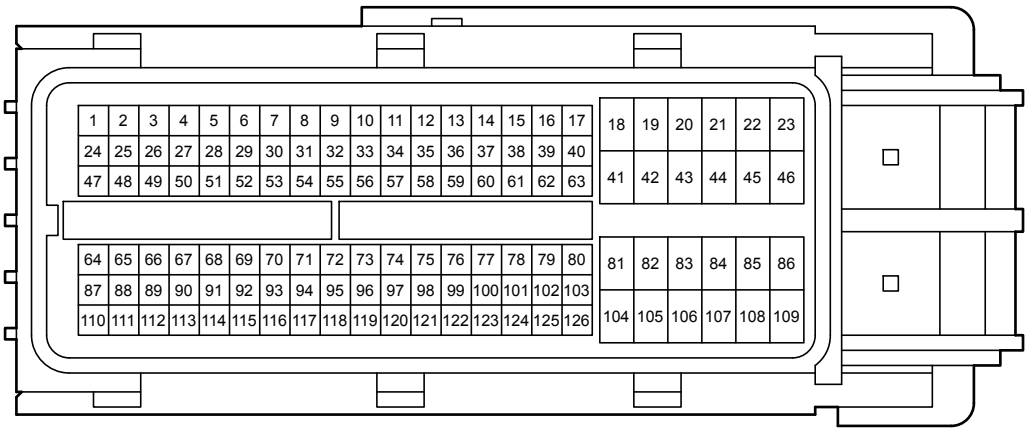

C 53
Black




C130
Gray

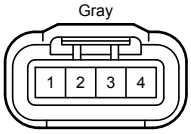

C131
Gray



C132
Gray

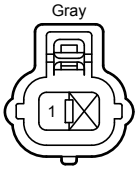


C133
Gray




C134
Gray



C135
Gray

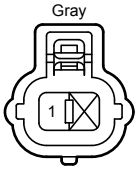

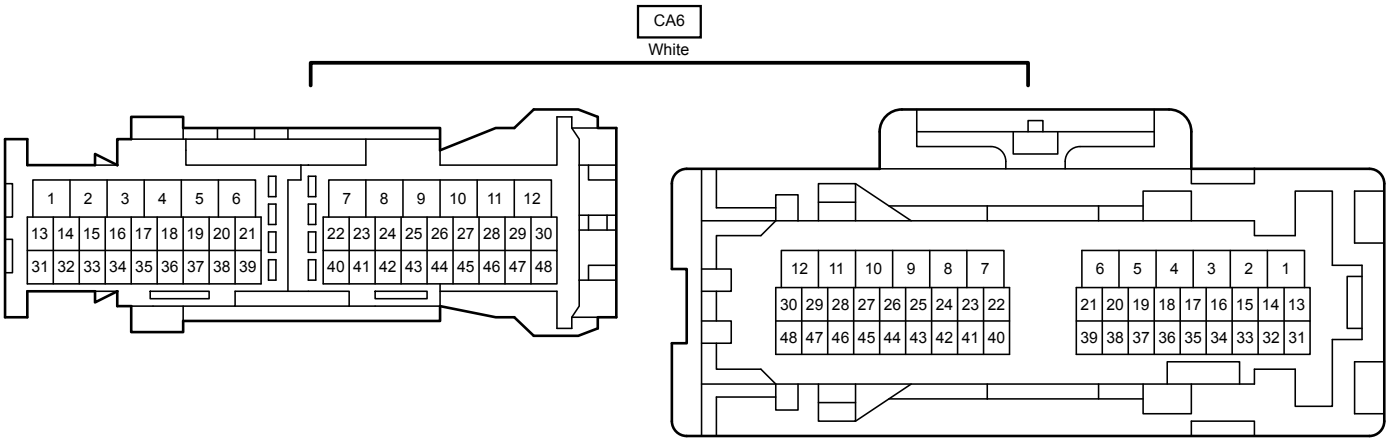
CA6
White
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18 19 20 21
22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39
40 41 42 43 44 45 46 47 48
12 11 10 9 8 7
6 5 4 3 2 1
30 29 28 27 26 25 24 23 22
21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40
39 38 37 36 35 34 33 32 31