




(IG)
10A
INJ
2
1
B
15
CA1
B–R
B–R
B–R
B–R
B–R
B–R
B–R
W–B
W–B
W–B
W–B
C17
Noise Filter
(Ignition Bank 2)
1
C4
Ignition Coil Assembly No. 1
1
4
+B
GND
IGT1
IGF1
3
2
B–Y
G–B
C13
Ignition Coil Assembly No. 4
L–B
C11
Ignition Coil Assembly No. 6
G
C51
Ignition Coil Assembly No. 7
G–W
20
19
21
22
18
C43
Junction
Connector
40
34
104
36
38
IGT4
IGT6
IGT7
C45(B)
ECM


B–R
B–R
B–R
B–R
B–R
W–B
W–B
W–B
W–B
W–B
C15
Ignition Coil Assembly No. 2
C6
Ignition Coil Assembly No. 3
C8
Ignition Coil Assembly No. 5
C53
Ignition Coil Assembly No. 8
+B
GND
IGT2
IGF2
IGT3
IGT5
IGT8
L–B
B
G–R
G–B
R
C43
Junction Connector
C10
Noise Filter
(Ignition Bank 1)
C11
C45(B)
ECM
33
37
105
35
39


C 4
Black

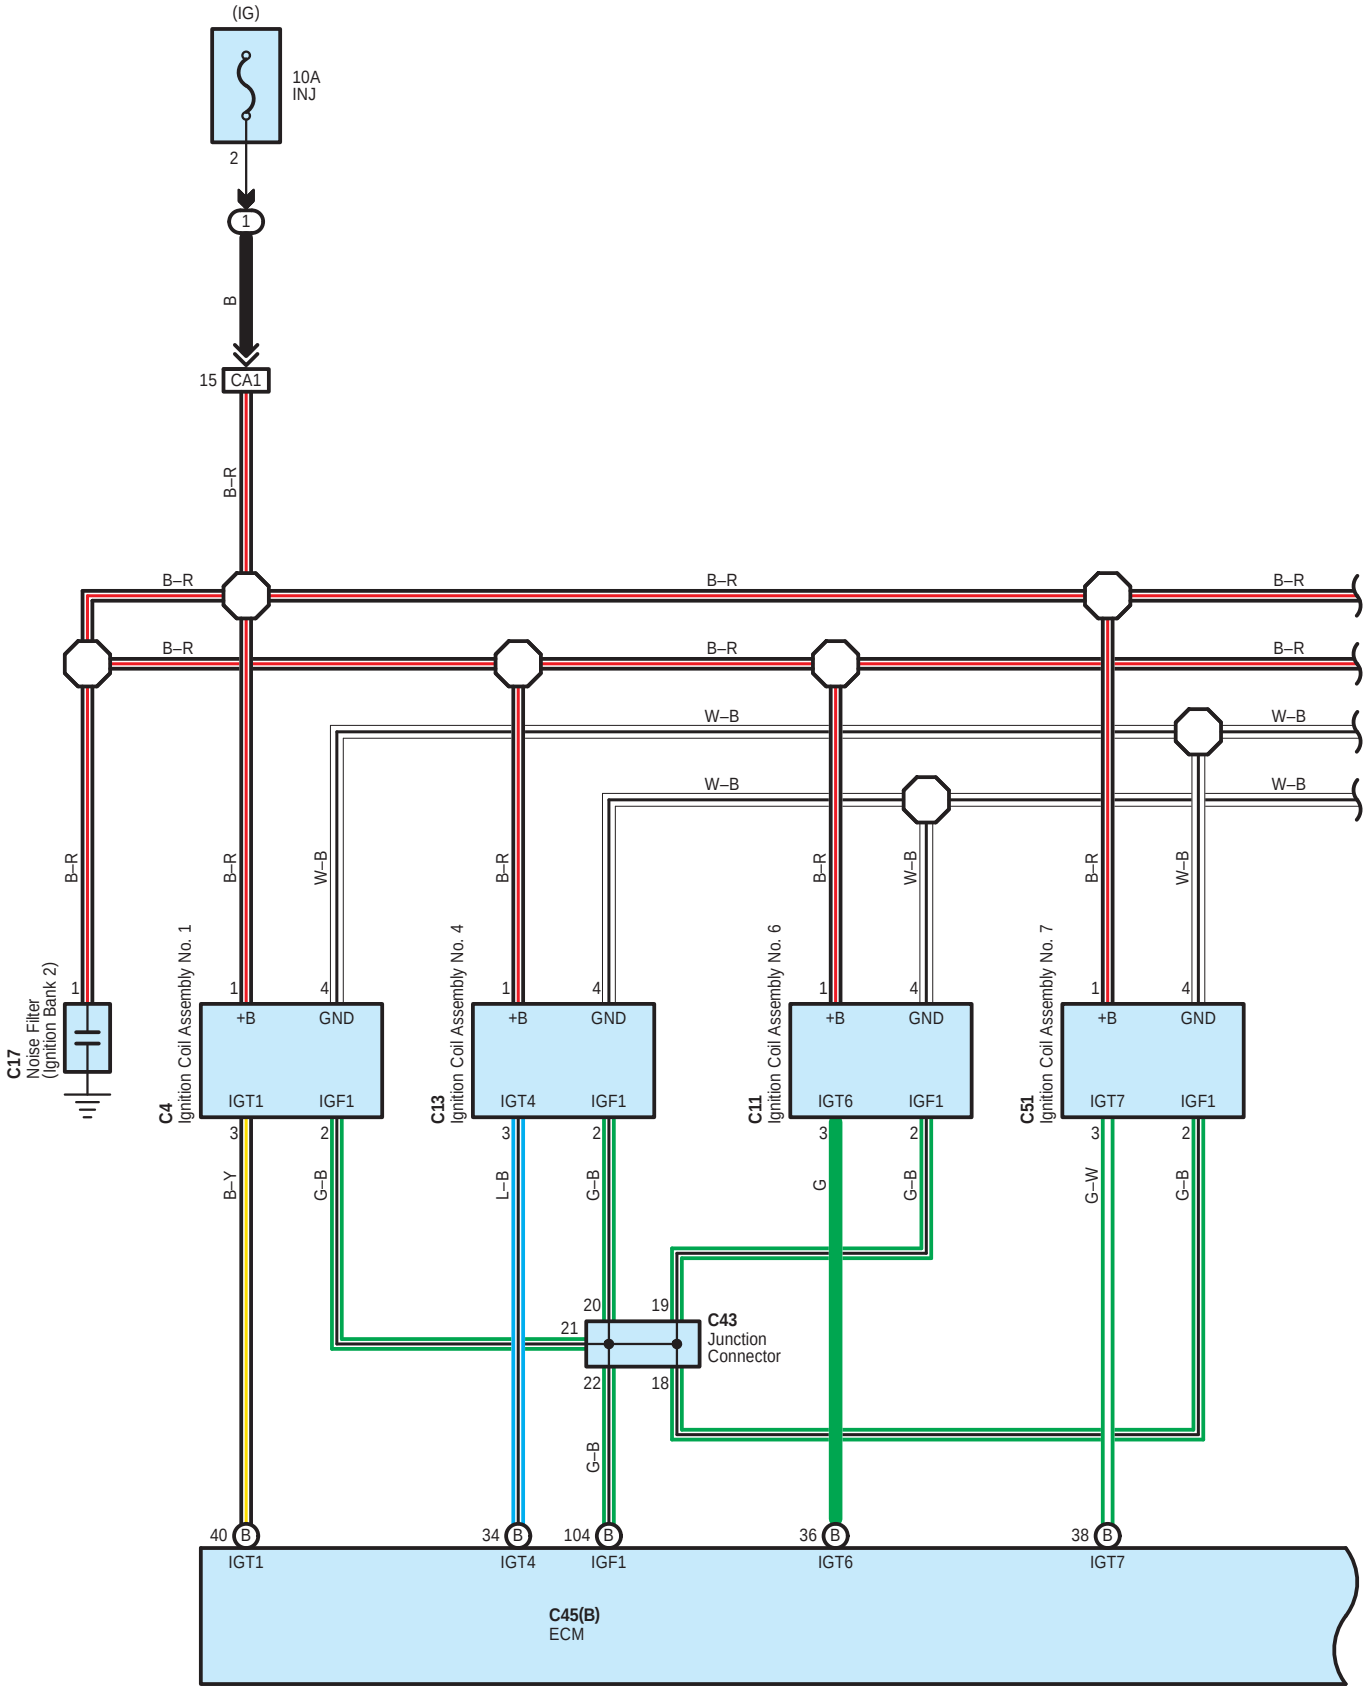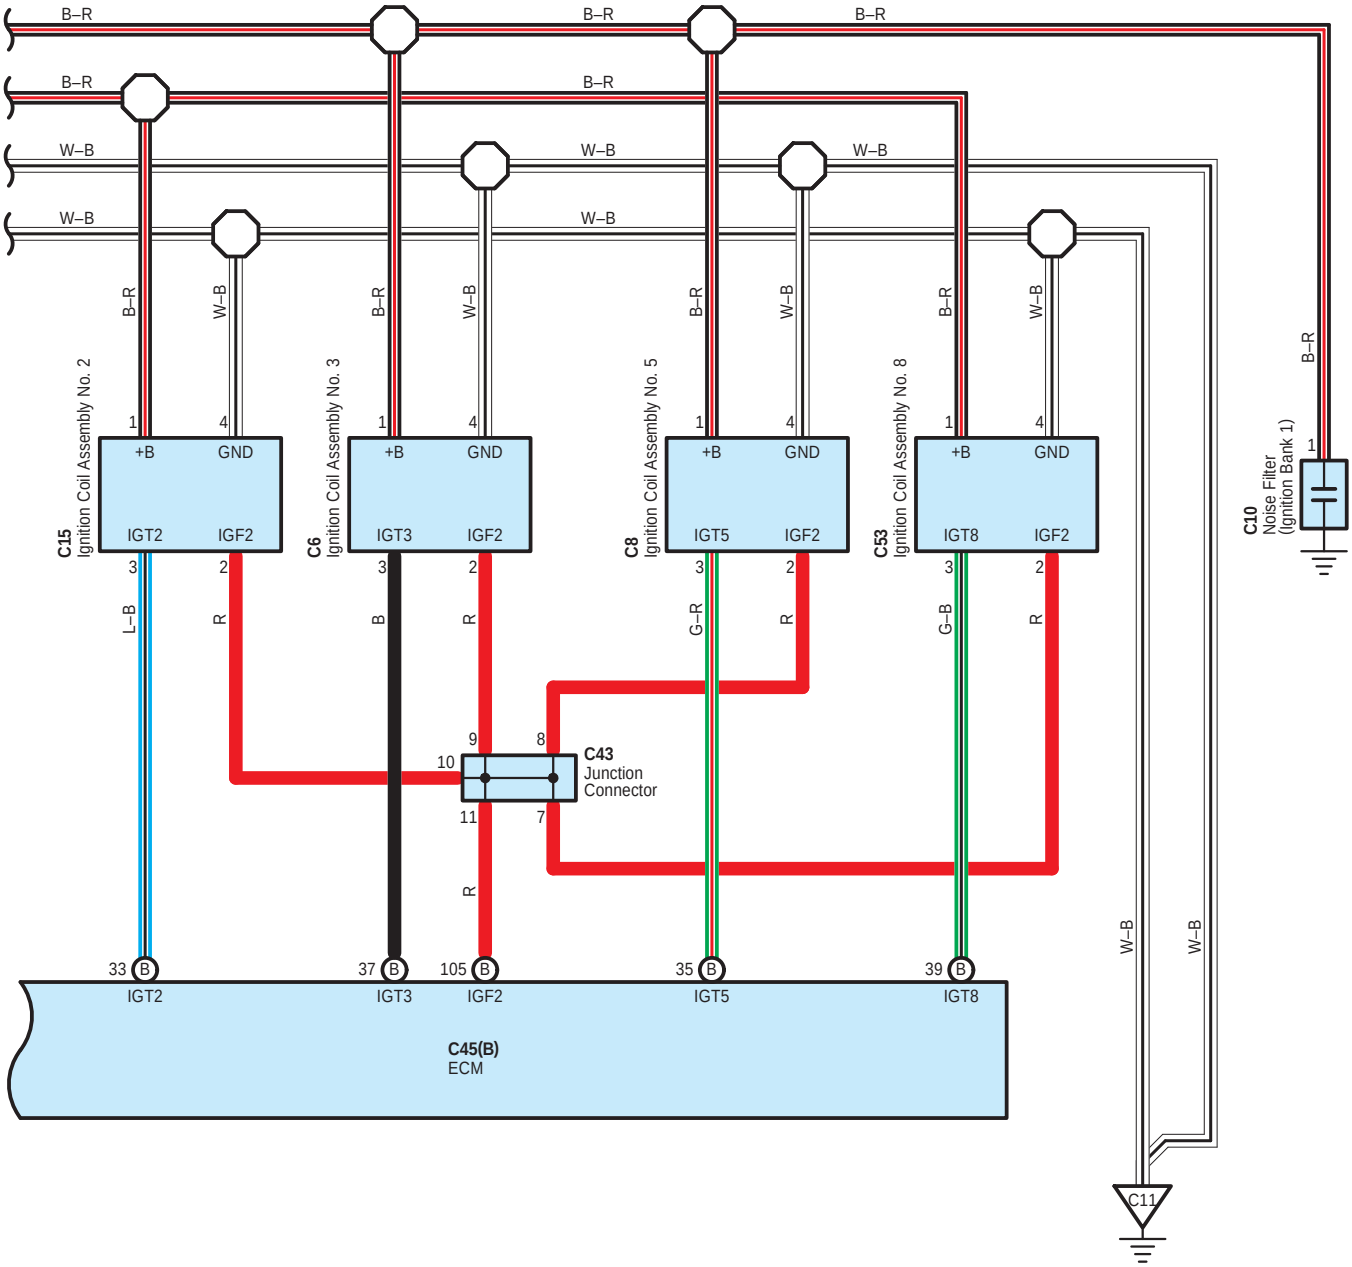


C 6
Black




C 8
Black




C 10
Gray

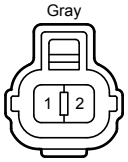


C 11
Black



C 13
Black




C 15
Black




C 17
Gray




C 43
White

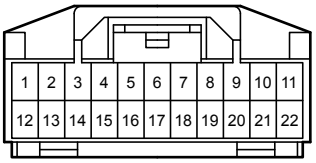


C 45
Black

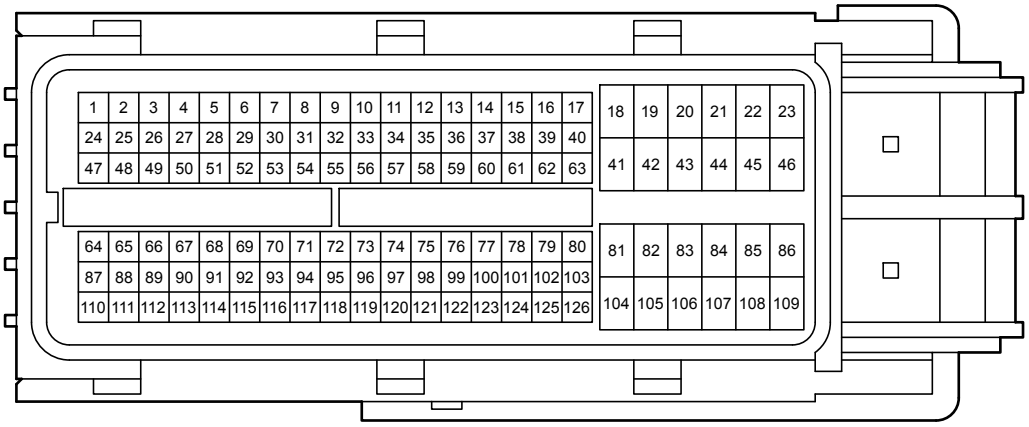

C 51
Black



C 53
Black



CA1
White

