



(IG)
(BAT)
10A
ECU–IG
NO. 2
15A
INV
INVERTER
Relay
1 2J
12 2K
W–B
LA–B
5 A (*4)
1 B (*3)
IG
GND
AC1
AC2
K44(A), K63(B)
Voltage
Inverter Assembly
1 A
4 B
4 A
3 B
8 A (*4)
7 B (*3)
W–B
LA–W
LA–B
5 A
1 B
8 A (*4)
2 B (*3)
ACC1
ACC2
E
K45(A), K61(B)
Power Outlet
Socket Assembly
1 A (*4)
5 B (*3)
W–B
W–B
5
K52
Junction
Connector
E5
K5
W–B
(BAT)
15A
P/OUTLET
P/OUTLET
Relay
10 2K
2 2J
1 2J
G
G
G
G
1
B
E
2
K41
Rear Power Outlet
Socket Assembly
E127
Rear Power Outlet
Socket Assembly
E46
Front Power Outlet
Socket Assembly
W–B
W–B
W–B
(*6)
W–B
(*5)
W–B
E5

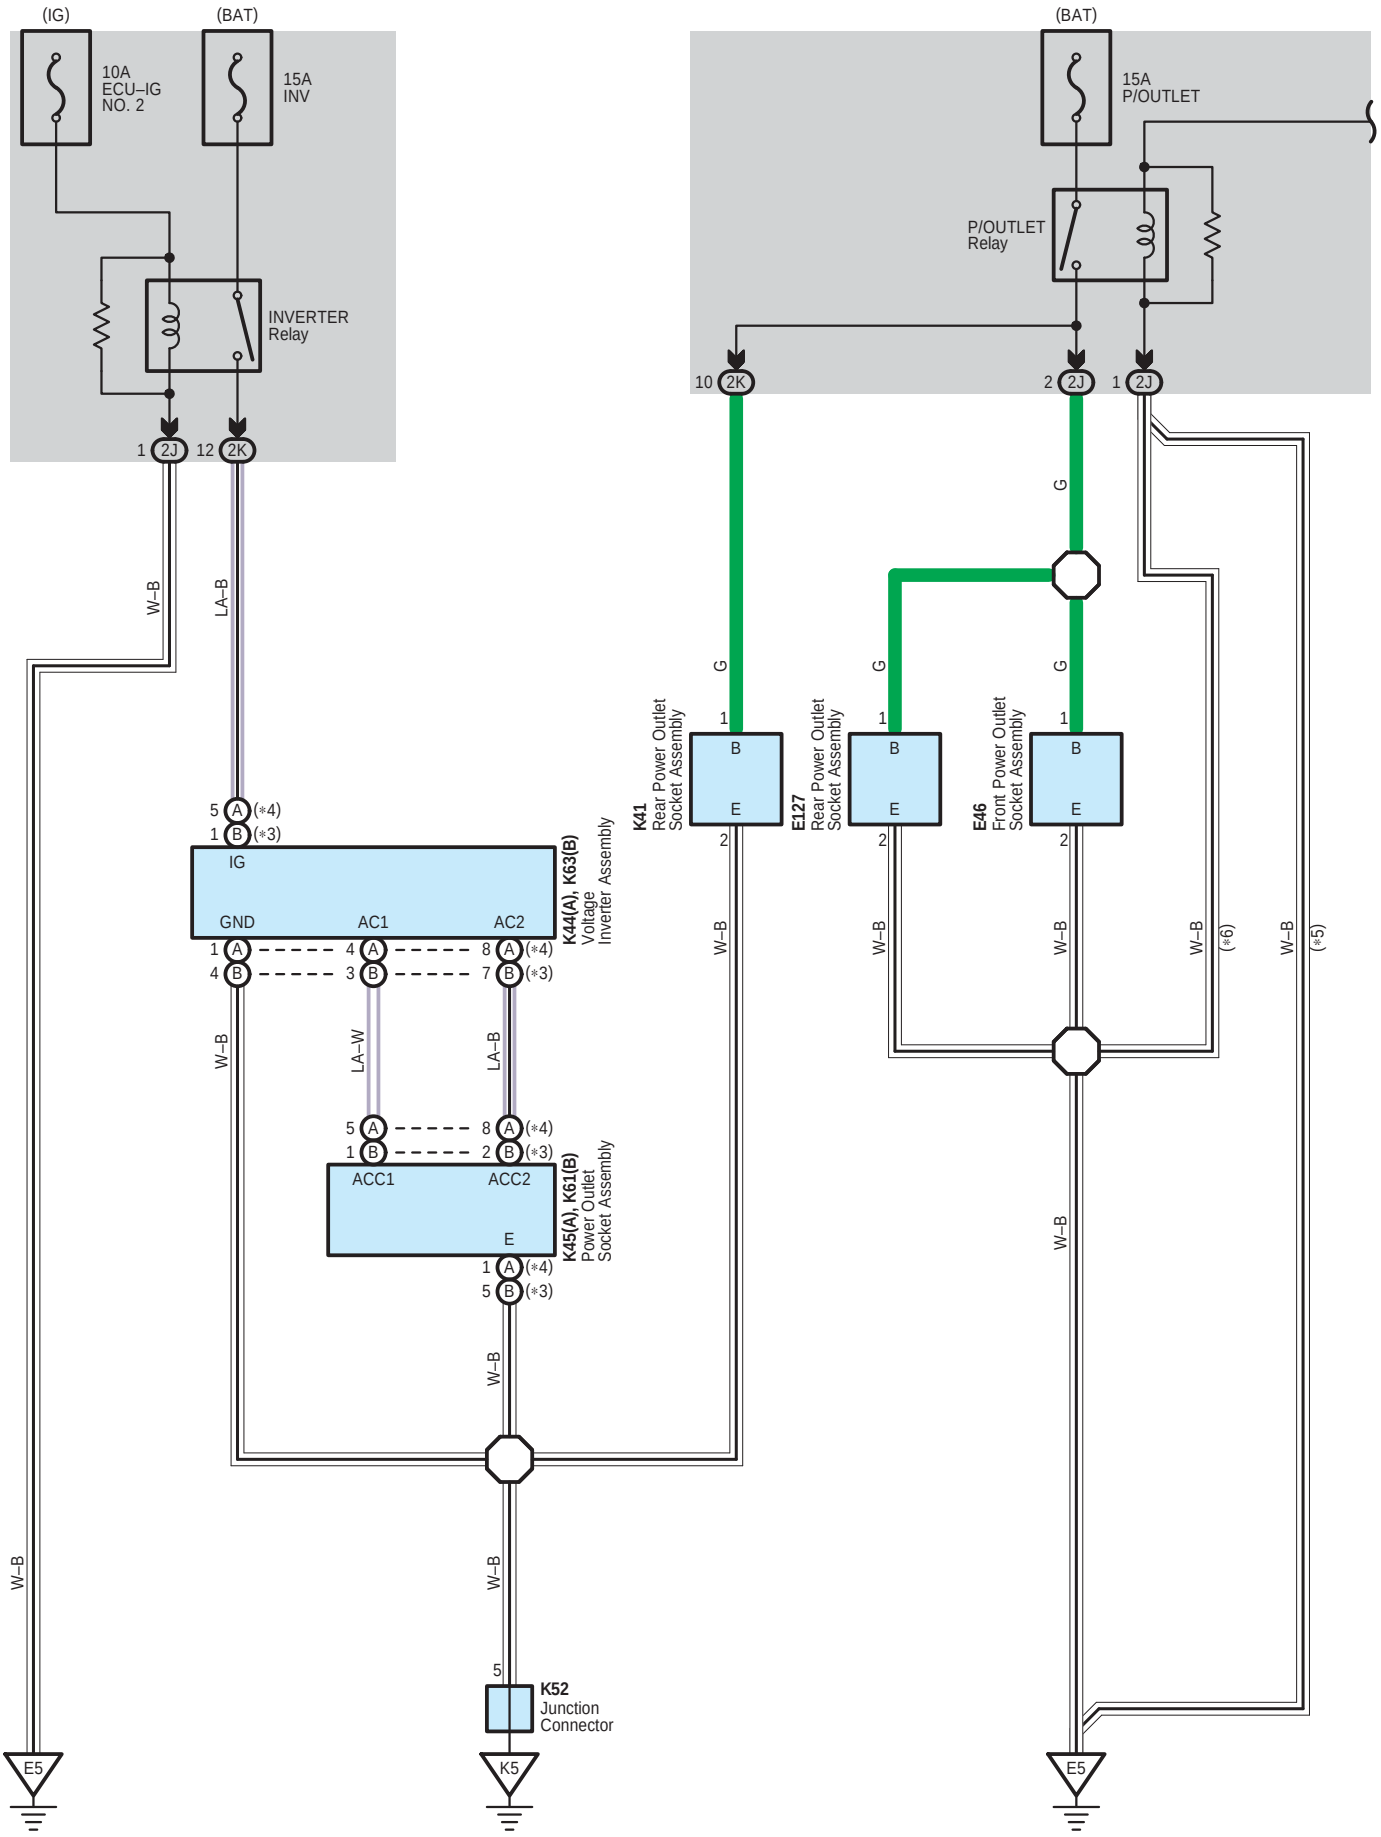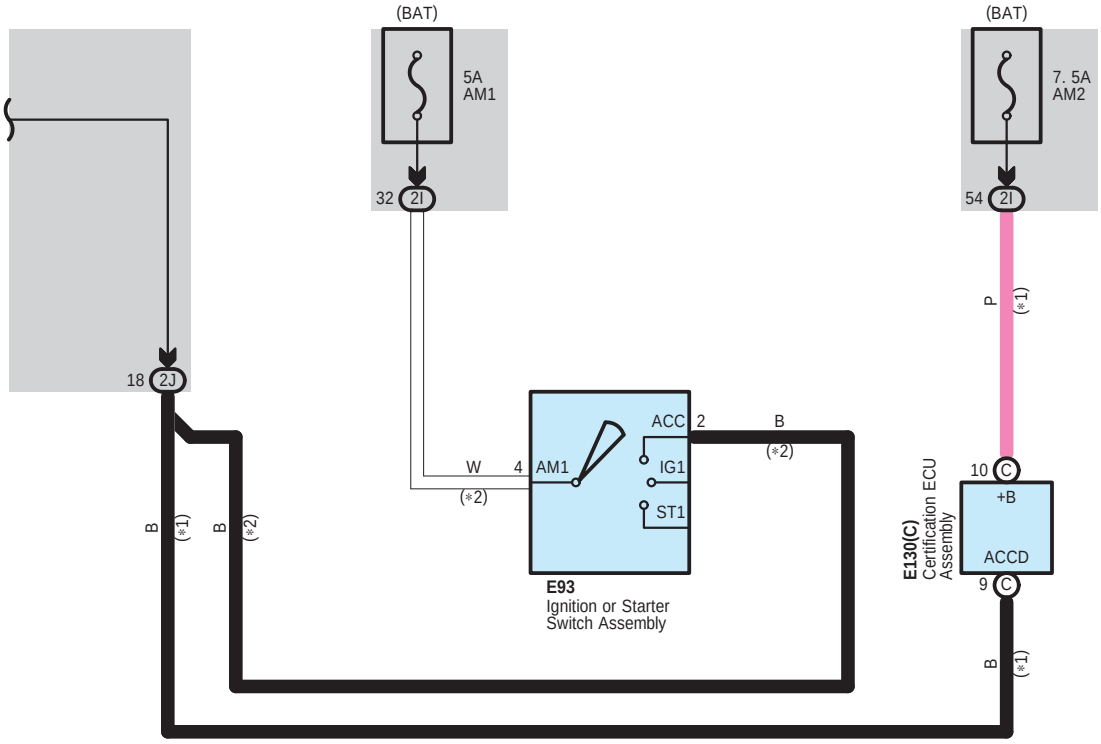


* 1 : w/ Entry & Start System
* 2 : w/o Entry & Start System
* 3 : w/ Trailer Towing
* 4 : w/o Trailer Towing
* 5 : LHD w/ Entry & Start System
* 6 : RHD, LHD w/o Entry & Start System


E 46
White




E 93
White

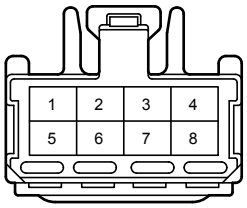


E127
White




E130
Black

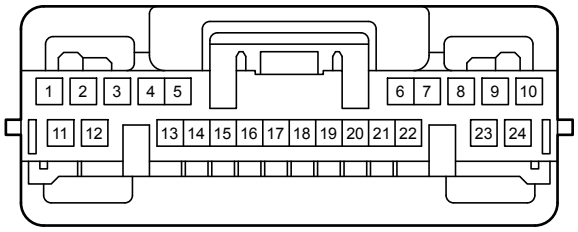


K 41
White




K 44
White

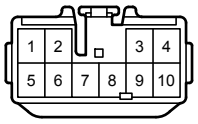


K 45
Black

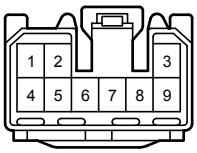


K 52
Black

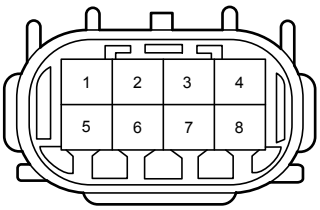


K 61
Black

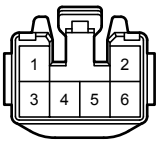


K 63
White



2I
White

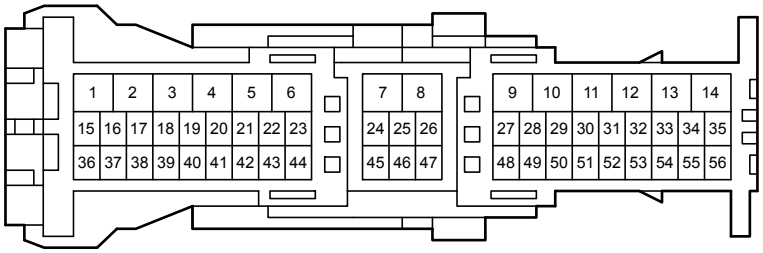

2J
White

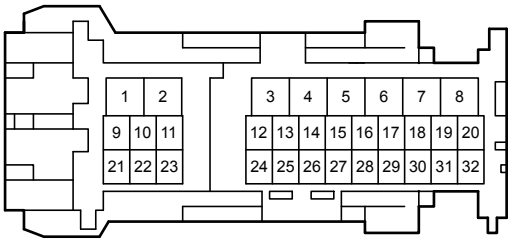

2K
White

