




B
L–R
B
DEFOG Relay
5A DEF NO. 2
RR A/C Relay
B–Y
7. 5A RR A/C NO. 2
50A AHC (*7) 30A POWER (*8)
30A DEFOG
50A RR A/C
30A H–LP CLN
40A SUB BATT
50A PTC–3
50A PTC–2
1D
1L
1I
1E
1J
100A SUB–R/B
150A LH–J/B
30A PBD
50A HTR
30A AMP1
10A RAD NO. 1
5A ECU–B1
10A DOME1
180A ALT (Except 1GR–FE) 140A ALT (1GR–FE)
50A A/PUMP NO. 1 (*15) 80A GLOW1 (Diesel)
80A GLOW2
SHORT PIN
50A ABS1
30A ABS2
30A ST
20A EFI MAIN 2(*15) 20A F/PMP(*10)
(*1)
B
(Diesel)
Battery
Battery
B
(*1)

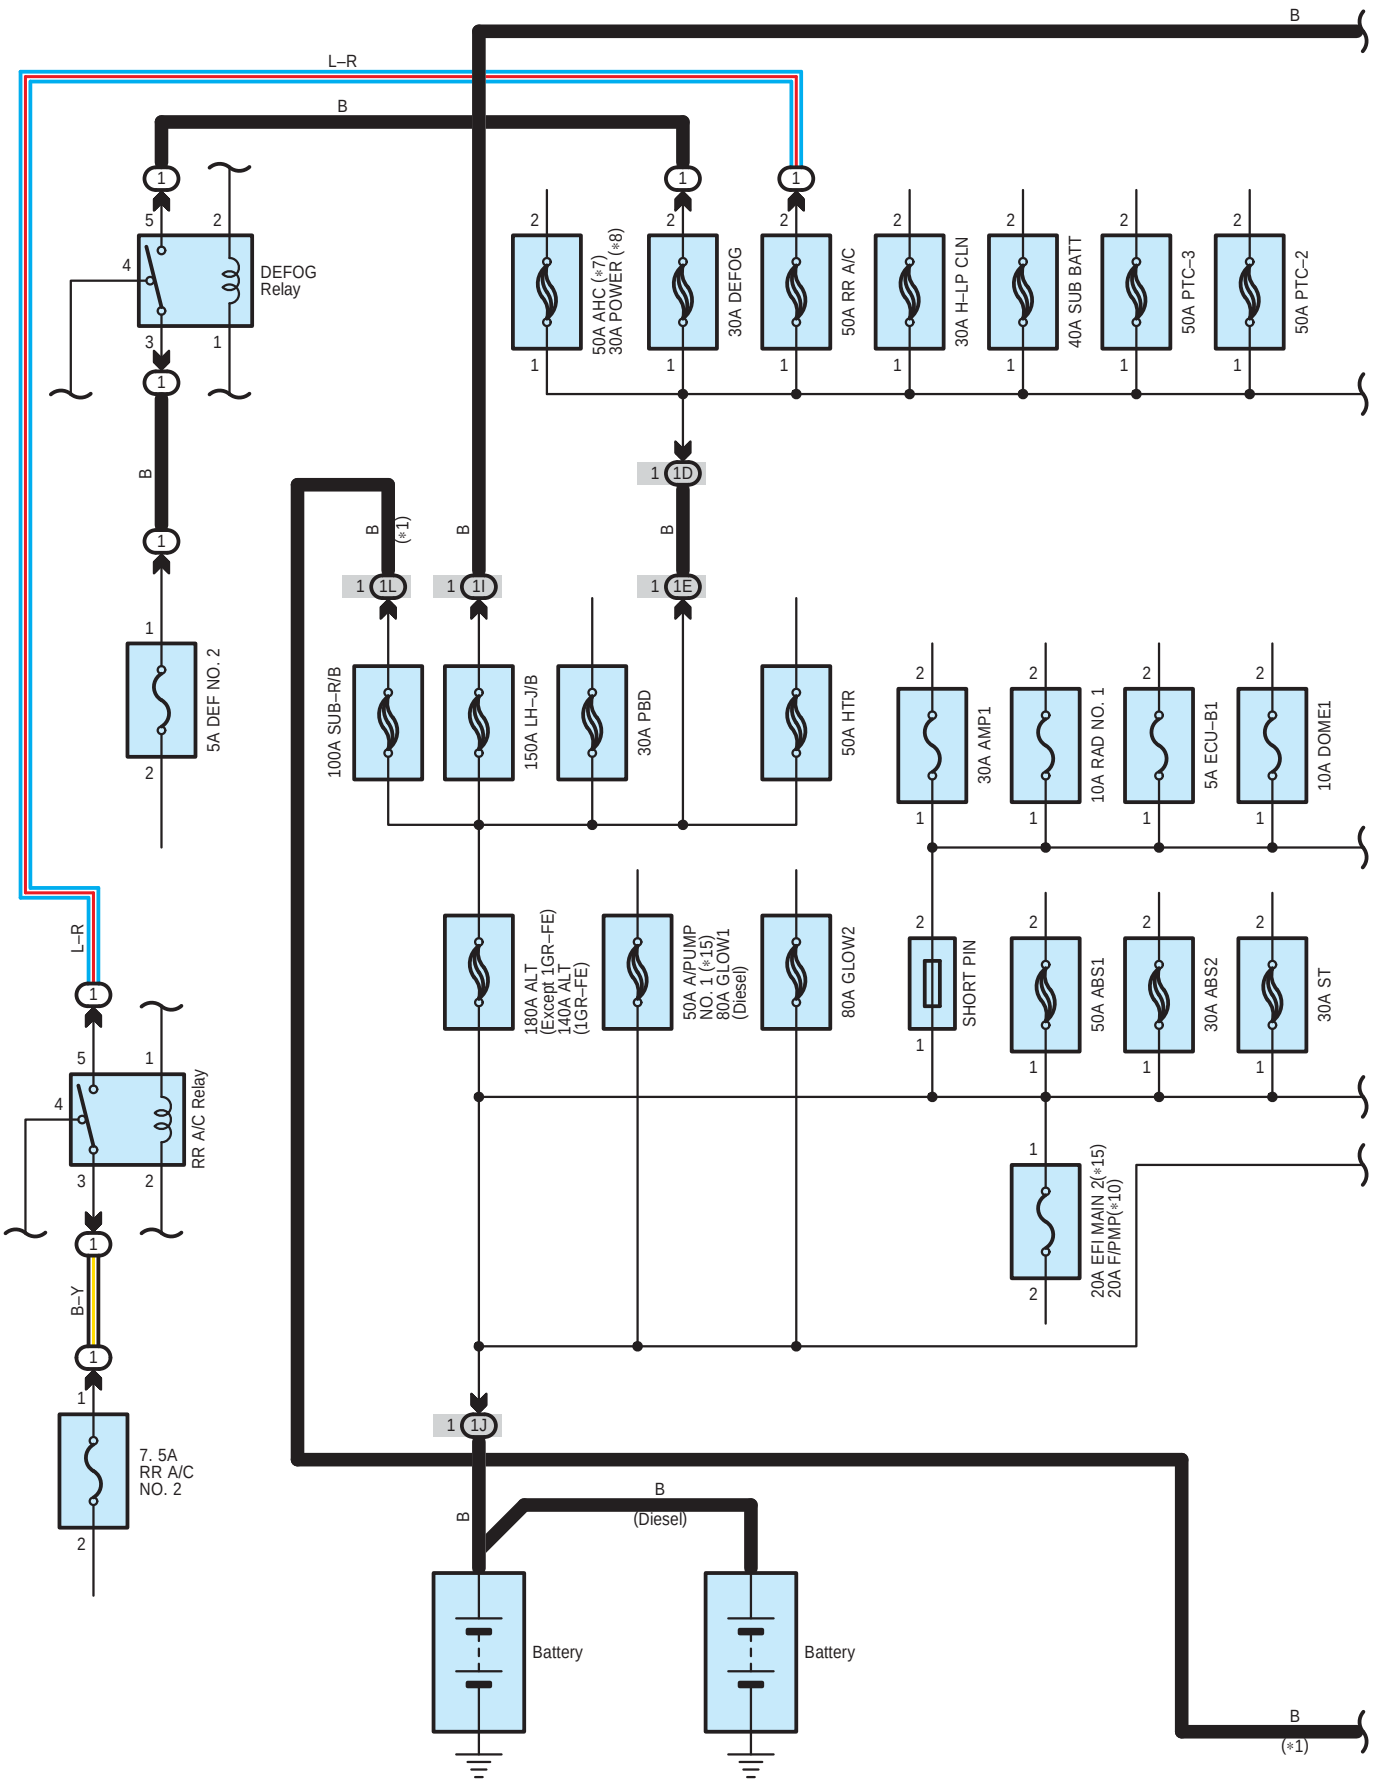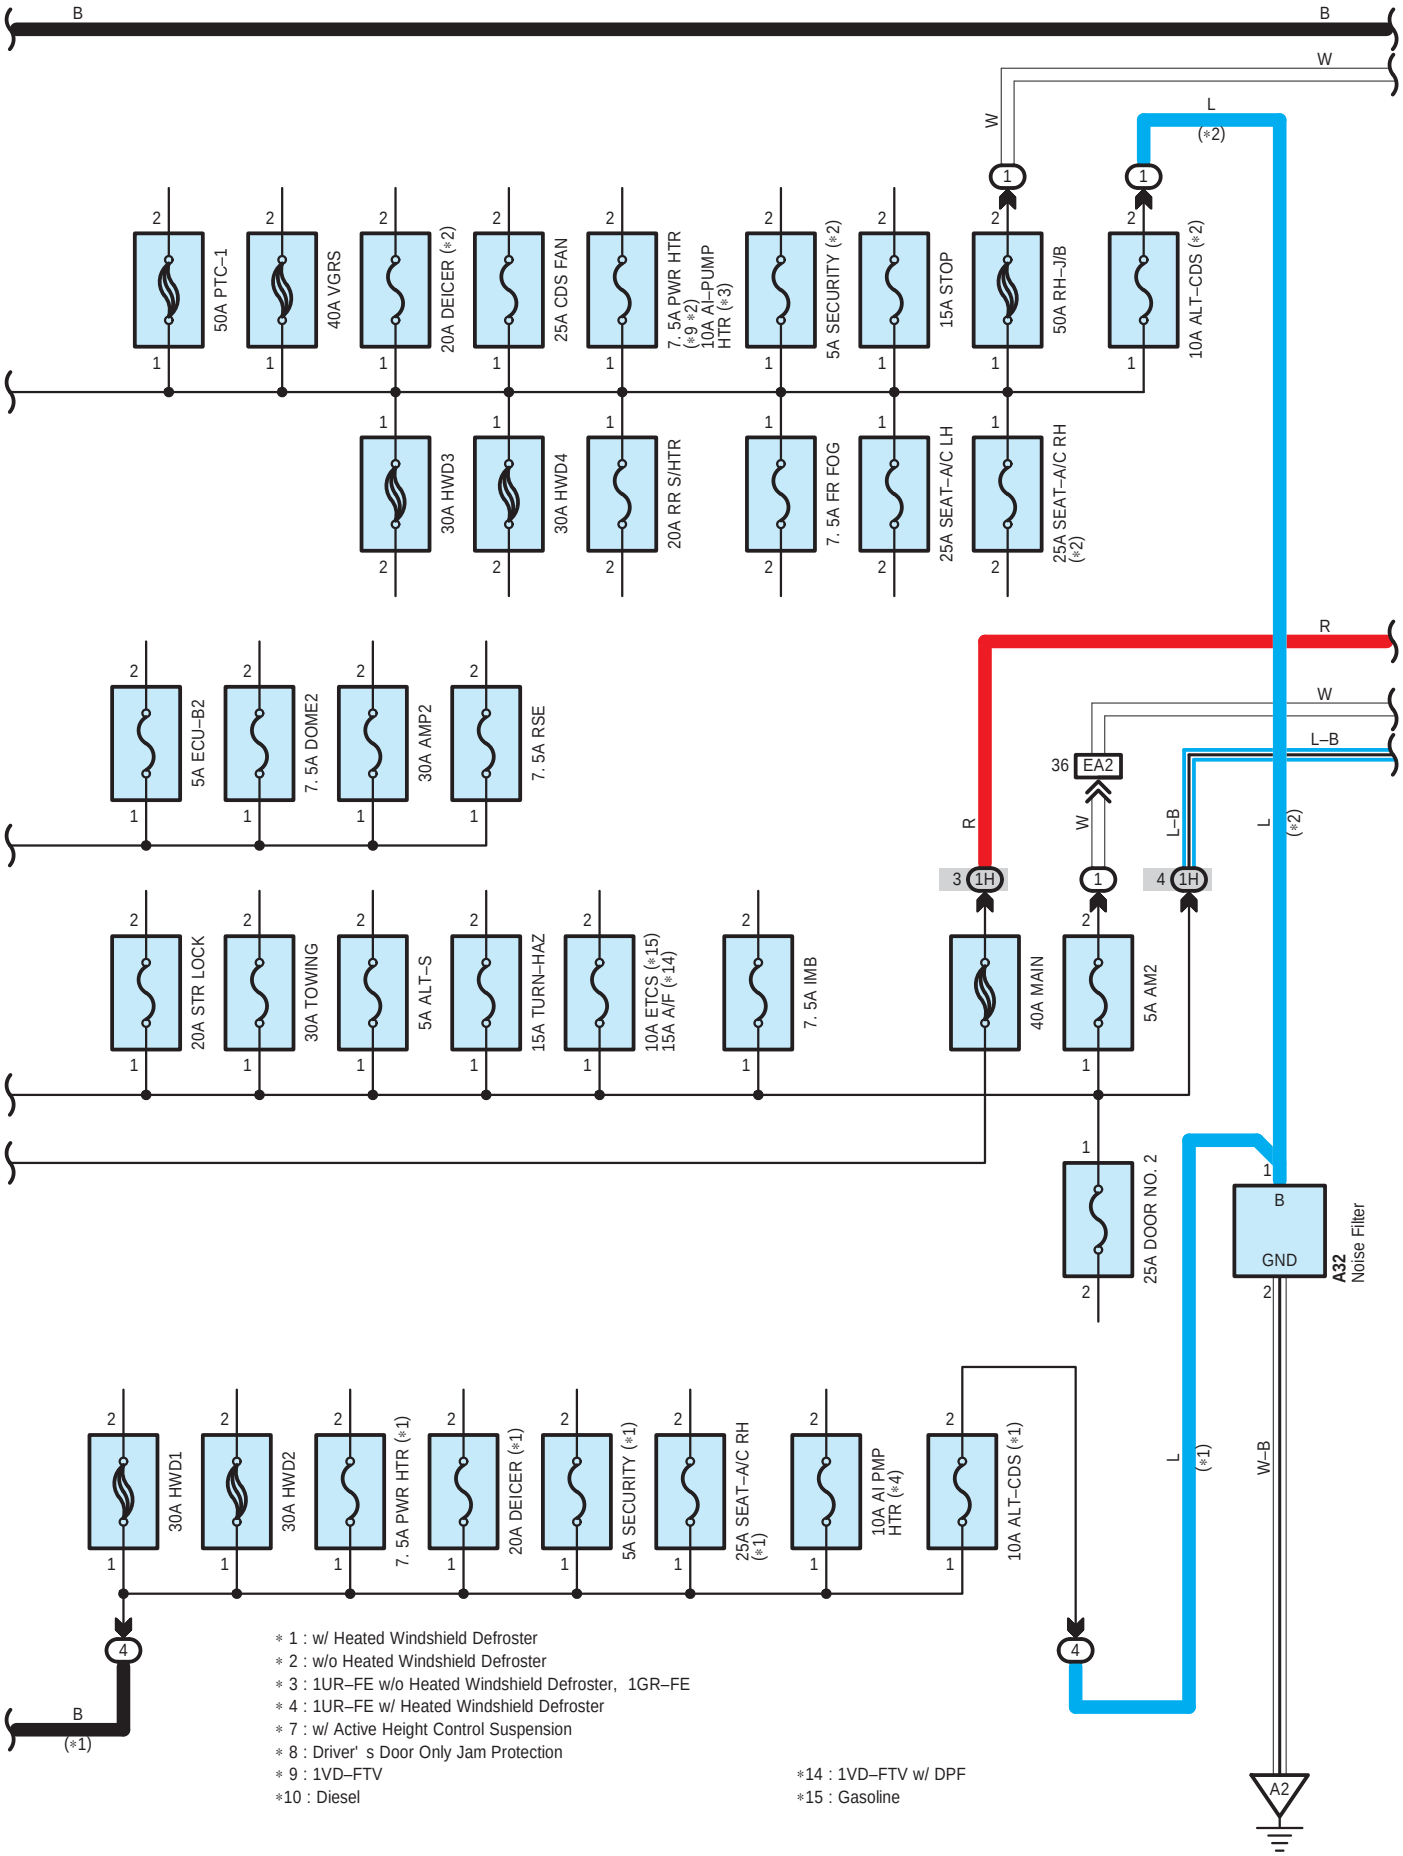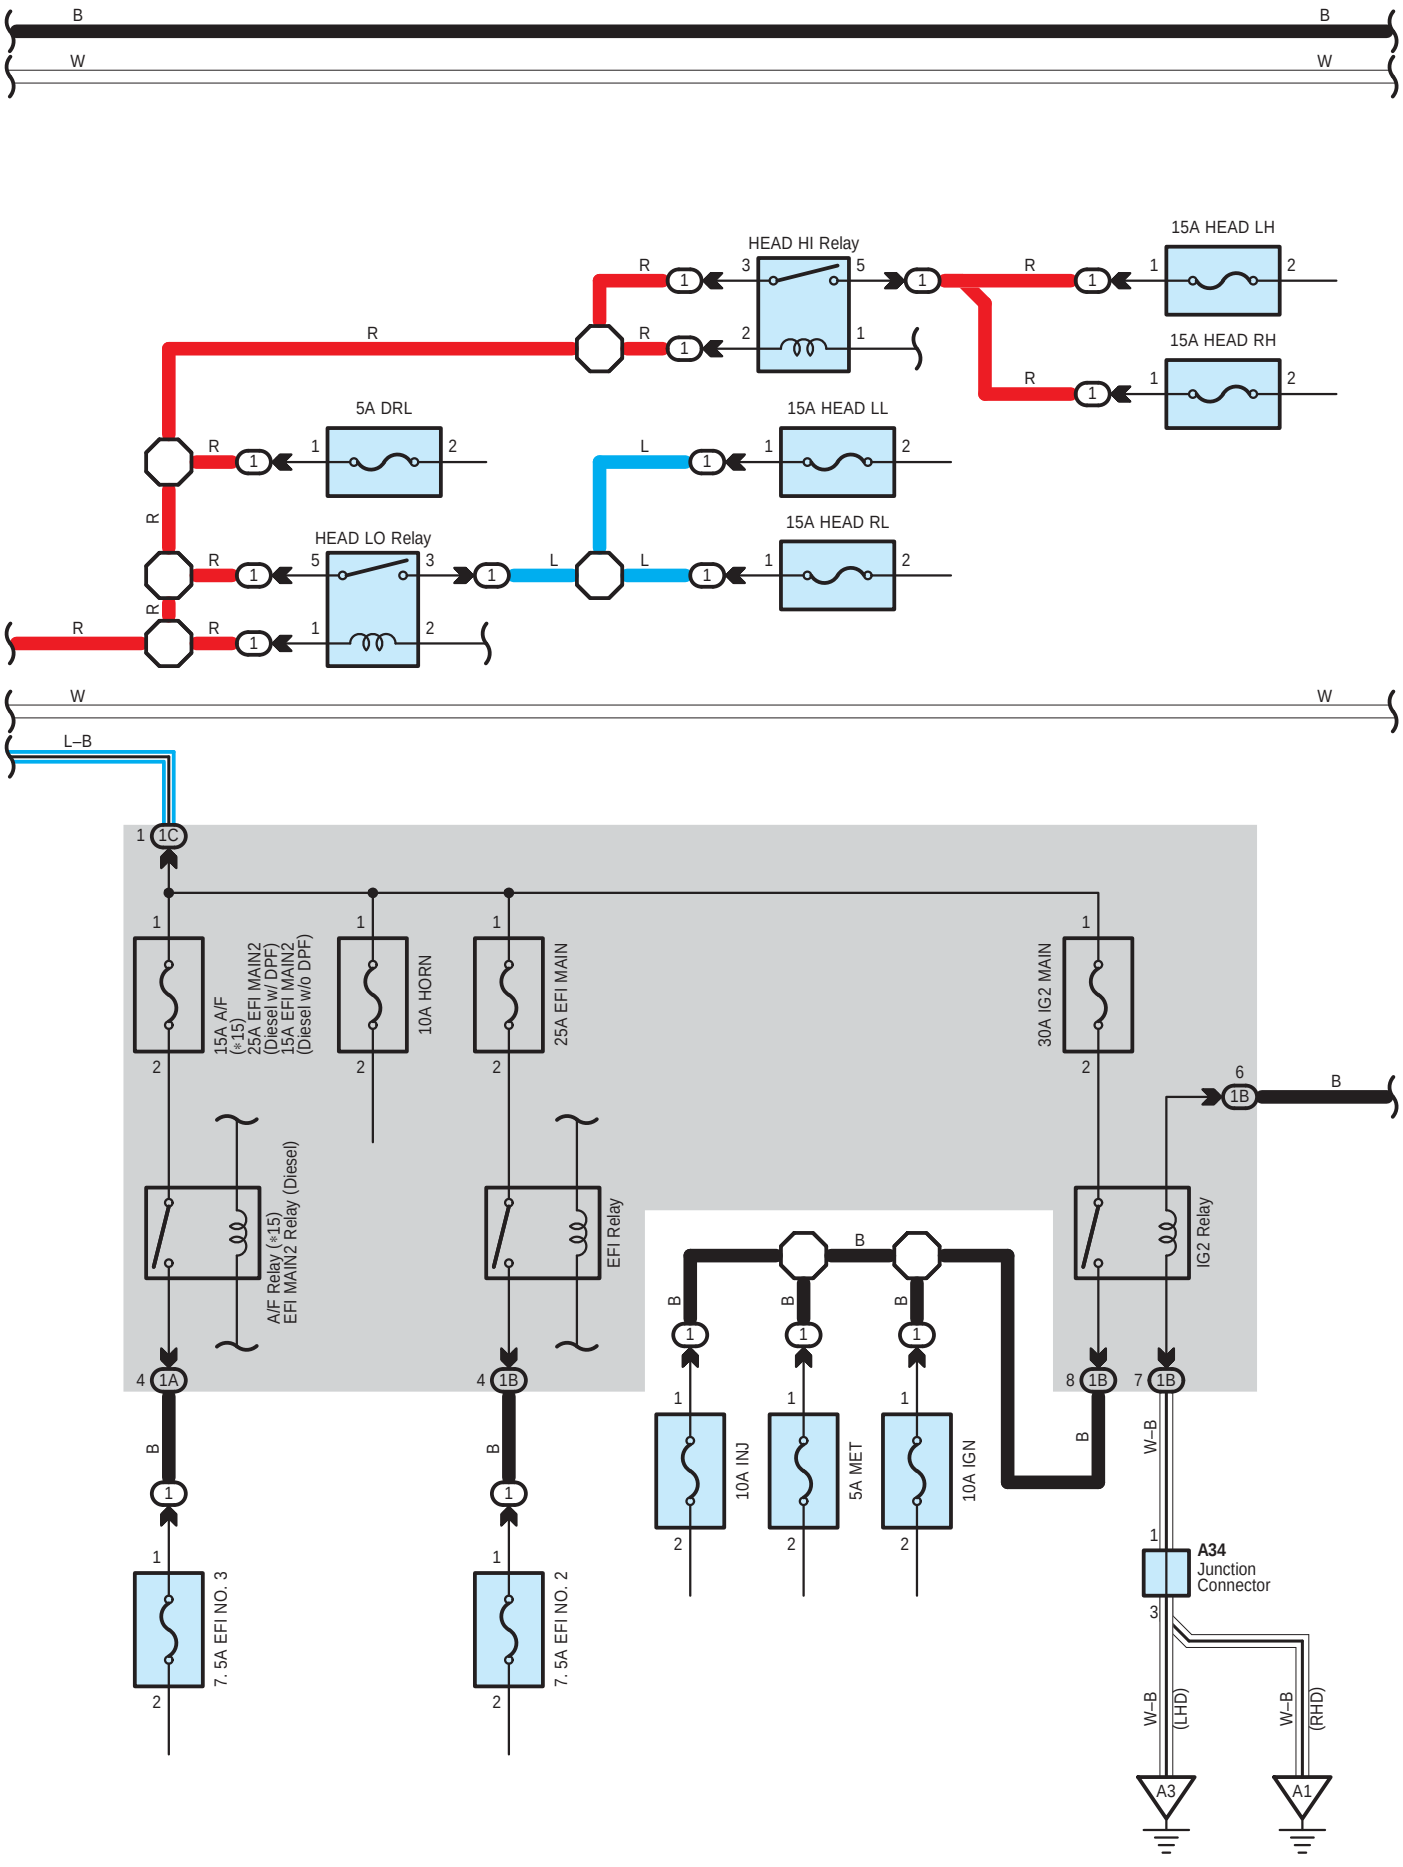



* 1 : w/ Heated Windshield Defroster
* 2 : w/o Heated Windshield Defroster
* 3 : 1UR–FE w/o Heated Windshield Defroster, 1GR–FE
* 4 : 1UR–FE w/ Heated Windshield Defroster
* 7 : w/ Active Height Control Suspension
* 8 : Driver' s Door Only Jam Protection
* 9 : 1VD–FTV
*10 : Diesel
*14 : 1VD–FTV w/ DPF
*15 : Gasoline


B
W
HEAD HI Relay
15A HEAD LH
15A HEAD RH
5A DRL
15A HEAD LL
15A HEAD RL
HEAD LO Relay
L–B
15A A/F (*15) 25A EFI MAIN2 (Diesel w/ DPF) 15A EFI MAIN2 (Diesel w/o DPF)
10A HORN
25A EFI MAIN
30A IG2 MAIN
A/F Relay (*15) EFI MAIN2 Relay (Diesel)
EFI Relay
IG2 Relay
10A INJ
5A MET
10A IGN
7. 5A EFI NO. 3
7. 5A EFI NO. 2
W–B
A34 Junction Connector
(LHD)
(RHD)
A3
A1

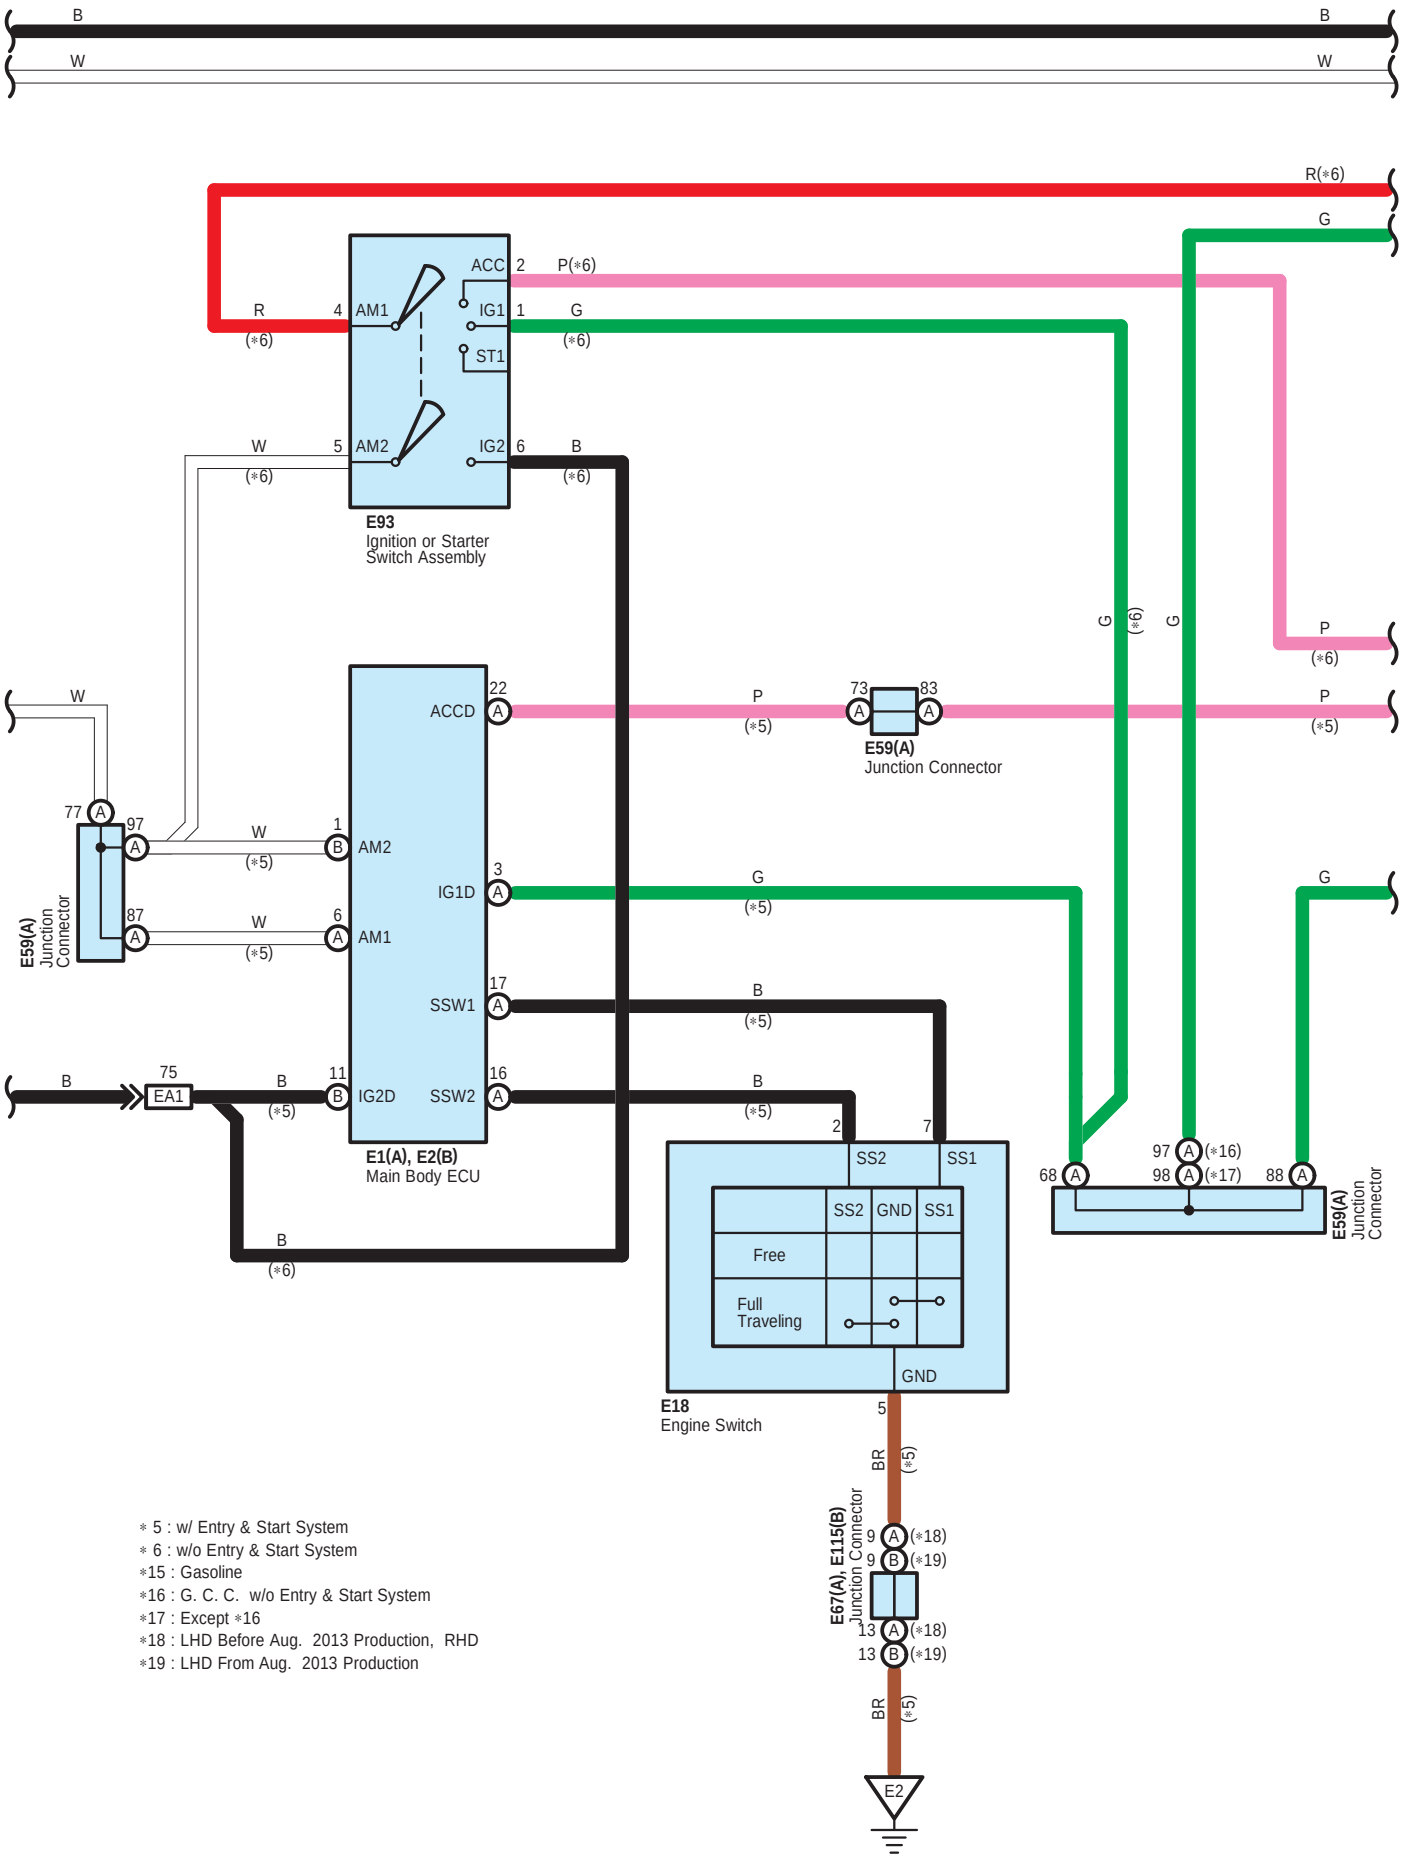


∗ 5 : w/ Entry & Start System
∗ 6 : w/o Entry & Start System
∗15 : Gasoline
∗16 : G. C. C. w/o Entry & Start System
∗17 : Except ∗16
∗18 : LHD Before Aug. 2013 Production, RHD
∗19 : LHD From Aug. 2013 Production

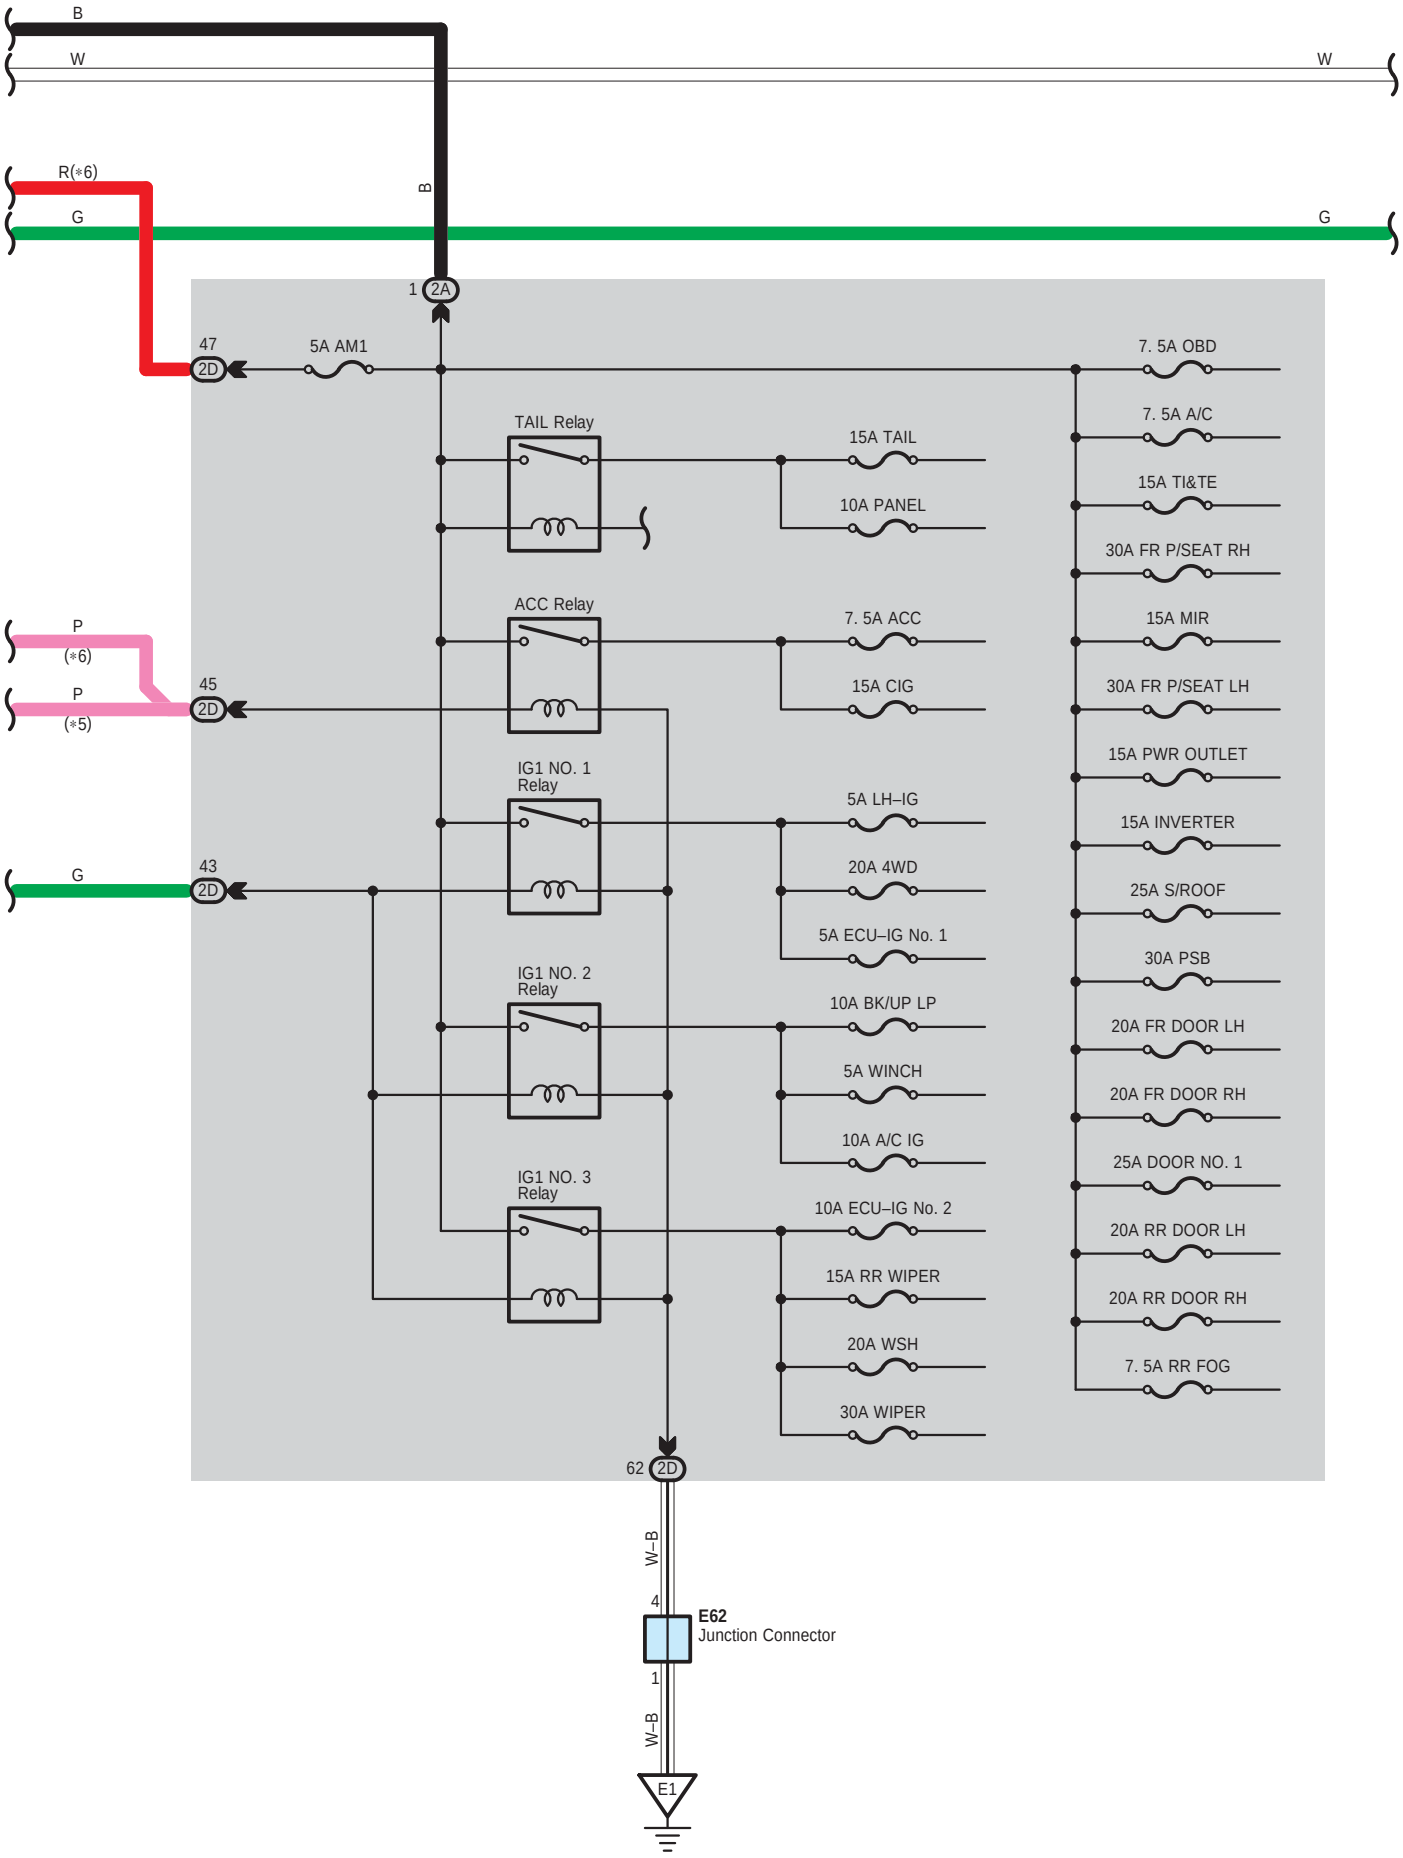

B
W
W
R(*6)
G
G
B
1 2A
47 2D
5A AM1
45 2D
P (*6)
P (*5)
G
43 2D
TAIL Relay
ACC Relay
IG1 NO. 1 Relay
IG1 NO. 2 Relay
IG1 NO. 3 Relay
15A TAIL
10A PANEL
7. 5A ACC
15A CIG
5A LH–IG
20A 4WD
5A ECU–IG No. 1
10A BK/UP LP
5A WINCH
10A A/C IG
10A ECU–IG No. 2
15A RR WIPER
20A WSH
30A WIPER
7. 5A OBD
7. 5A A/C
15A TI&TE
30A FR P/SEAT RH
15A MIR
30A FR P/SEAT LH
15A PWR OUTLET
15A INVERTER
25A S/ROOF
30A PSB
20A FR DOOR LH
20A FR DOOR RH
25A DOOR NO. 1
20A RR DOOR LH
20A RR DOOR RH
7. 5A RR FOG
62 2D
W–B
4
E62
Junction Connector
1
W–B
E1

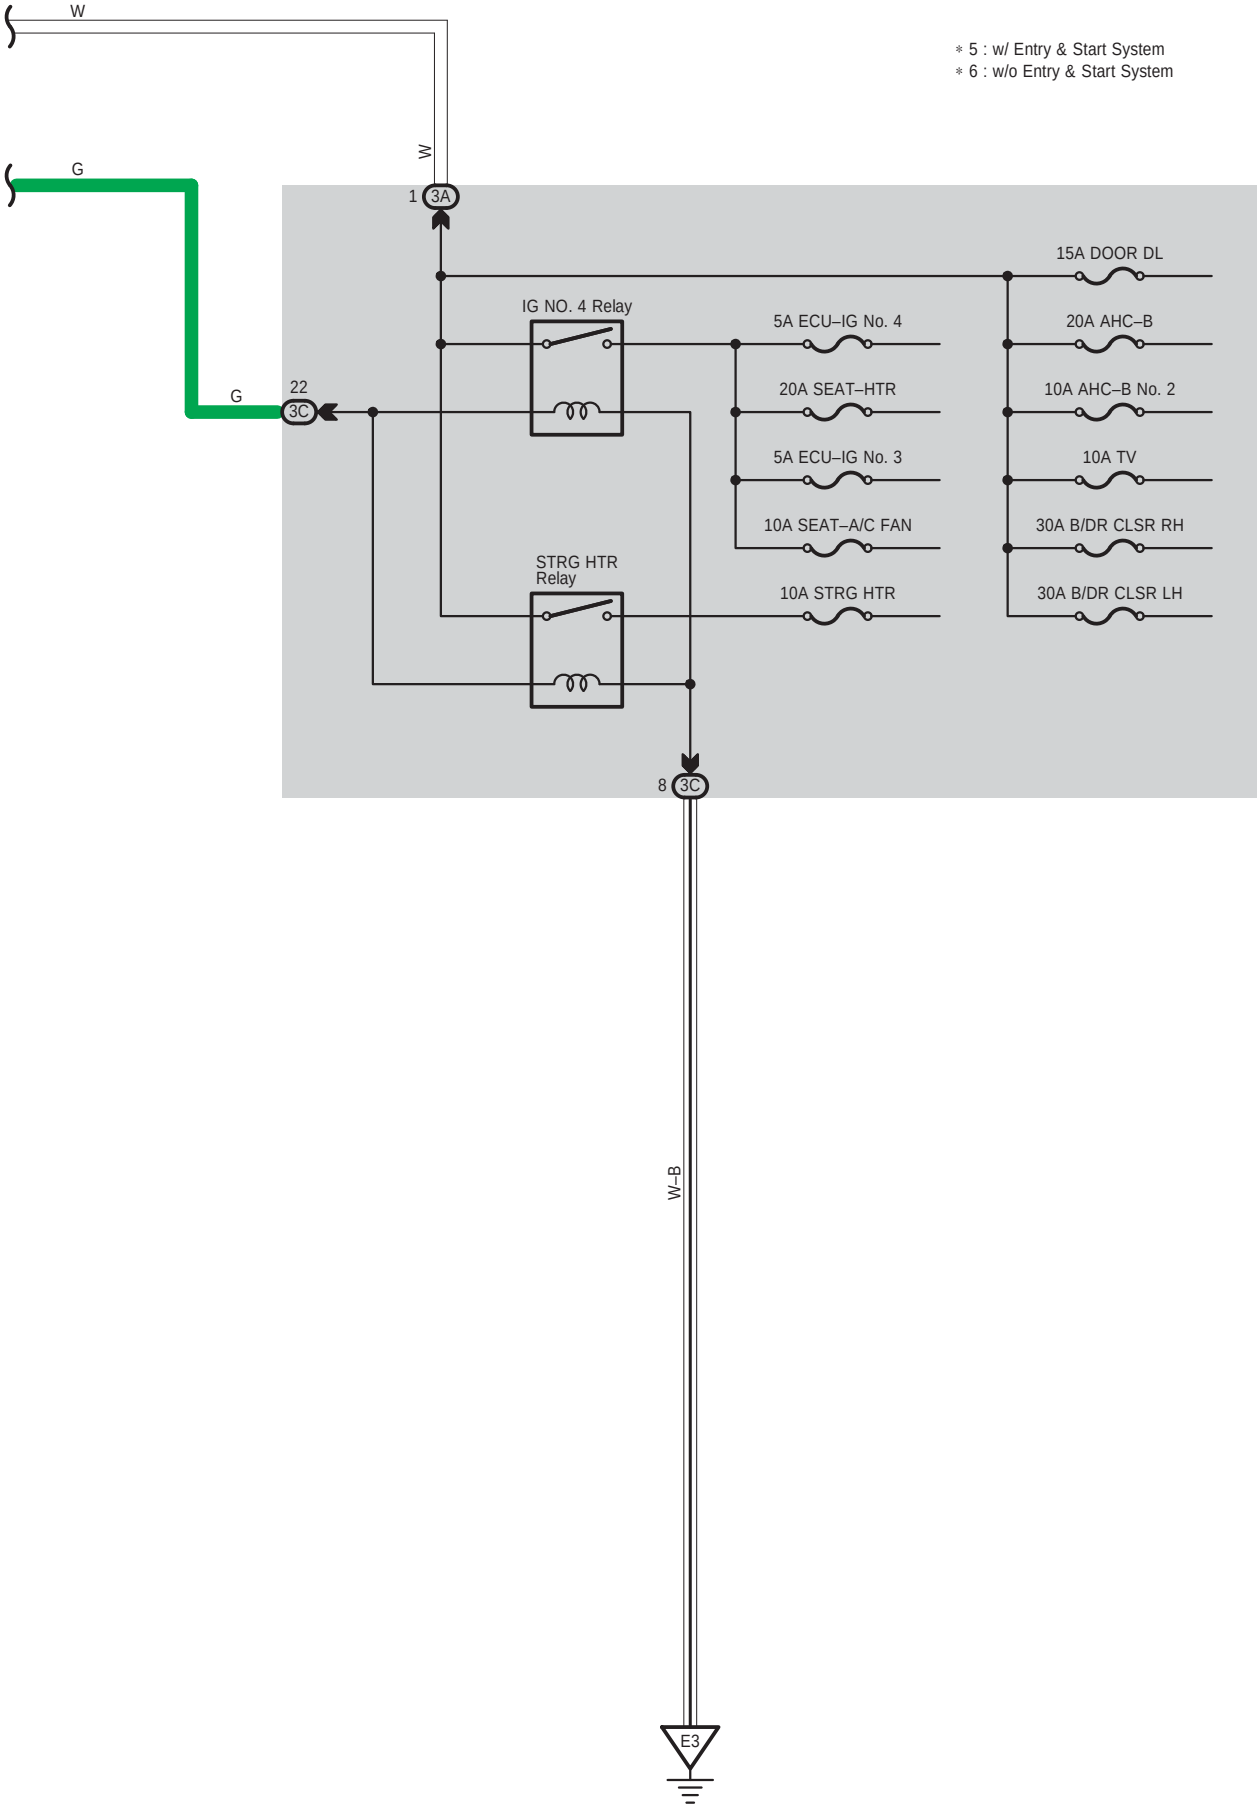
W
G
W
1 3A
∗ 5 : w/ Entry & Start System
∗ 6 : w/o Entry & Start System
15A DOOR DL
IG NO. 4 Relay
5A ECU–IG No. 4
20A AHC–B
G
22
3C
20A SEAT–HTR
10A AHC–B No. 2
5A ECU–IG No. 3
10A TV
10A SEAT–A/C FAN
30A B/DR CLSR RH
STRG HTR
Relay
10A STRG HTR
30A B/DR CLSR LH
8 3C
W–B
E3


A 32
Black

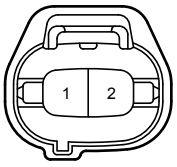


A 34
White

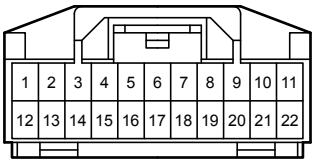


E 1
White

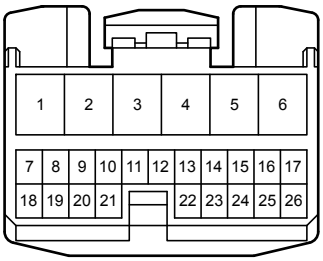


E 2
White

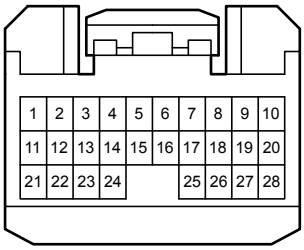


E 18
Black

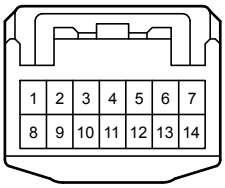


E 59

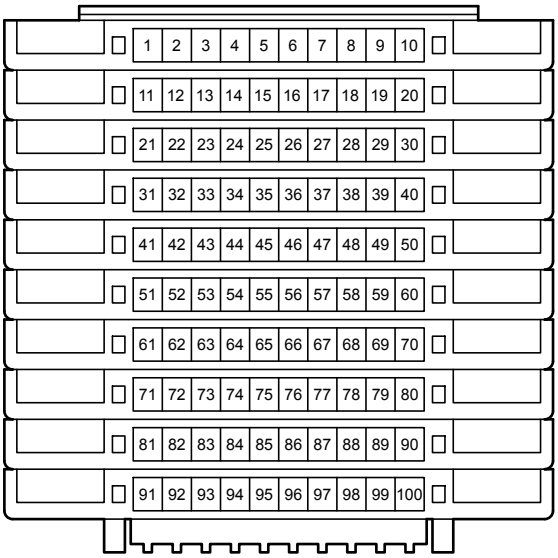


E 62
White

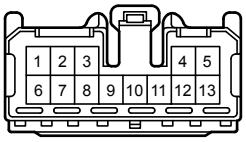


E 67
White

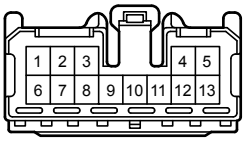


E 93
White

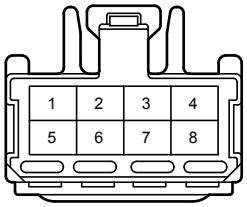


E115
White

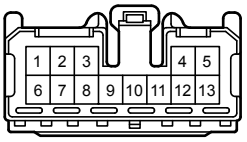

1A
White

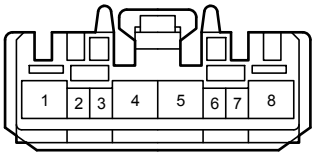


1B
White

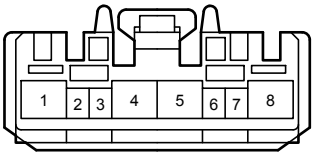


1C
White




1D




1E




1H
White

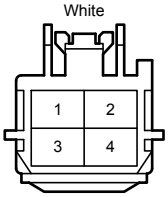


1I




1J




1L




2A
White




2D
White

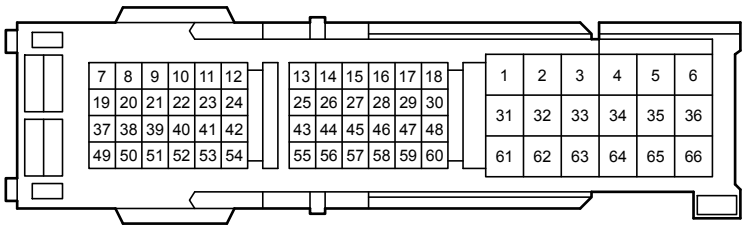


3A
Black




3C
White

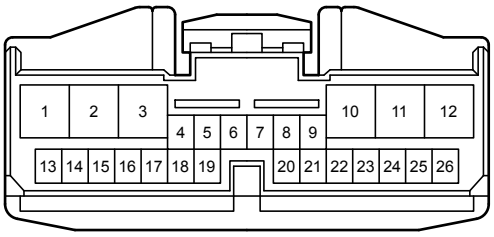

EA1
White

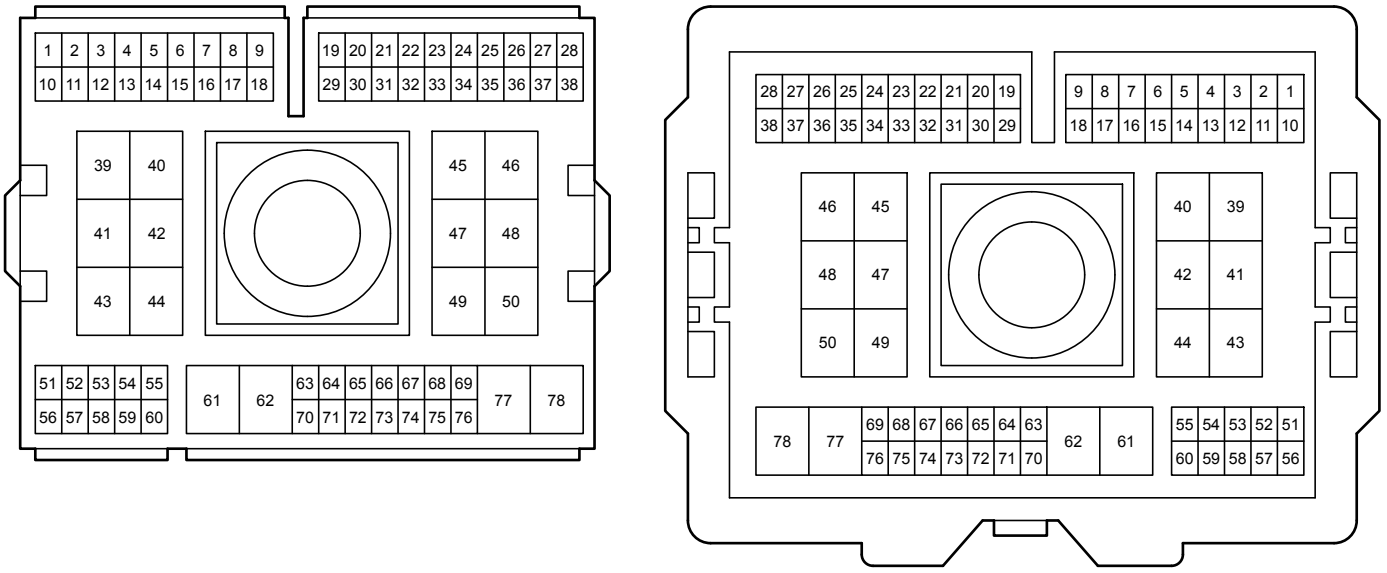

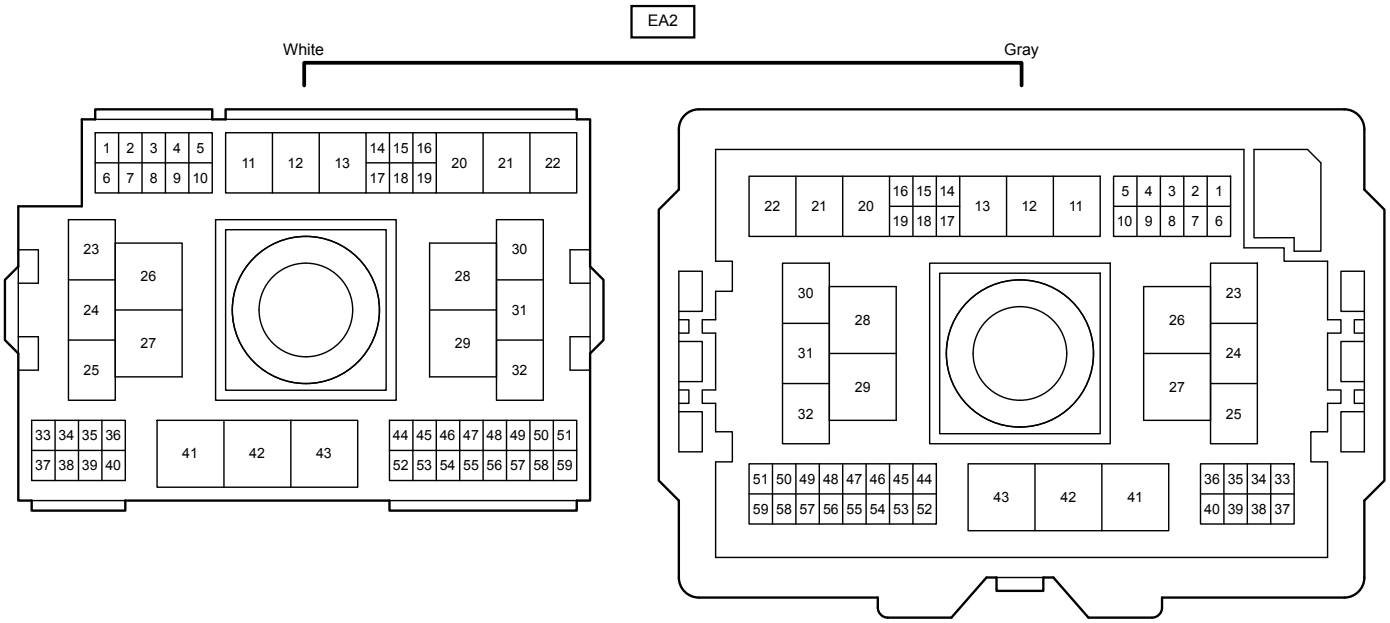
EA2
White
Gray
1 2 3 4 5
6 7 8 9 10
11 12 13 14 15 16
17 18 19 20 21 22
23 24 25 26 27
28 29 30 31 32
33 34 35 36
37 38 39 40
41 42 43
44 45 46 47 48 49 50 51
52 53 54 55 56 57 58 59
22 21 20 16 15 14
19 18 17 13 12 11
5 4 3 2 1
10 9 8 7 6
30 31 32 28 29
26 27 23 24 25
51 50 49 48 47 46 45 44
59 58 57 56 55 54 53 52
43 42 41
36 35 34 33
40 39 38 37