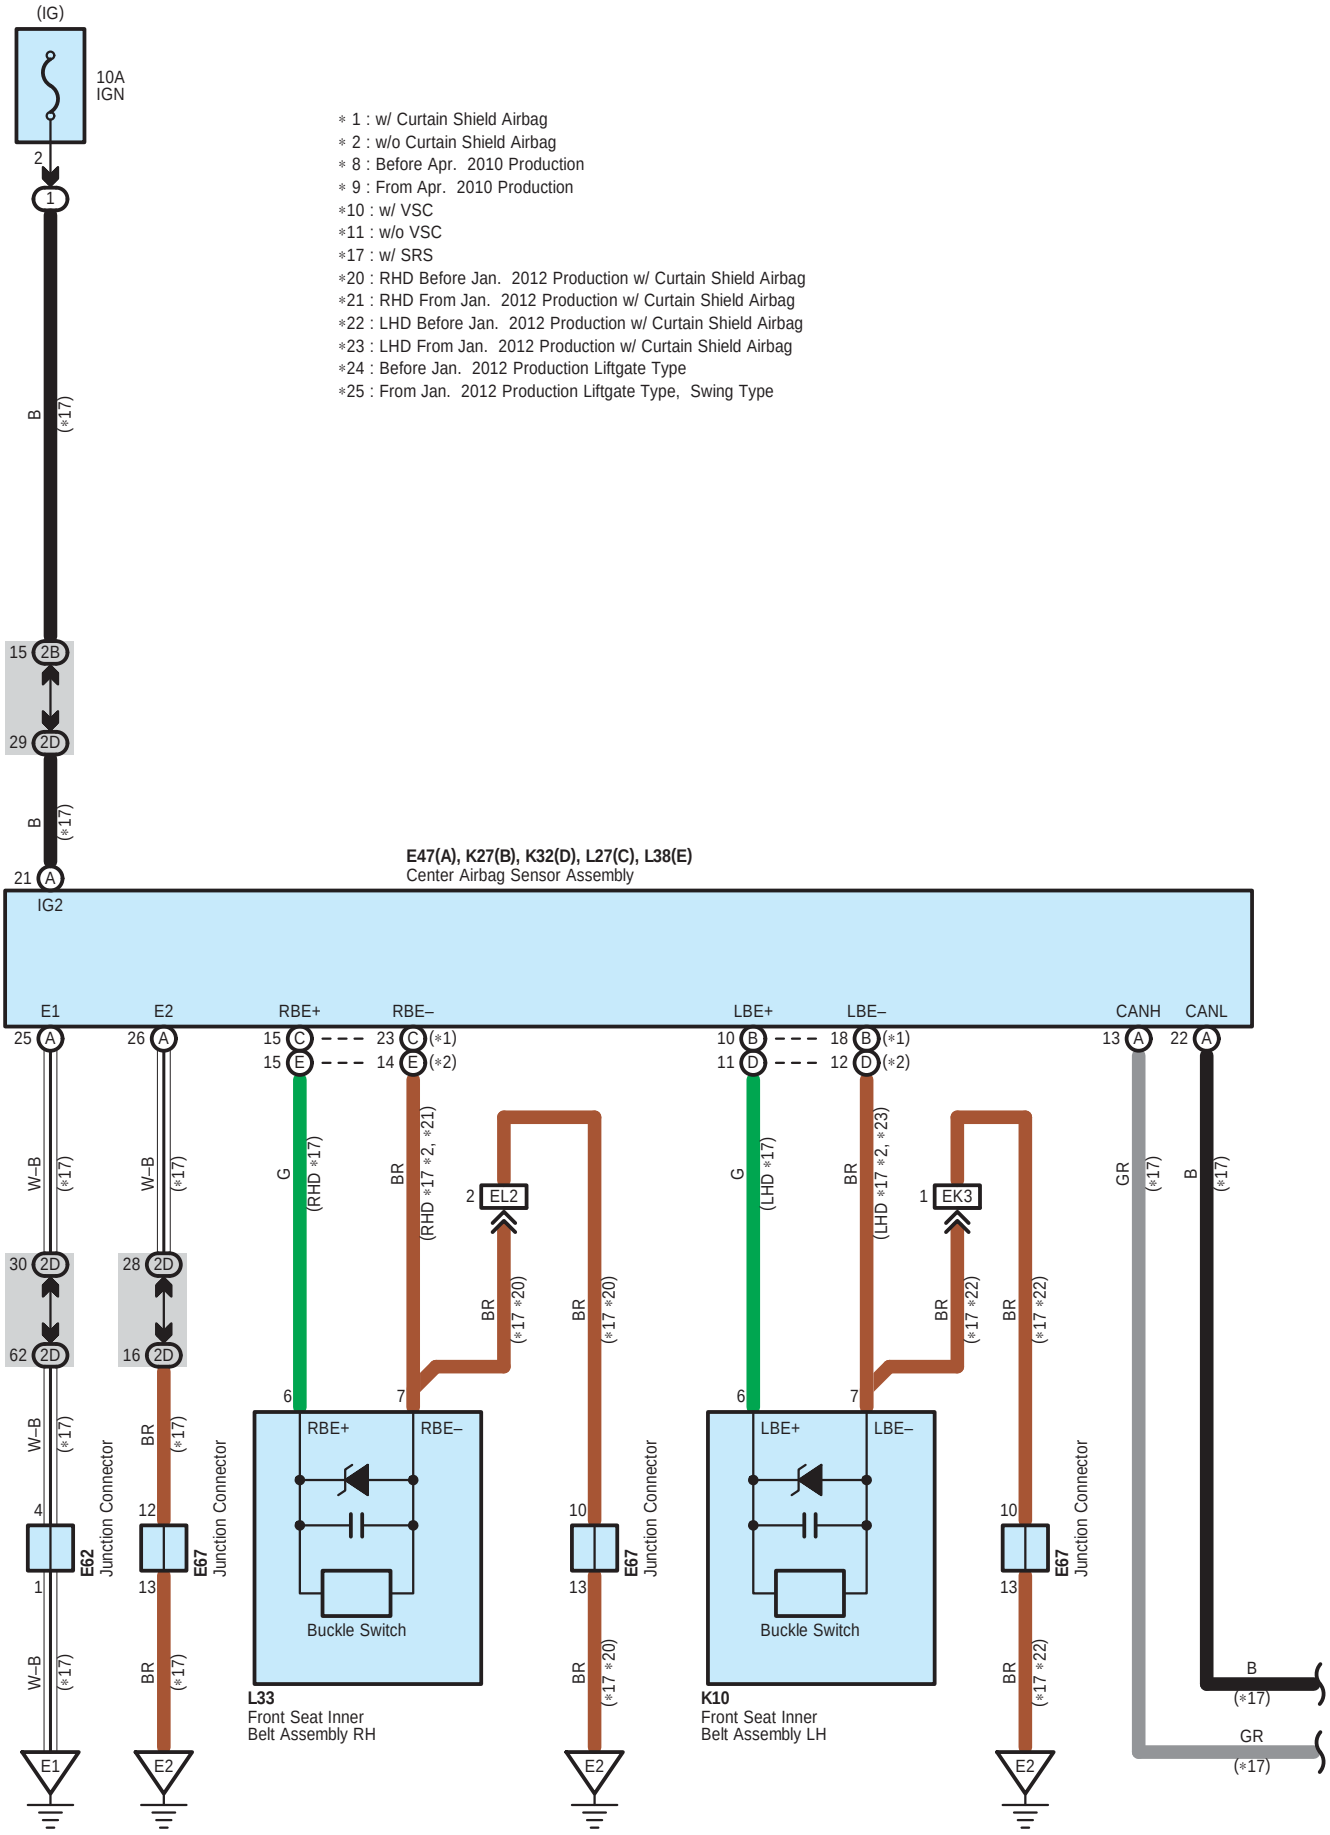
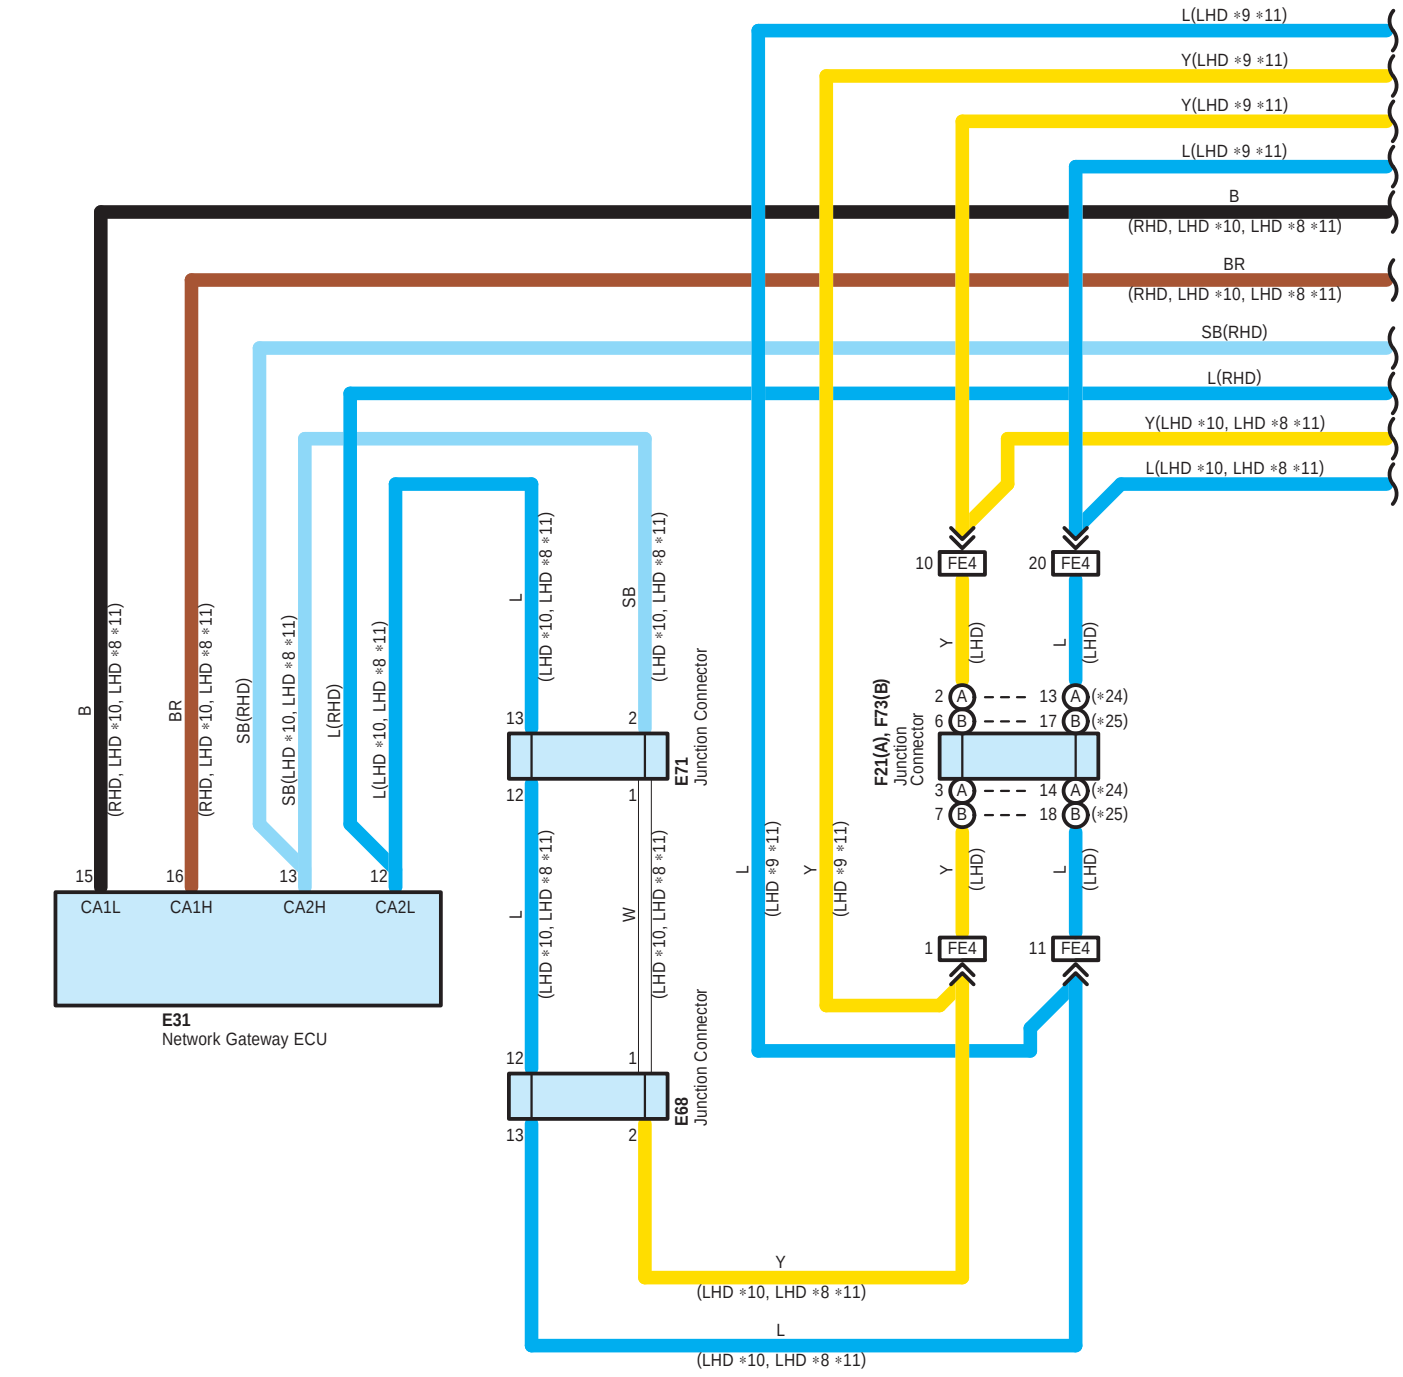
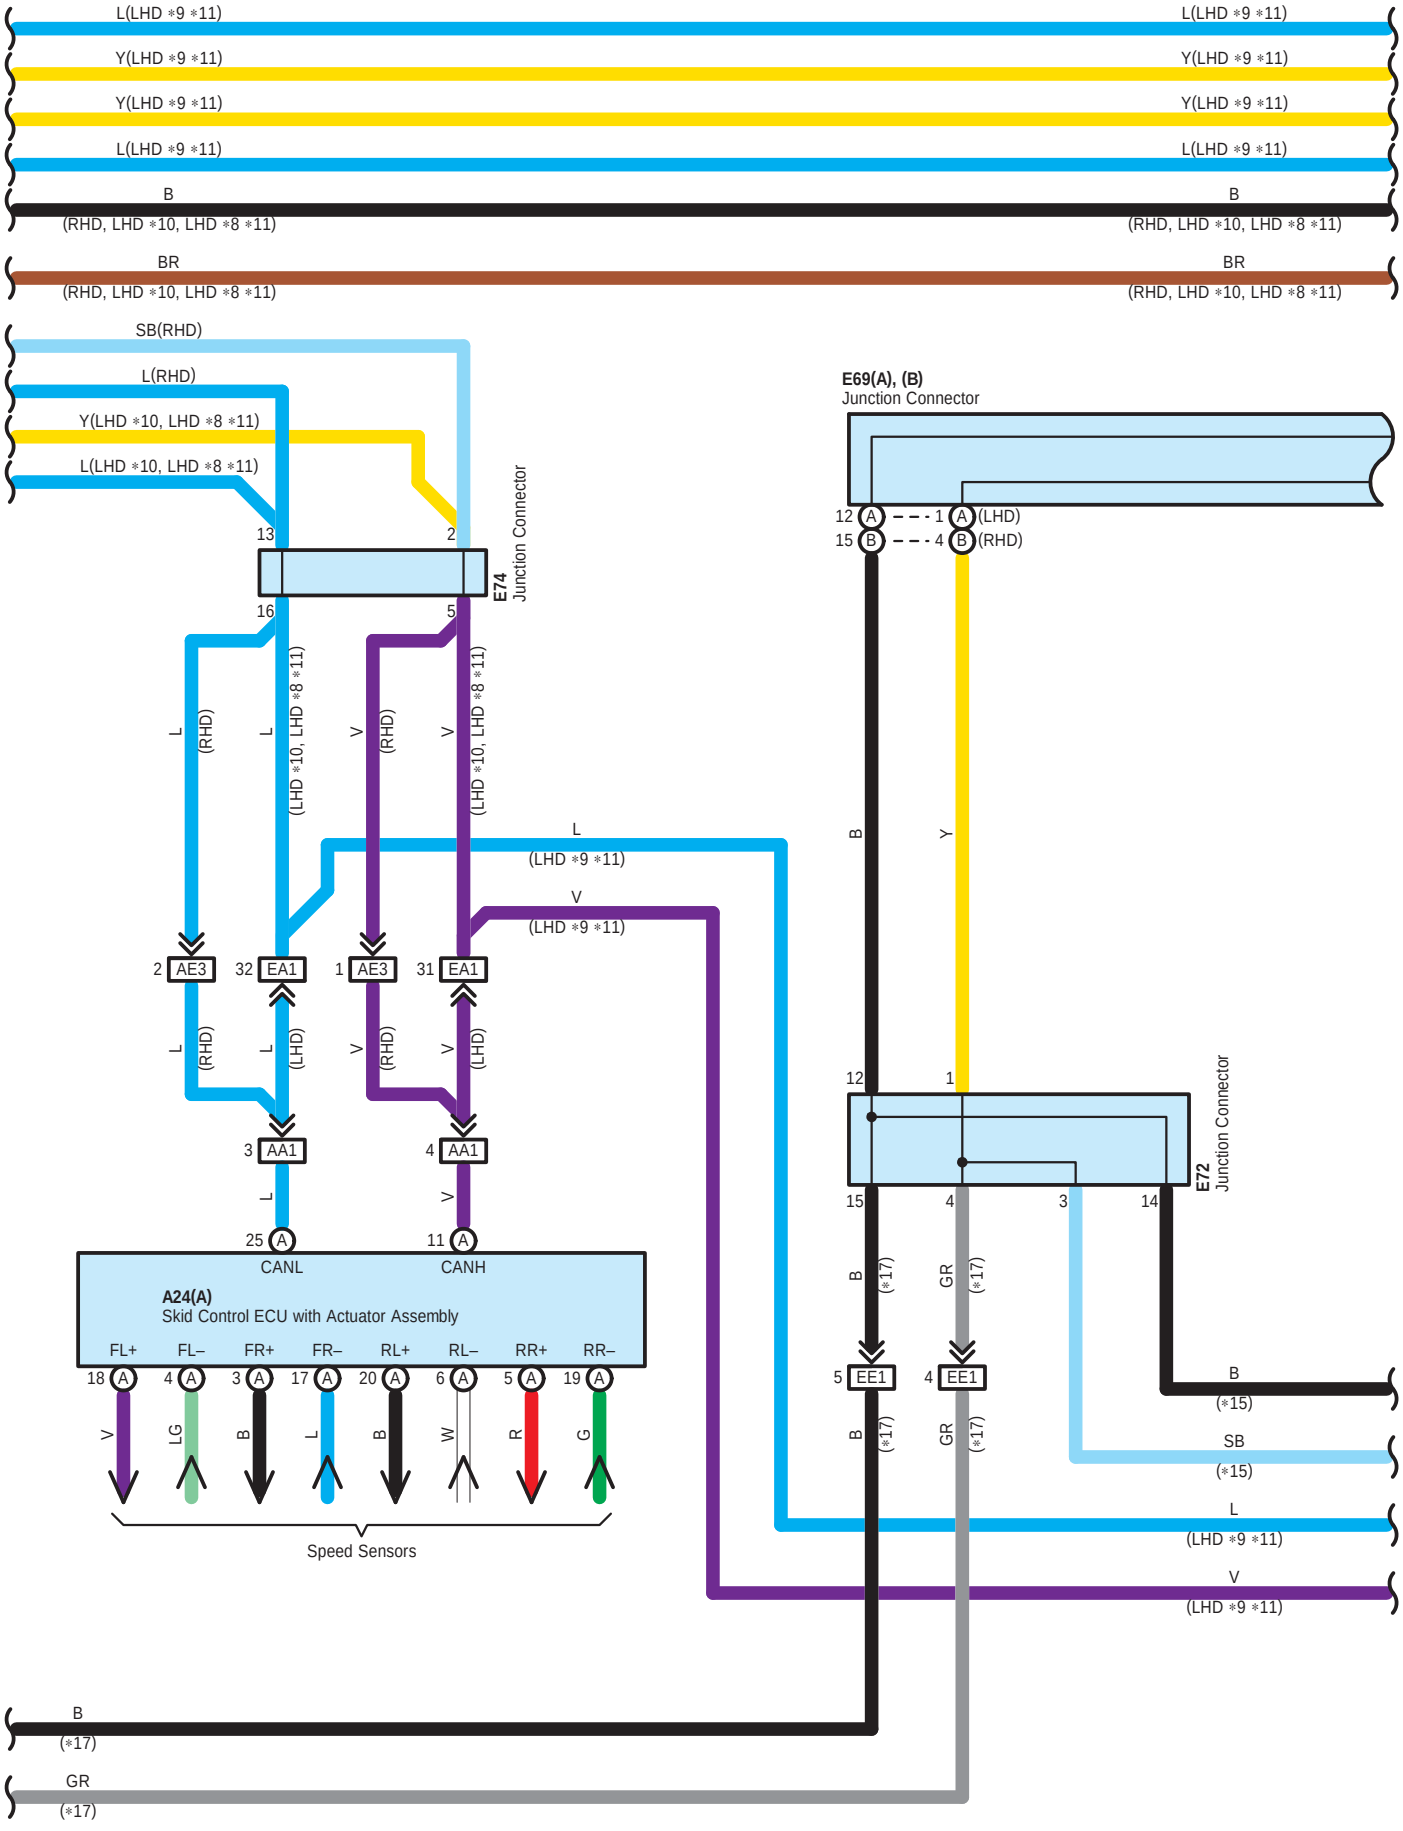
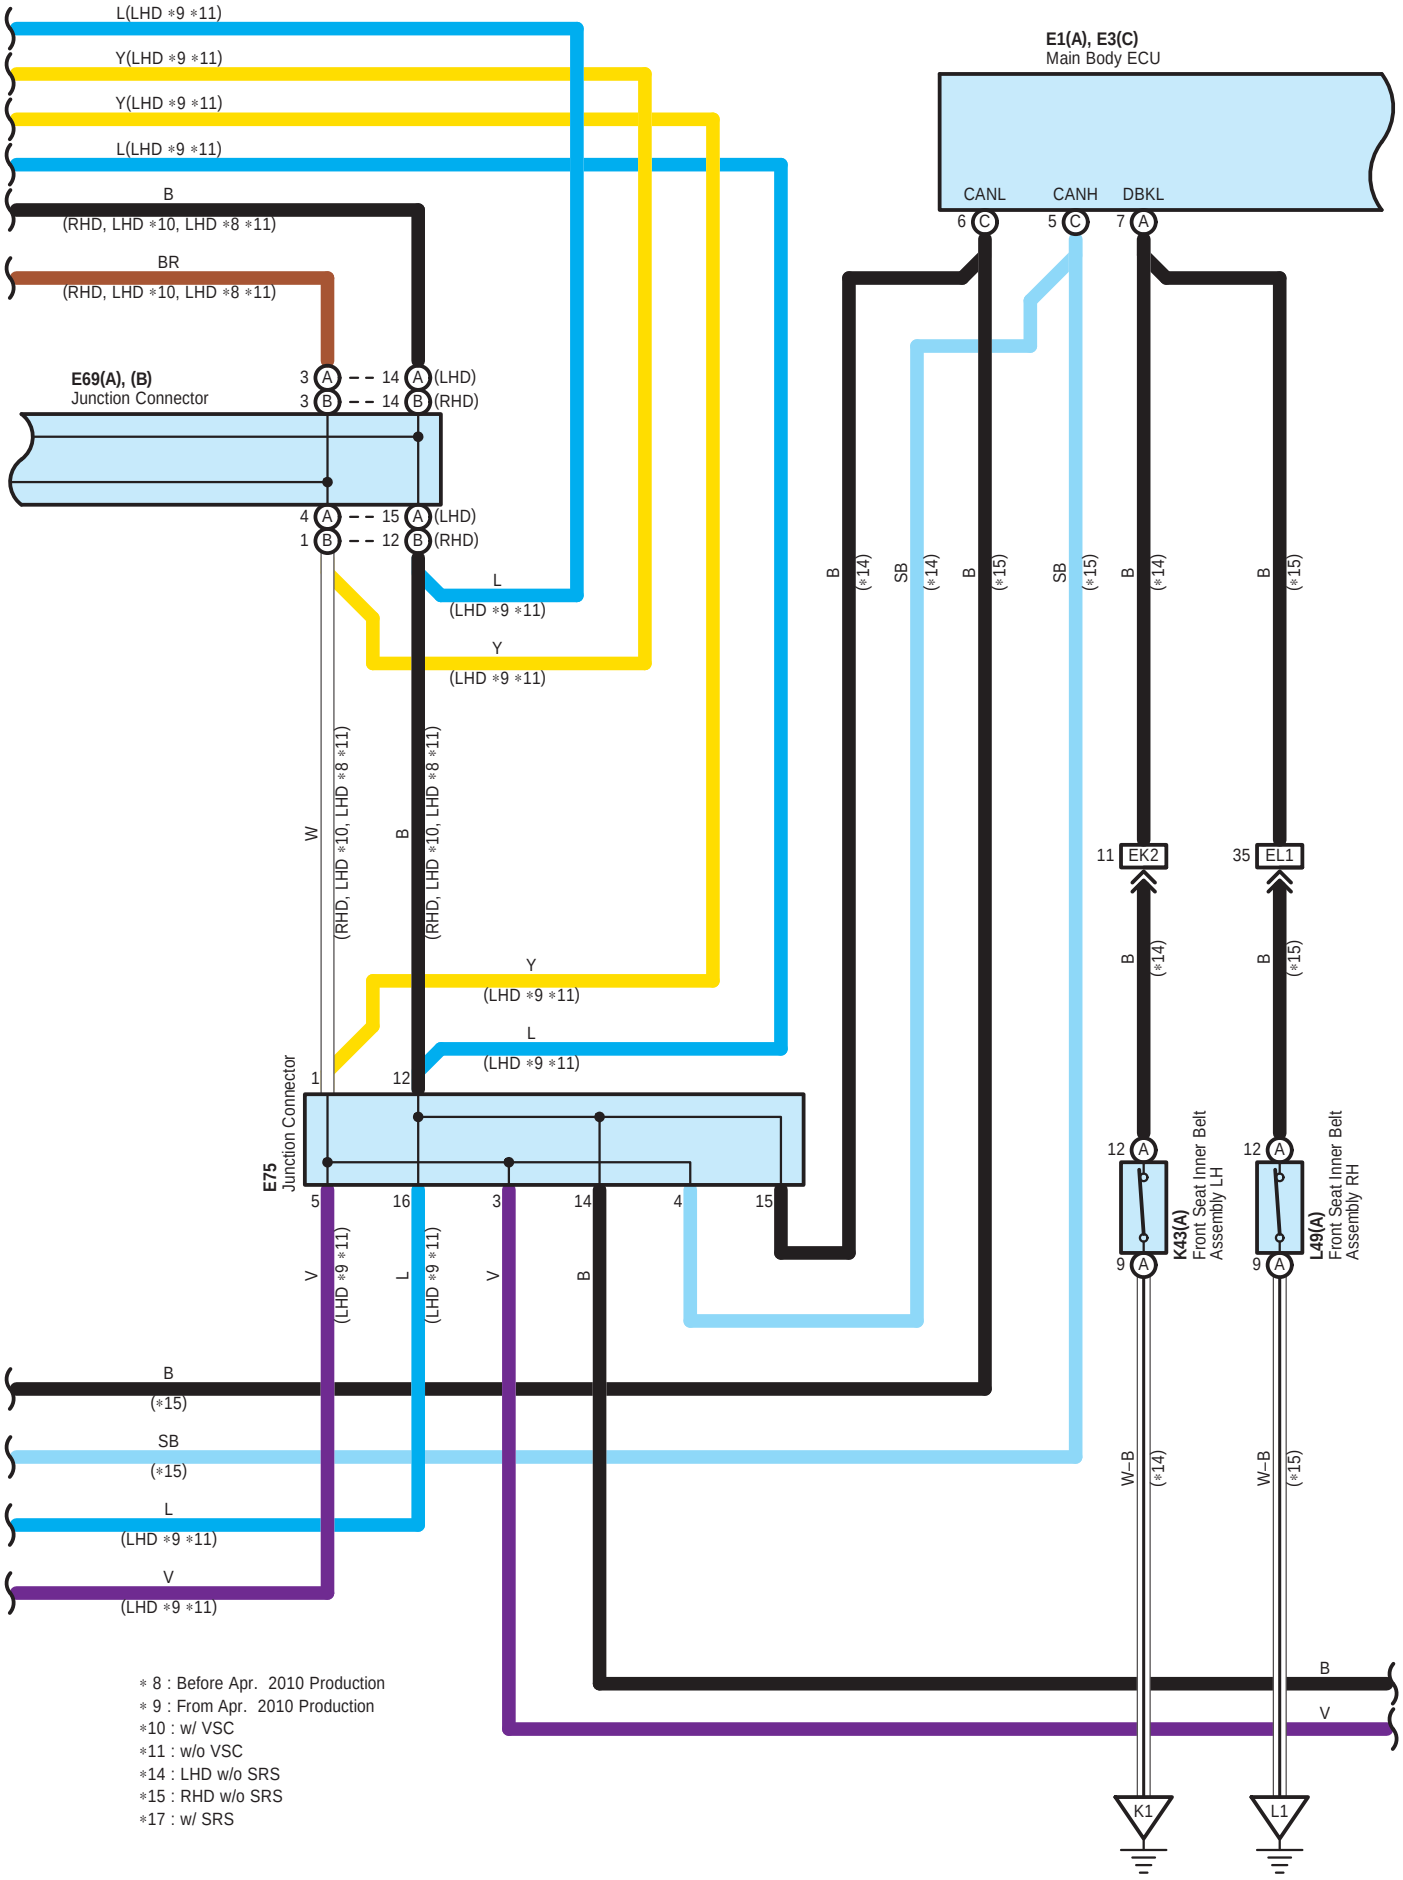
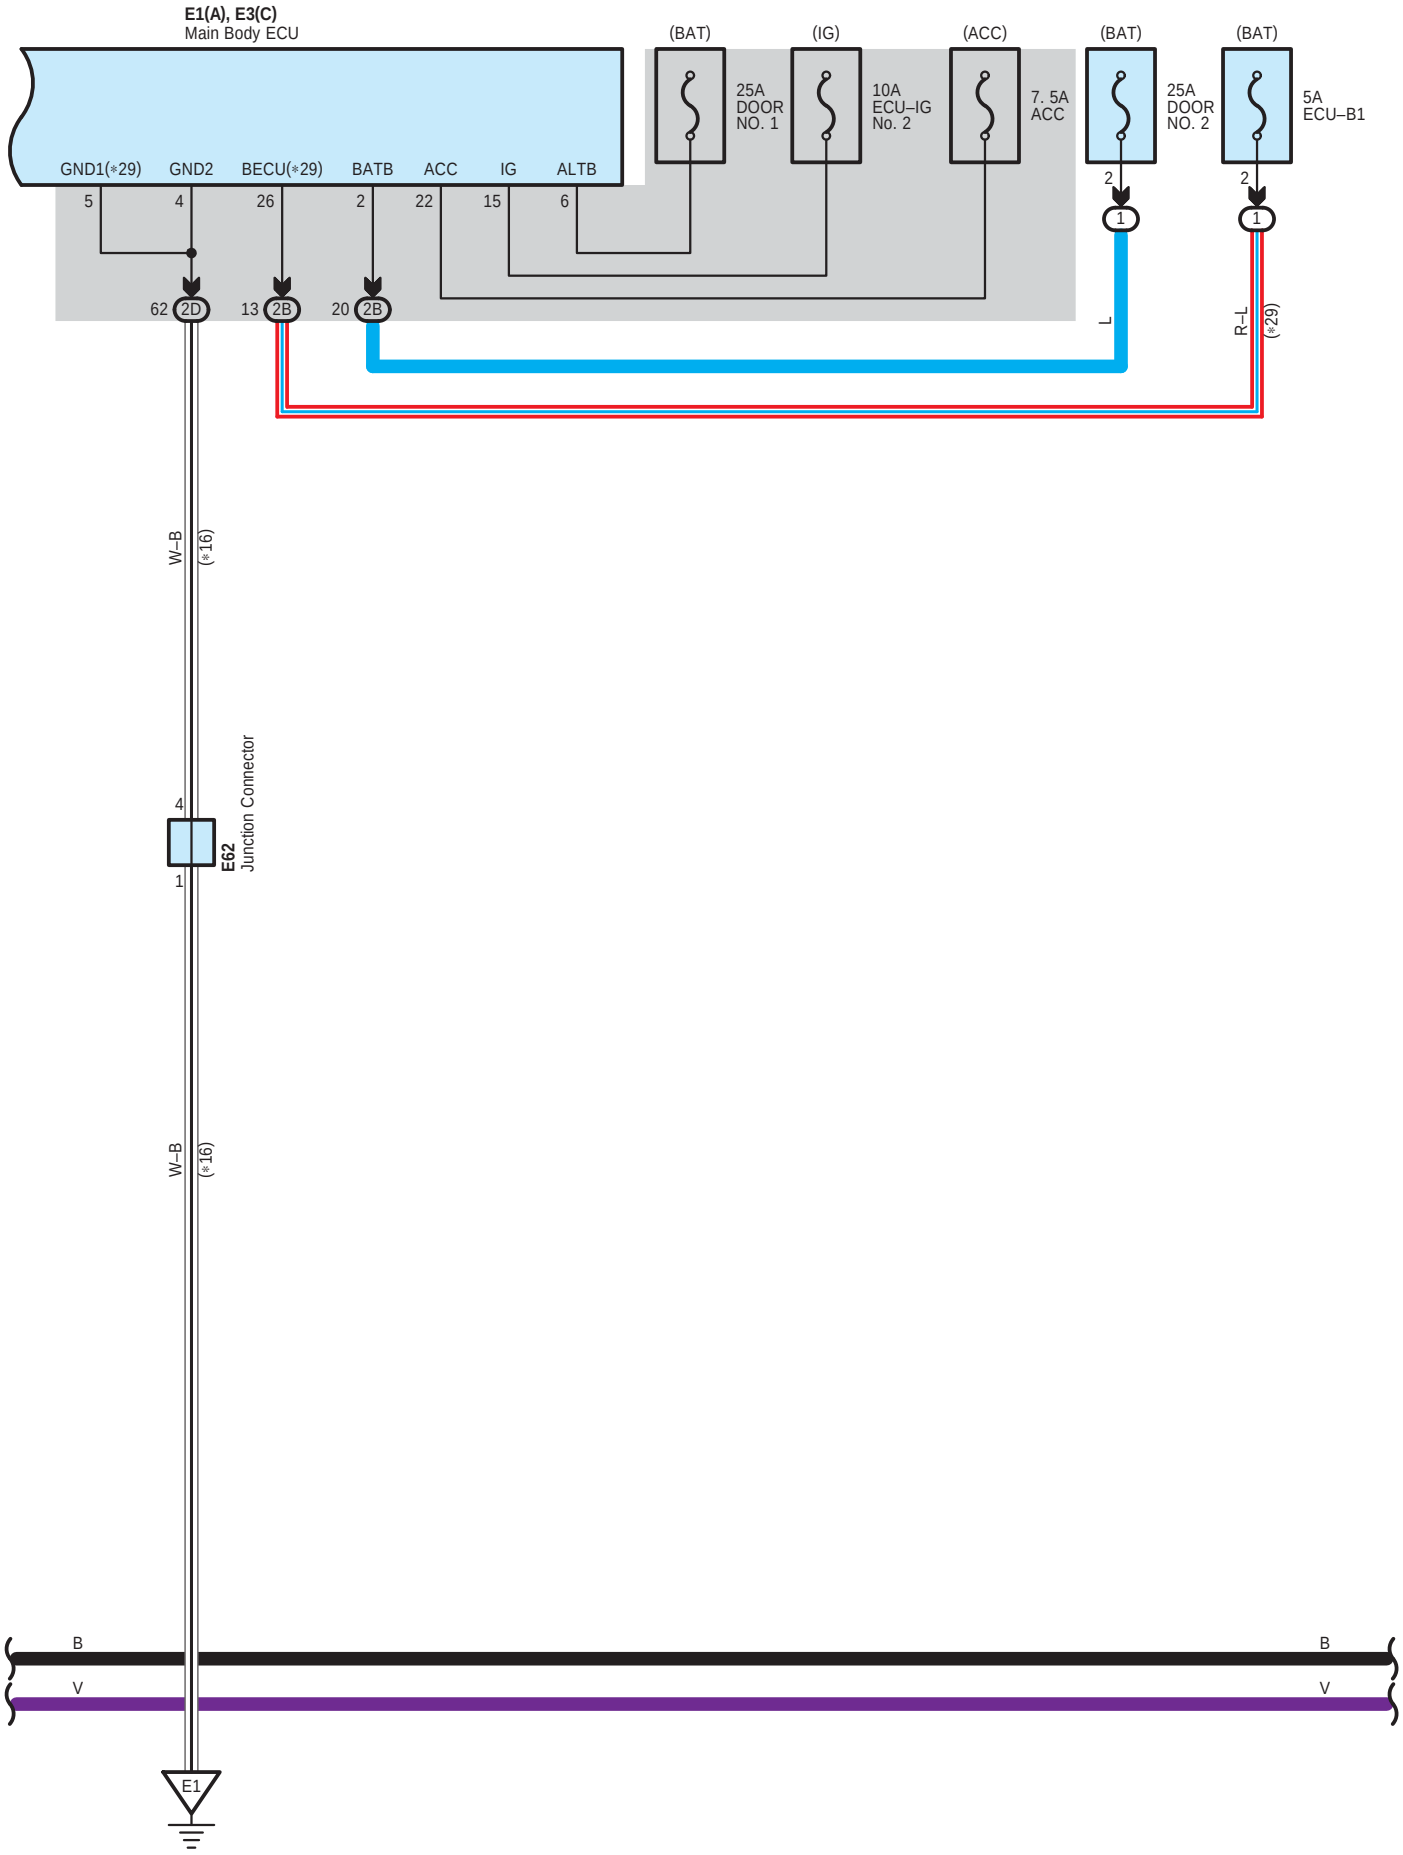

(IG)
10A
IGN
2
1
B
(*17)
15 2B
29 2D
B
(*17)
21 A
IG2
∗ 1 : w/ Curtain Shield Airbag
∗ 2 : w/o Curtain Shield Airbag
∗ 8 : Before Apr. 2010 Production
∗ 9 : From Apr. 2010 Production
∗10 : w/ VSC
∗11 : w/o VSC
∗17 : w/ SRS
∗20 : RHD Before Jan. 2012 Production w/ Curtain Shield Airbag
∗21 : RHD From Jan. 2012 Production w/ Curtain Shield Airbag
∗22 : LHD Before Jan. 2012 Production w/ Curtain Shield Airbag
∗23 : LHD From Jan. 2012 Production w/ Curtain Shield Airbag
∗24 : Before Jan. 2012 Production Liftgate Type
∗25 : From Jan. 2012 Production Liftgate Type, Swing Type
E47(A), K27(B), K32(D), L27(C), L38(E)
Center Airbag Sensor Assembly
E1
E2
RBE+
RBE–
LBE+
LBE–
CANH
CANL
25 A
26 A
15 C
15 E
23 C (∗1)
14 E (∗2)
10 B
11 D
18 B (∗1)
12 D (∗2)
13 A
22 A
W–B (∗17)
30 2D
62 2D
28 2D
16 2D
G (RHD ∗17)
BR (RHD ∗17 ∗2, ∗21)
G (LHD ∗17)
BR (LHD ∗17 ∗2, ∗23)
GR (∗17)
B (∗17)
2 EL2
1 EK3
BR (∗17 ∗20)
BR (∗17 ∗22)
6
7
RBE+
RBE–
LBE+
LBE–
Buckle Switch
4
12
1
13
10
E62 Junction Connector
E67 Junction Connector
L33
Front Seat Inner Belt Assembly RH
K10
Front Seat Inner Belt Assembly LH
B (∗17)
GR (∗17)
E1
E2



L(LHD ∗9 ∗11)
Y(LHD ∗9 ∗11)
Y(LHD ∗9 ∗11)
L(LHD ∗9 ∗11)
B
(RHD, LHD ∗10, LHD ∗8 ∗11)
BR
(RHD, LHD ∗10, LHD ∗8 ∗11)
SB(RHD)
L(RHD)
Y(LHD ∗10, LHD ∗8 ∗11)
L(LHD ∗10, LHD ∗8 ∗11)
B
(RHD, LHD ∗10, LHD ∗8 ∗11)
BR
(RHD, LHD ∗10, LHD ∗8 ∗11)
SB(LHD ∗10, LHD ∗8 ∗11)
L(RHD)
L(LHD ∗10, LHD ∗8 ∗11)
15
16
13
12
CA1L
CA1H
CA2H
CA2L
E31
Network Gateway ECU
L
(LHD ∗10, LHD ∗8 ∗11)
SB
(LHD ∗10, LHD ∗8 ∗11)
13
2
12
1
E71
Junction Connector
L
(LHD ∗10, LHD ∗8 ∗11)
W
(LHD ∗10, LHD ∗8 ∗11)
12
1
13
2
E68
Junction Connector
L
(LHD ∗9 ∗11)
Y
(LHD ∗9 ∗11)
10 FE4
20 FE4
Y
(LHD)
L
(LHD)
F21(A), F73(B)
Junction
Connector
2 A 13 A (∗24)
6 B 17 B (∗25)
3 A 14 A (∗24)
7 B 18 B (∗25)
Y
(LHD)
L
(LHD)
1 FE4
11 FE4
Y
(LHD ∗10, LHD ∗8 ∗11)
L
(LHD ∗10, LHD ∗8 ∗11)



B
(∗17)
B
(∗17)
GR
(∗17)
GR
(∗17)


L(LHD ∗9 ∗11)
Y(LHD ∗9 ∗11)
Y(LHD ∗9 ∗11)
L(LHD ∗9 ∗11)
B
(RHD, LHD ∗10, LHD ∗8 ∗11)
BR
(RHD, LHD ∗10, LHD ∗8 ∗11)
SB(RHD)
L(RHD)
Y(LHD ∗10, LHD ∗8 ∗11)
L(LHD ∗10, LHD ∗8 ∗11)
E74
Junction Connector
E69(A), (B)
Junction Connector
12 A 1 A (LHD)
15 B 4 B (RHD)
E72
Junction Connector
2 AE3
32 EA1
1 AE3
31 EA1
3 AA1
4 AA1
25 A CANL
11 A CANH
A24(A)
Skid Control ECU with Actuator Assembly
FL+ FL– FR+ FR– RL+ RL– RR+ RR–
Speed Sensors
5 EE1
4 EE1
(∗17)
(∗15)
SB
(∗15)
B
(∗17)
GR
(∗17)



L(LHD *9 *11)
Y(LHD *9 *11)
Y(LHD *9 *11)
L(LHD *9 *11)
B
(RHD, LHD *10, LHD *8 *11)
BR
(RHD, LHD *10, LHD *8 *11)
E69(A), (B)
Junction Connector
3 A -- 14 A (LHD)
3 B -- 14 B (RHD)
4 A -- 15 A (LHD)
1 B -- 12 B (RHD)
L
(LHD *9 *11)
Y
(LHD *9 *11)
W
(RHD, LHD *10, LHD *8 *11)
B
(RHD, LHD *10, LHD *8 *11)
Y
(LHD *9 *11)
L
(LHD *9 *11)
E75
Junction Connector
1
12
5
16
3
14
4
15
V
(LHD *9 *11)
L
(LHD *9 *11)
V
B
B
(*15)
SB
(*15)
L
(LHD *9 *11)
V
(LHD *9 *11)
E1(A), E3(C)
Main Body ECU
CANL
CANH
DBKL
6 C
5 C
7 A
B
(*14)
SB
(*14)
B
(*15)
SB
(*15)
B
(*14)
B
(*15)
11 EK2
35 EL1
B
(*14)
B
(*15)
12 A
9 A
K43(A)
Front Seat Inner Belt
Assembly LH
12 A
9 A
L49(A)
Front Seat Inner Belt
Assembly RH
W-B
(*14)
W-B
(*15)
B
V
K1
L1
* 8 : Before Apr. 2010 Production
* 9 : From Apr. 2010 Production
*10 : w/ VSC
*11 : w/o VSC
*14 : LHD w/o SRS
*15 : RHD w/o SRS
*17 : w/ SRS


E1(A), E3(C)
Main Body ECU
GND1(*29)
GND2
BECU(*29)
BATB
ACC
IG
ALTB
5
4
26
2
22
15
6
62 2D
13 2B
20 2B
(BAT)
(IG)
(ACC)
(BAT)
(BAT)
25A DOOR NO. 1
10A ECU–IG No. 2
7. 5A ACC
25A DOOR NO. 2
5A ECU–B1
2
1
2
1
L
R–L
(*29)
W–B
(*16)
4
E62
Junction Connector
1
W–B
(*16)
B
V
B
V
E1

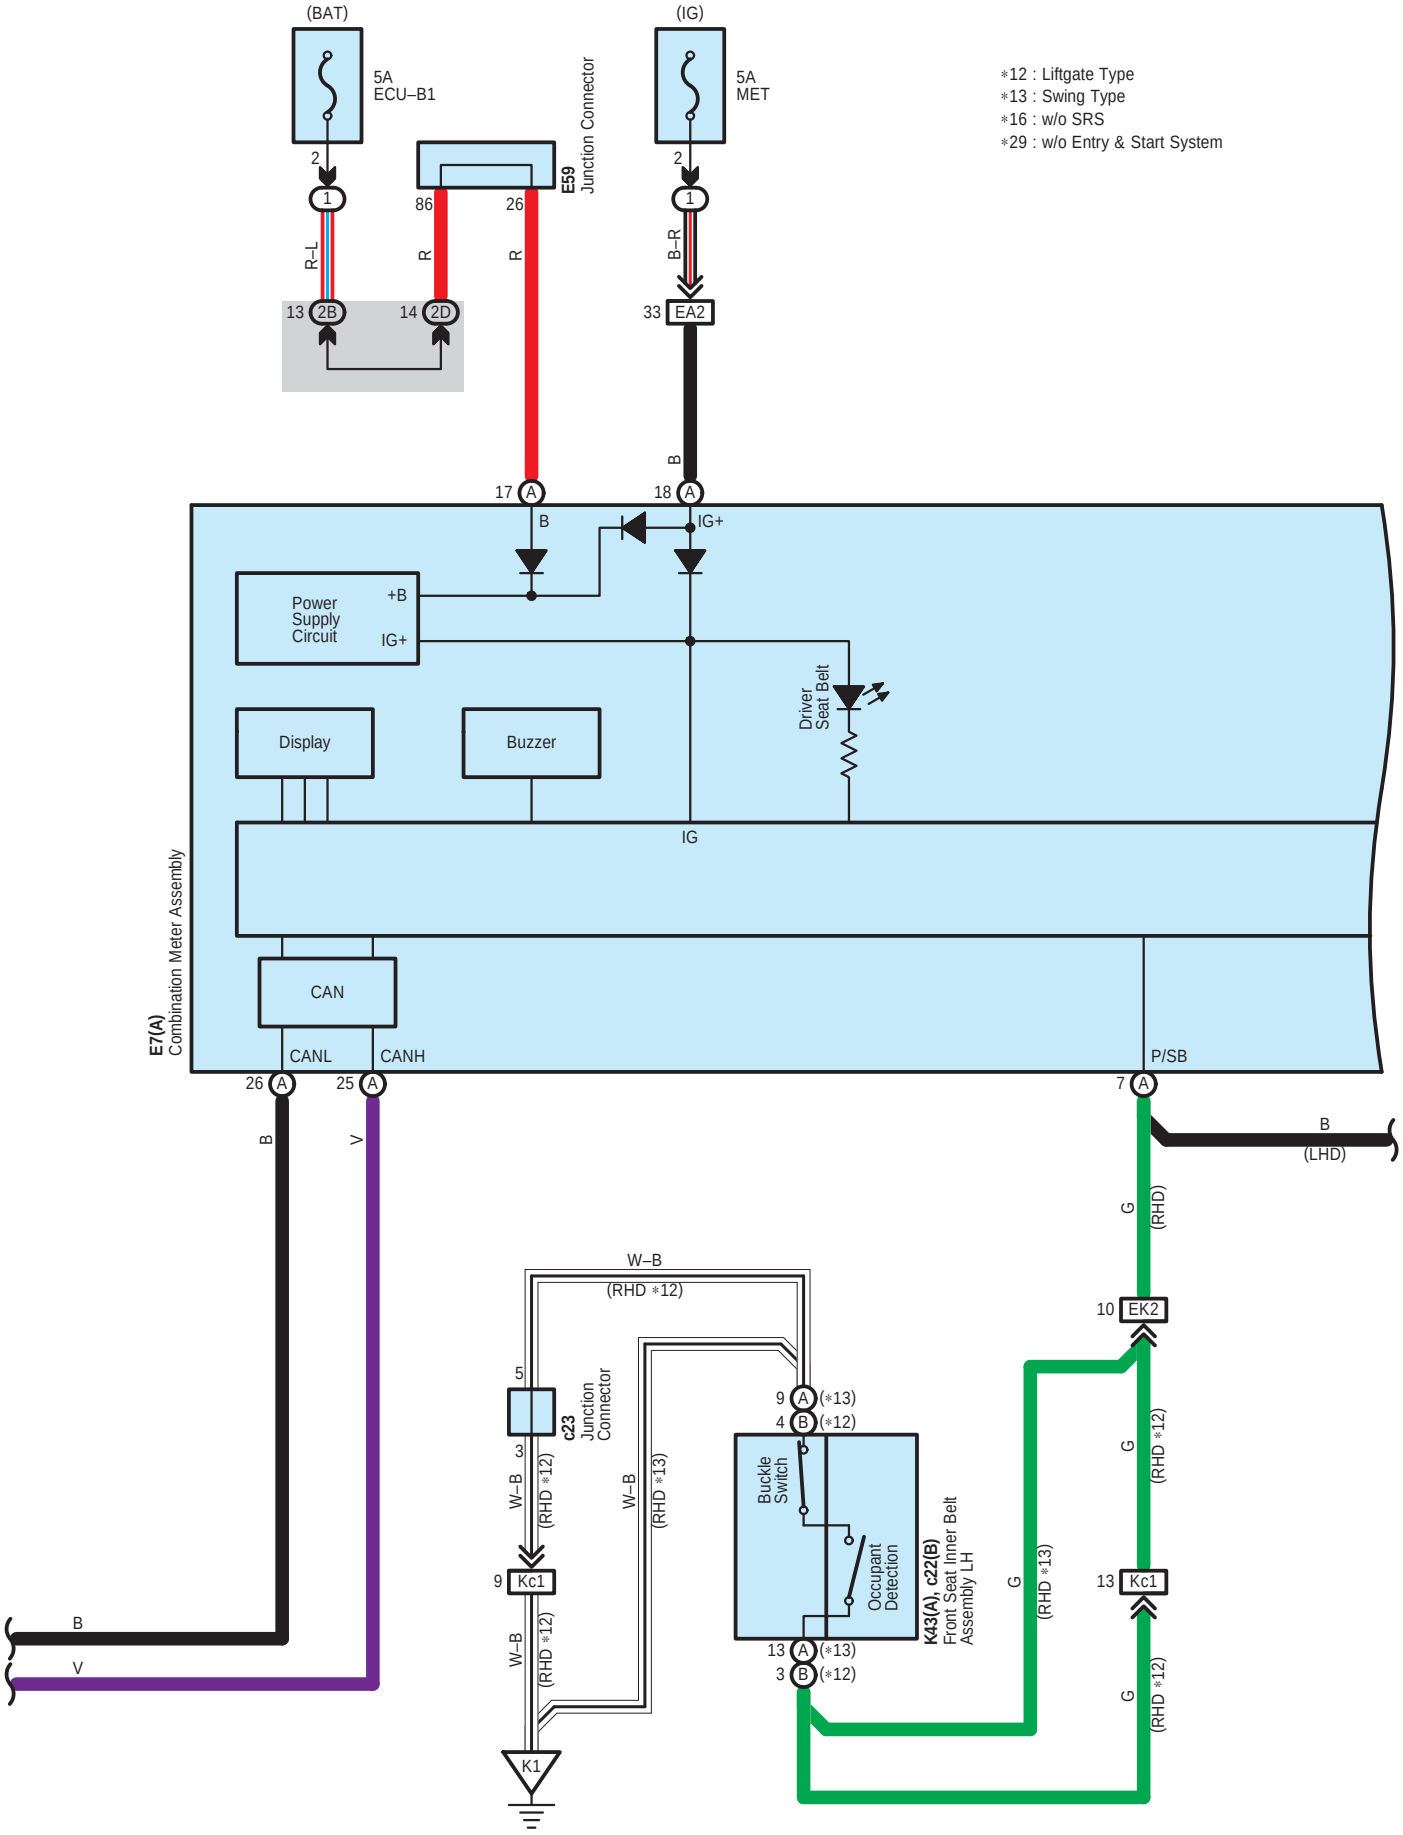

(BAT)
5A
ECU–B1
(IG)
5A
MET
∗12 : Liftgate Type
∗13 : Swing Type
∗16 : w/o SRS
∗29 : w/o Entry & Start System
E59
Junction Connector
R–L
R
R
B–R
B
13 2B
14 2D
33 EA2
17 A
18 A
B
IG+
Power Supply Circuit
+B
IG+
Display
Buzzer
Driver Seat Belt
IG
E7(A)
Combination Meter Assembly
CAN
CANL
CANH
P/SB
26 A
25 A
7 A
B
V
B
(LHD)
G
(RHD)
W–B
(RHD ∗12)
10 EK2
5
c23
Junction Connector
3
W–B
(RHD ∗12)
9 Kc1
W–B
(RHD ∗12)
K1
W–B
(RHD ∗13)
9 A (∗13)
4 B (∗12)
Buckle Switch
Occupant Detection
K43(A), c22(B)
Front Seat Inner Belt Assembly LH
13 A (∗13)
3 B (∗12)
G
(RHD ∗13)
G
(RHD ∗12)
13 Kc1
G
(RHD ∗12)

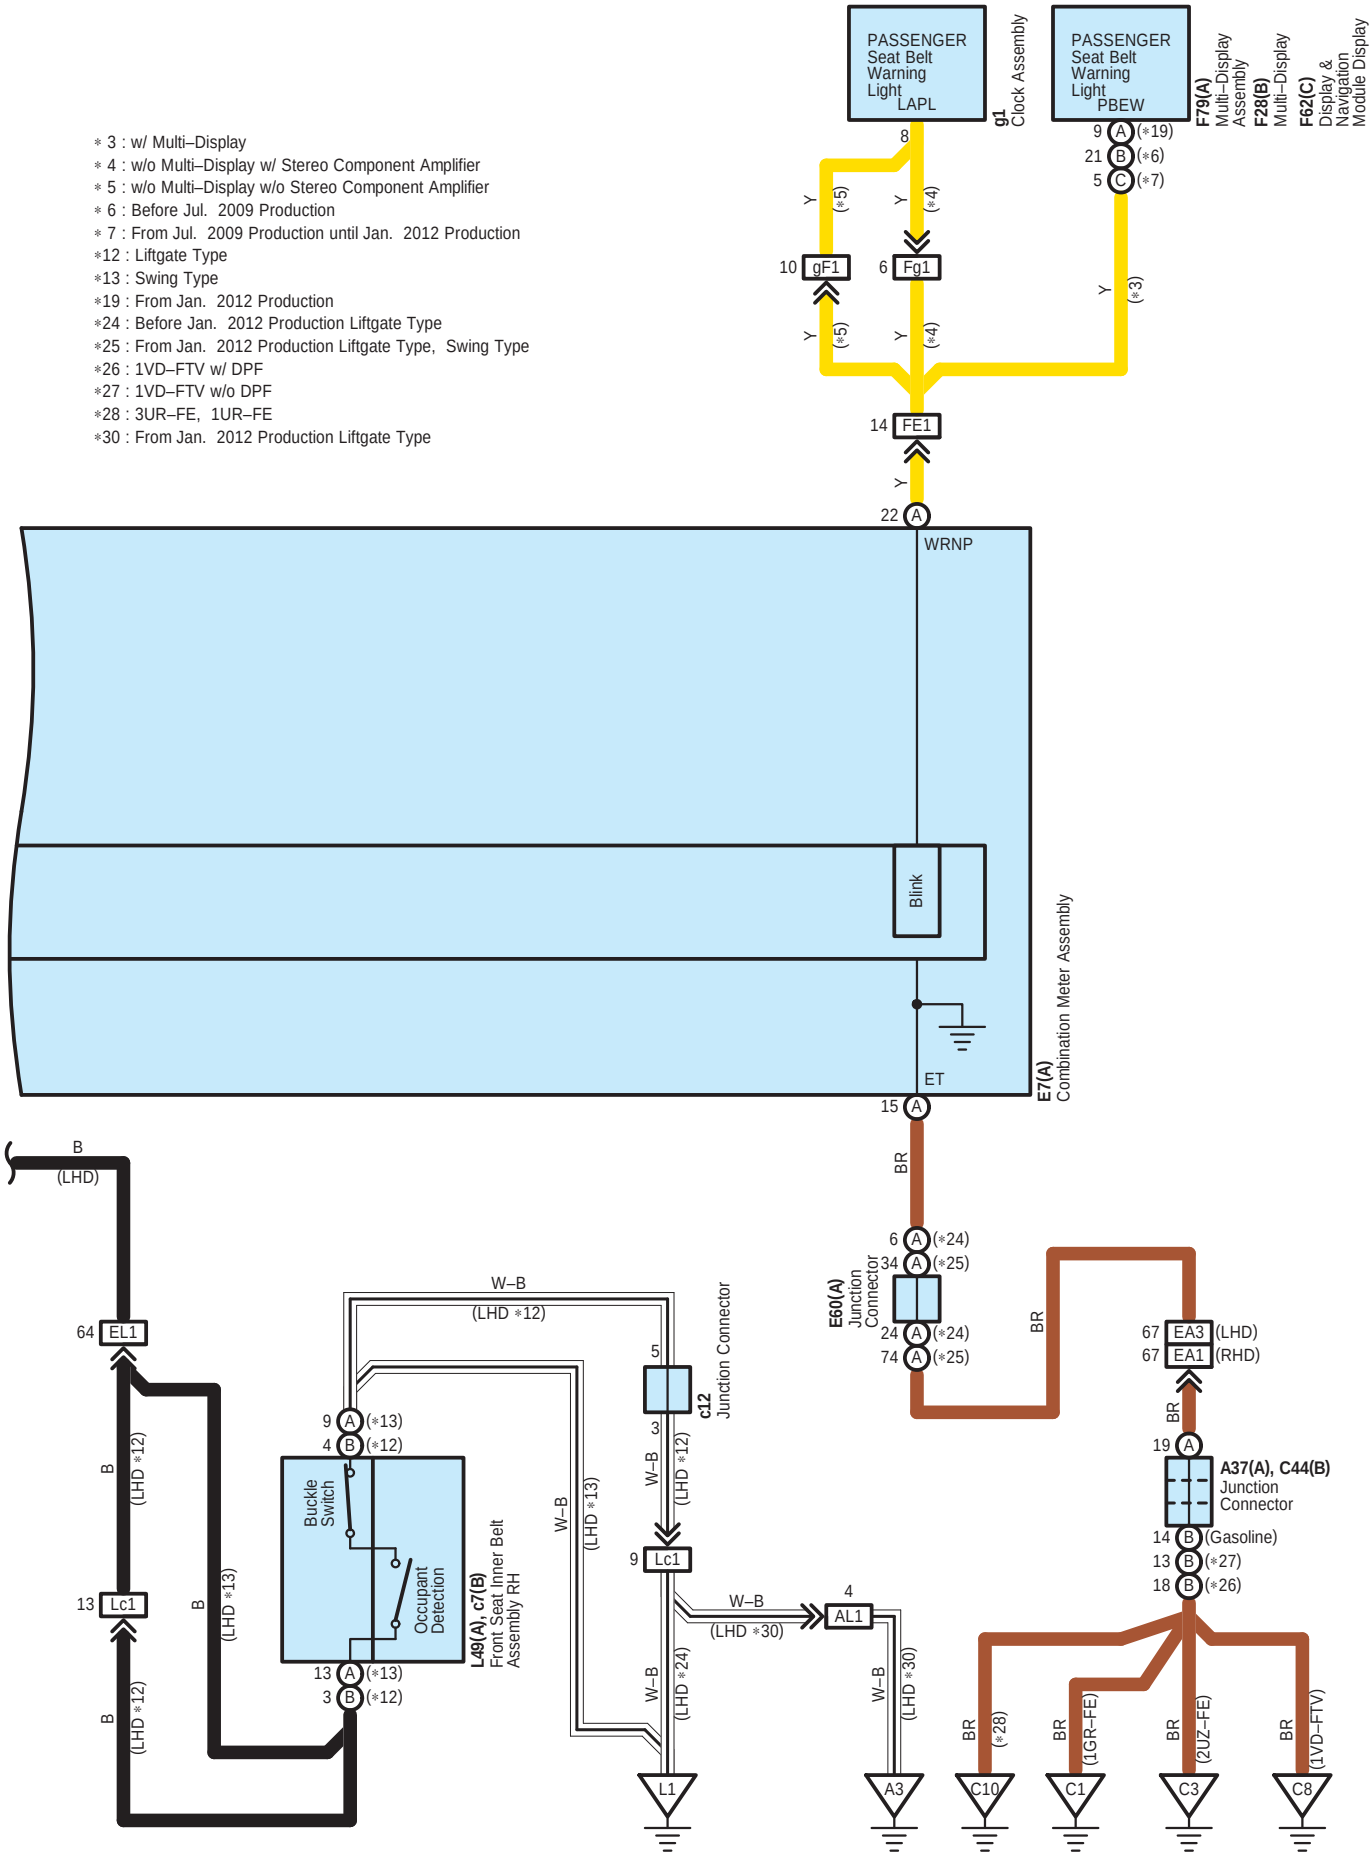
∗ 3 : w/ Multi–Display
∗ 4 : w/o Multi–Display w/ Stereo Component Amplifier
∗ 5 : w/o Multi–Display w/o Stereo Component Amplifier
∗ 6 : Before Jul. 2009 Production
∗ 7 : From Jul. 2009 Production until Jan. 2012 Production
∗12 : Liftgate Type
∗13 : Swing Type
∗19 : From Jan. 2012 Production
∗24 : Before Jan. 2012 Production Liftgate Type
∗25 : From Jan. 2012 Production Liftgate Type, Swing Type
∗26 : 1VD–FTV w/ DPF
∗27 : 1VD–FTV w/o DPF
∗28 : 3UR–FE, 1UR–FE
∗30 : From Jan. 2012 Production Liftgate Type
PASSENGER Seat Belt Warning Light LAPL
PASSENGER Seat Belt Warning Light PBEW
g1 Clock Assembly
F79(A) Multi–Display Assembly
F28(B) Multi–Display
F62(C) Display & Navigation Module Display
gF1
Fg1
FE1
WRNP
Blink
ET
E7(A) Combination Meter Assembly
E60(A) Junction Connector
EL1
Lc1
L49(A), c7(B) Front Seat Inner Belt Assembly RH
Buckle Switch
Occupant Detection
c12 Junction Connector
AL1
L1
A3
C10
C1
C3
C8
EA3
EA1
A37(A), C44(B) Junction Connector
(LHD)
(RHD)
(Gasoline)
(1VD–FTV)
(2UZ–FE)
(1GR–FE)
W–B
BR
B


A 24
Black

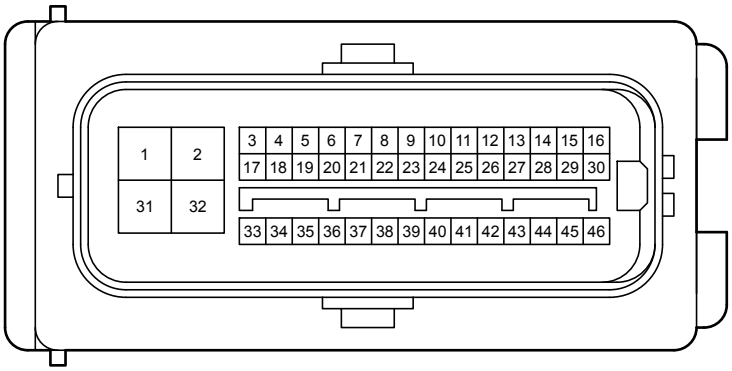


A 37
Blue

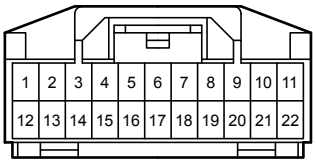


C 44
Blue

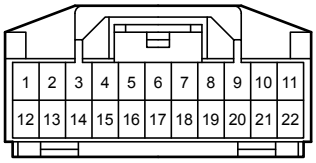


E 1
White

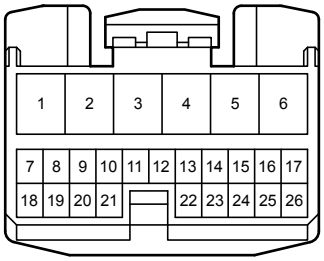


E 3
White

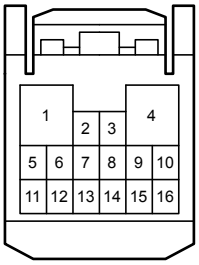


E 7
White

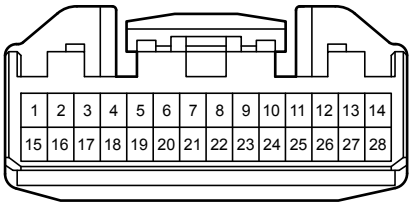


E 31
White

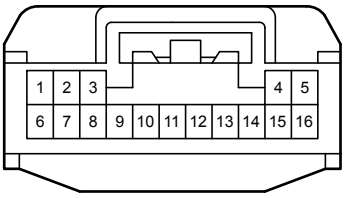


E 47
Yellow

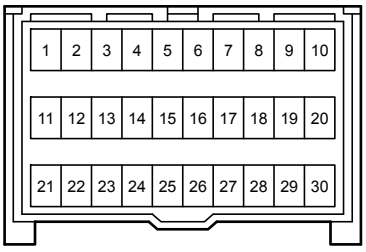


E 59

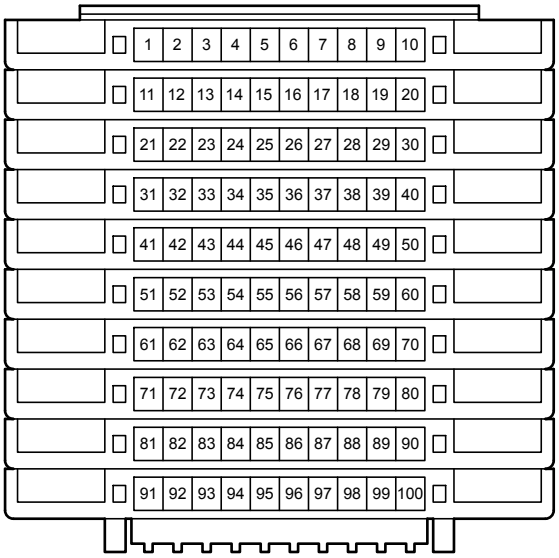


E 60

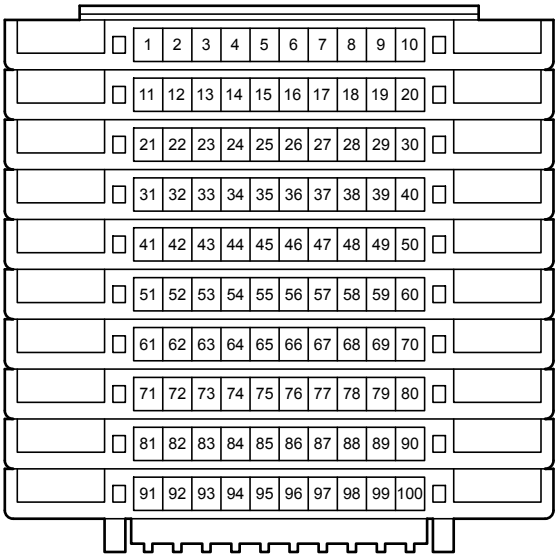


E 62
White

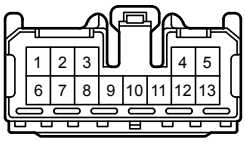


E 67
White

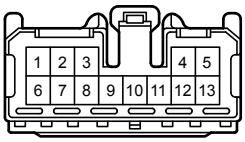


E 68
Gray

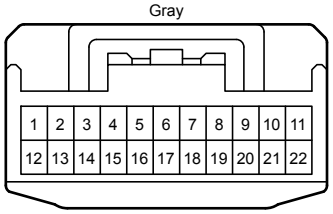


E 69
Gray

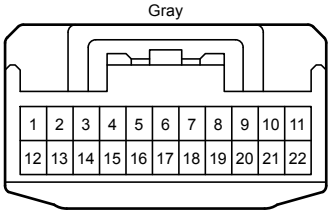


E 71
Gray

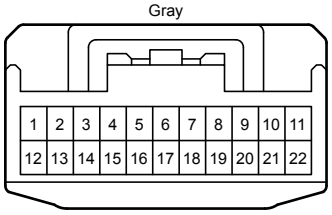


E 72
Gray

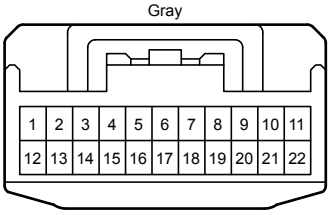


E 74
Gray

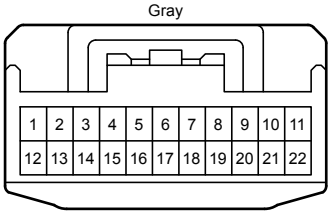


E 75
Gray

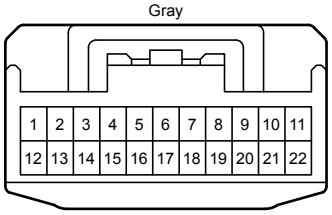


F 21
Black

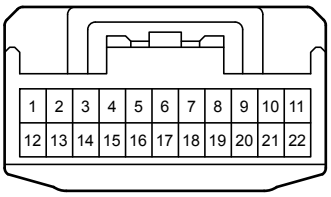


F 28
White

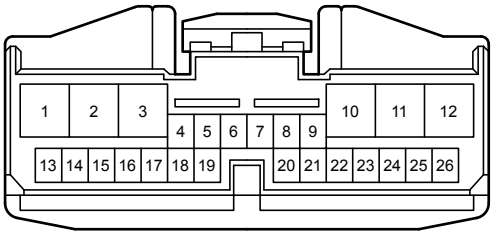


F 62
Blue




F 73
Blue

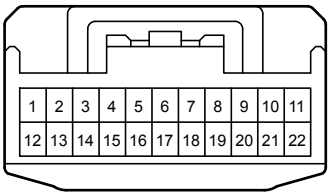


F 79
White

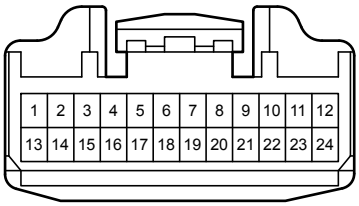


K 10
Gray

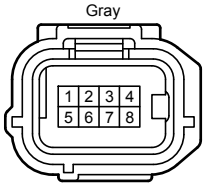


K 27
Yellow

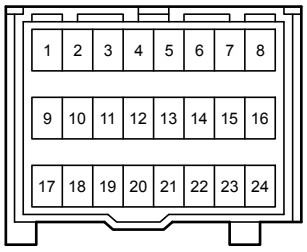


K 32
Yellow

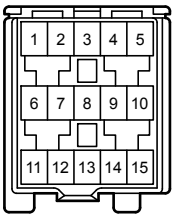


K 43
White

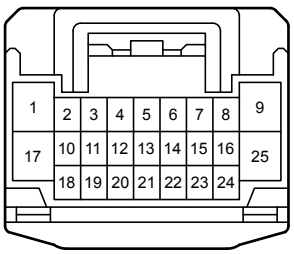


L 27
Yellow

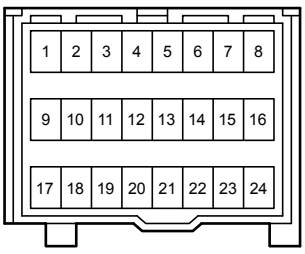


L 33
Gray

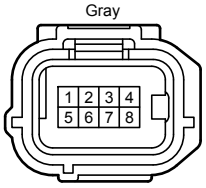


L 38
Yellow

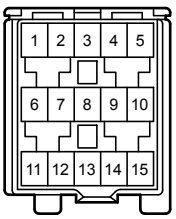


L 49
White

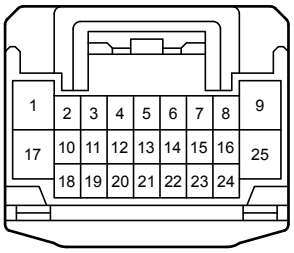


c 7
White

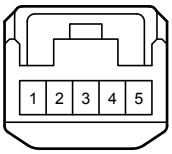


c 12
White




c 22
White

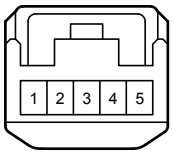


c 23
White




g 1
White

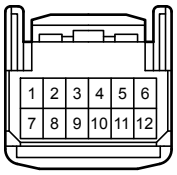


2B
White

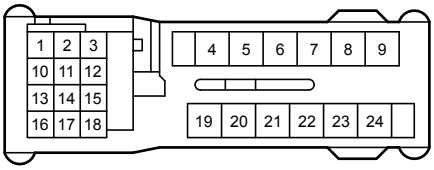


2D
White

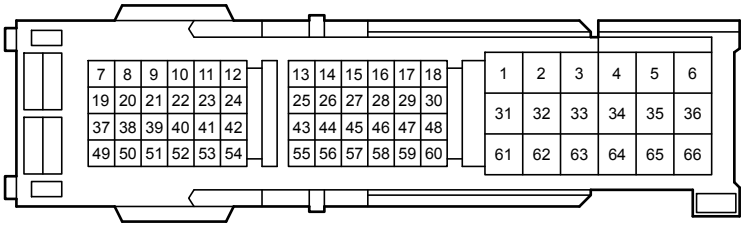


AA1
Gray

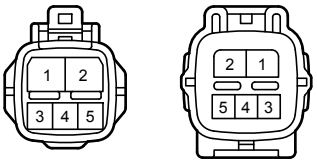

AE3
Gray

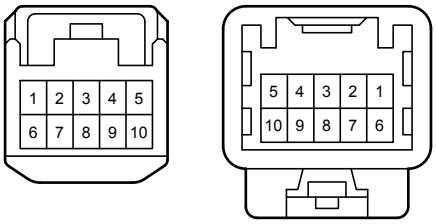


AL1
White

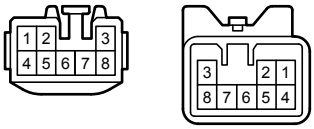

EA1


White

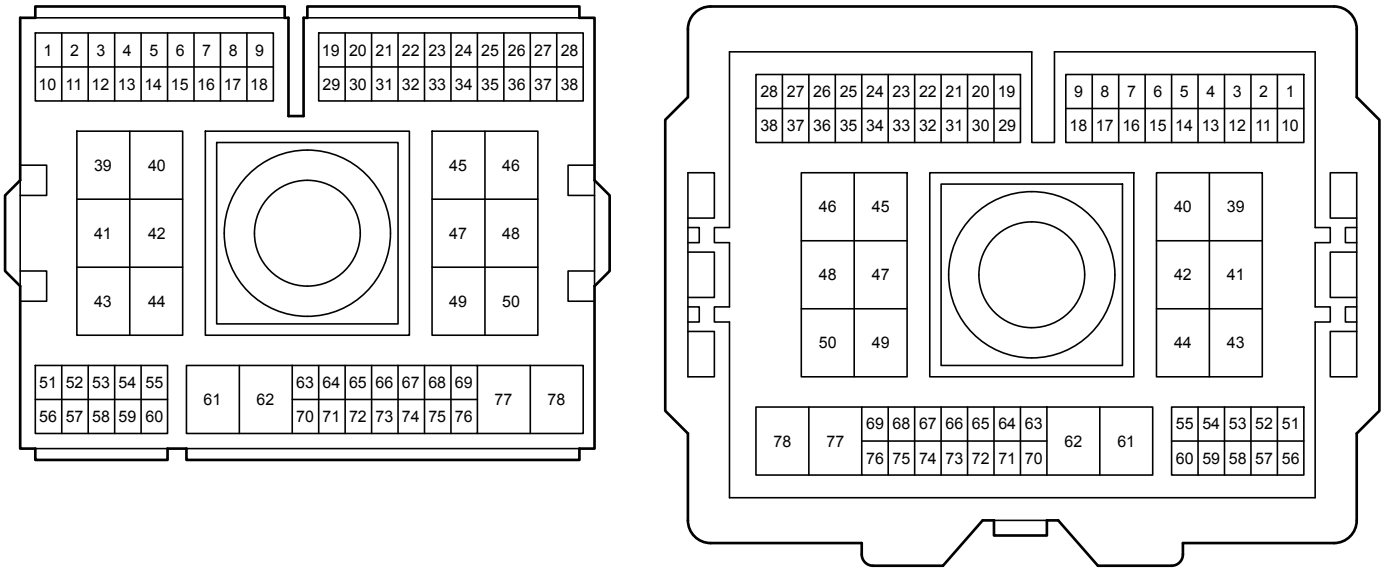


EA2


White

Gray

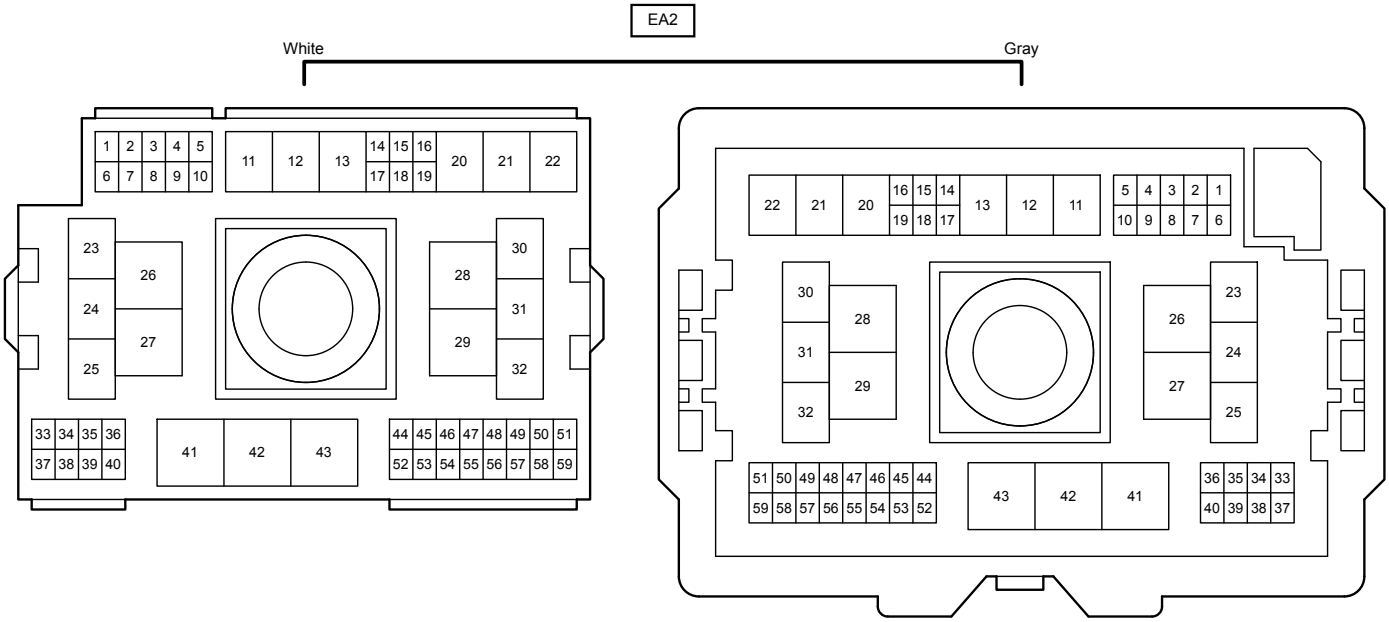


EA3
White

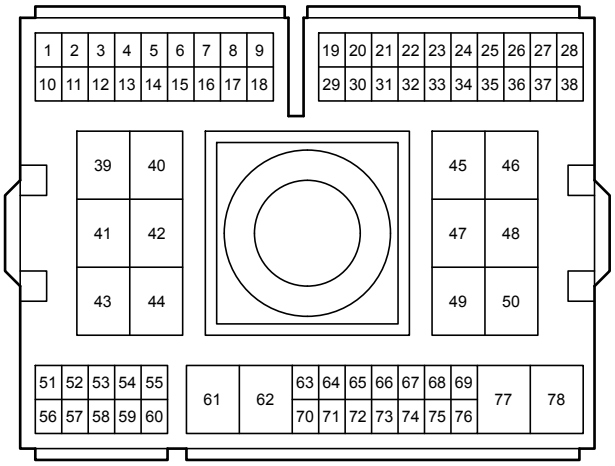


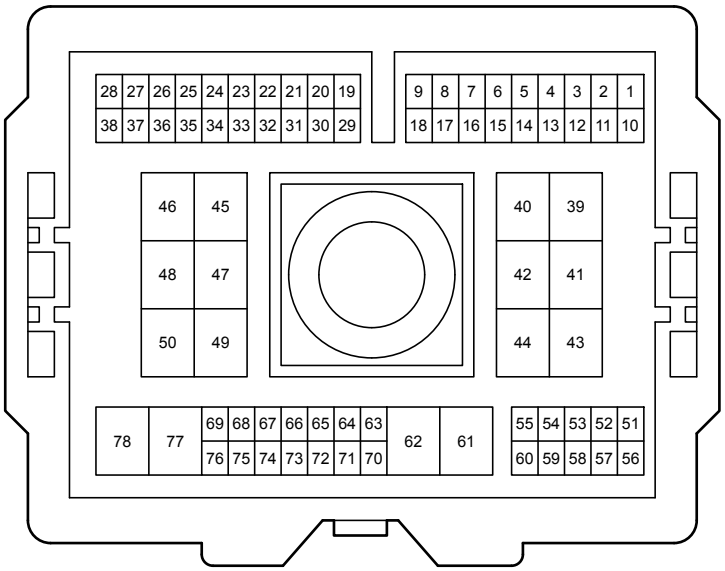


EE1
White

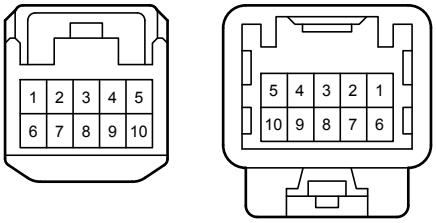


EK2
White

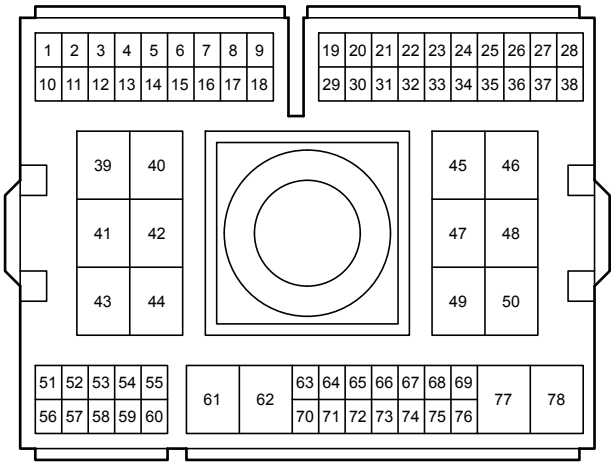


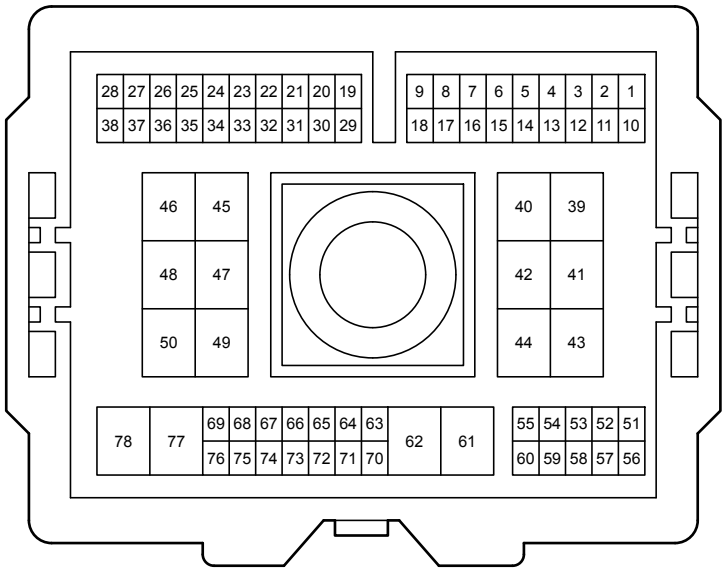


EK3
Black

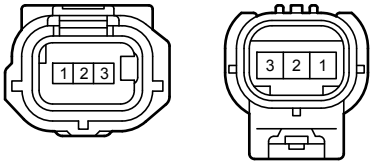


EL1
White

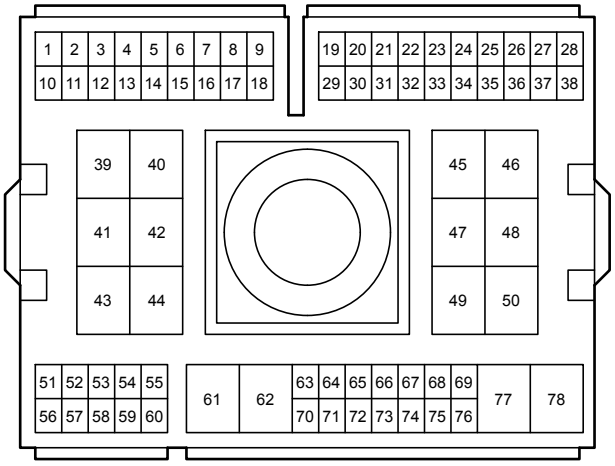


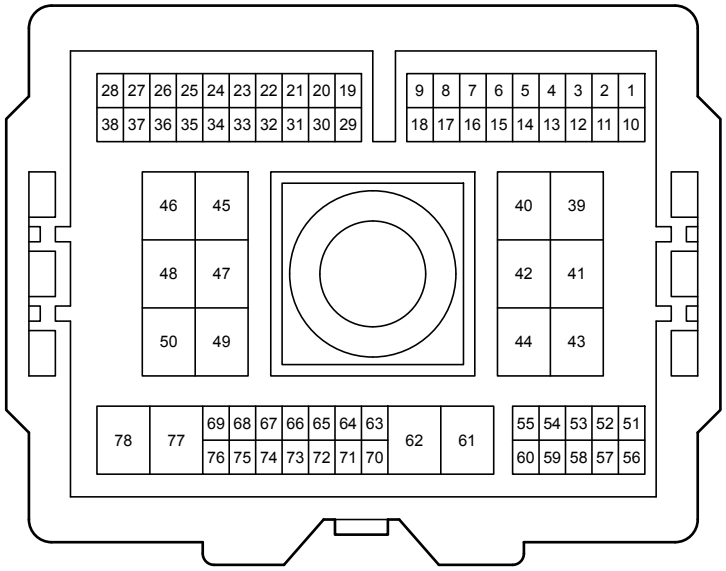


EL2
Gray

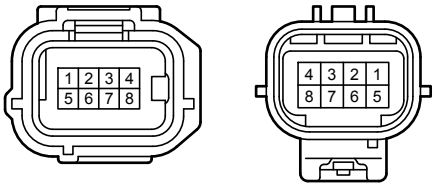


FE1
White

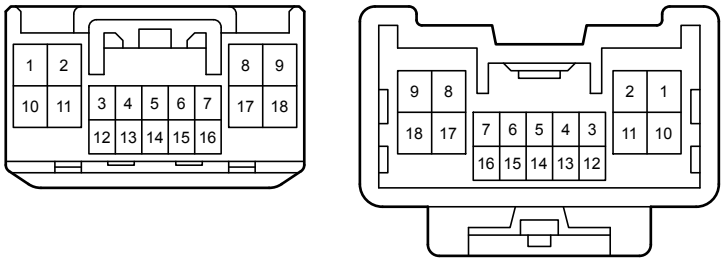


FE4
White

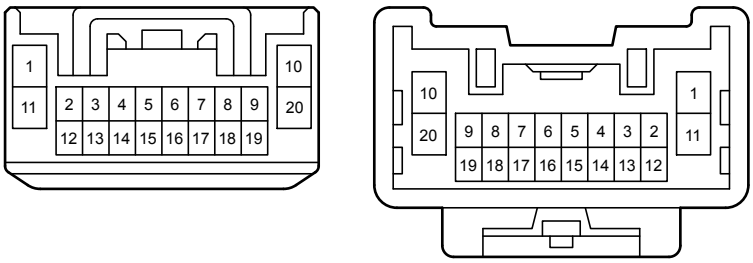


Fg1
Black

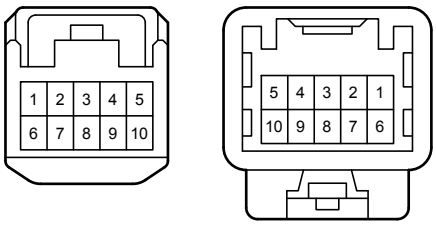

Kc1
White

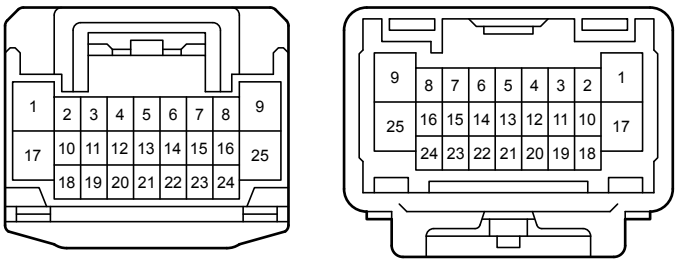

Lc1
White

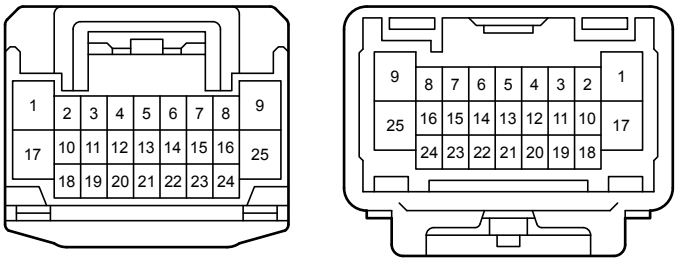

gF1
Black

