




(BAT)
20A
RR S/HTR
G
d2
Rear Seat Heater LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
(IG)
10A
ECU–IG
No. 2
7 2D
G
51
E60
Junction
Connector
1
G
W–B
L
IG1 NO. 5
Relay
W–B
A34
Junction Connector
G
G
G
59 EA1
AK1
5 Kd1
1 Kd1
2 Kd1
3 Kd1
W–B
W
B
67 EK2
66 EK2
W
B
11
5
6
RLY
COM
IG
Rear Seat Heater Switch
E55
No. 2 A/C Control Assembly
W–B
(LHD)
W–B
(RHD)
77 A (*1)
78 A (*2)
E59(A)
Junction Connector
67 A (*1)
68 A (*2)
G
3 A
IG1D
E1(A)
Main Body ECU
W–B
A3
A1
K1
* 1 : Before Jan. 2012 Production
* 2 : From Jan. 2012 Production


G
d1
Rear Seat Heater RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
THR
SWR
E
B
5
1
6
4
W
B
W–B
G
2 Ld1
3 Ld1
1 Ld1
5 Ld1
3 AL1
W
B
W–B
G
21 EL1
20 EL1
W
B
9
3
RLY
COM
Rear Seat Heater Switch
E
E55
No. 2 A/C Control Assembly
1
W–B
70 A
20 A
E59(A)
Junction Connector
W–B
(LHD)
W–B
(RHD)
13
E62
Junction Connector
1
W–B
(LHD)
W–B
E3
E1
L2

A 34
White

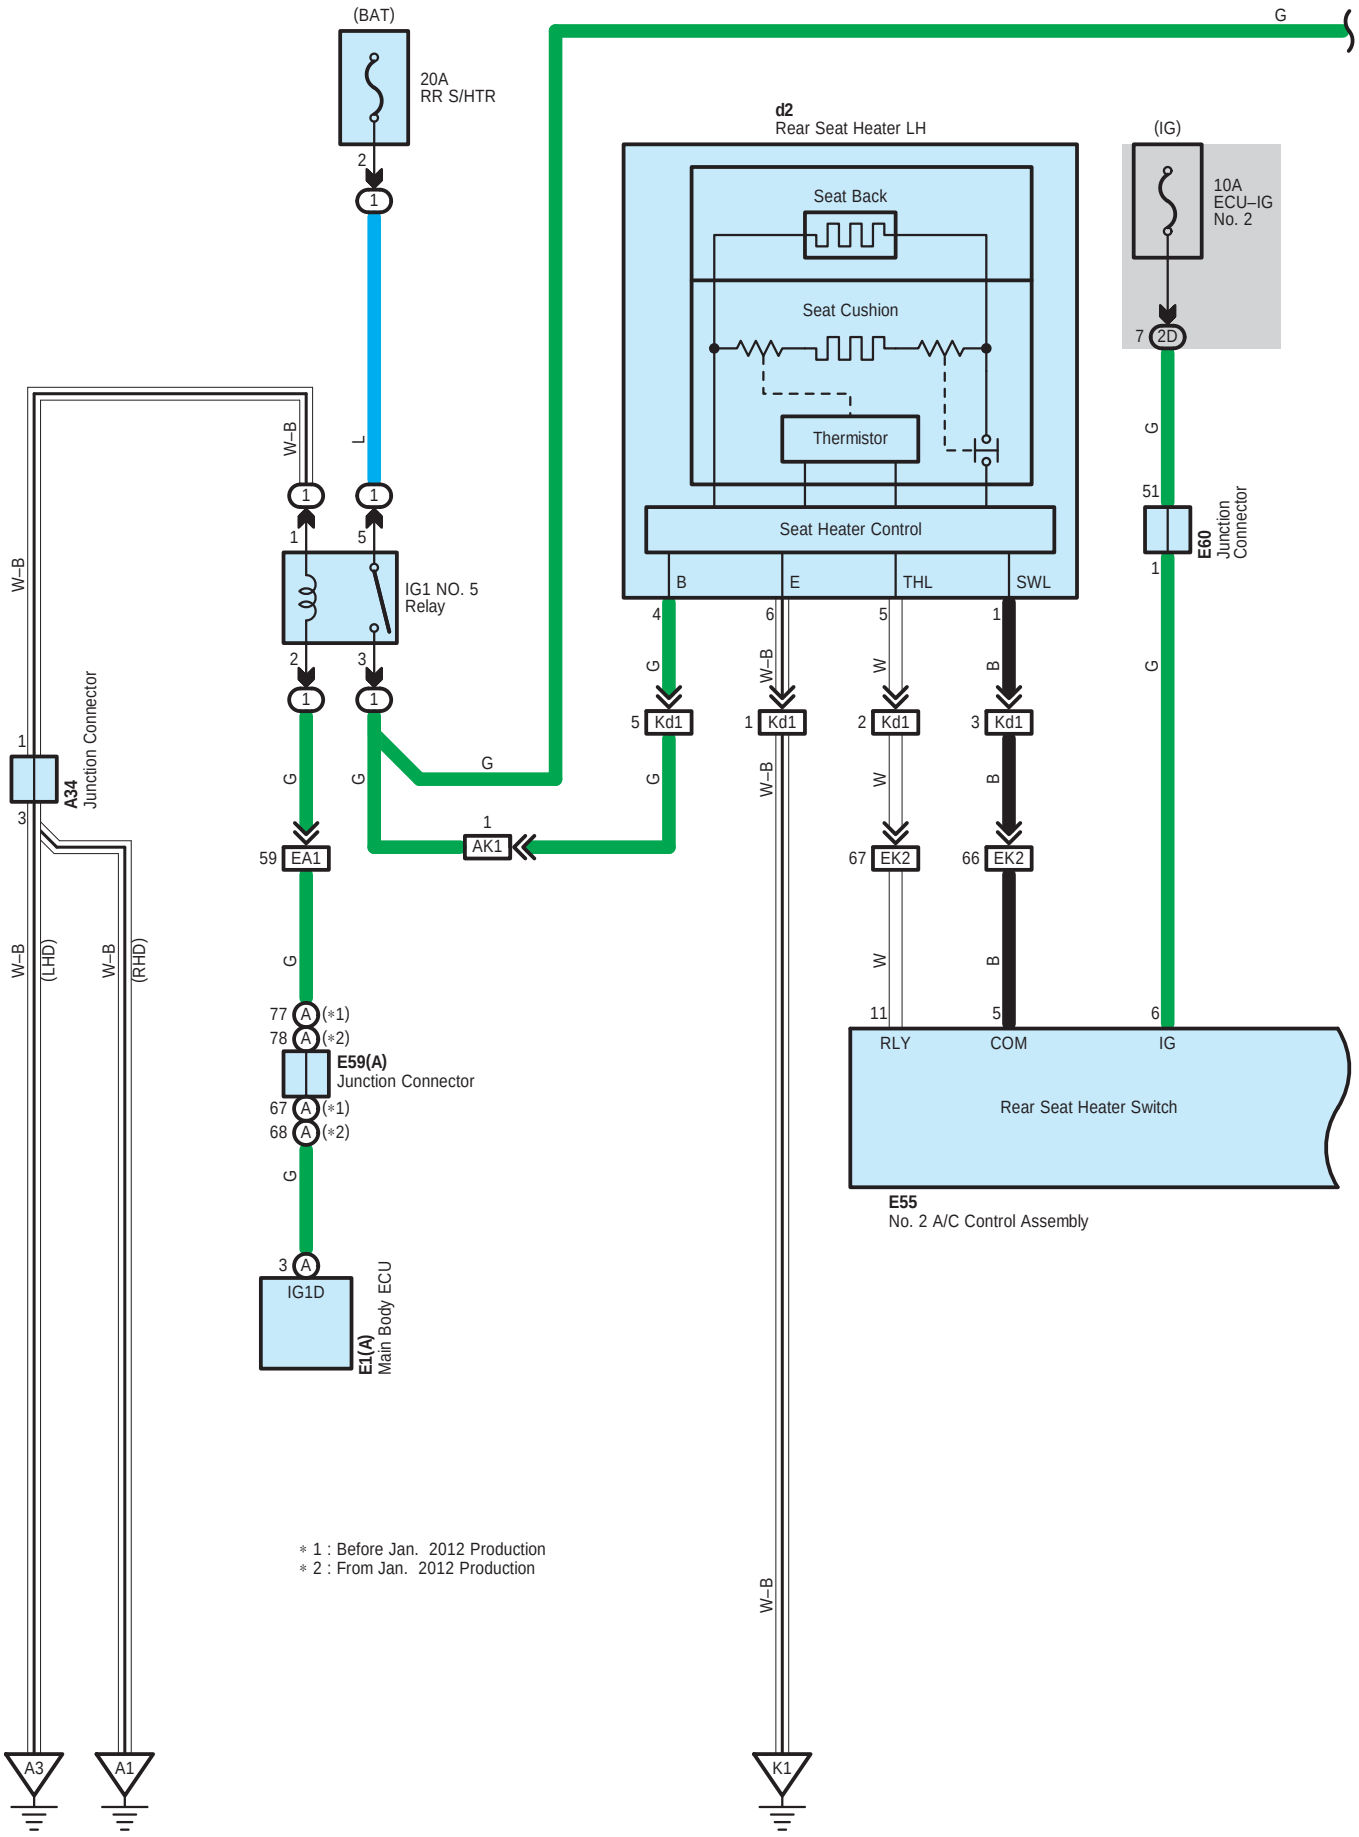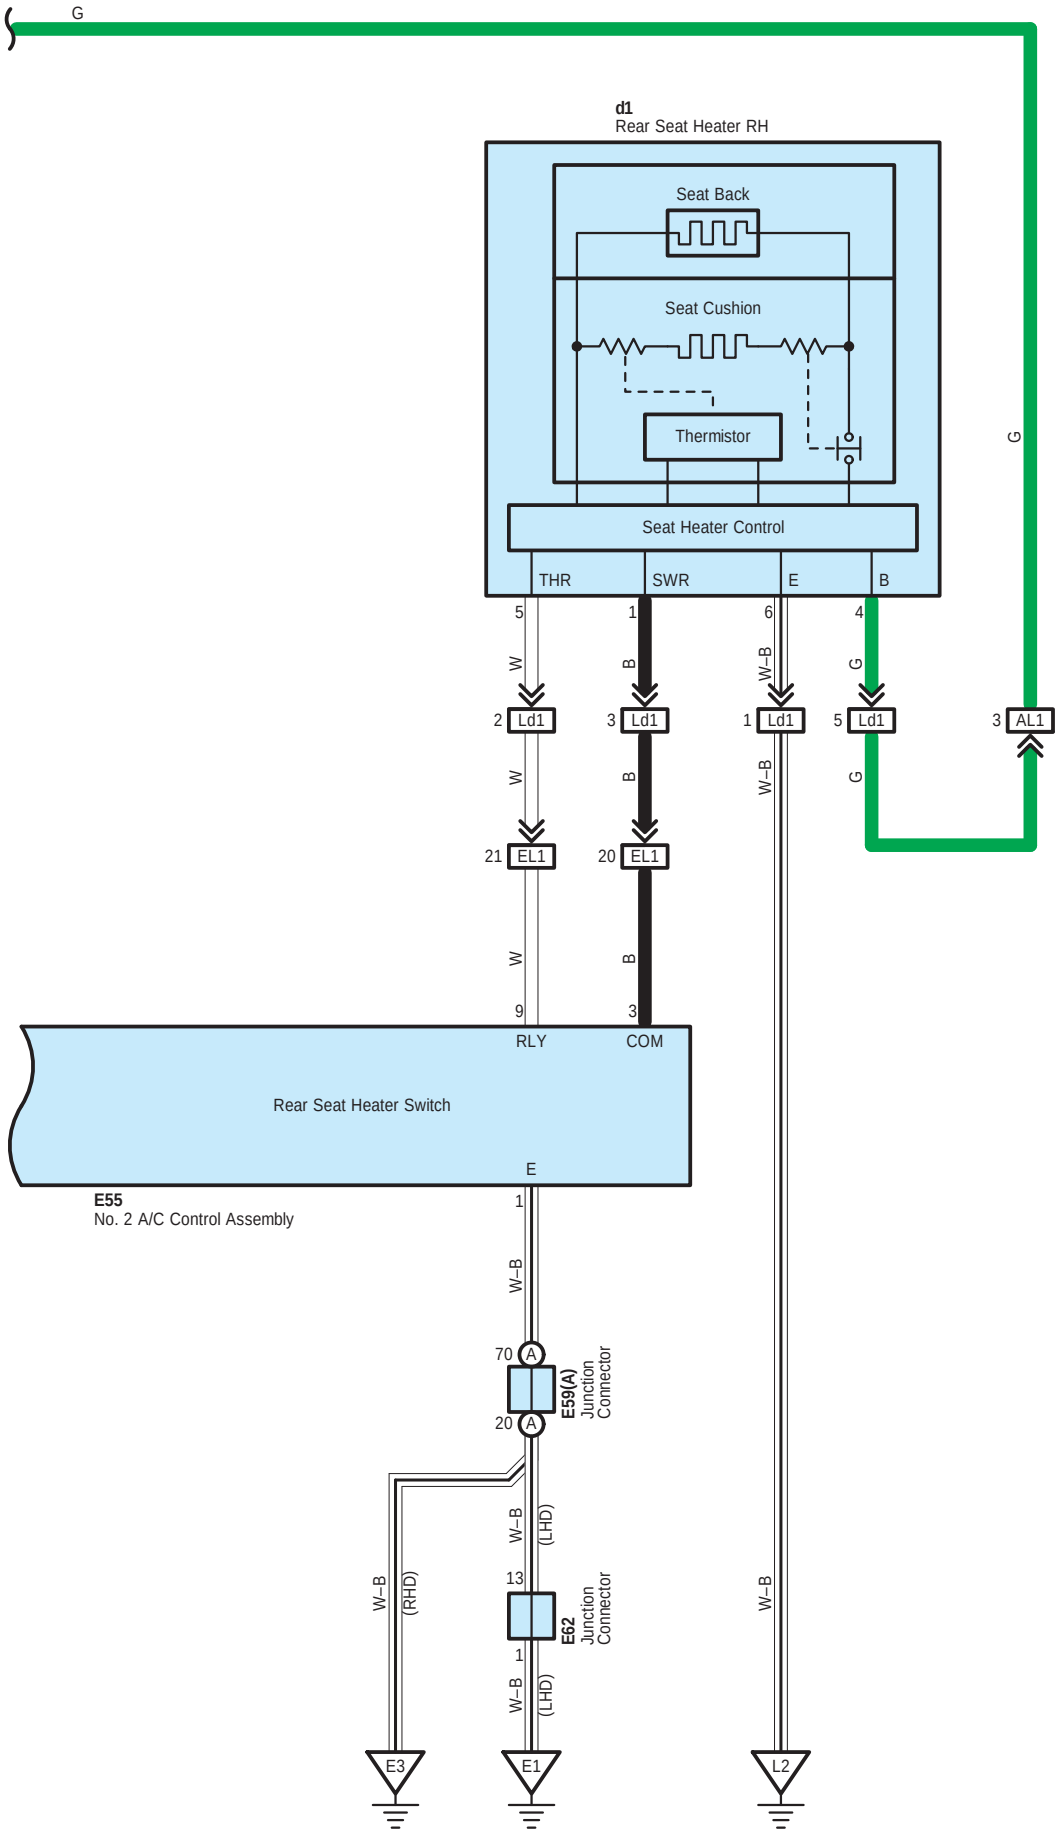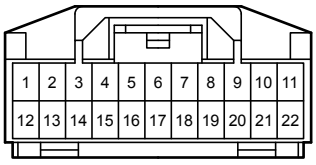


E 1
White

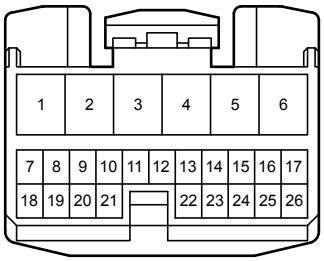


E 55
White




E 59

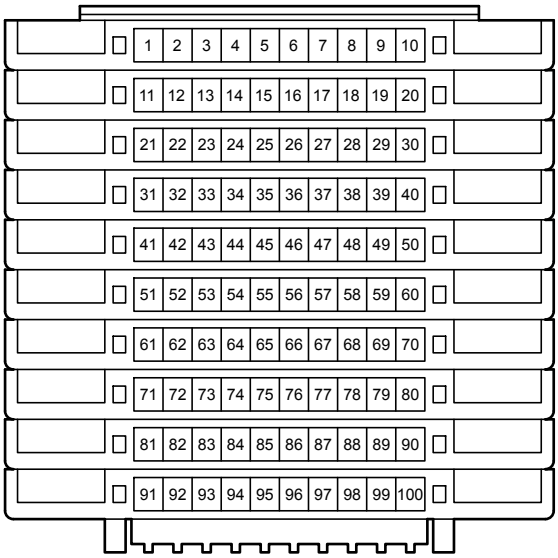


E 60

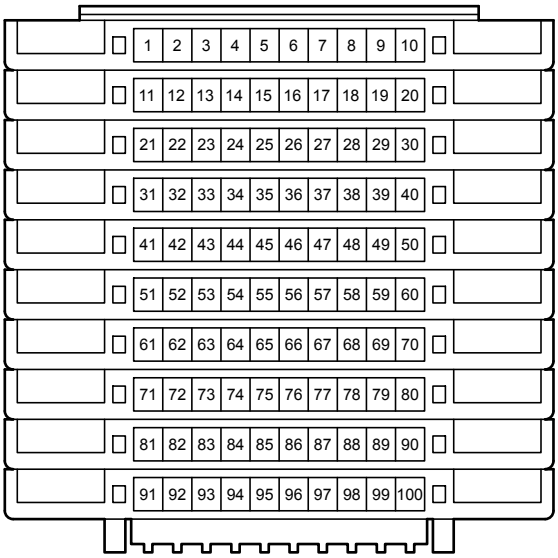


E 62
White

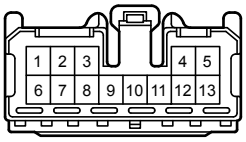


d 1
White

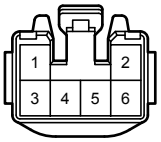



d 2
White

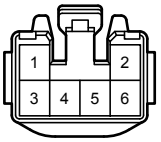


2D
White

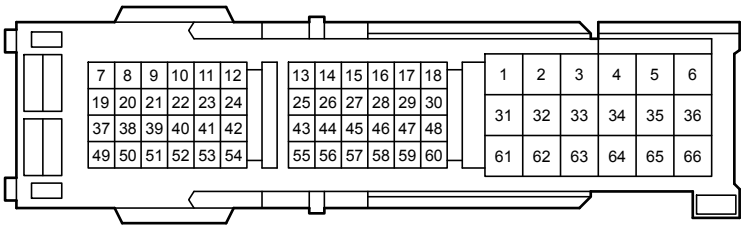


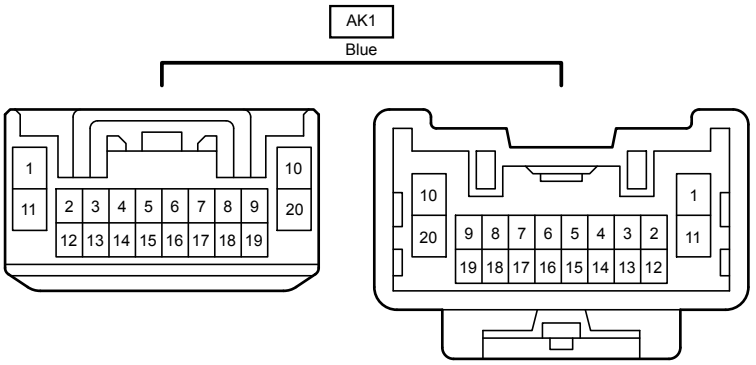
AK1
Blue
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11

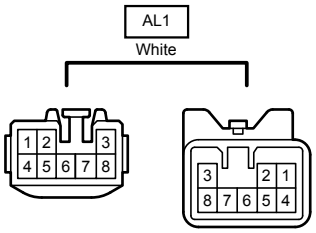

AL1
White
1 2 3
4 5 6 7 8
3 2 1
8 7 6 5 4

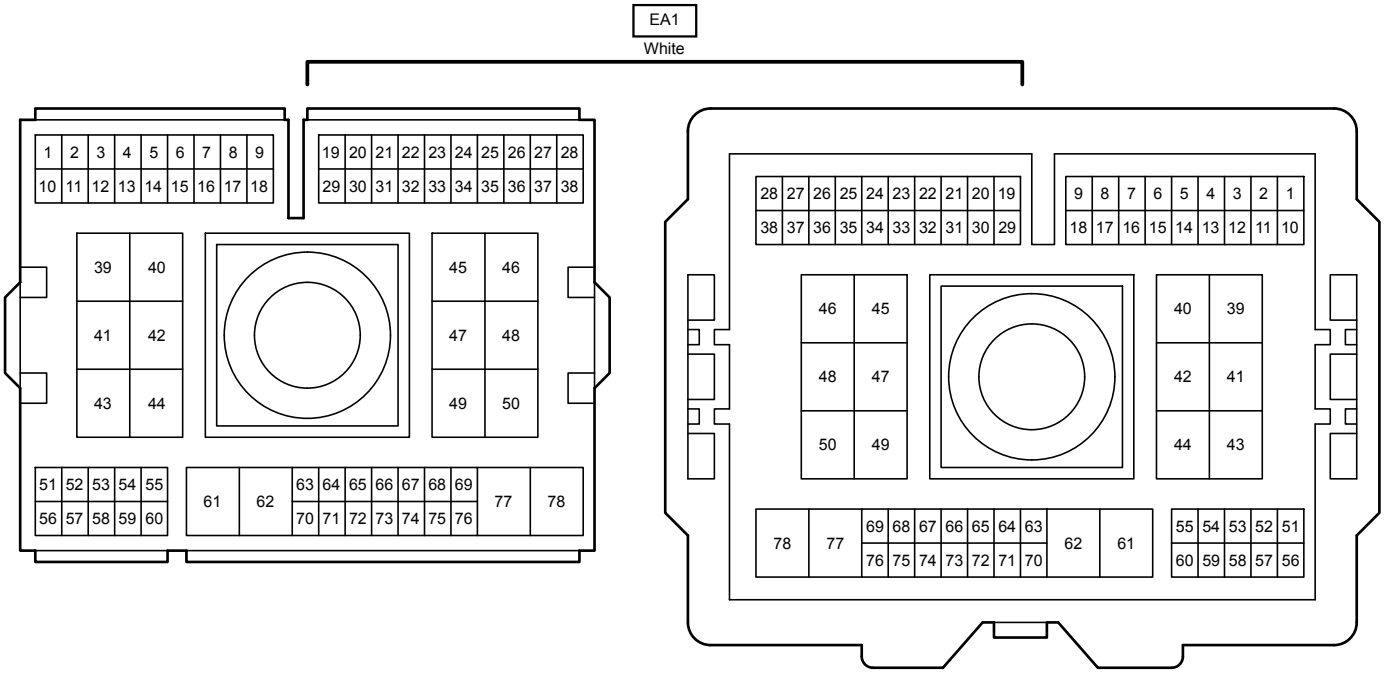
EA1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40
41 42
43 44
45 46
47 48
49 50
51 52 53 54 55
56 57 58 59 60
61 62
63 64 65 66 67 68 69
70 71 72 73 74 75 76
77 78
28 27 26 25 24 23 22 21 20 19
38 37 36 35 34 33 32 31 30 29
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
46 45
48 47
50 49
40 39
42 41
44 43
78 77
69 68 67 66 65 64 63
76 75 74 73 72 71 70
62 61
55 54 53 52 51
60 59 58 57 56


EK2
White

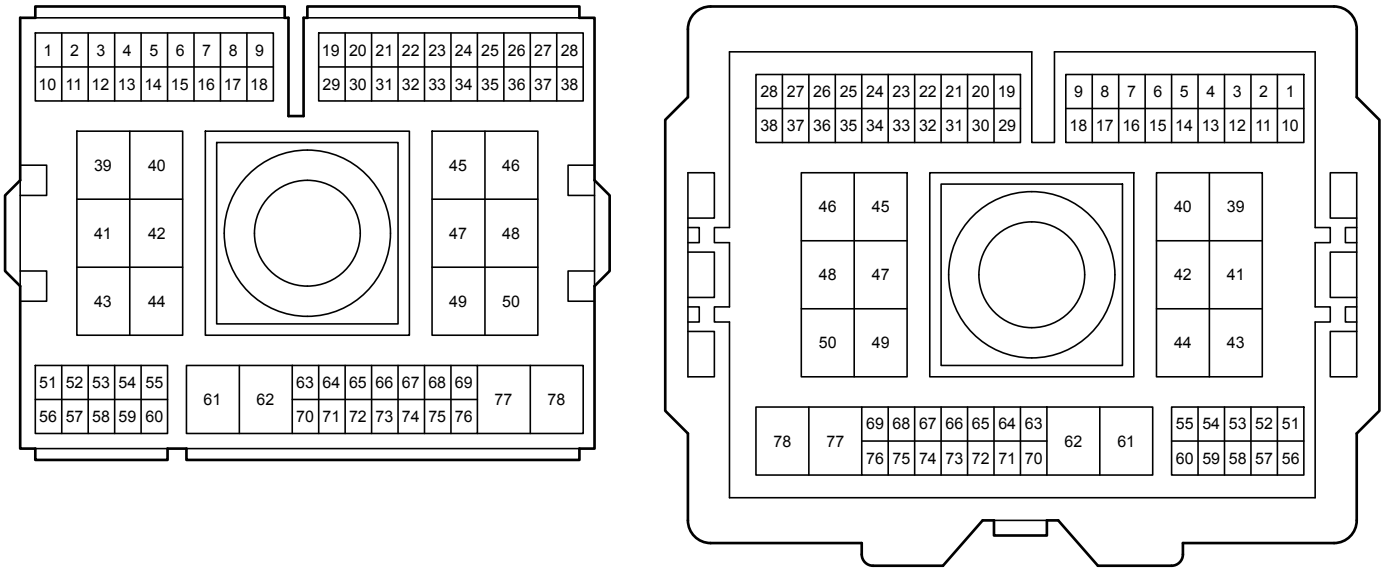

EL1
White

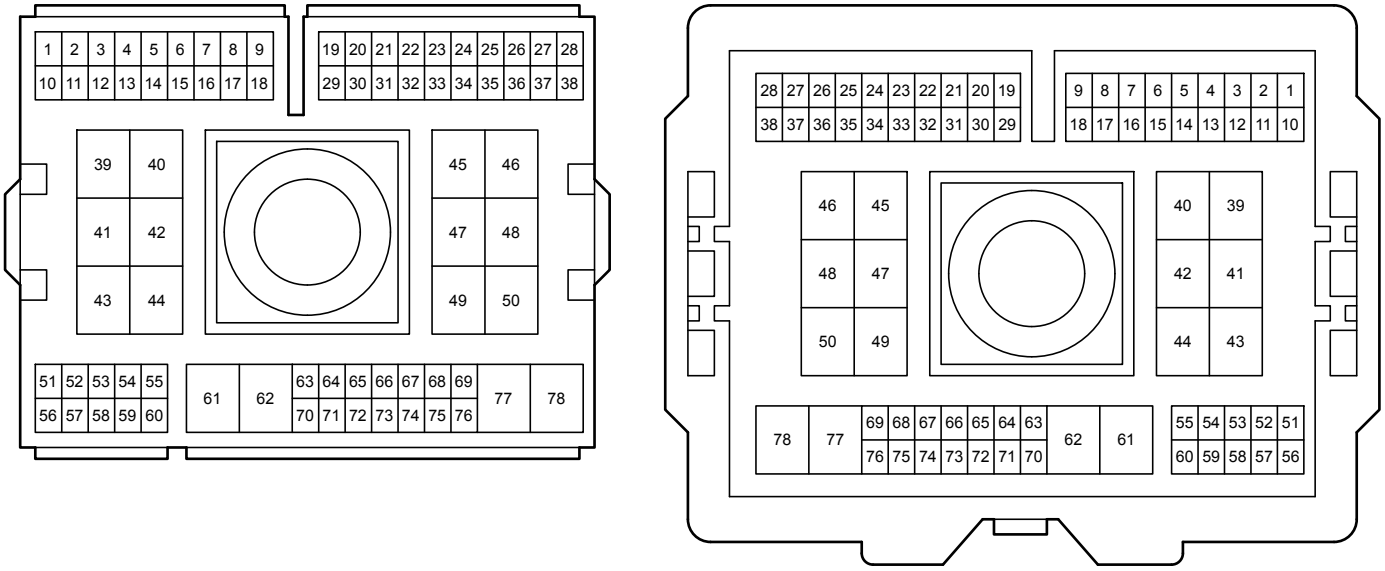

Kd1
White

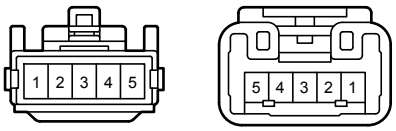

Ld1
White

