




K1
Front
Pretensioner LH
L13
Front
Pretensioner RH
z57
Front Side Airbag
Squib Circuit LH
z58
Front Side Airbag
Squib Circuit RH
L+
L–
R+
R–
SFL+
SFL–
SFR+
SFR–
Y–B
Y
Kz4
Lz1
PL+
PL–
PR+
PR–
SFL+
SFL–
SFR+
SFR–
(*4)
(*5)
E47(A), K27(B), K32(D), L27(C), L38(E)
Center Airbag Sensor Assembly
E1
D+
D–
D2+
D2–
P+
P–
P2+
P2–
W–B
Y–R
Y–G
Y–GR
Y–P
Eb1
2D
E62
Junction Connector
E13(A), z38(B), z39(C)
Spiral Cable Sub–Assembly
Front Passenger
Side Squib
Circuit
Front Passenger
Side Squib
2nd Step Circuit
z39(C)
Driver Side
Squib Circuit
z38(B)
Driver Side Squib
2nd Step Circuit
b3(C), b4(D)
Front Passenger Side
Squib Circuit

∗ 4 : w/ Curtain Shield Airbag
∗ 5 : w/o Curtain Shield Airbag
∗13 : Liftgate Type
∗14 : Swing Type

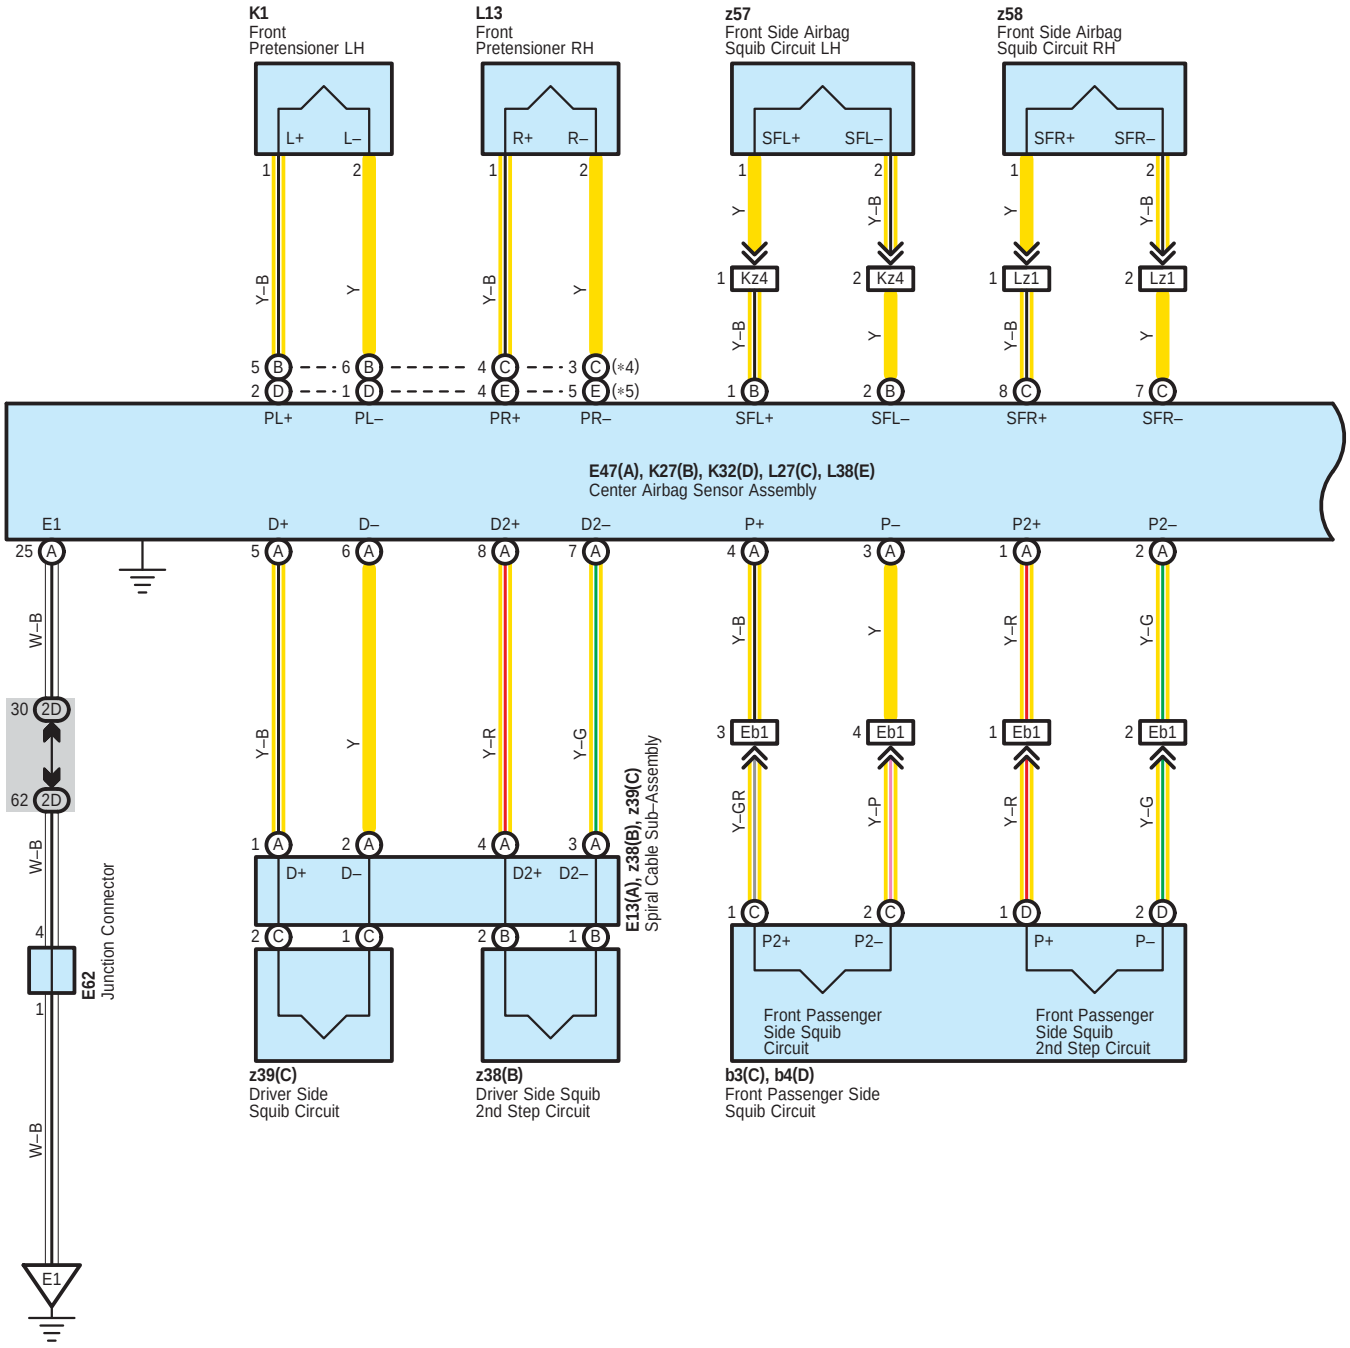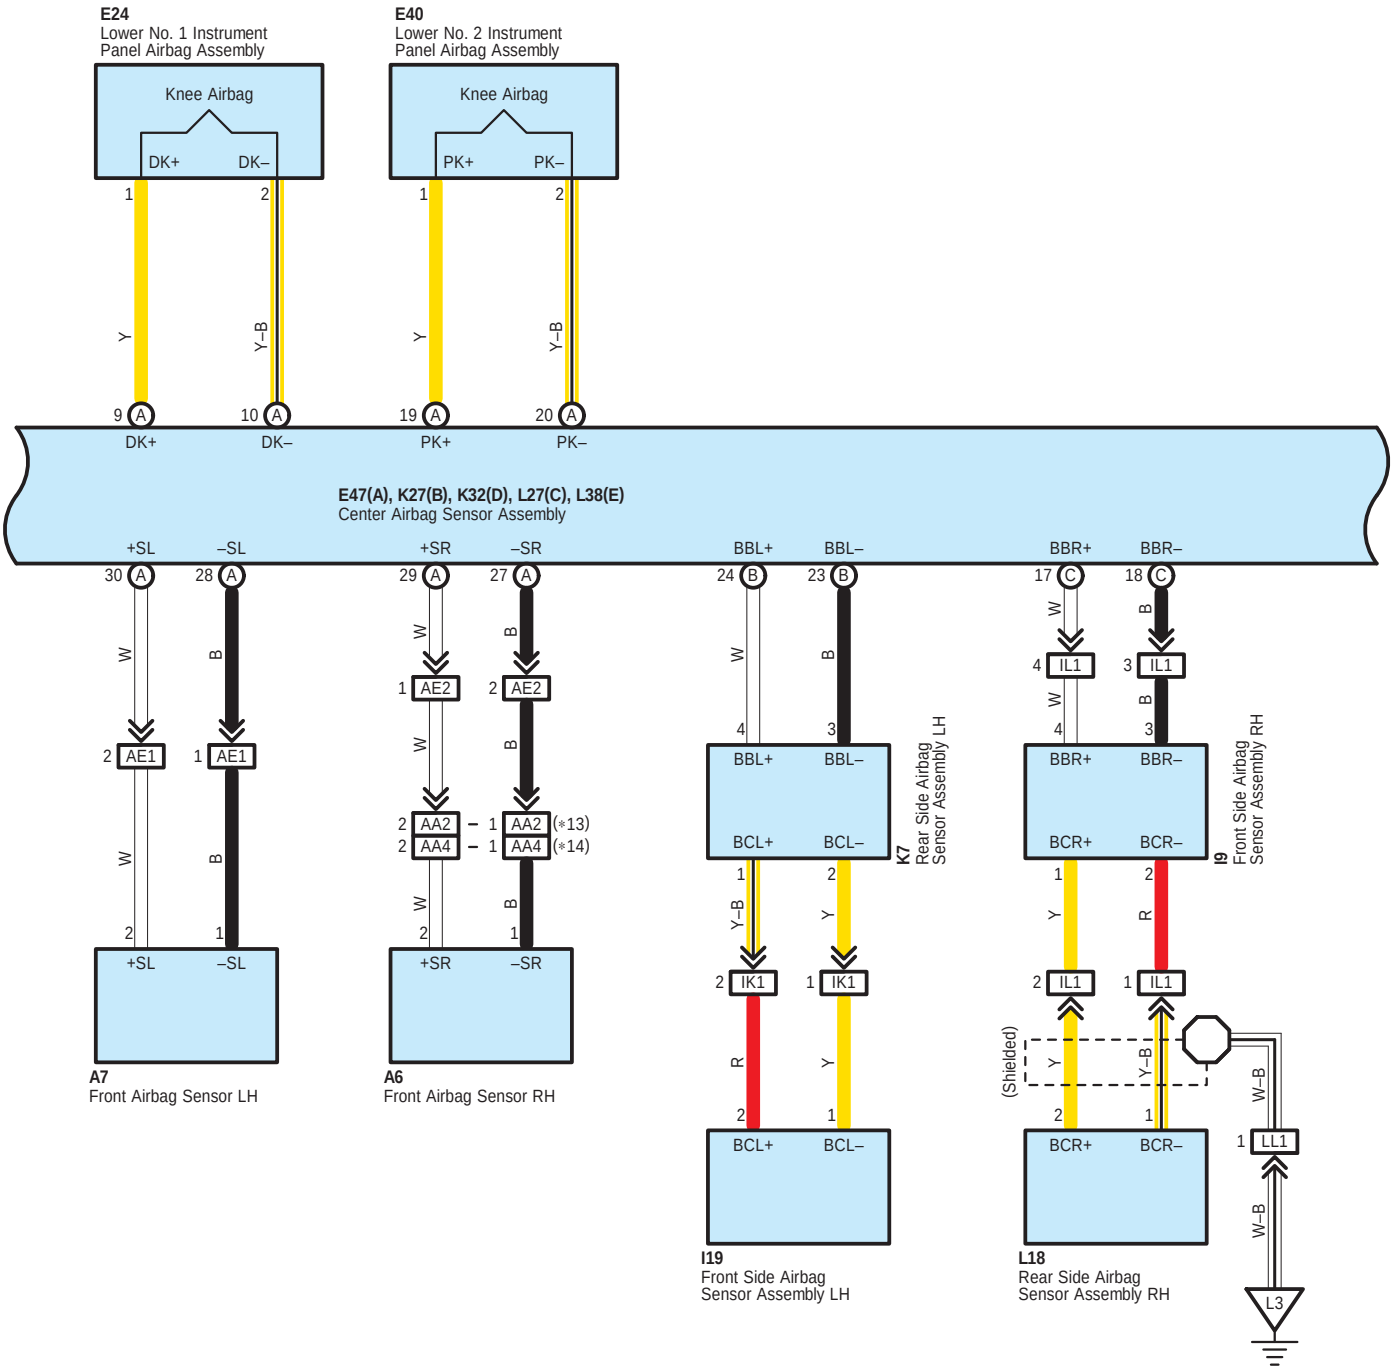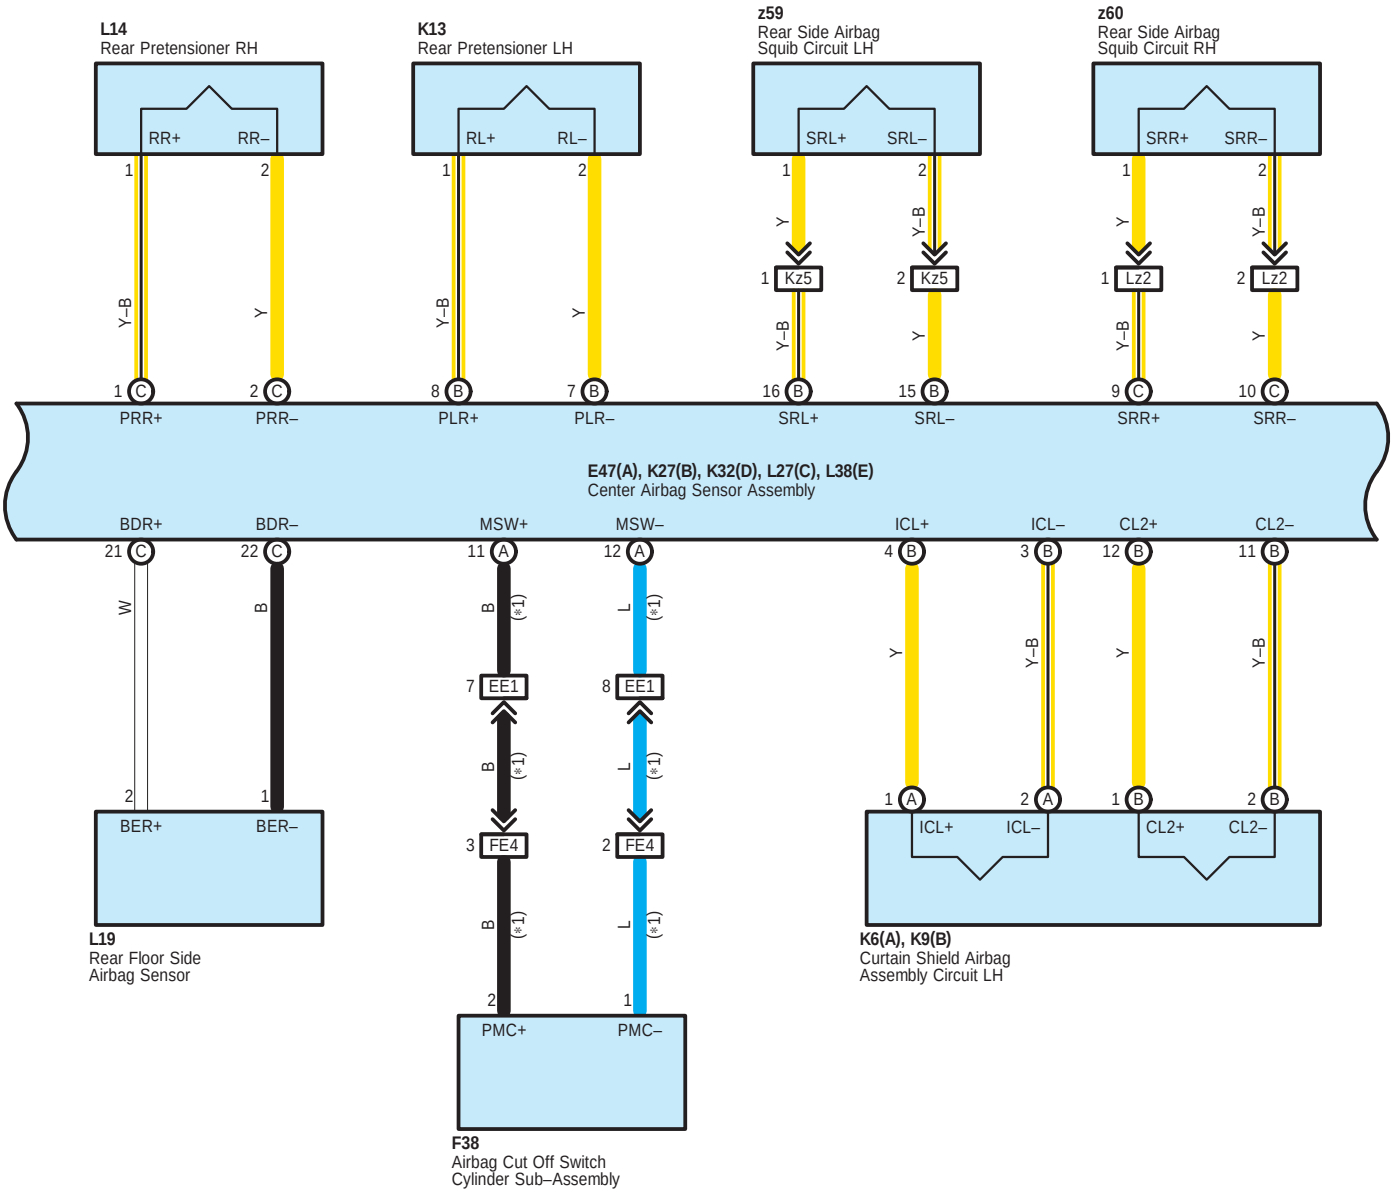



* 1 : w/ Airbag Cutoff Switch
* 2 : w/o Multi–Display w/ Stereo Component Amplifier
* 3 : w/o Multi–Display w/o Stereo Component Amplifier
* 4 : w/ Curtain Shield Airbag
* 5 : w/o Curtain Shield Airbag
* 6 : w/ Multi–Display

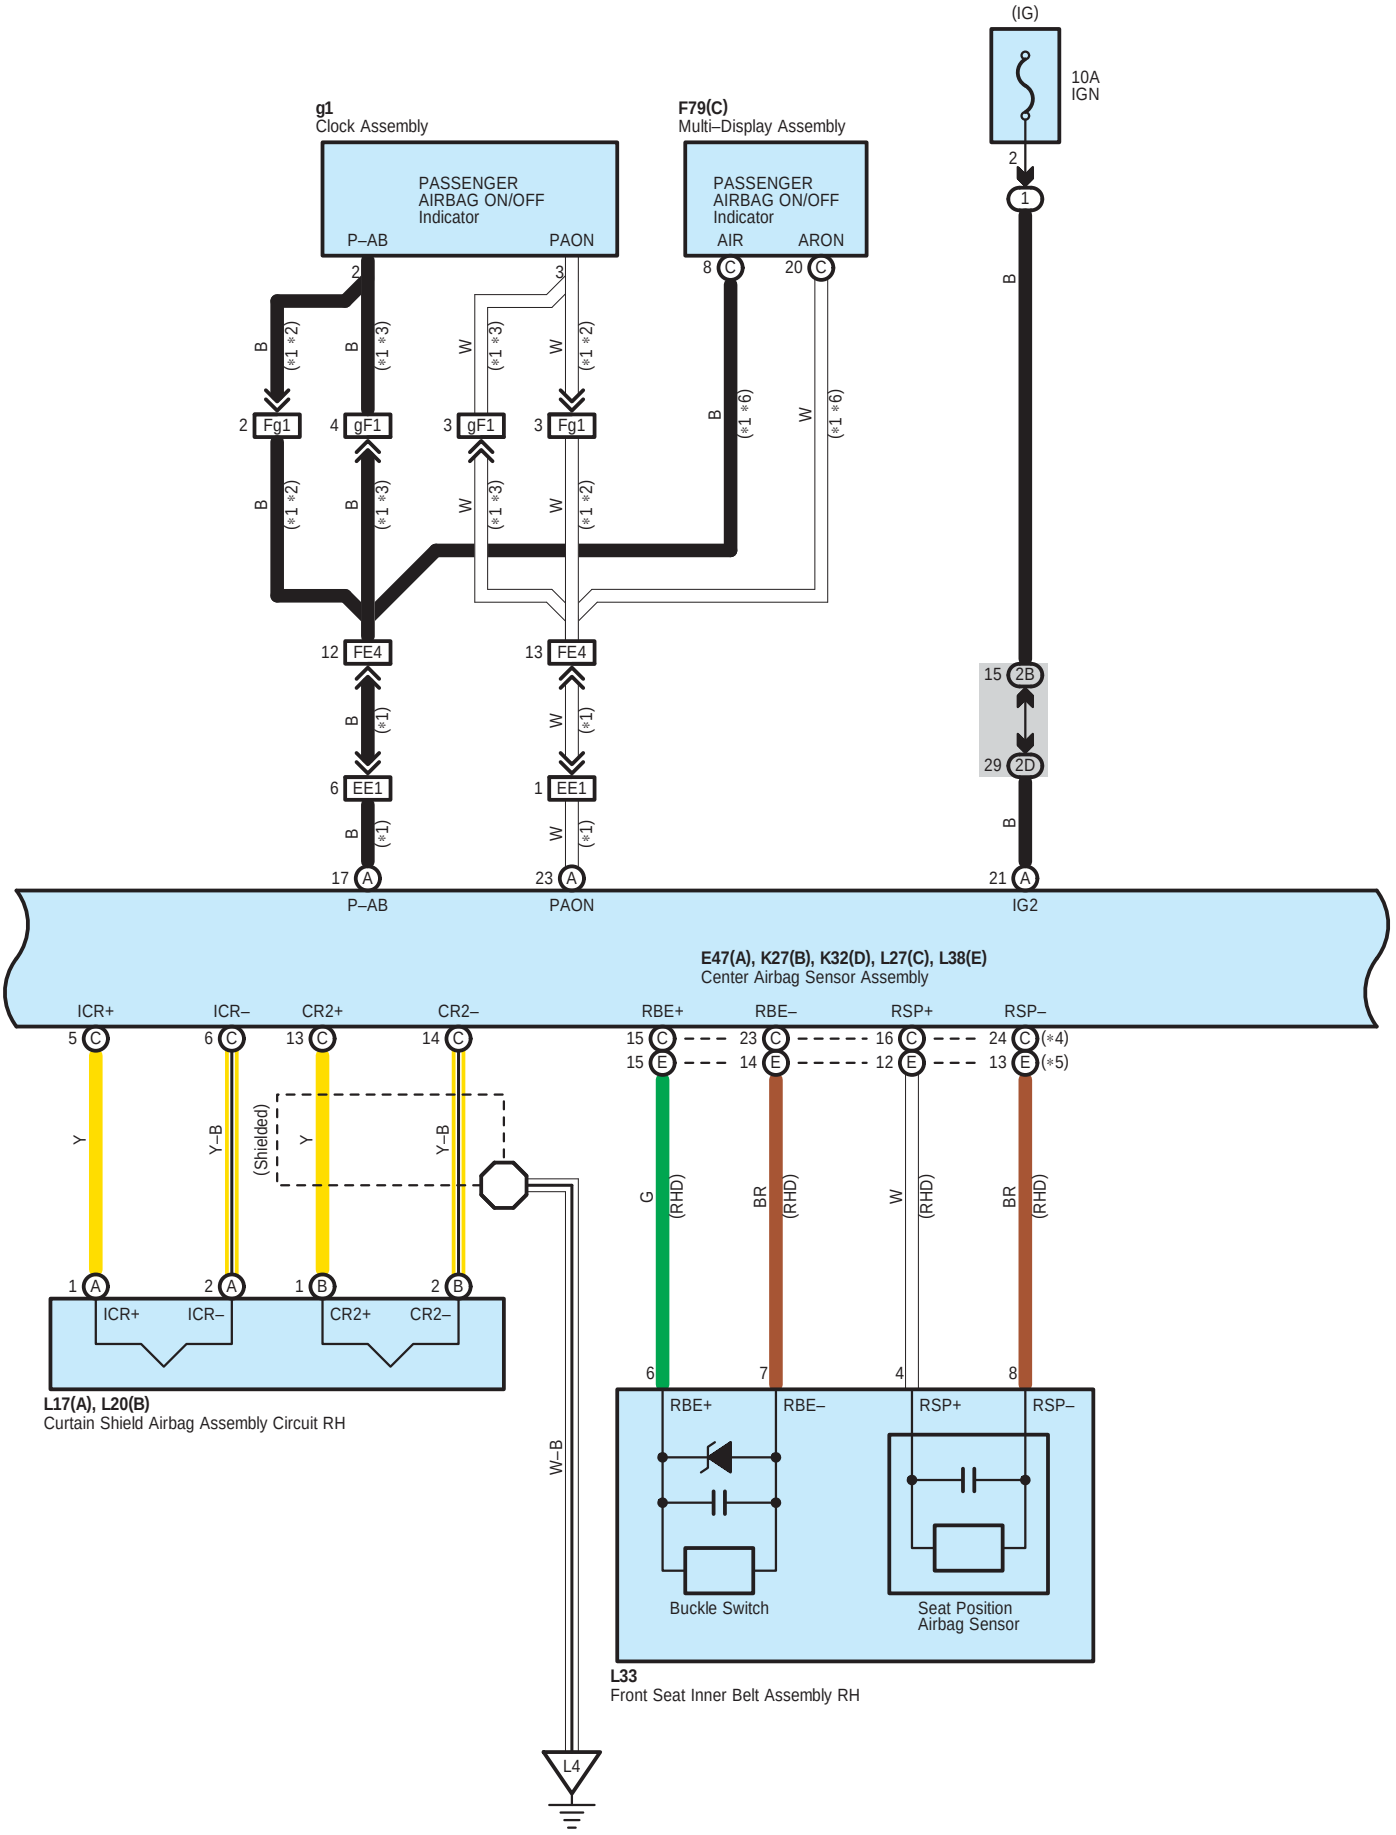



(IG)
10A
IGN
g1
Clock Assembly
PASSENGER
AIRBAG ON/OFF
Indicator
P–AB
PAON
F79(C)
Multi–Display Assembly
PASSENGER
AIRBAG ON/OFF
Indicator
AIR
ARON
Fg1
gF1
FE4
EE1
2B
2D
P–AB
PAON
IG2
E47(A), K27(B), K32(D), L27(C), L38(E)
Center Airbag Sensor Assembly
ICR+
ICR–
CR2+
CR2–
RBE+
RBE–
RSP+
RSP–
(Shielded)
(RHD)
L17(A), L20(B)
Curtain Shield Airbag Assembly Circuit RH
L33
Front Seat Inner Belt Assembly RH
Buckle Switch
Seat Position
Airbag Sensor
L4


∗ 4 : w/ Curtain Shield Airbag
∗ 5 : w/o Curtain Shield Airbag
∗11 : w/ VSC
∗12 : w/o VSC
∗21 : 1UR–FE, 1GR–FE
∗22 : 1VD–FTV
∗23 : 3UR–FE, 1UR–FE, 1GR–FE
∗30 : LHD Before Aug. 2013 Production, RHD
∗31 : LHD From Aug. 2013 Production
∗32 : From Aug. 2013 Production G. C. C.

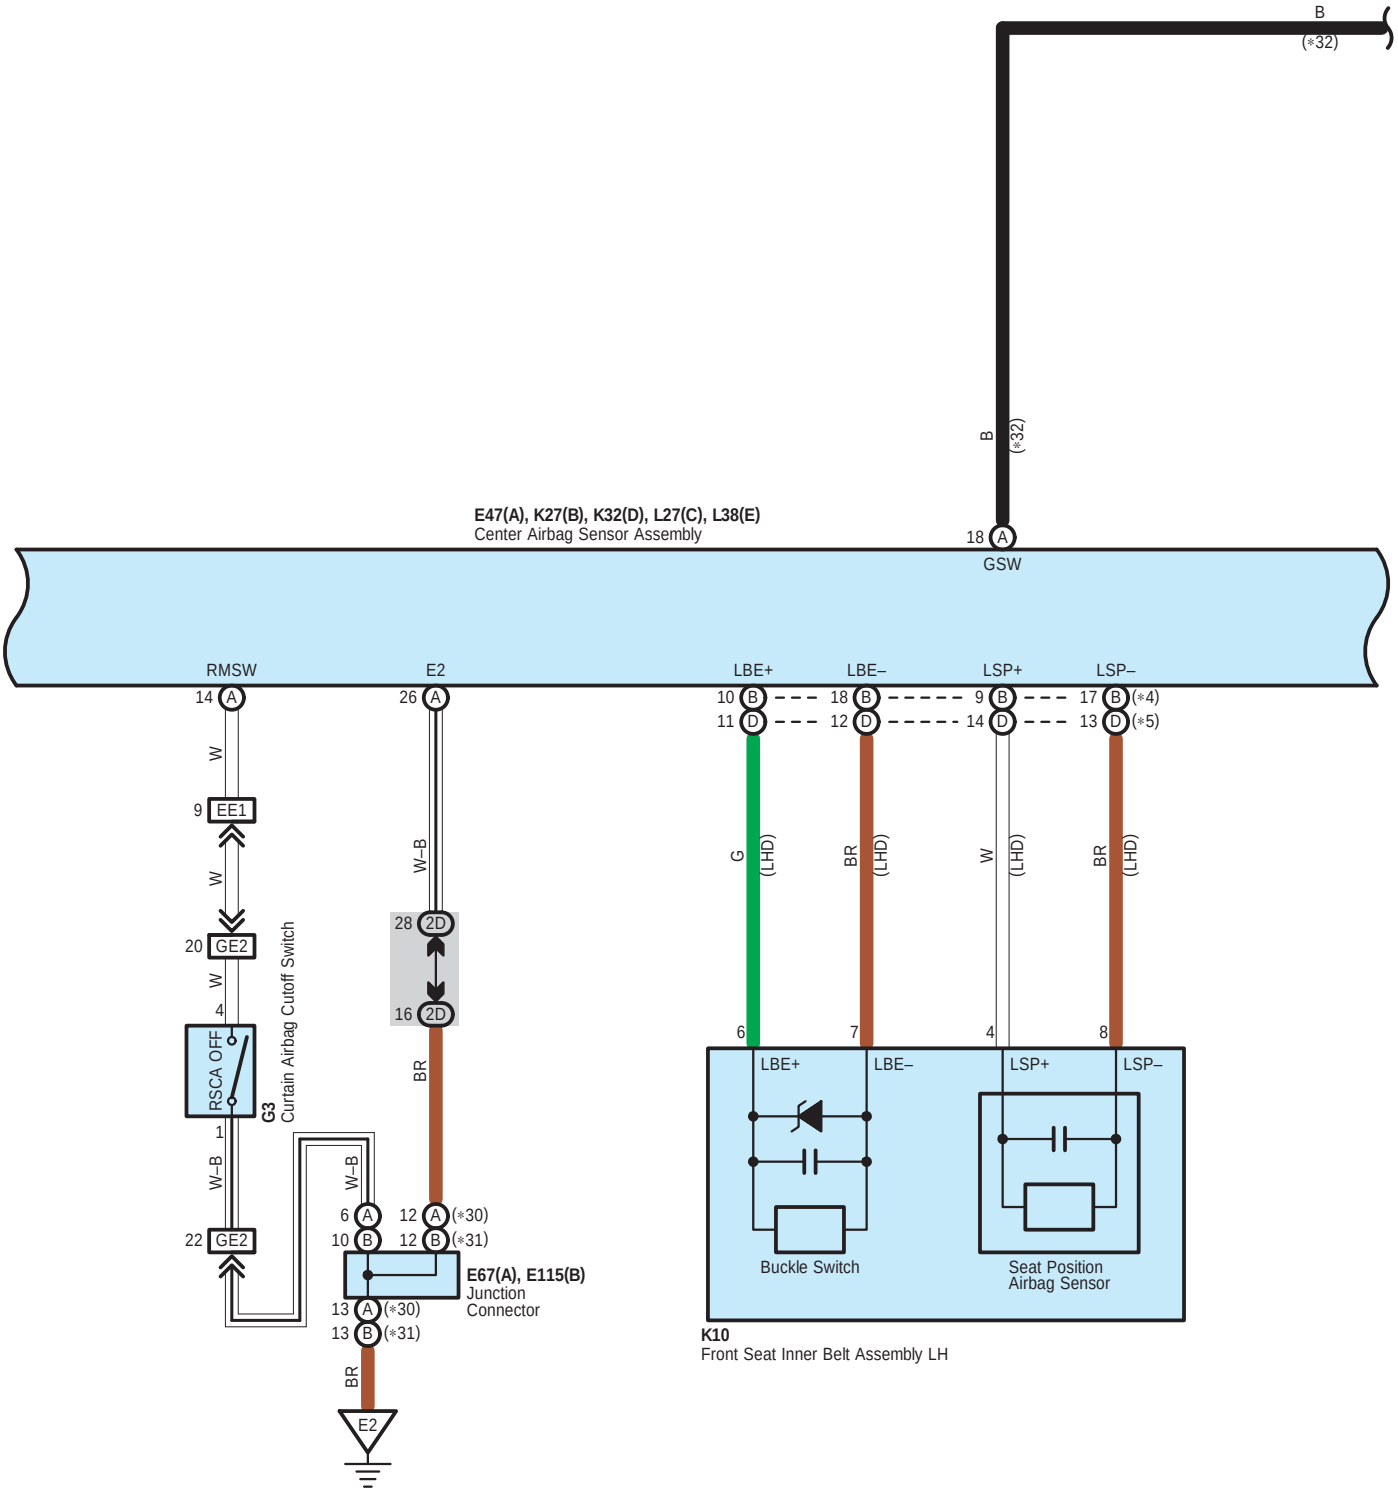

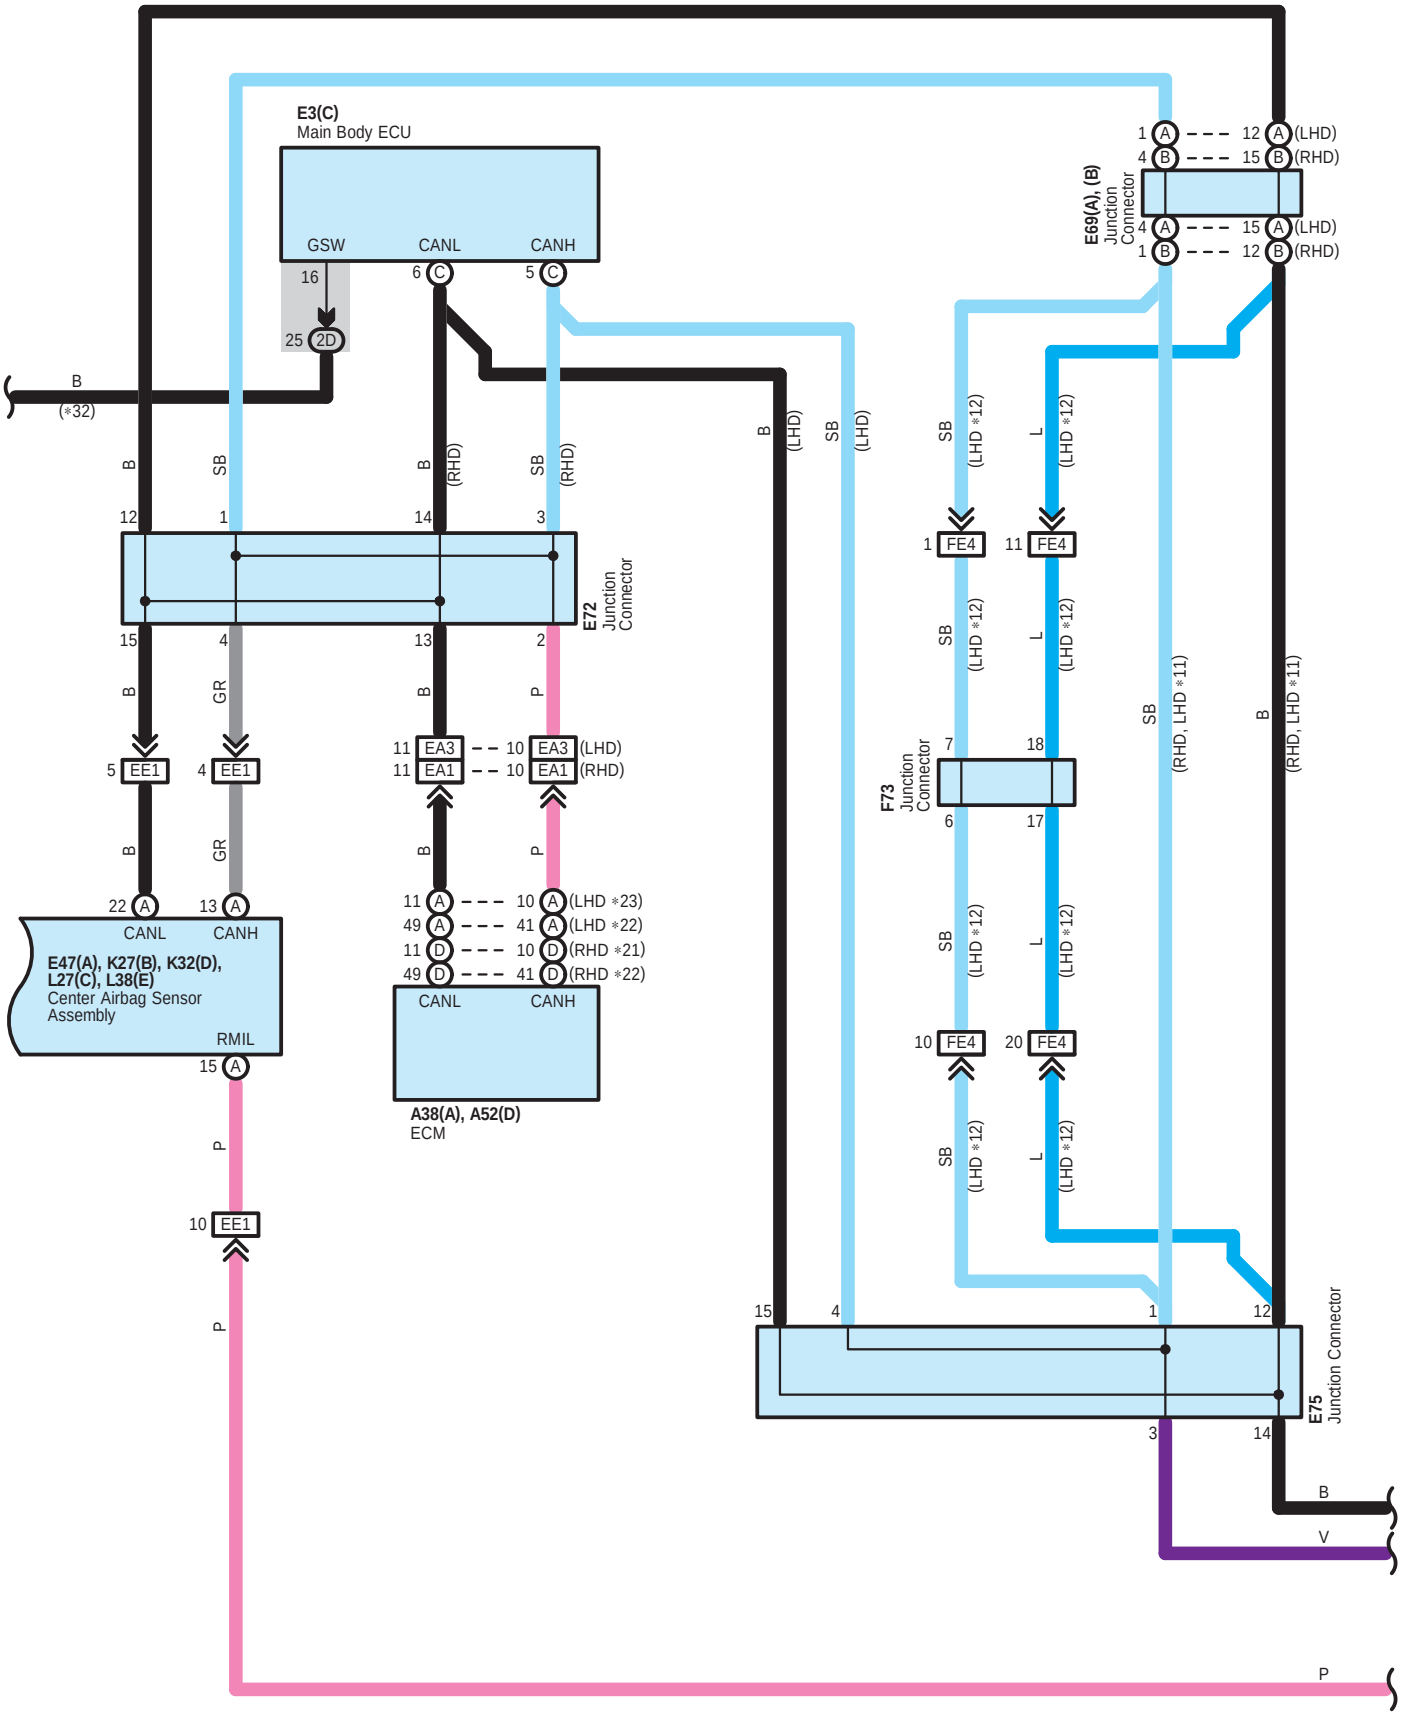

E3(C)
Main Body ECU
GSW
CANL
CANH
16
25 2D
6 C
5 C
B
(*32)
B
SB
B (RHD)
SB (RHD)
B (LHD)
SB (LHD)
12
1
14
3
E72
Junction
Connector
15
4
13
2
B
GR
B
P
5 EE1
4 EE1
11 EA3
11 EA1
10 EA3 (LHD)
10 EA1 (RHD)
B
GR
B
P
22 A
13 A
CANL
CANH
E47(A), K27(B), K32(D),
L27(C), L38(E)
Center Airbag Sensor
Assembly
RMIL
15 A
11 A
49 A
11 D
49 D
10 A (LHD *23)
41 A (LHD *22)
10 D (RHD *21)
41 D (RHD *22)
CANL
CANH
A38(A), A52(D)
ECM
P
10 EE1
P
E69(A), (B)
Junction
Connector
1 A
4 B
12 A (LHD)
15 B (RHD)
4 A
1 B
15 A (LHD)
12 B (RHD)
SB (LHD *12)
L (LHD *12)
1 FE4
11 FE4
SB
L
7
18
F73
Junction
Connector
6
17
SB (RHD, LHD *11)
B (RHD, LHD *11)
10 FE4
20 FE4
15
4
1
12
E75
Junction Connector
3
14
B
V
P

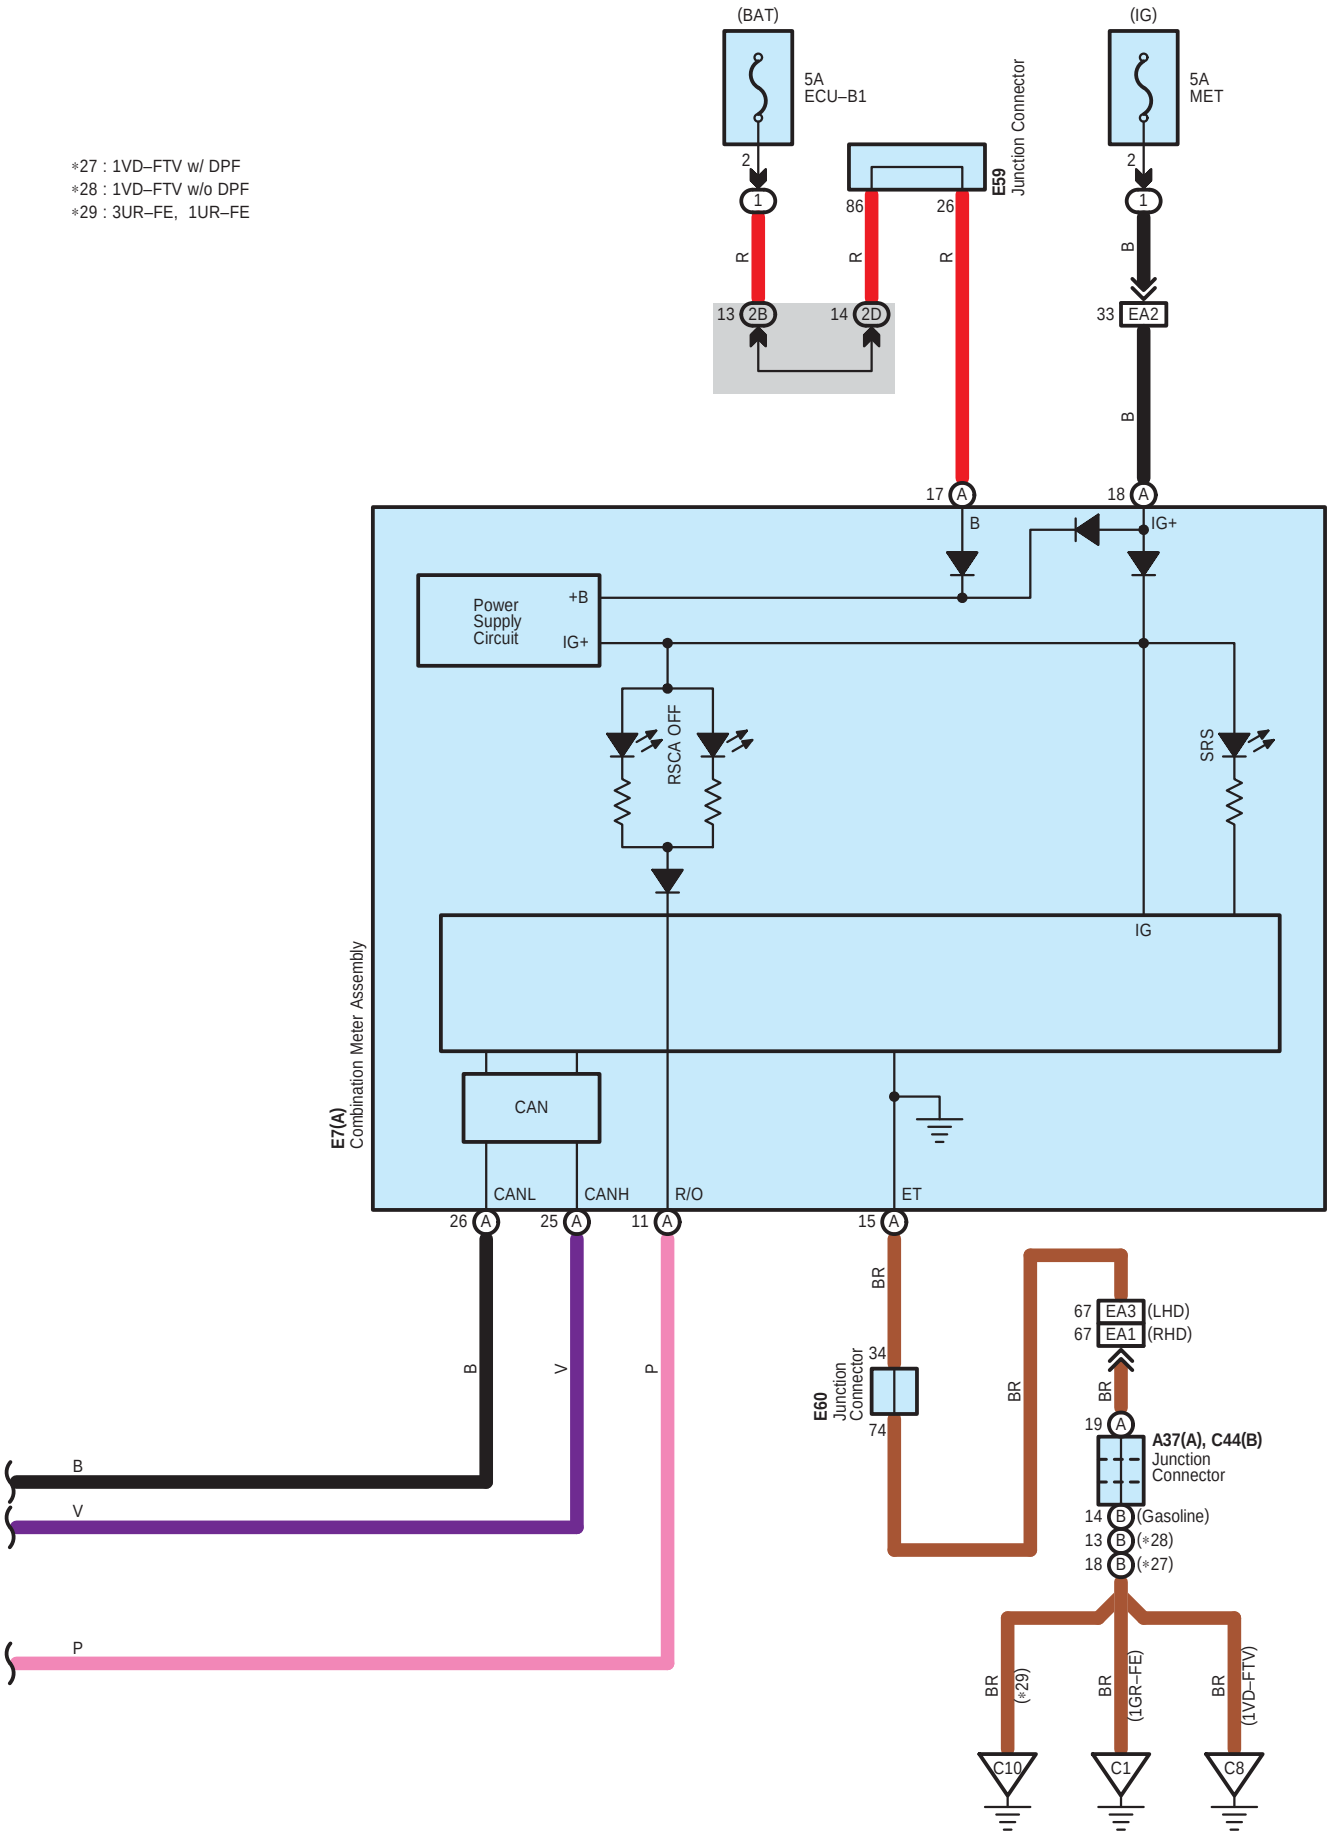
∗27 : 1VD–FTV w/ DPF
∗28 : 1VD–FTV w/o DPF
∗29 : 3UR–FE, 1UR–FE
(BAT)
5A
ECU–B1
(IG)
5A
MET
E59
Junction Connector
2
1
86
26
R
13 2B
14 2D
33 EA2
B
17 A
18 A
B
IG+
Power
Supply
Circuit
+B
IG+
RSCA OFF
SRS
IG
E7(A)
Combination Meter Assembly
CAN
CANL
CANH
R/O
ET
26 A
25 A
11 A
15 A
B
V
P
BR
E60
Junction
Connector
34
74
67 EA3 (LHD)
67 EA1 (RHD)
19 A
A37(A), C44(B)
Junction
Connector
14 B (Gasoline)
13 B (∗28)
18 B (∗27)
(∗29)
(1GR–FE)
(1VD–FTV)
C10
C1
C8


A 6
Yellow

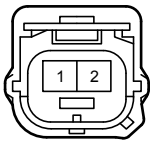


A 7
Yellow

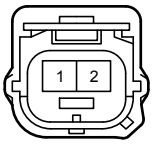


A 37
Blue

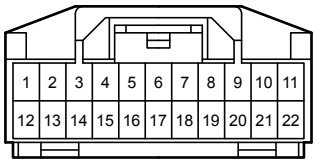


A 38
Black

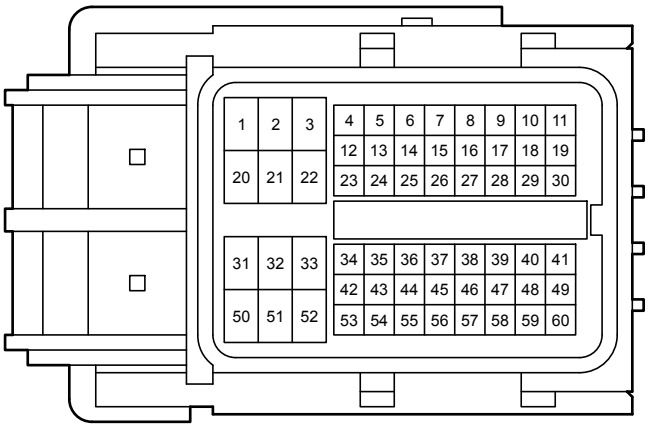


A 52
Black

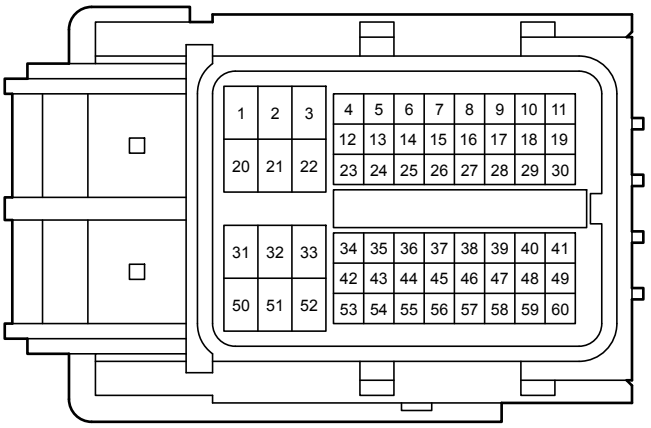


C 44
Blue

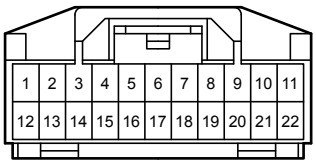


E 3
White

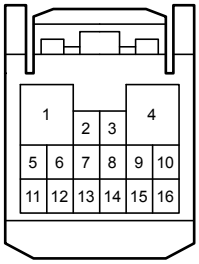


E 7
White

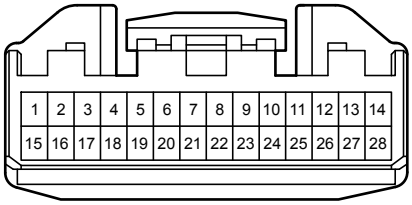


E 13
Yellow

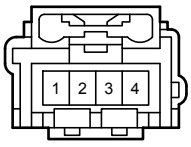


E 24
Black




E 40
Black




E 47
Yellow

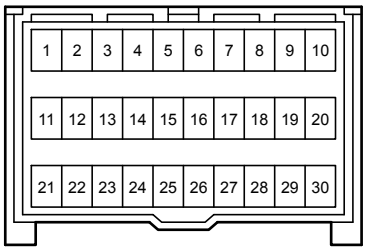


E 59

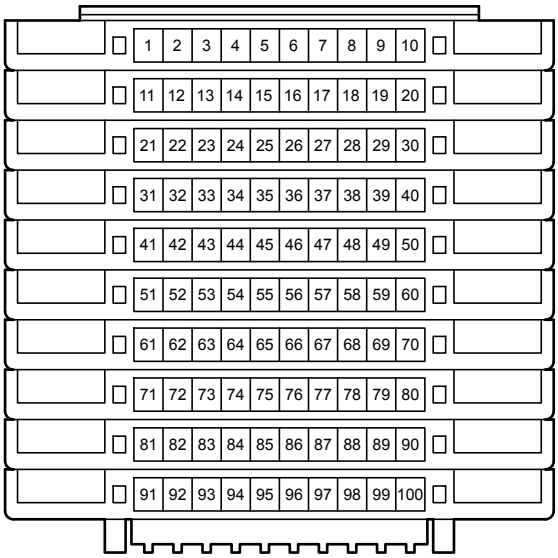


E 60

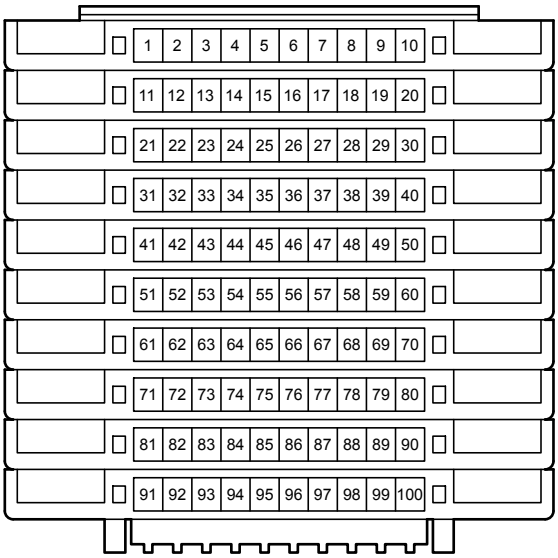


E 62
White

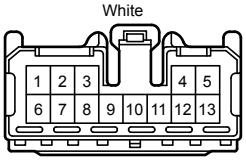


E 67
White

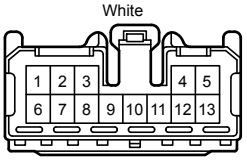


E 69
Gray

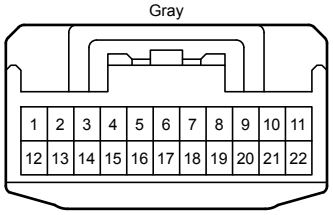


E 72
Gray

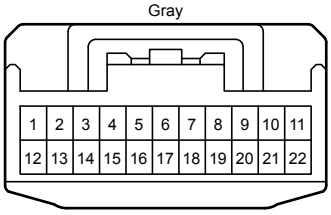


E 75
Gray

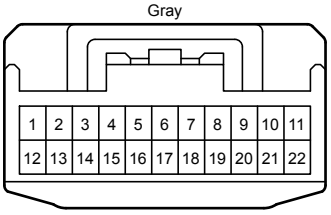


E115
White

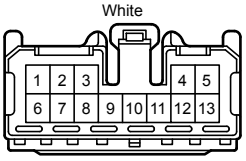


F 38
White




F 73
Blue

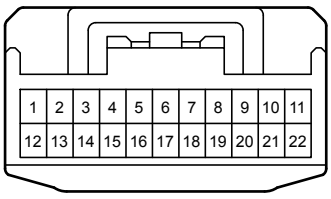


F 79
White

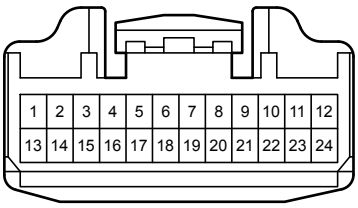


G 3
Gray

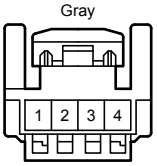


I 9
Yellow

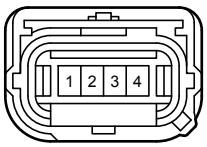


I 19
Yellow

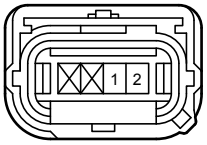


K 1
Yellow

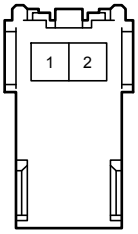


K 6
Black

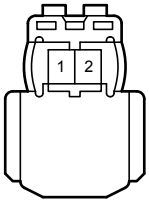


K 7
Yellow

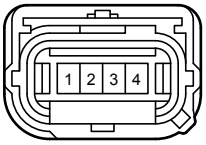


K 9
Black

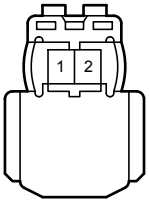


K 10
Gray

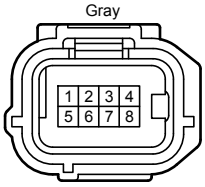


K 13
Yellow

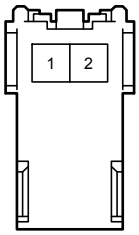


K 27
Yellow

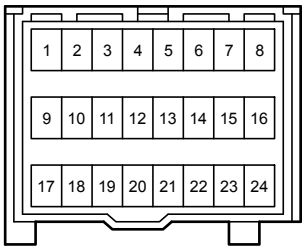


K 32
Yellow

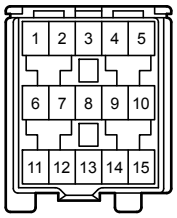


L 13
Yellow

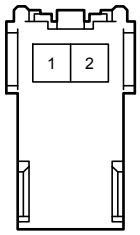


L 14
Yellow

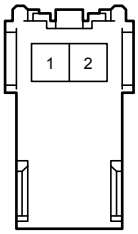


L 17
Black

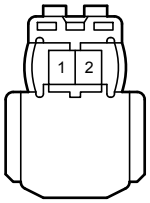


L 18
Yellow

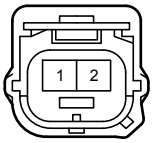


L 19
Yellow

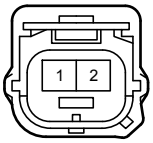


L 20
Black

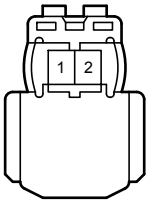


L 27
Yellow

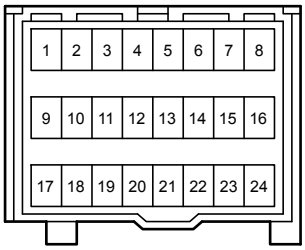


L 33
Gray

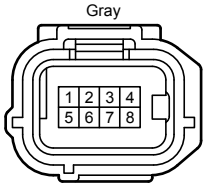


L 38
Yellow

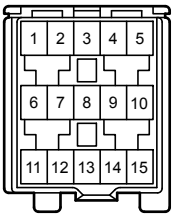

b 3
Orange




b 4
Black




g 1
White




z 38
Black




z 39
Orange




z 57
White




z 58
White




z 59
White




z 60
White




2B
White

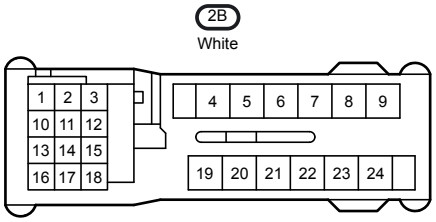


2D
White

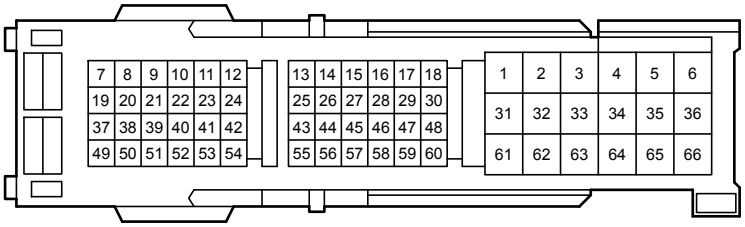


AA2
Yellow

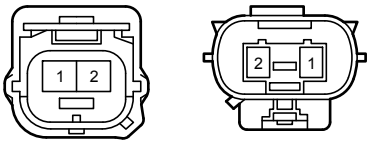


AA4
Yellow

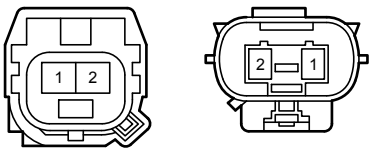


AE1
Yellow

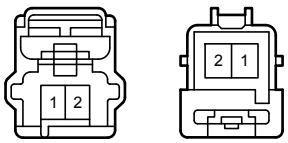

AE2
Yellow

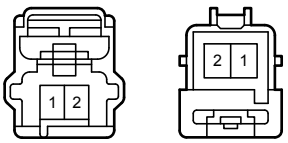


EA1
White

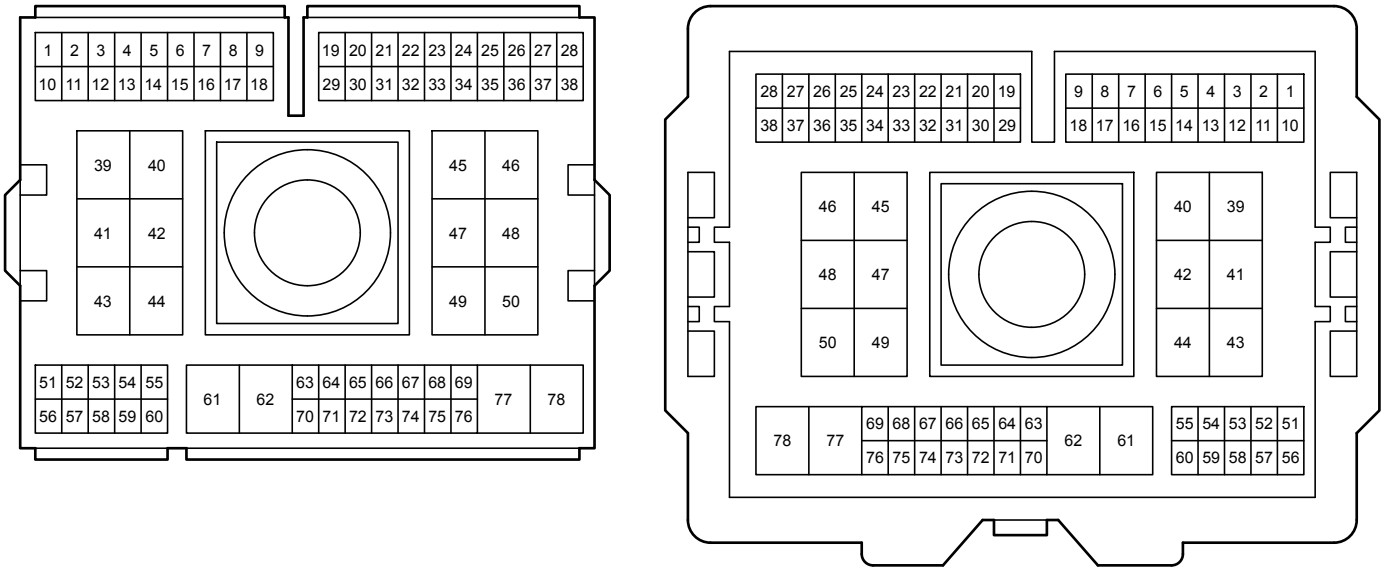


EA2

White

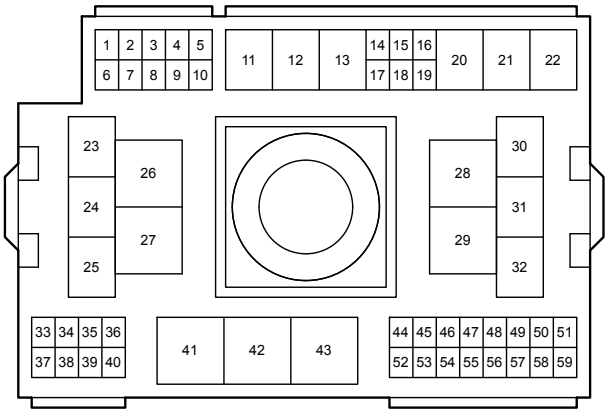



Gray

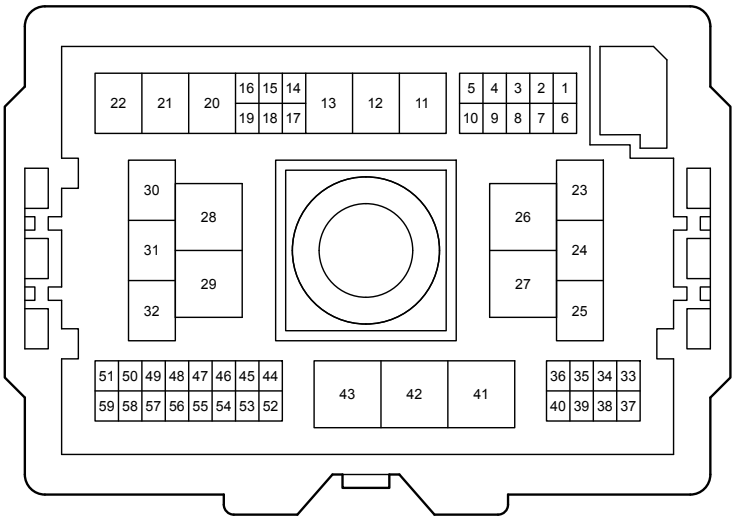

EA3


White

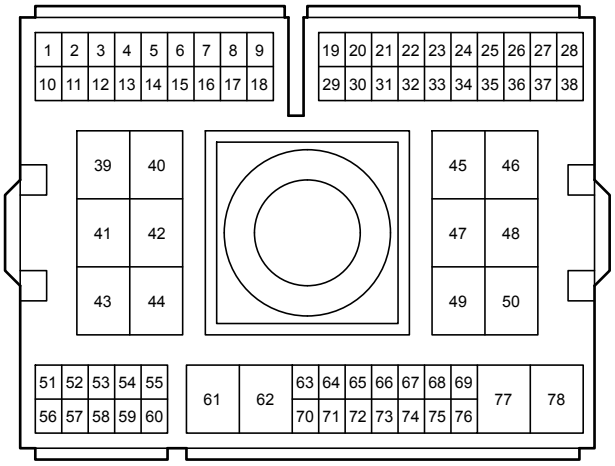

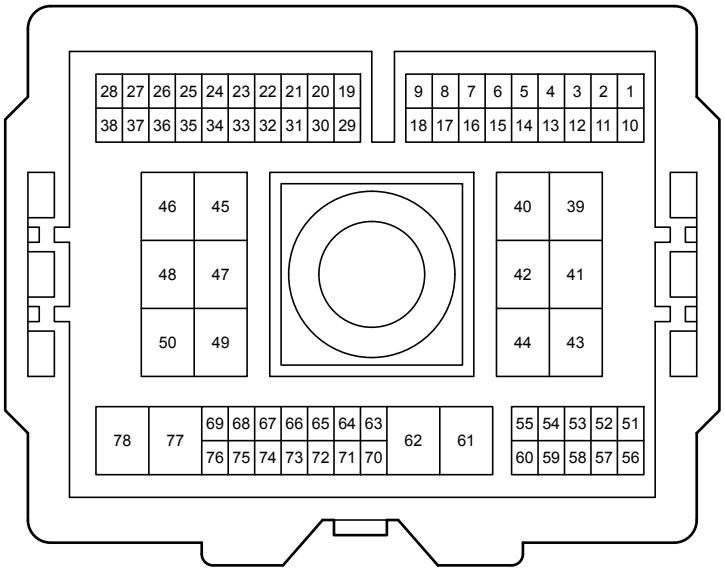


EE1

White

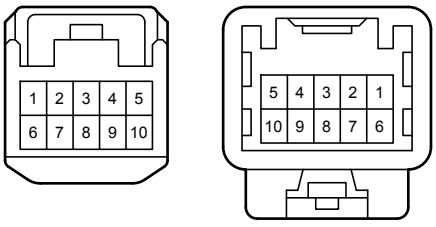


Eb1


Yellow

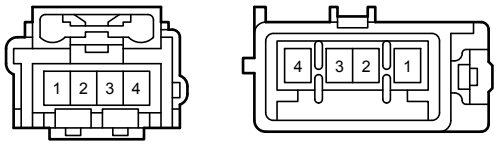


FE4
White

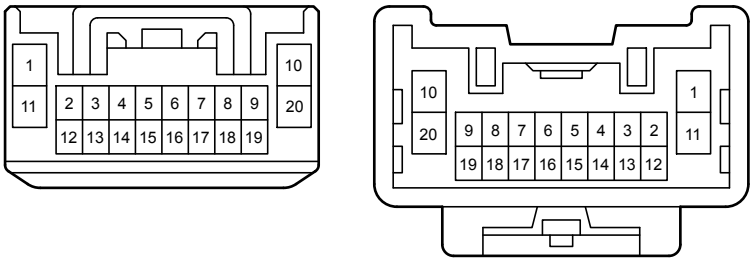


Fg1
Black

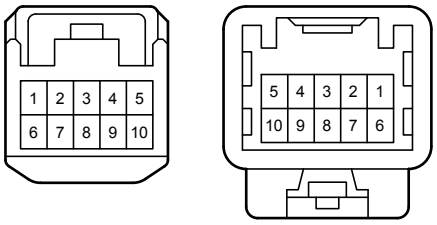


GE2
White

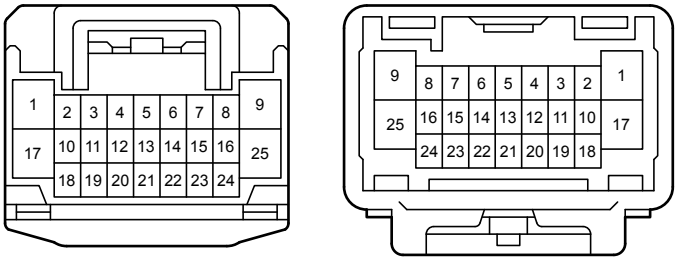


IK1
Yellow

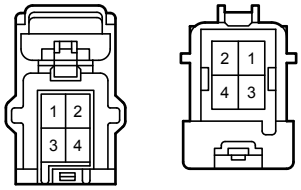


IL1
Yellow

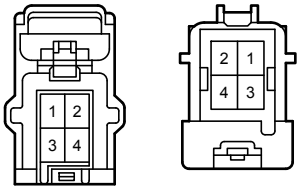


Kz4
Yellow White

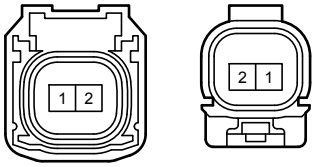


Kz5
Yellow White

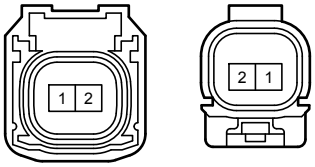


LL1
White




Lz1
Yellow White

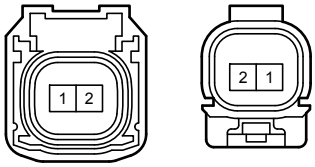

Lz2
Yellow White

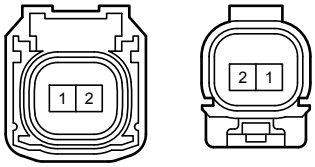

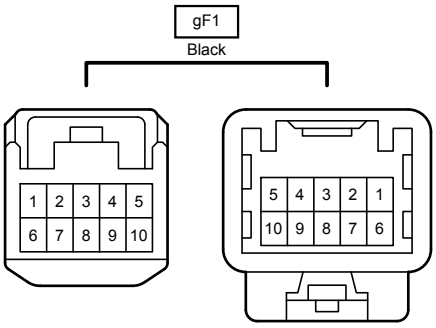
gF1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6