




(BAT)
10A
STOP
A39
Stop Light Control Relay Assembly
STP
GND
OUT
+B
(IG)
10A
ENG–IG
NO. 1
STP LP OPE
Relay
A73
Stop Light
Switch Assembly
GND
K33
Diode (Stop Light)
AK1
W–B
(LHD)
(RHD)
A2
A4


(BAT)
30A
TOWING
2
1
R–B
11
AK2
R
1
+B
(IG)
10A
ECU–IG
NO. 3
30
2K
B
7
TIG
(IG)
10A
BKUP LP
11
2H
G
G
(M/T)
7
CA6
G
(M/T)
2
C39
Back–Up Light
Switch Assembly
1
L
(M/T)
G
(A/T)
27
CA6
G
(A/T)
1
A
(*3)
2
A
(*4)
RB
RL
R
C24(A)
Park/Neutral
Position Switch
2
A
(*3)
1
A
(*4)
L
(A/T)
L
4
CA6
L
1
AK1
L
K64
Towing Converter
STIN
GND
RTIN
LTIN
B/UP
8
6
3
9
5
R
W–B
R
18
EK1
R
L
20
EK1
L
L
L
R
W–B
5
K52
Junction
Connector
K5
R
* 3 : 3UR–FE
* 4 : Except 3UR–FE

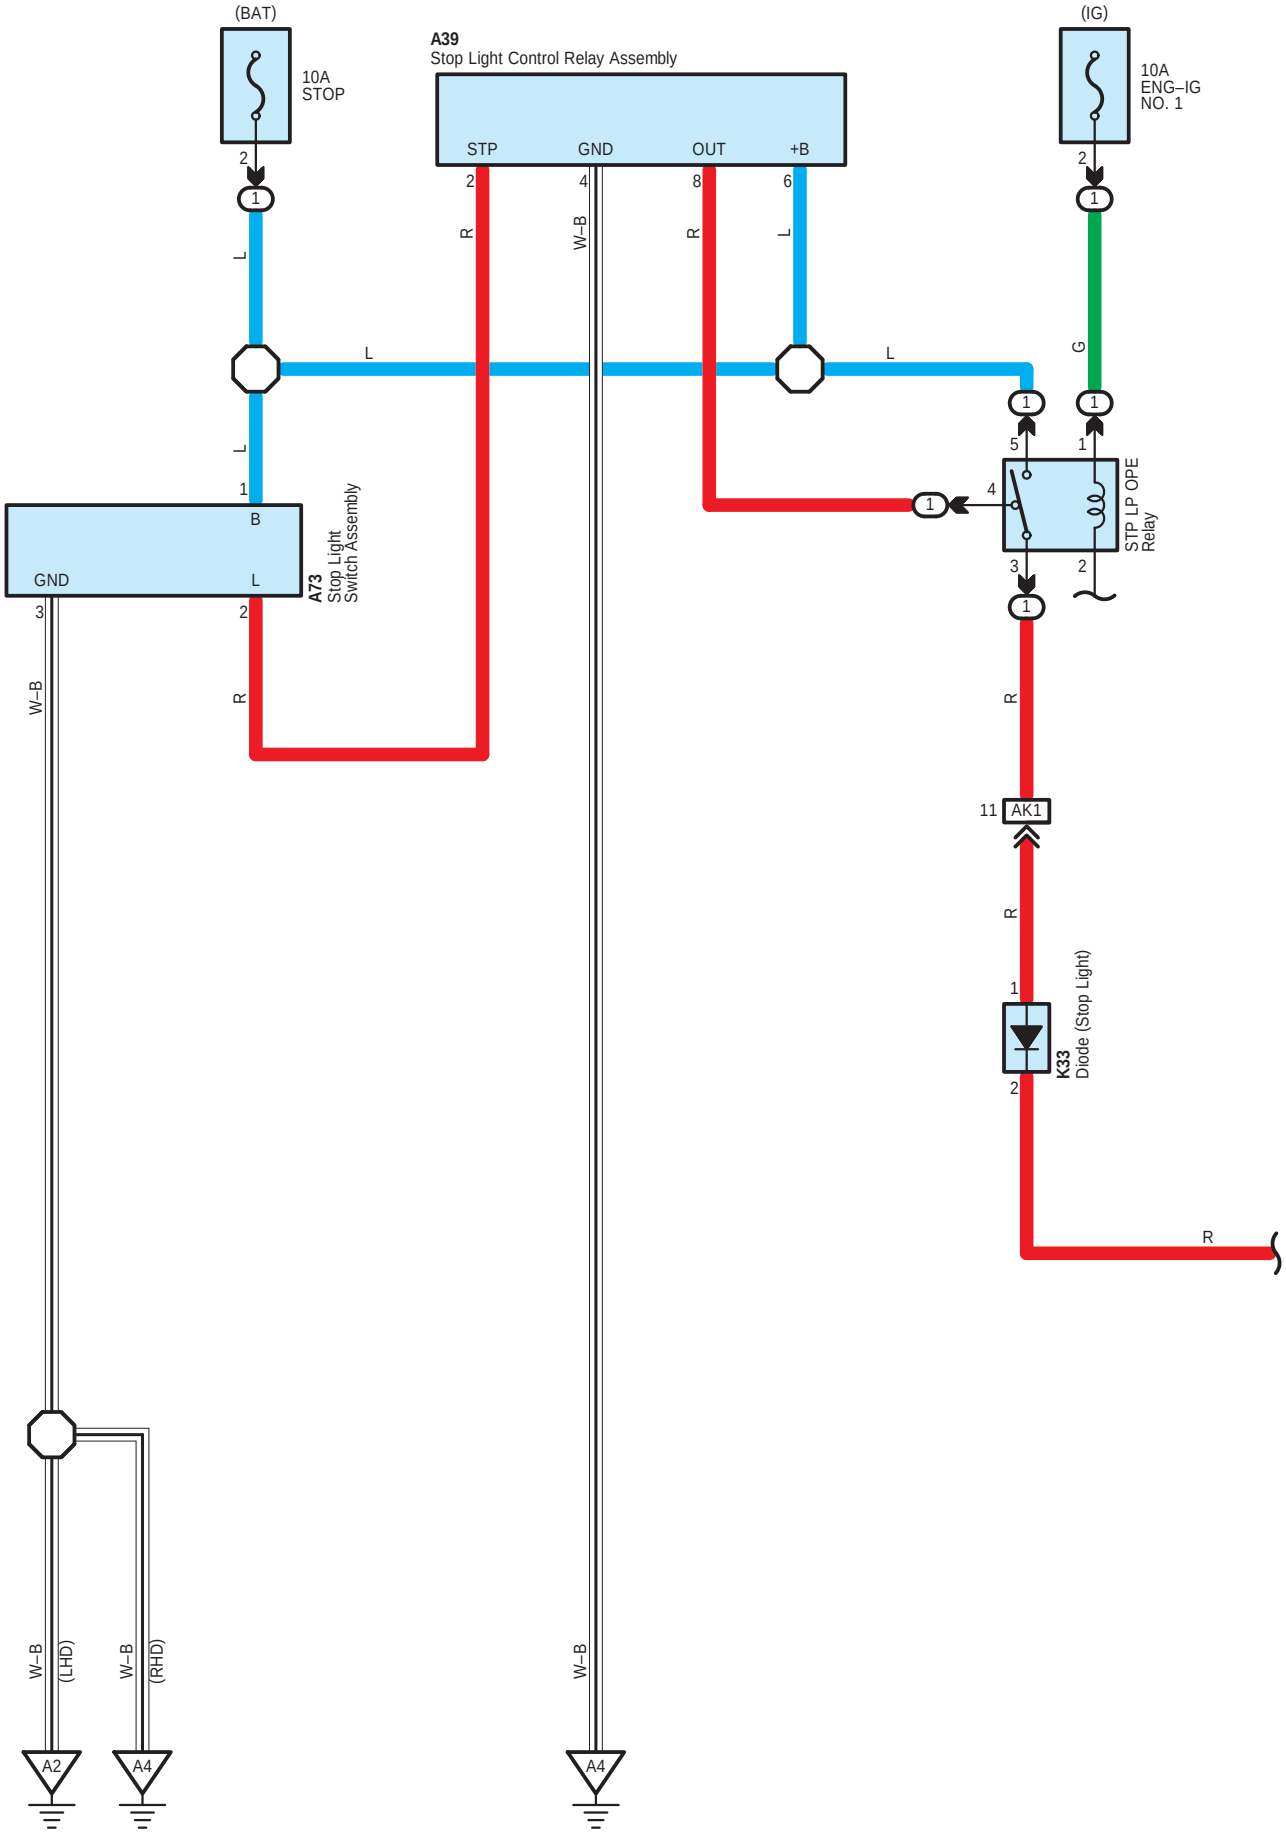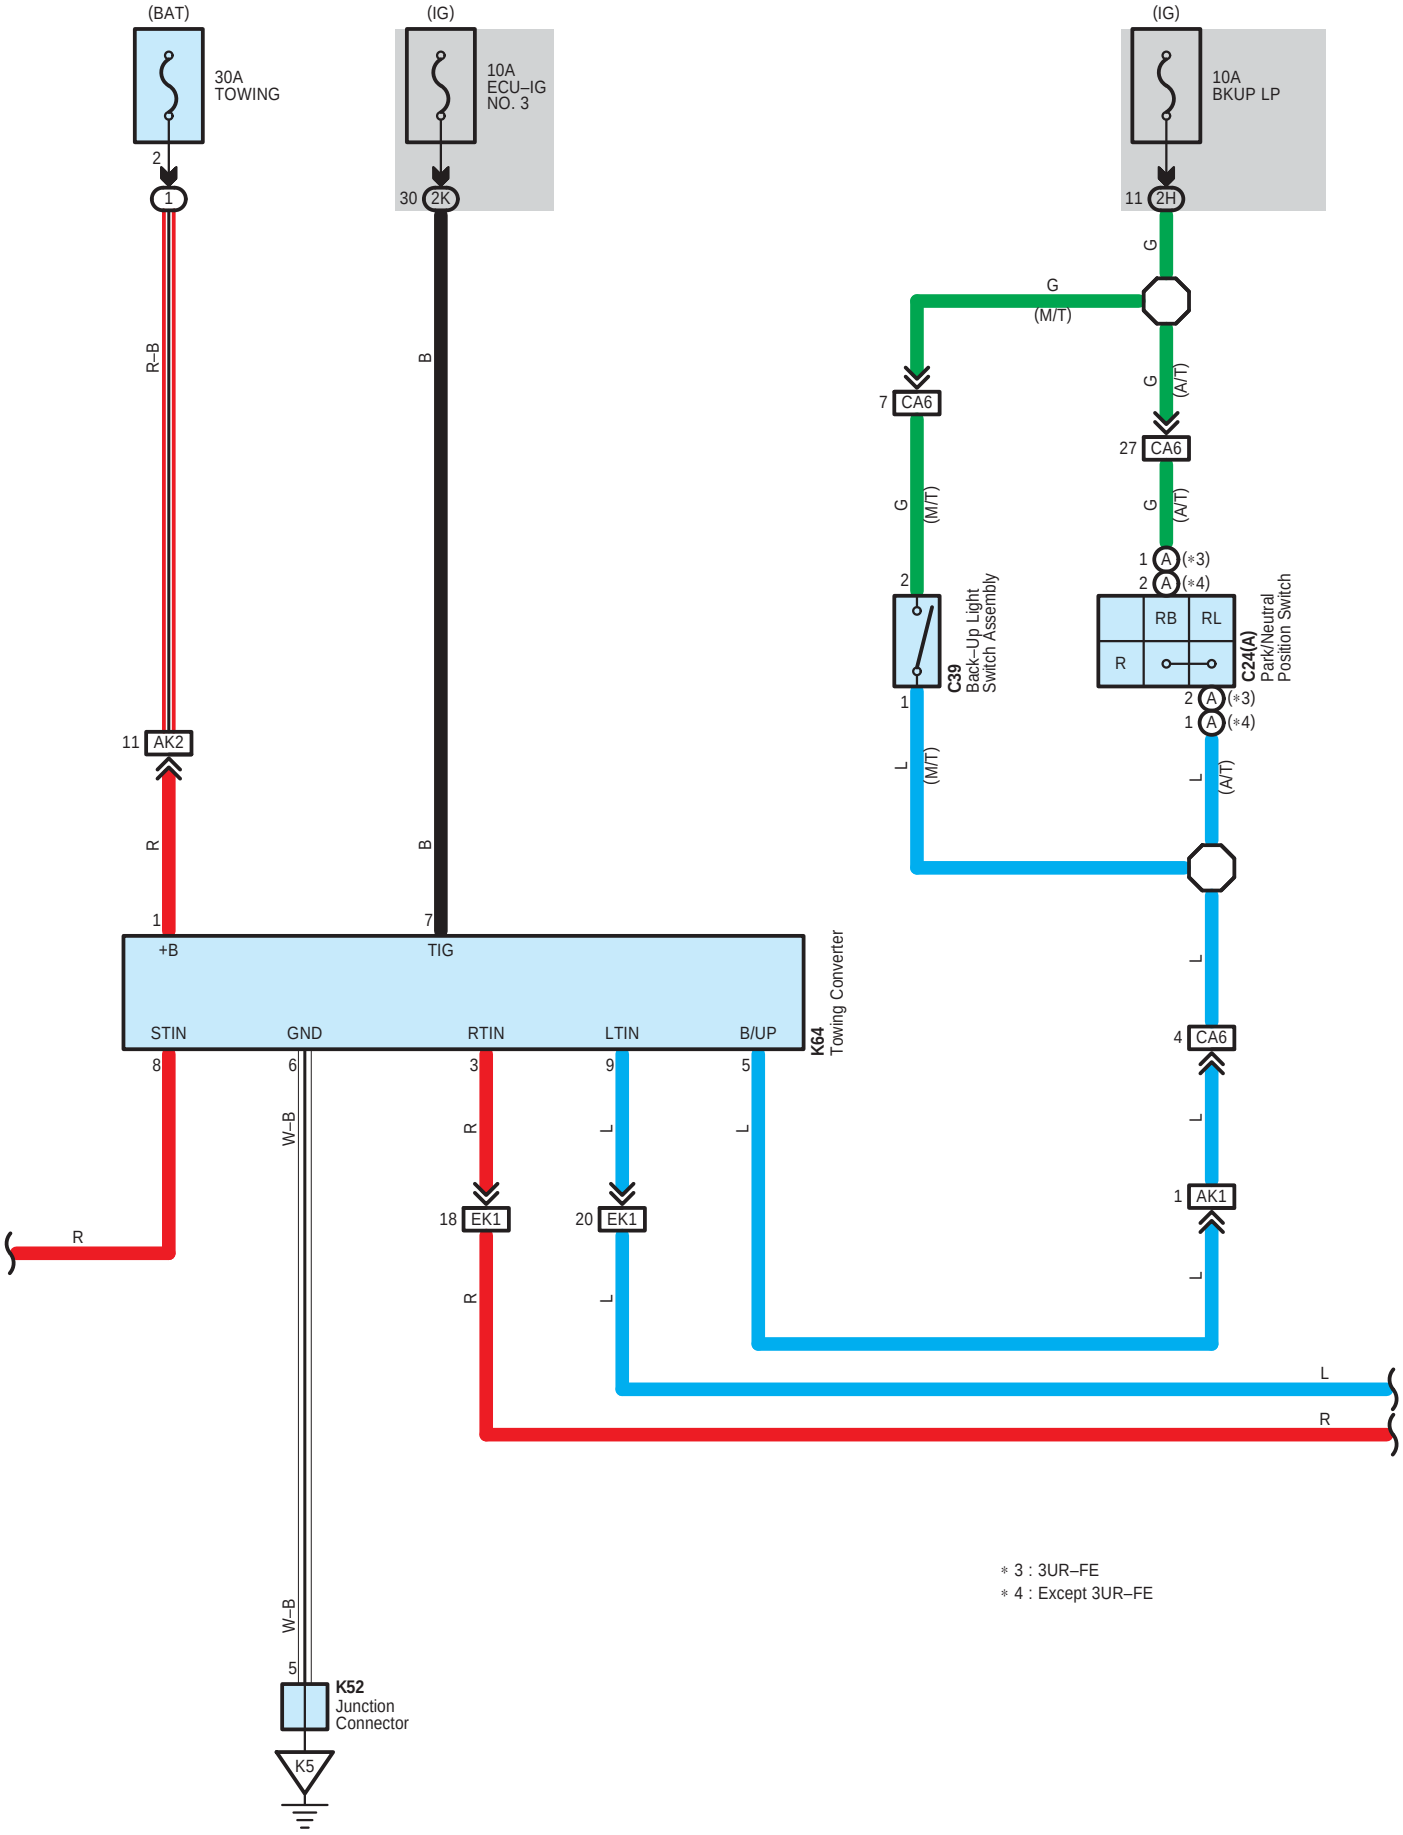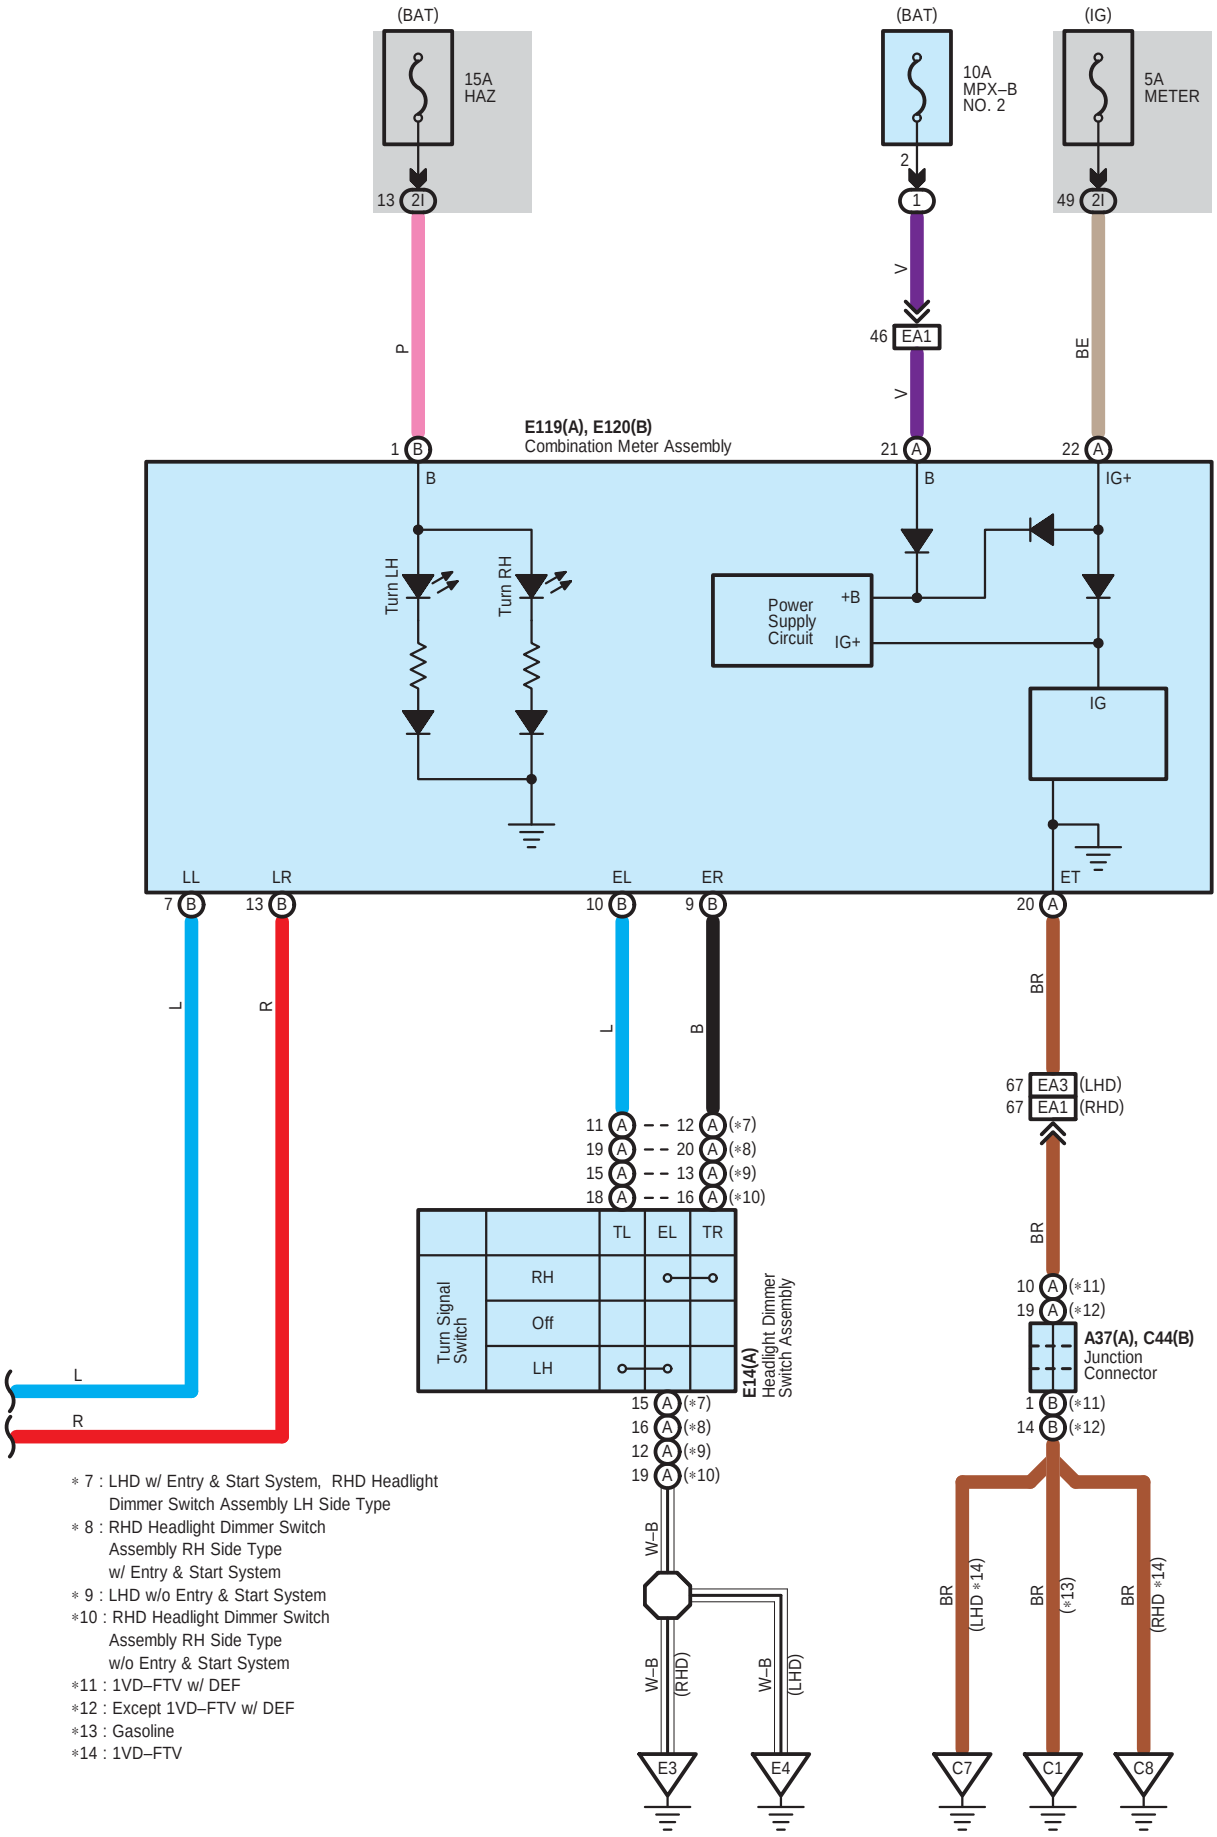


∗ 7 : LHD w/ Entry & Start System, RHD Headlight Dimmer Switch Assembly LH Side Type
∗ 8 : RHD Headlight Dimmer Switch Assembly RH Side Type w/ Entry & Start System
∗ 9 : LHD w/o Entry & Start System
∗10 : RHD Headlight Dimmer Switch Assembly RH Side Type w/o Entry & Start System
∗11 : 1VD–FTV w/ DEF
∗12 : Except 1VD–FTV w/ DEF
∗13 : Gasoline
∗14 : 1VD–FTV


A 37
Blue

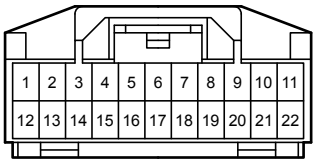


A 39
Black




A 73
Gray

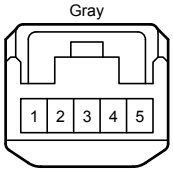


C 24
Gray

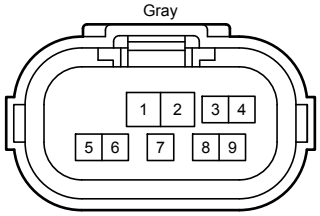


C 39
Gray

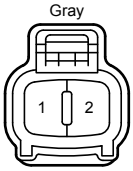


C 44
Blue

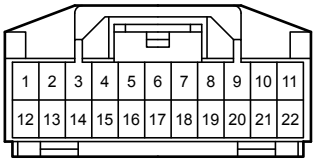


E 14
White

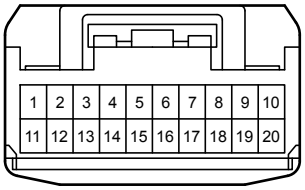

E119
Black

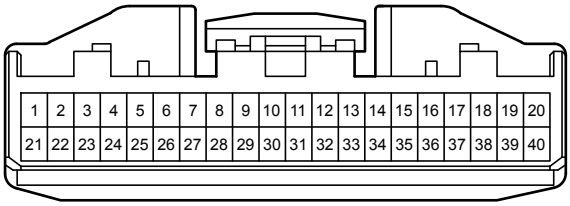


E120
Black

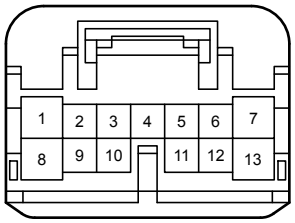


K 33
White




K 52
Black

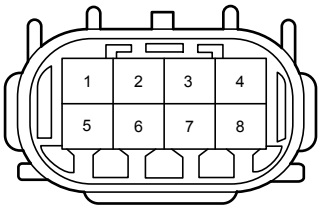


K 64
White

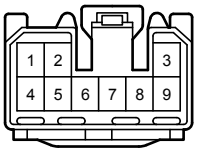


2H
White

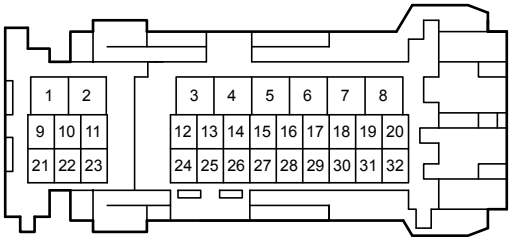


2I
White

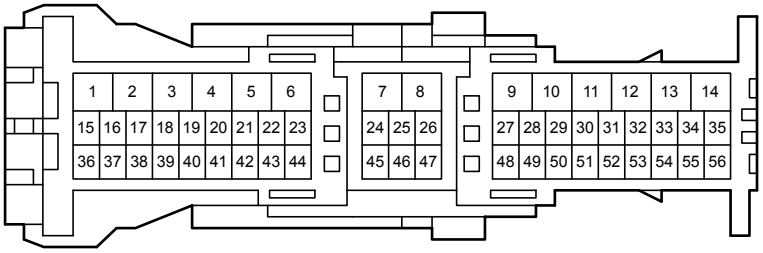


2K
White

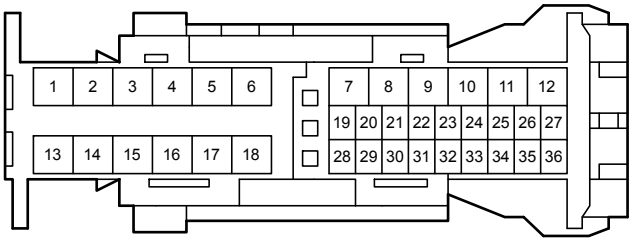


AK1
Blue

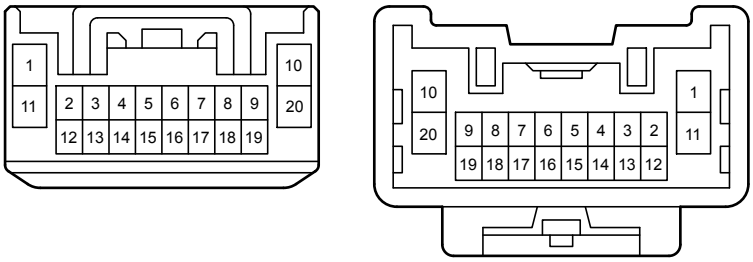


AK2
Gray

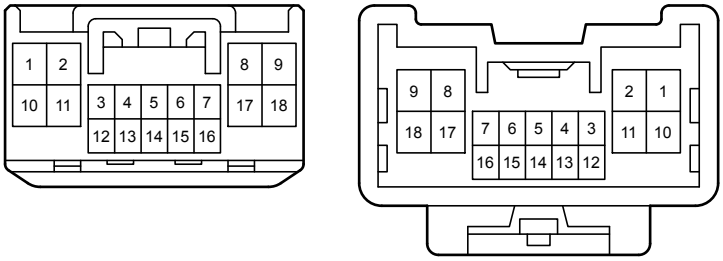


CA6
White

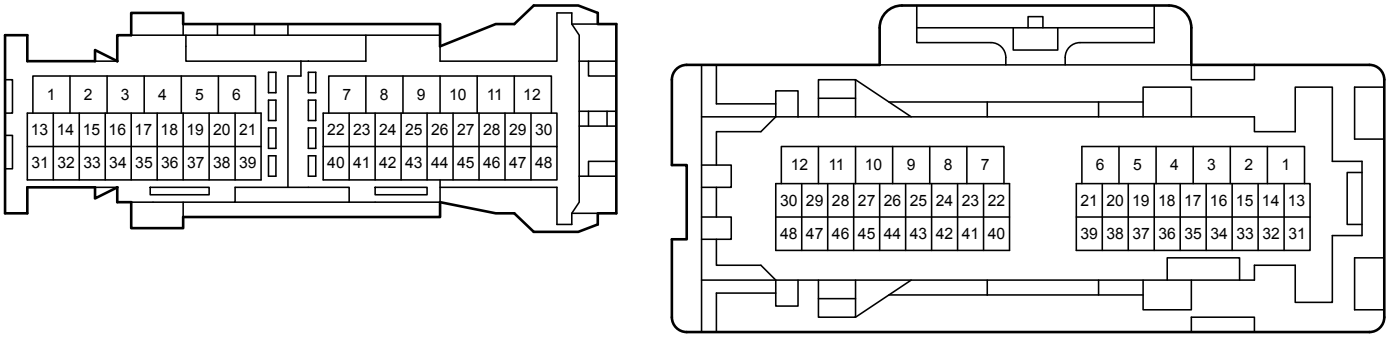


EA1
White

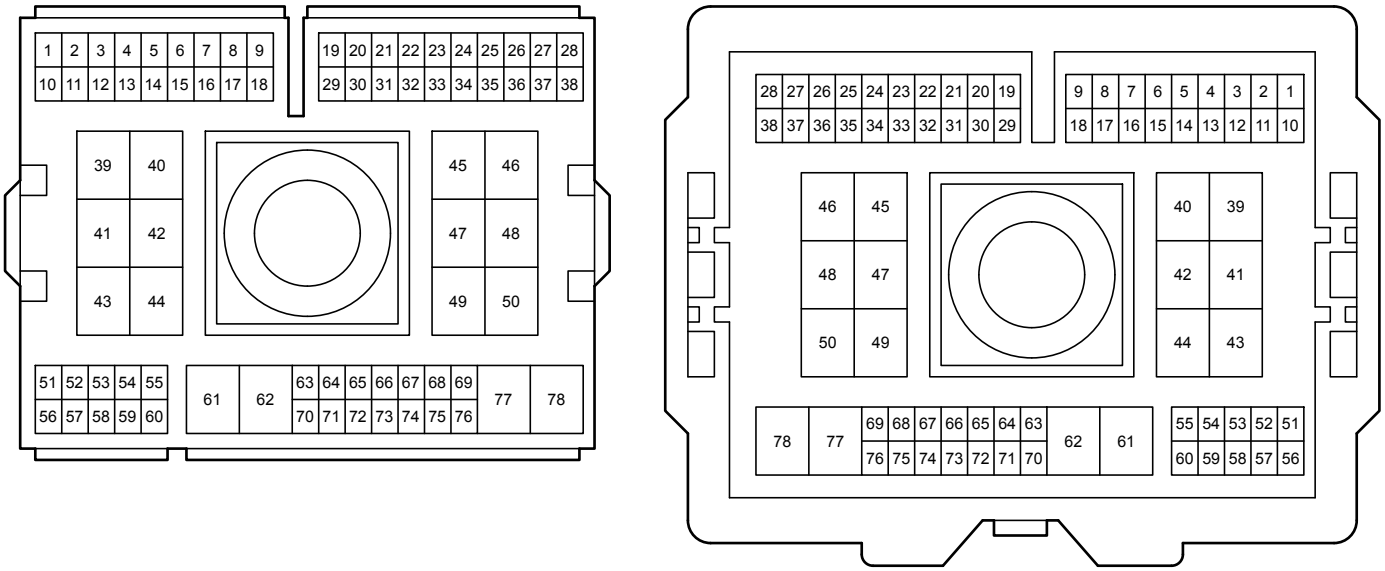

EA3
White

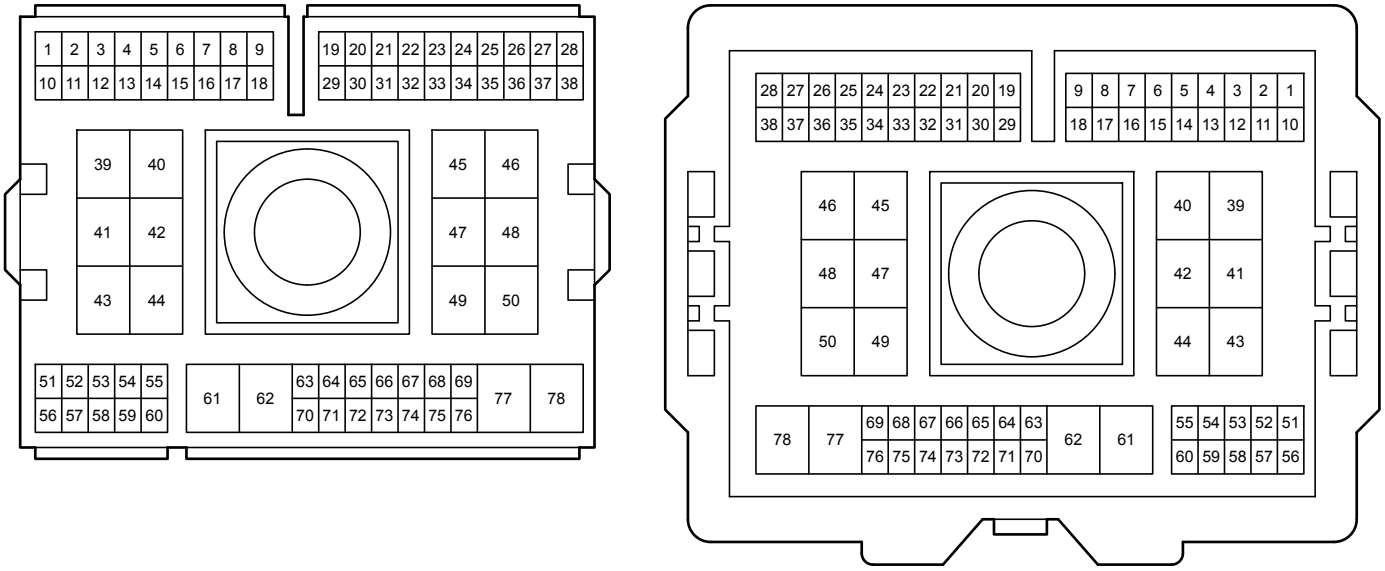

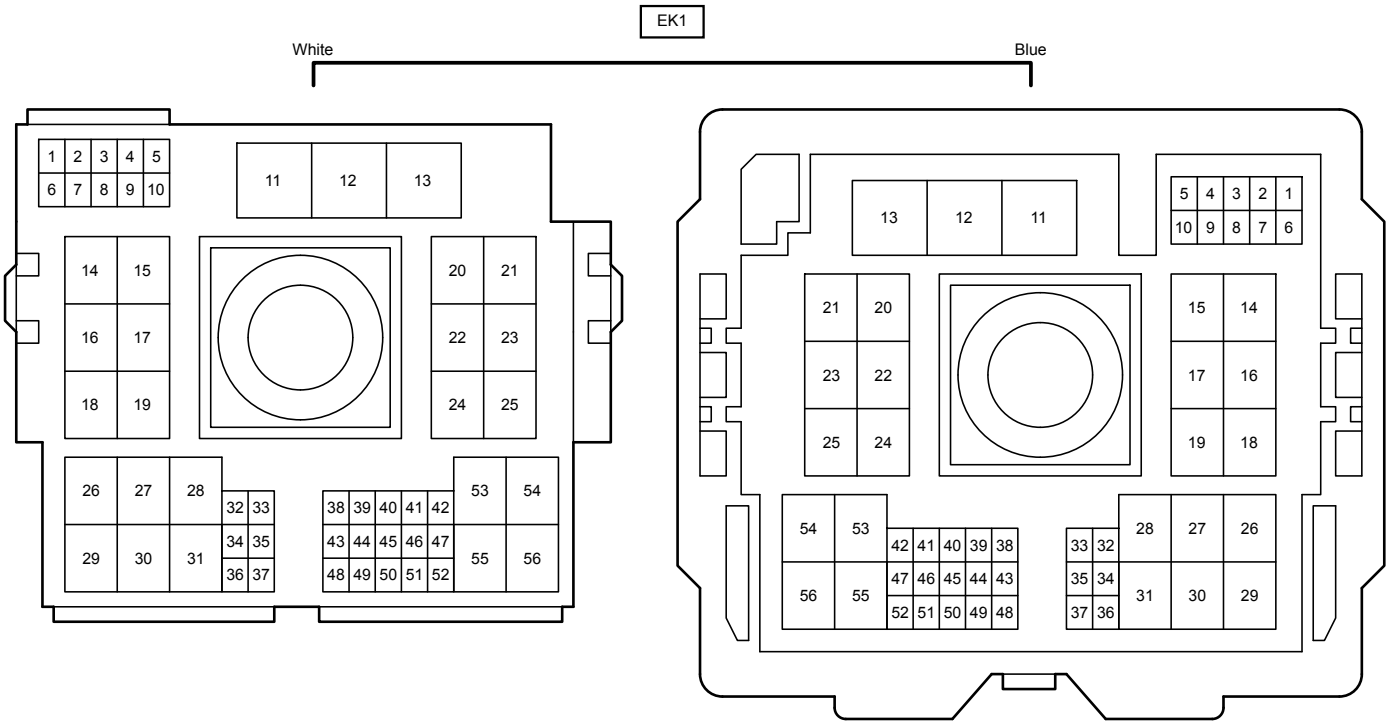
EK1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
5 4 3 2 1
10 9 8 7 6
21 20
23 22
25 24
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29