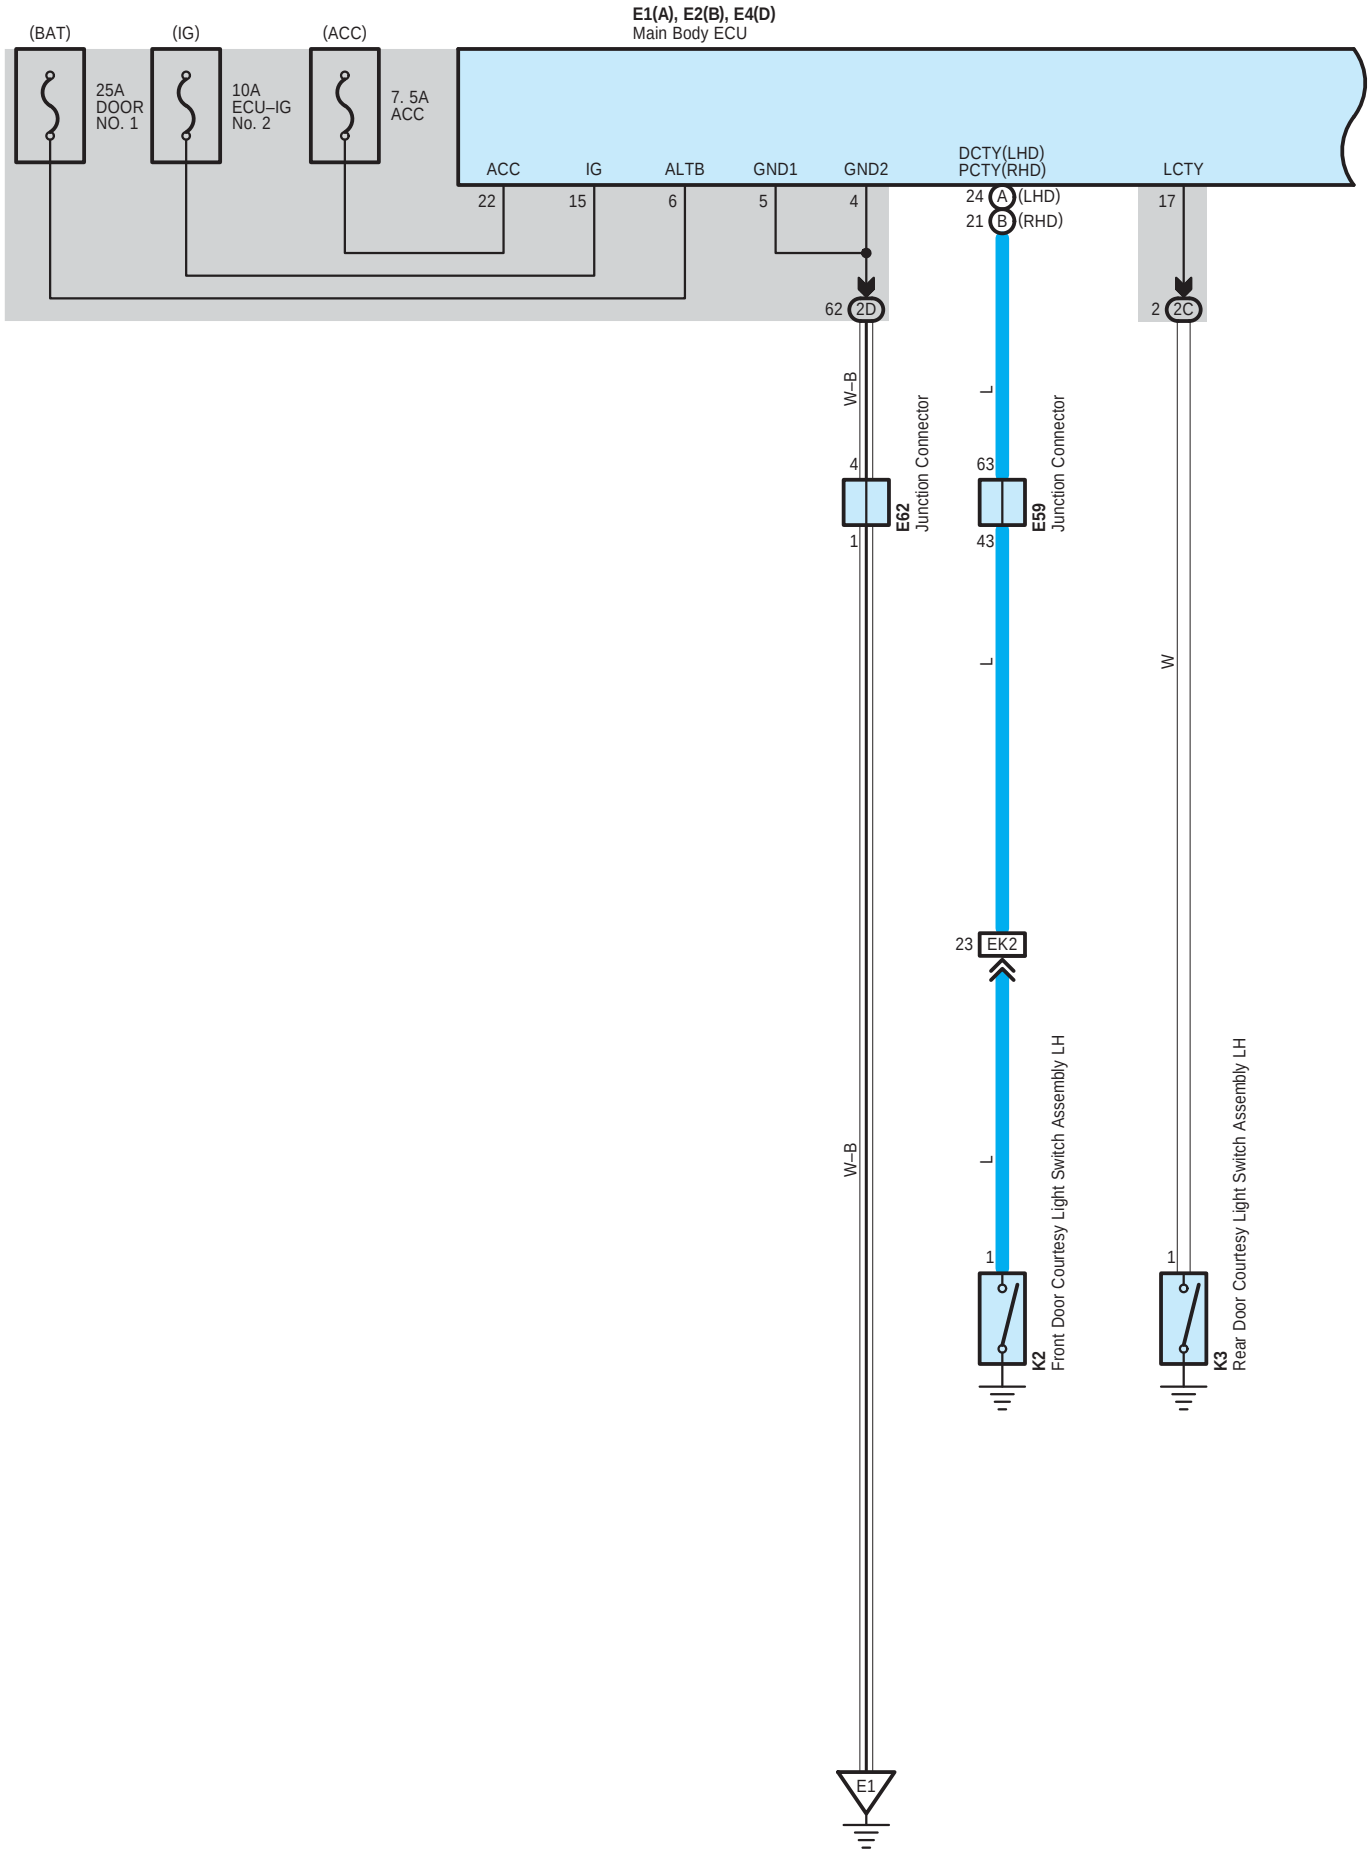
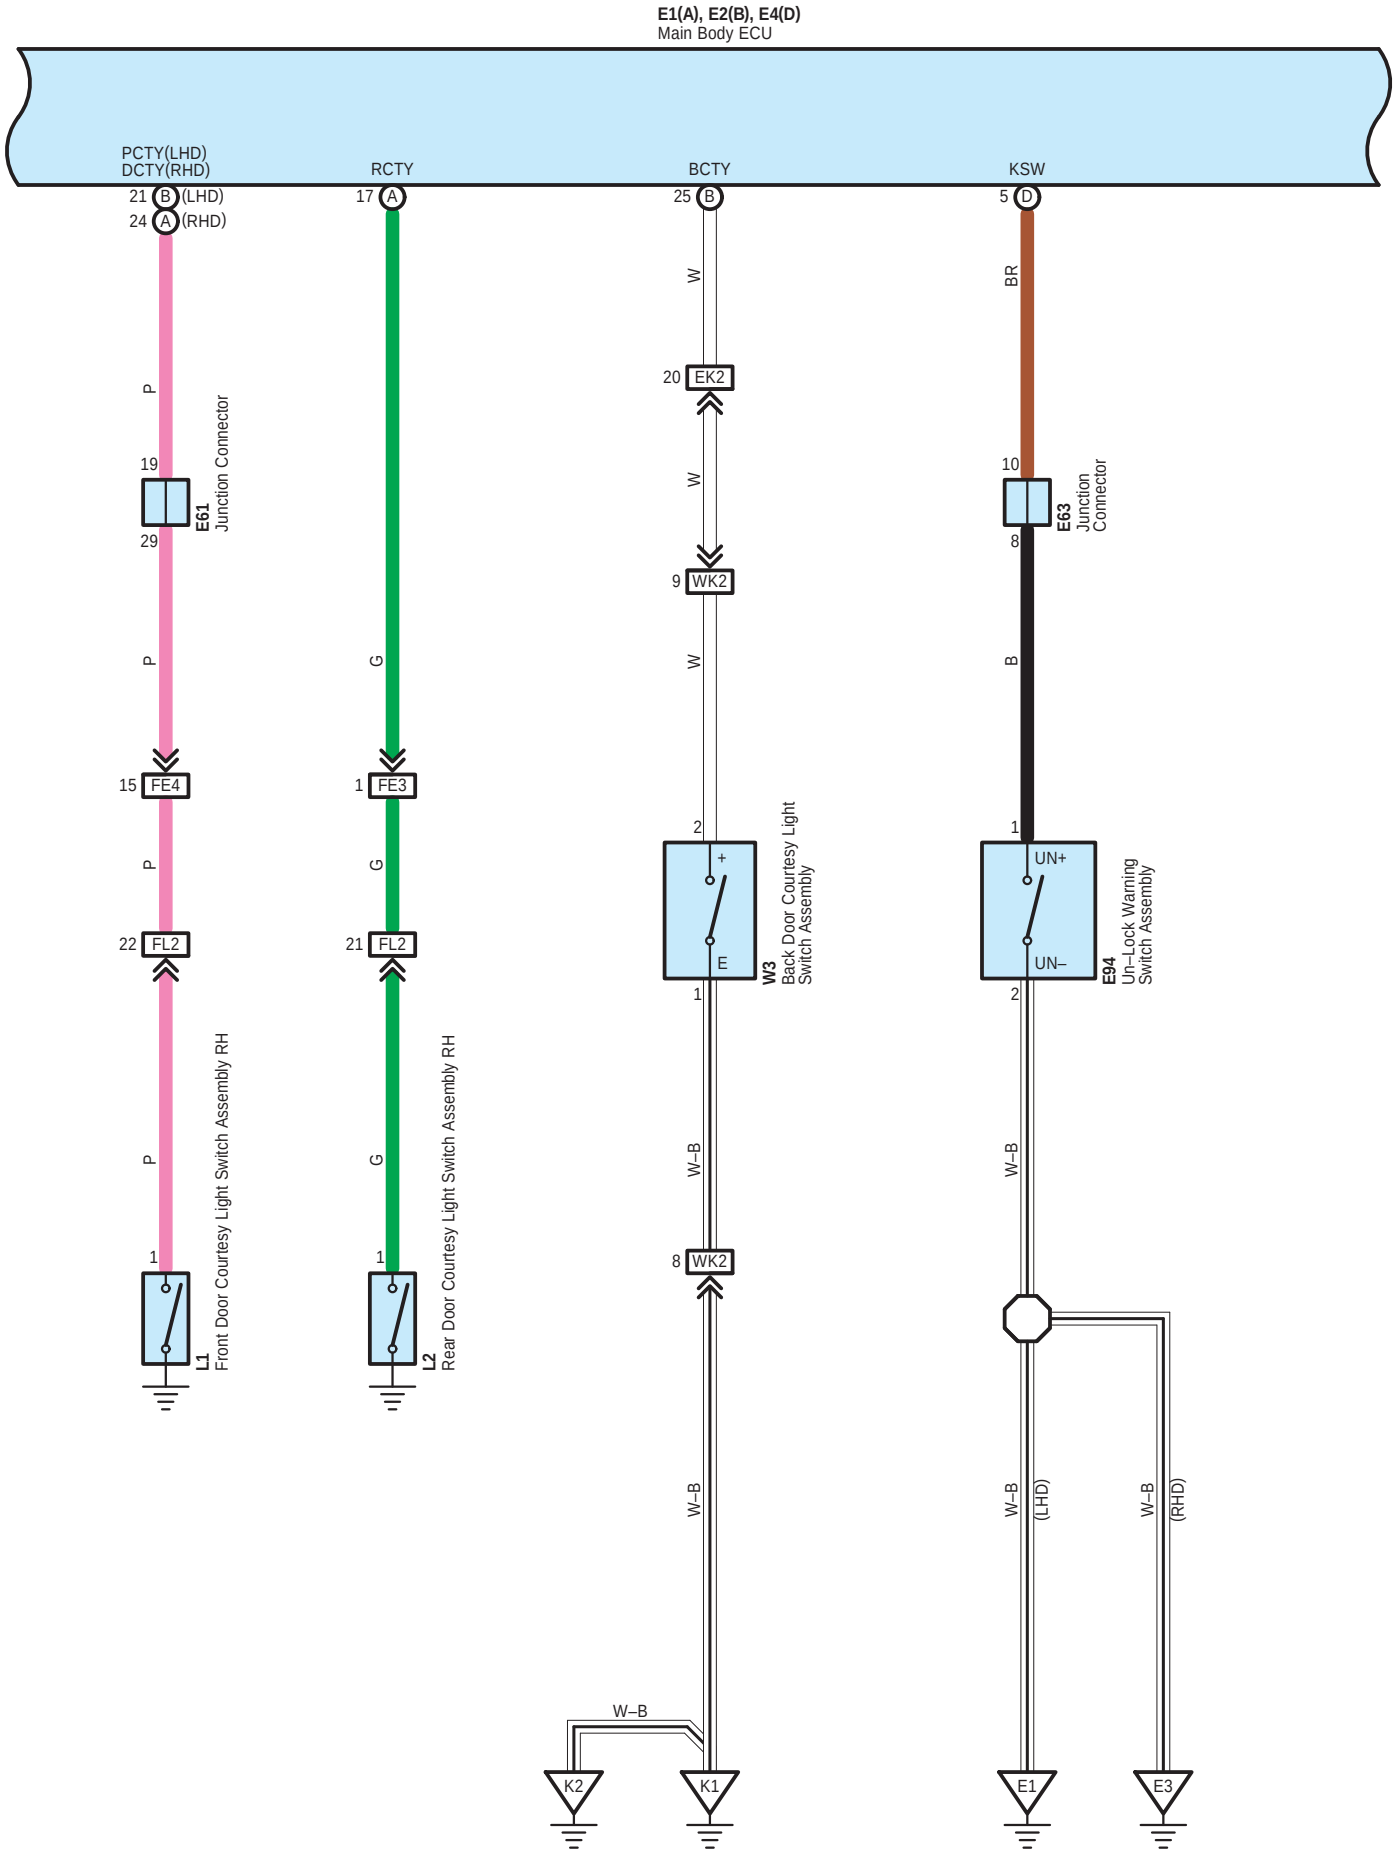
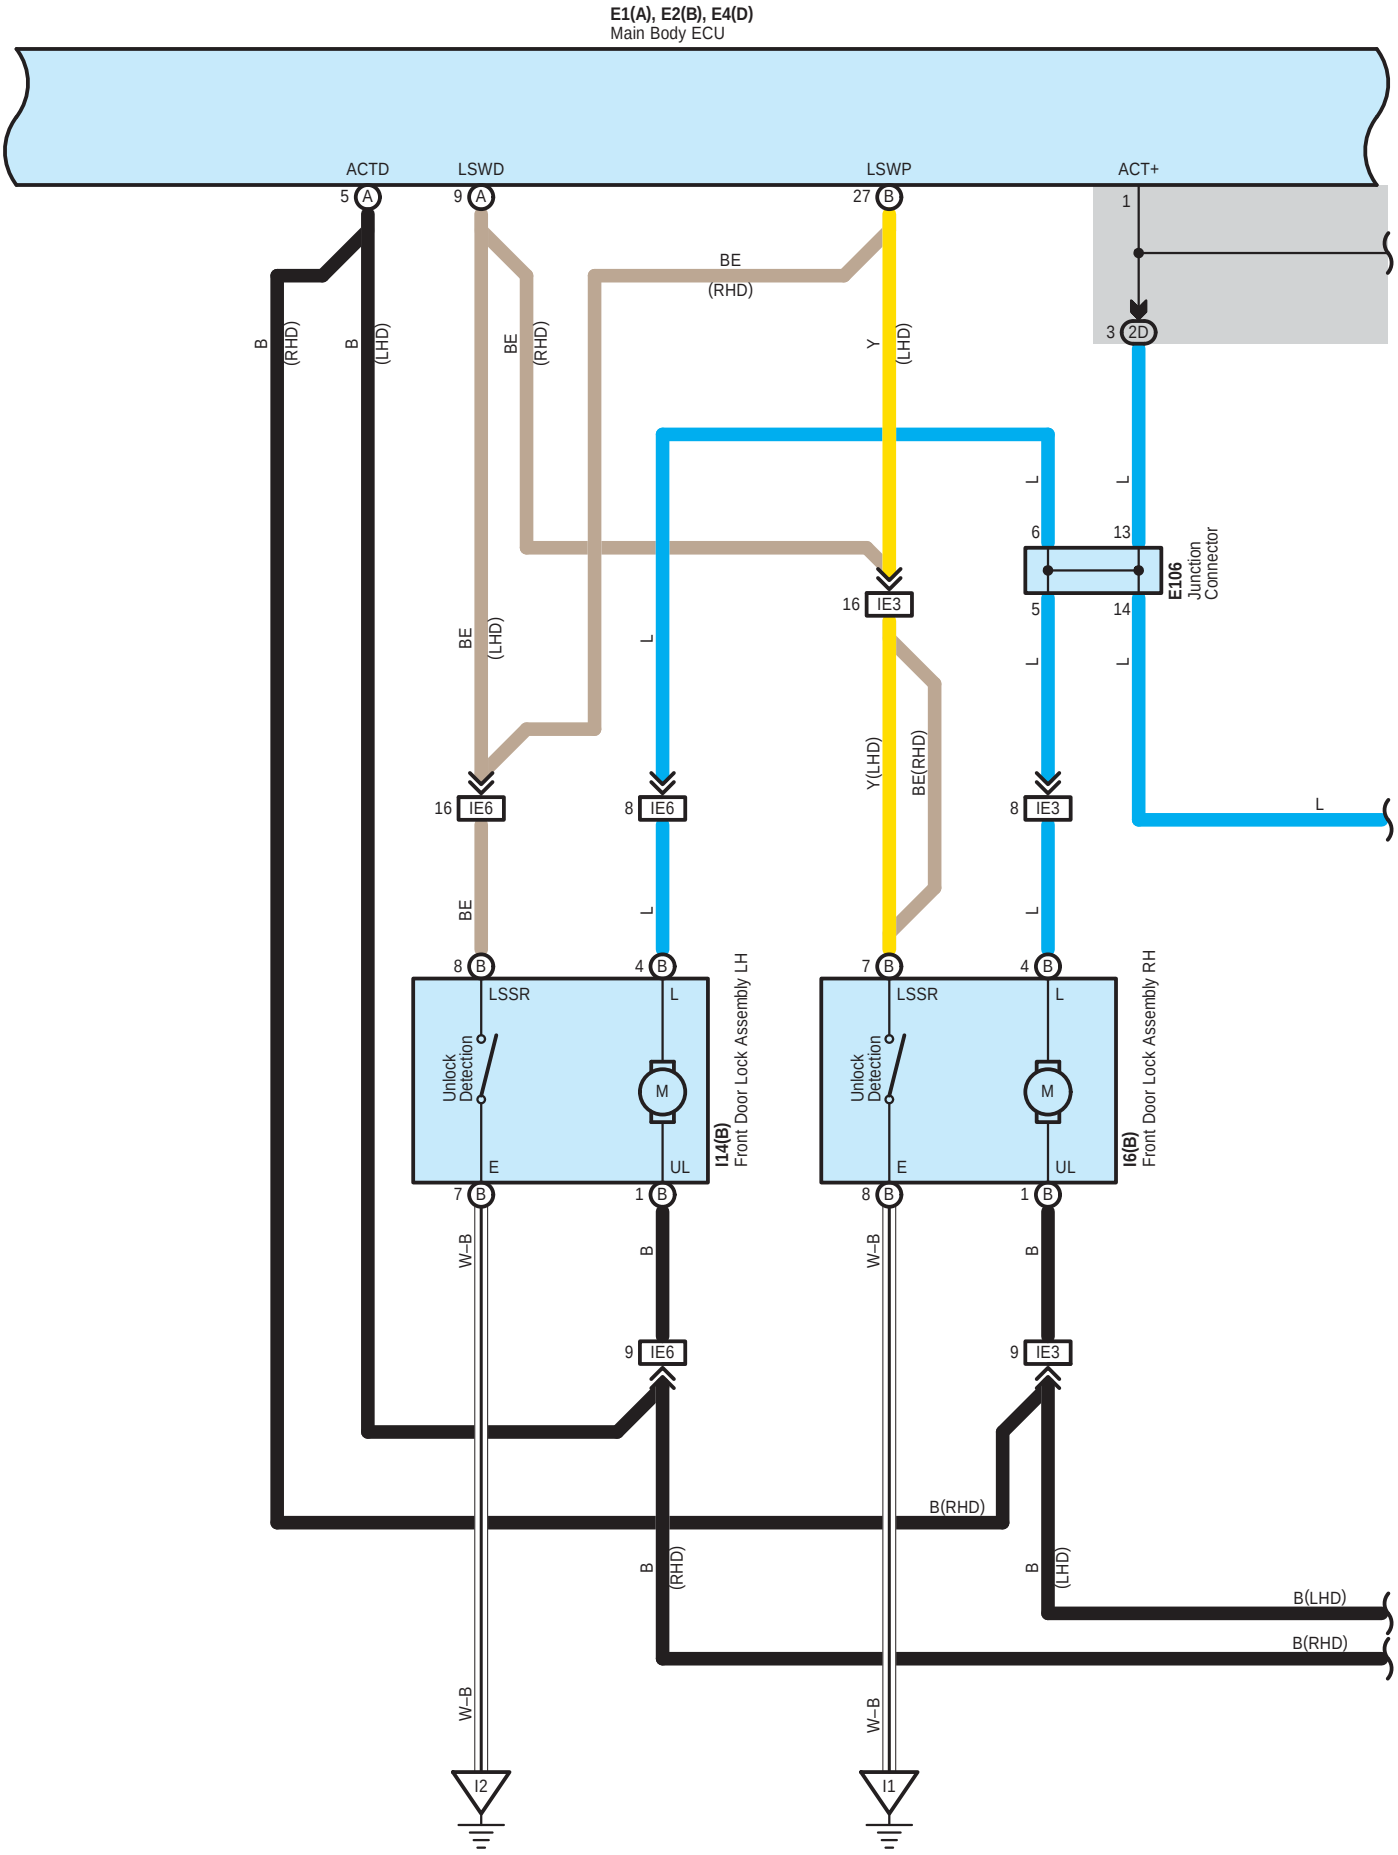
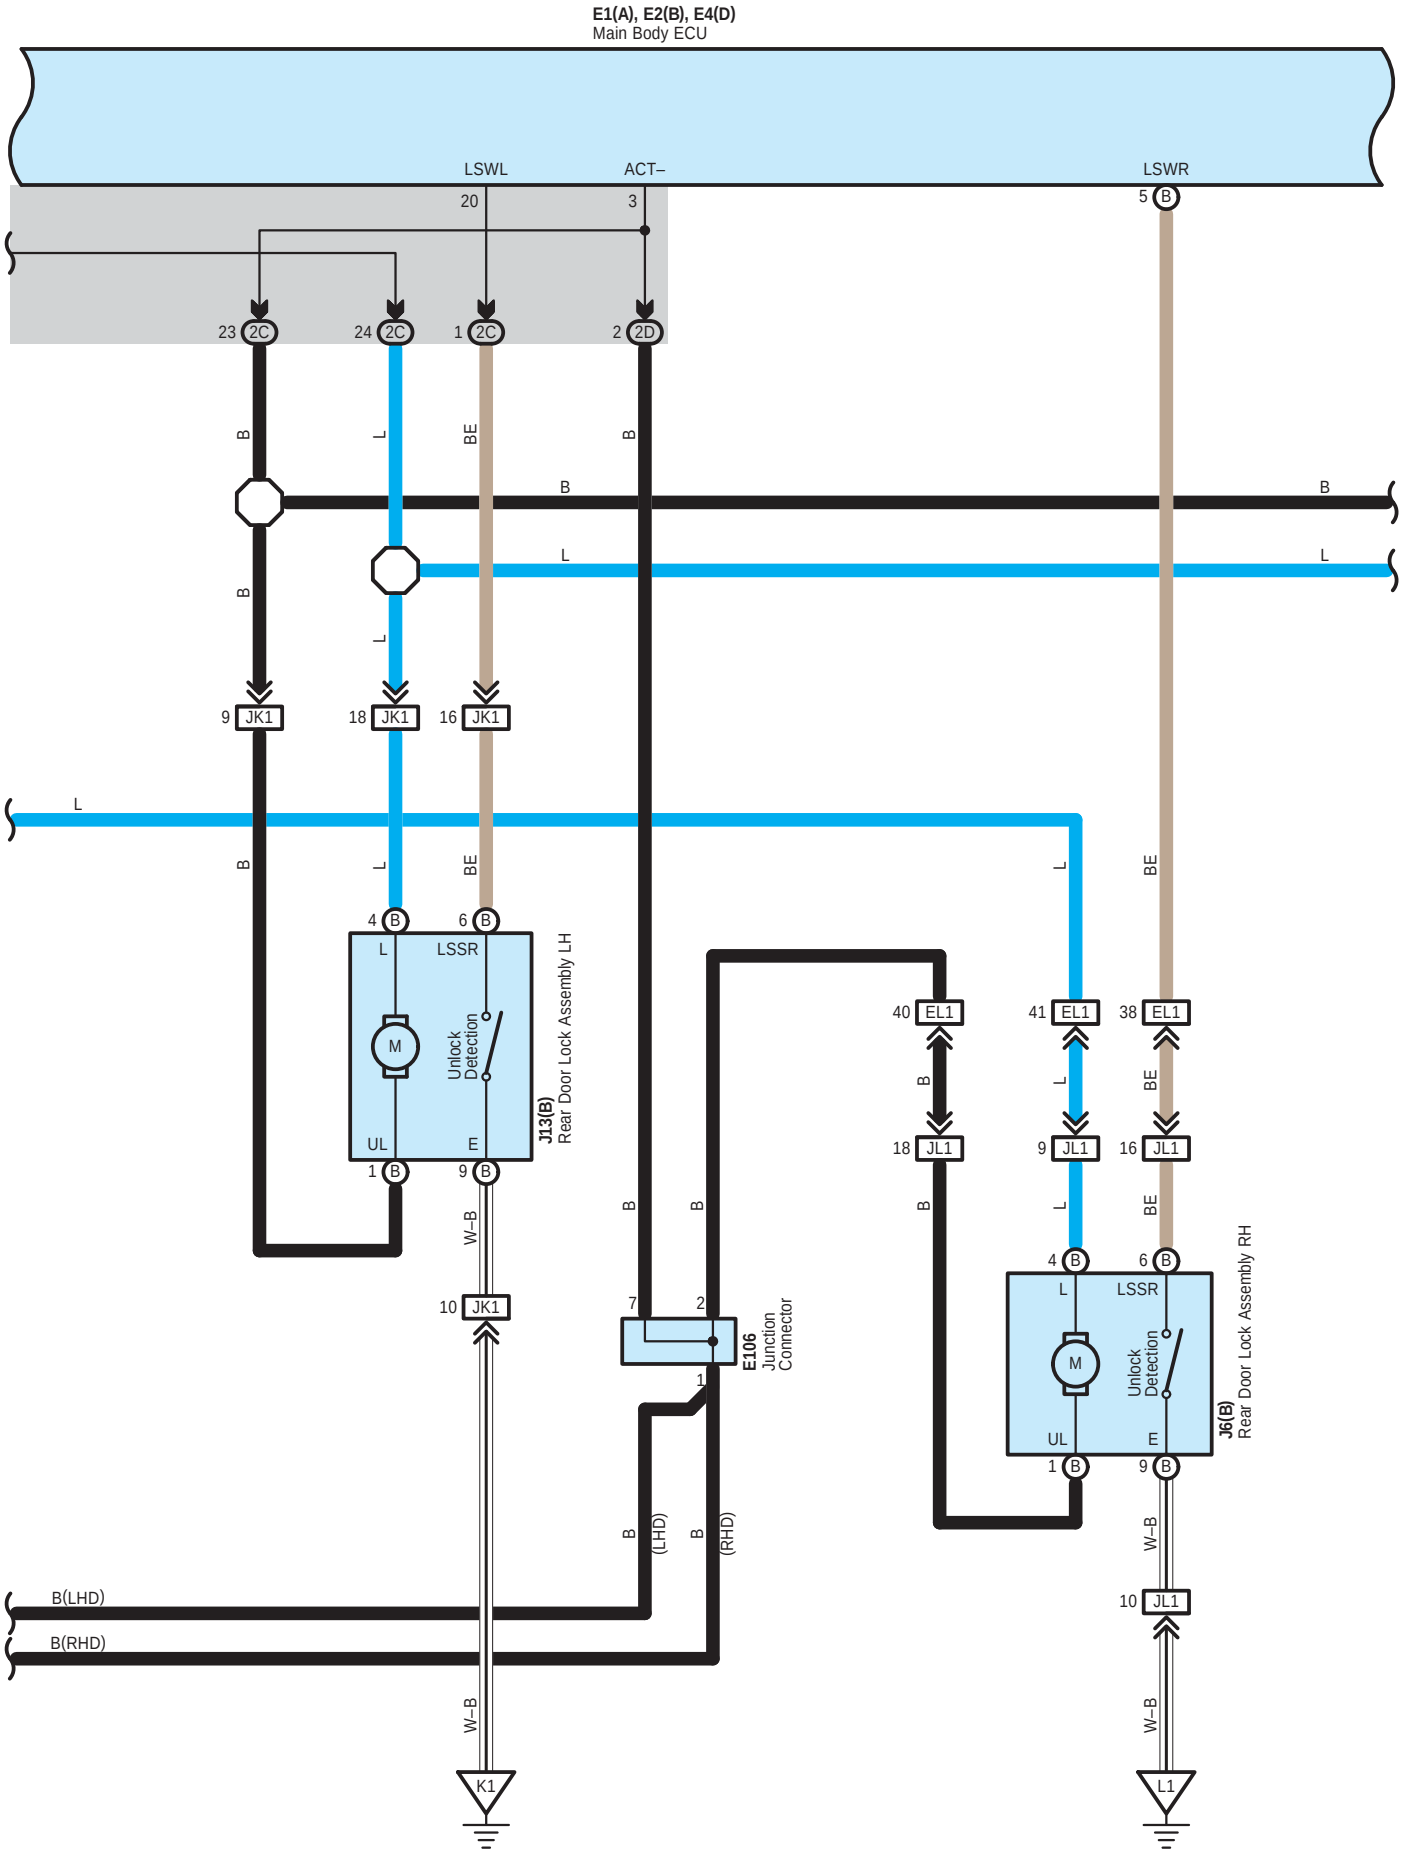
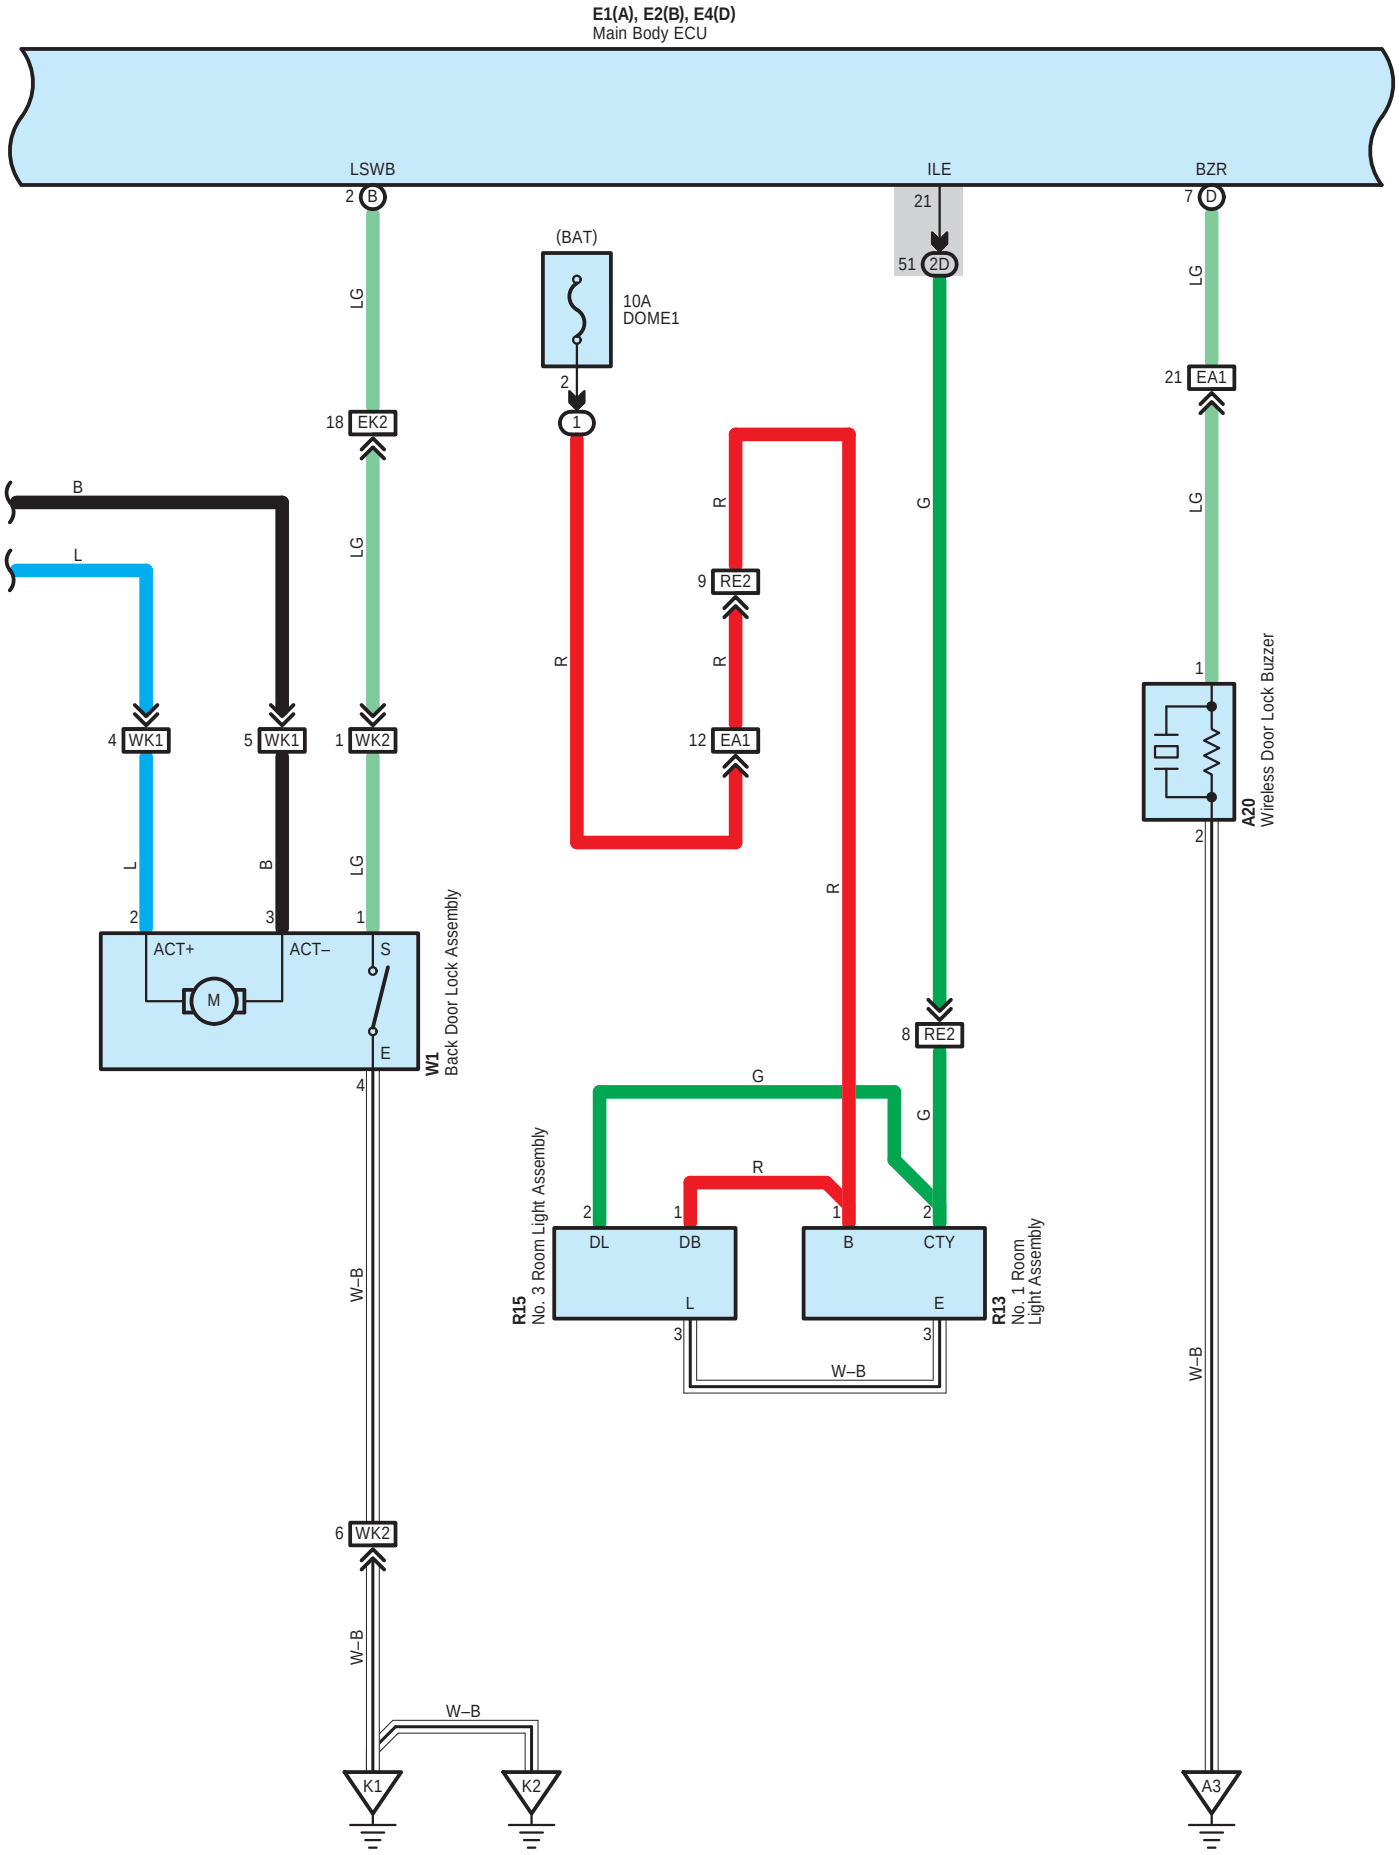
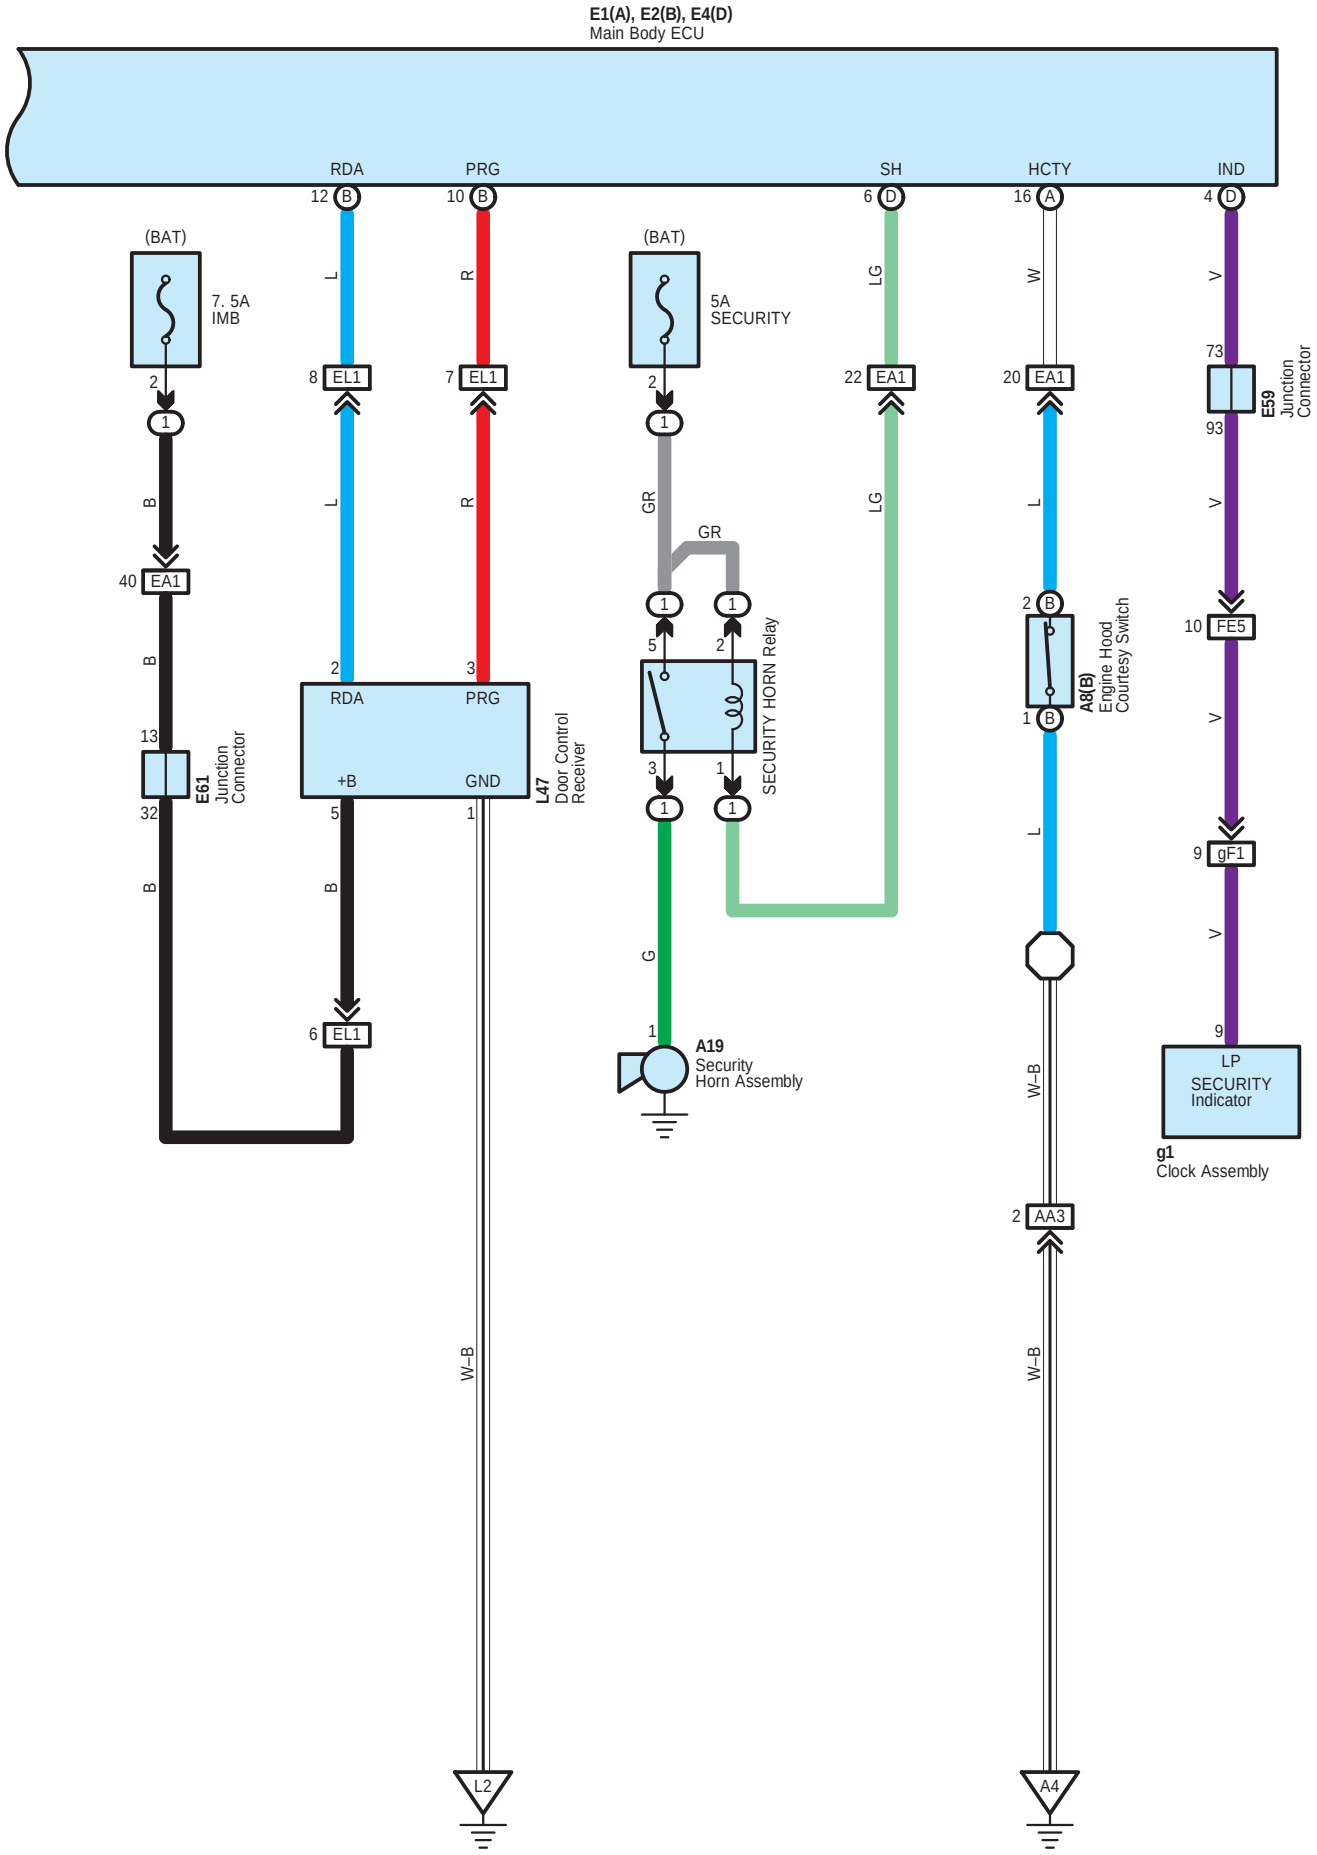

E1(A), E2(B), E4(D)
Main Body ECU
(BAT)
(IG)
(ACC)
25A DOOR NO. 1
10A ECU–IG No. 2
7. 5A ACC
ACC
IG
ALTB
GND1
GND2
DCTY(LHD) PCTY(RHD)
LCTY
22
15
6
5
4
24 A (LHD)
21 B (RHD)
17
62 2D
2 2C
W–B
L
W
4
1
E62 Junction Connector
63
43
E59 Junction Connector
23 EK2
1
K2 Front Door Courtesy Light Switch Assembly LH
K3 Rear Door Courtesy Light Switch Assembly LH
E1


E1(A), E2(B), E4(D)
Main Body ECU
PCTY(LHD)
DCTY(RHD)
RCTY
BCTY
KSW
21 B (LHD)
24 A (RHD)
17 A
25 B
5 D
P
G
W
BR
B
19
29
E61
Junction Connector
10
8
E63
Junction
Connector
20 EK2
9 WK2
15 FE4
22 FL2
1 FE3
21 FL2
2
1
+
E
W3
Back Door Courtesy Light
Switch Assembly
UN+
UN–
E94
Un–Lock Warning
Switch Assembly
1
L1
Front Door Courtesy Light Switch Assembly RH
L2
Rear Door Courtesy Light Switch Assembly RH
W–B
8 WK2
W–B (LHD)
W–B (RHD)
K2
K1
E1
E3


E1(A), E2(B), E4(D)
Main Body ECU
ACTD
LSWD
LSWP
ACT+
5 A
9 A
27 B
1
3 2D
BE (RHD)
B (RHD)
B (LHD)
BE (RHD)
Y (LHD)
BE (LHD)
L
6
13
E106 Junction Connector
5
14
16 IE3
16 IE6
8 IE6
8 IE3
Y(LHD)
BE(RHD)
L
8 B
4 B
7 B
4 B
LSSR
Unlock Detection
M
E
UL
I14(B) Front Door Lock Assembly LH
I6(B) Front Door Lock Assembly RH
7 B
1 B
8 B
1 B
W–B
B
9 IE6
9 IE3
B(RHD)
B (RHD)
B (LHD)
B(LHD)
B(RHD)
W–B
W–B
I2
I1


E1(A), E2(B), E4(D)
Main Body ECU
LSWL
ACT–
LSWR
20
3
5 B
23 2C
24 2C
1 2C
2 2D
B
L
BE
9 JK1
18 JK1
16 JK1
4 B
6 B
L
LSSR
M
Unlock Detection
UL
E
1 B
9 B
J13(B)
Rear Door Lock Assembly LH
W–B
10 JK1
7
2
1
E106
Junction Connector
40 EL1
41 EL1
38 EL1
18 JL1
9 JL1
16 JL1
J6(B)
Rear Door Lock Assembly RH
10 JL1
(LHD)
(RHD)
B(LHD)
B(RHD)
K1
L1


E1(A), E2(B), E4(D)
Main Body ECU
LSWB
ILE
BZR
2 B
21
51 2D
7 D
(BAT)
10A
DOME1
2
1
LG
18 EK2
21 EA1
B
L
R
9 RE2
12 EA1
G
4 WK1
5 WK1
1 WK2
8 RE2
1
2
3
ACT+
ACT–
S
M
E
W1
Back Door Lock Assembly
4
6 WK2
W–B
K1
K2
A3
A20
Wireless Door Lock Buzzer
R15
No. 3 Room Light Assembly
DL
DB
L
R13
No. 1 Room
Light Assembly
B
CTY


E1(A), E2(B), E4(D)
Main Body ECU
RDA
PRG
SH
HCTY
IND
(BAT)
7. 5A
IMB
5A
SECURITY
E61
Junction
Connector
L47
Door Control
Receiver
SECURITY HORN Relay
A19
Security
Horn Assembly
A8(B)
Engine Hood
Courtesy Switch
E59
Junction
Connector
LP
SECURITY
Indicator
g1
Clock Assembly
EL1
EA1
gF1
FE5
AA3
L2
A4
W–B

A 8
Dark Gray




(U.K.)

A 8
Black




(Except U.K.)


A 19
Black




A 20
Black




E 1
White

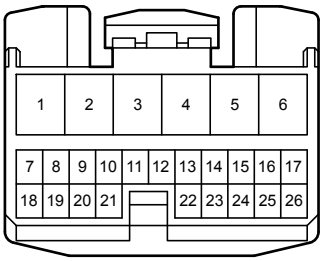


E 2
White

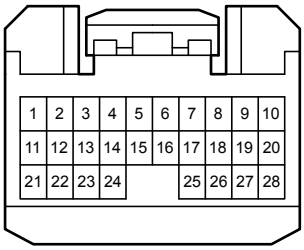


E 4
White

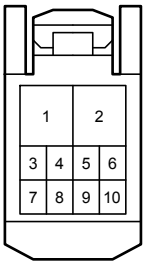


E 59

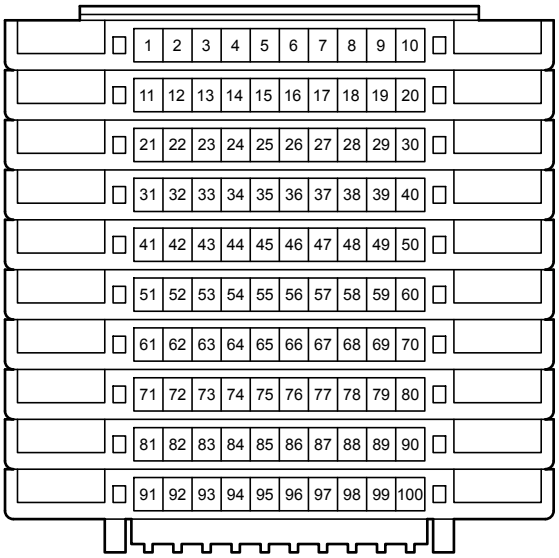


E 61

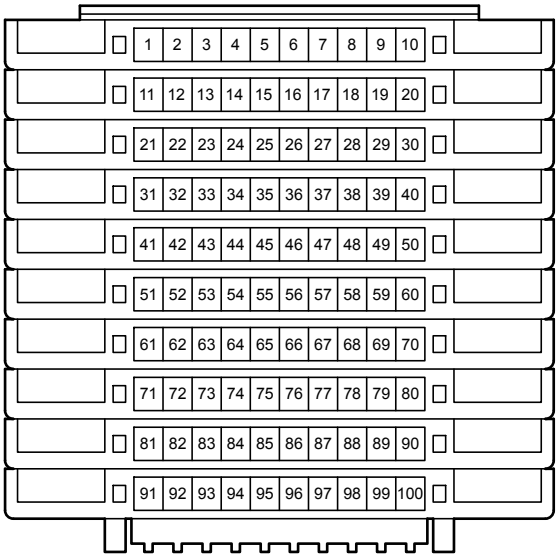


E 62
White

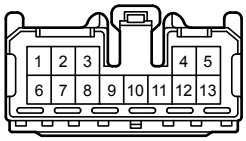


E 63
Gray




E 94
White




E106
White




I 6
White

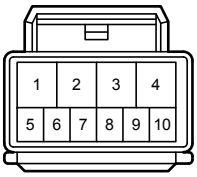


I 14
White

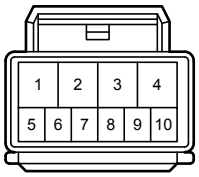

J 6
White

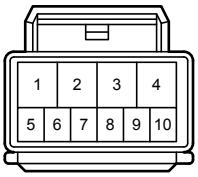

J 13
White

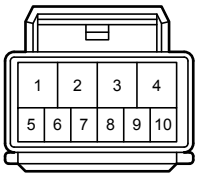

K 2
White



K 3
White




L 1
White




L 2
White




L 47
White

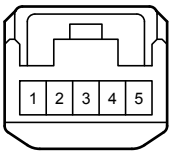

R 13
White




R 15
White



W 1
White




W 3
Blue

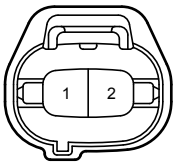


g 1
White




2C
White

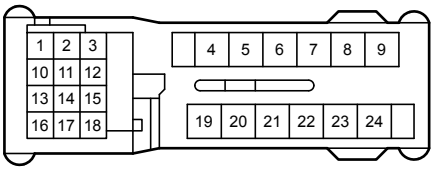

2D
White

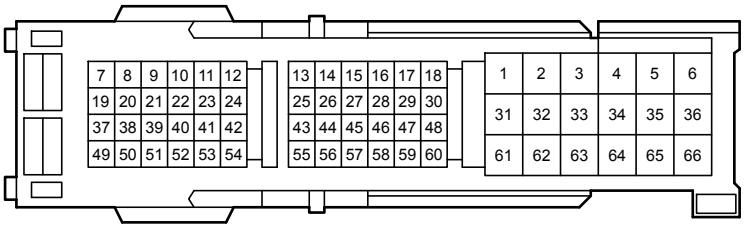


AA3
Gray

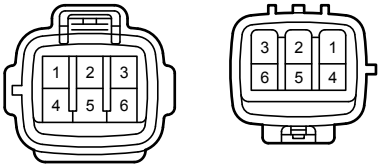


EA1

White

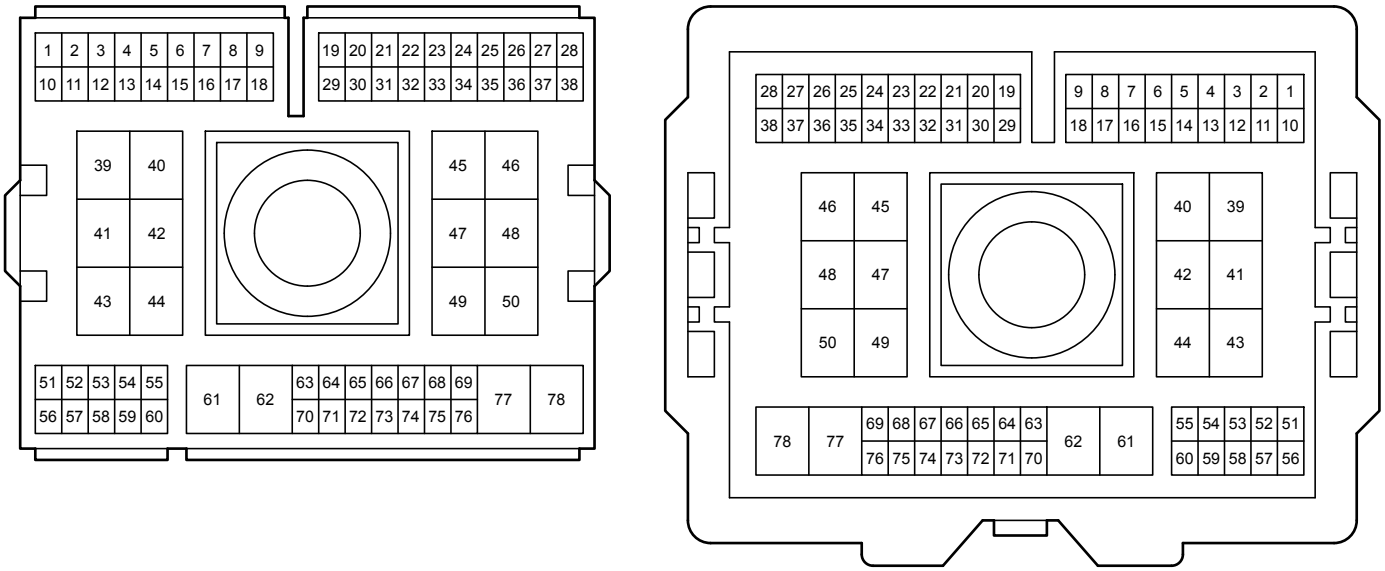



EK2

White

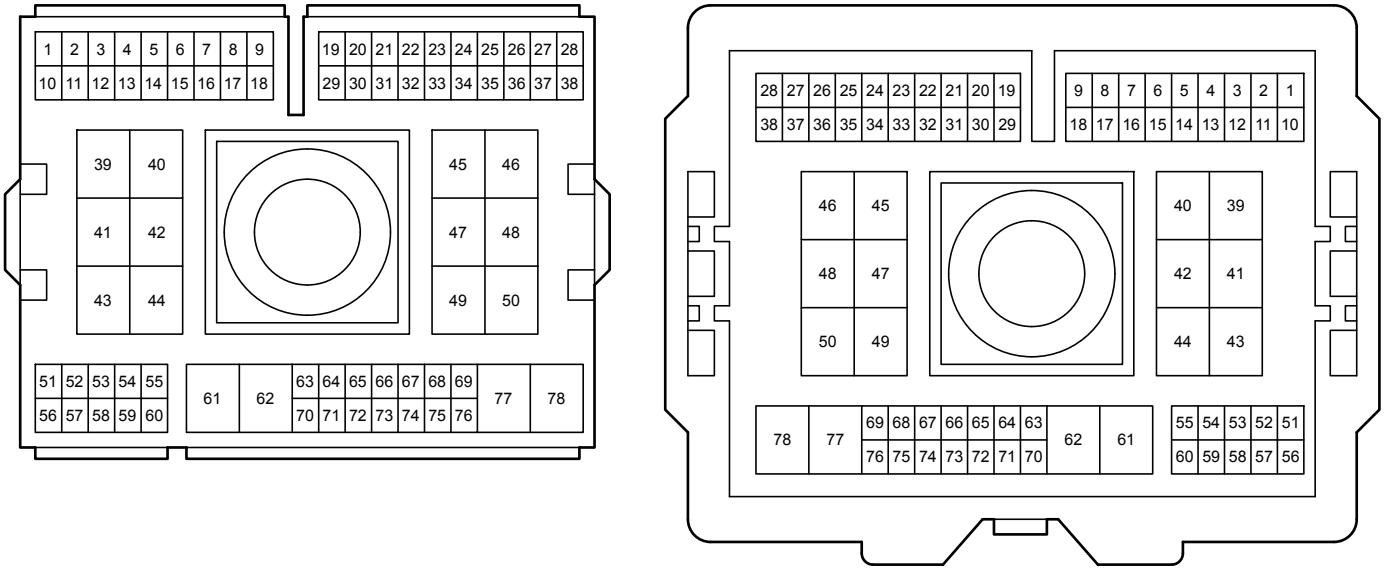


EL1
White

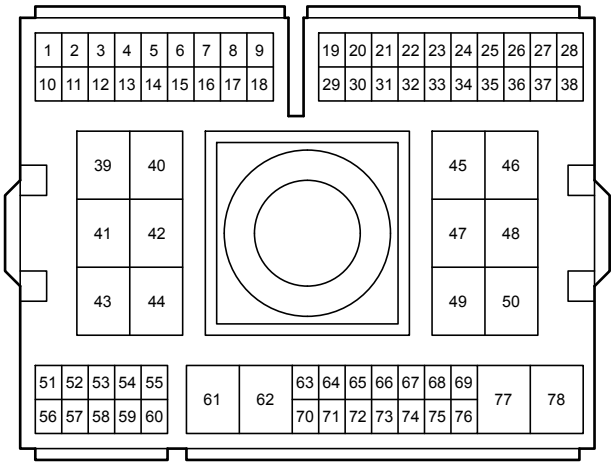


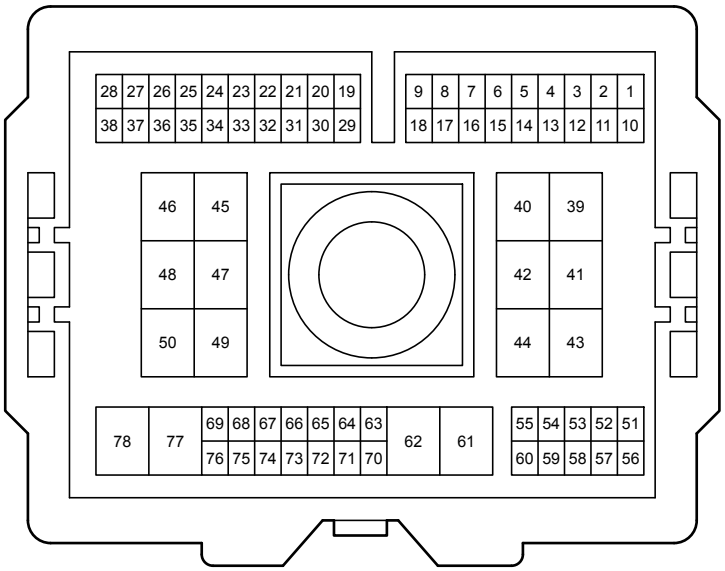


FE3
White

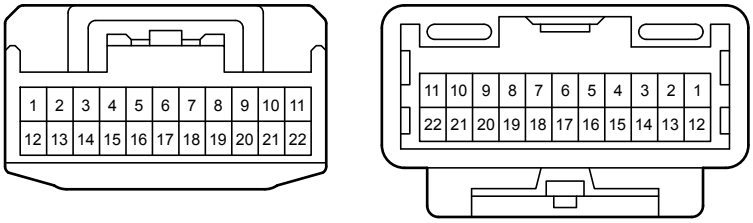


FE4
White

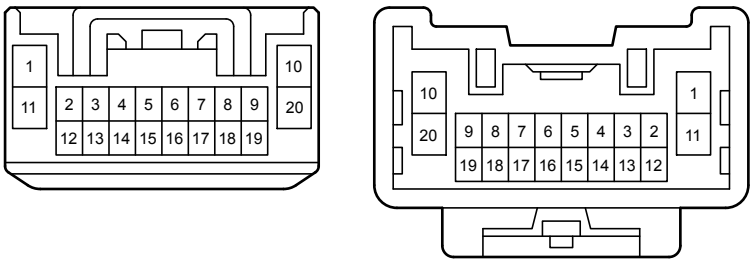


FE5
White

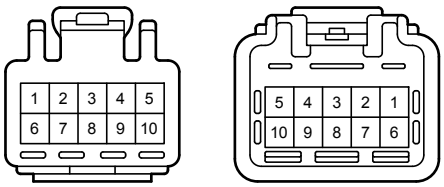


FL2
Blue

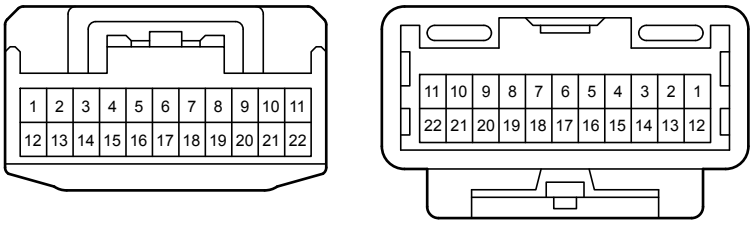


IE3
White

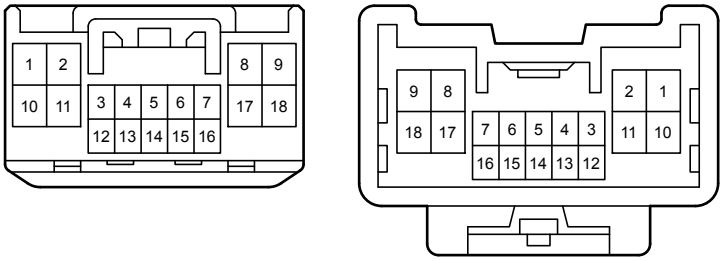



IE6
White

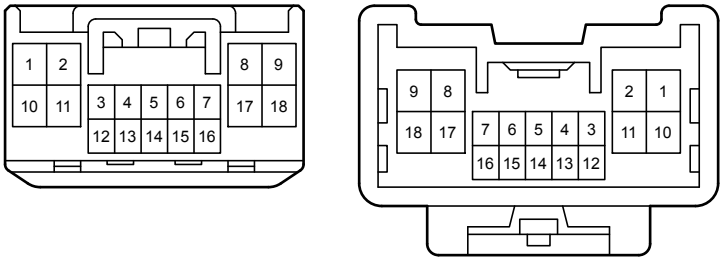



JK1
White

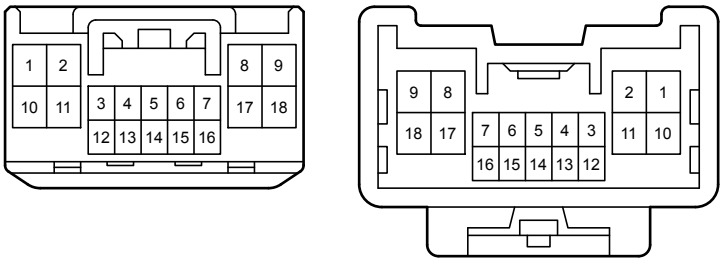


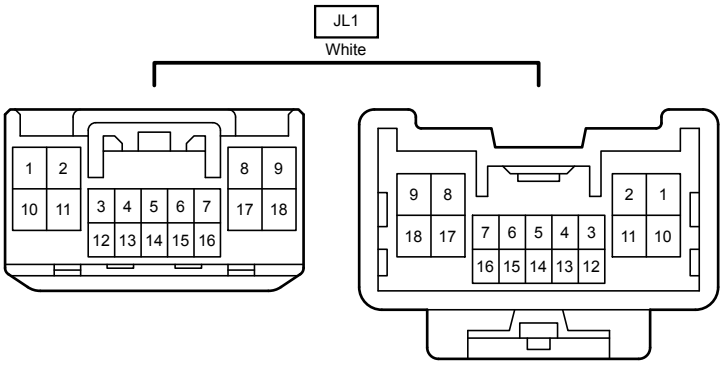
JL1
White
1 2 8 9
10 11 3 4 5 6 7 17 18
12 13 14 15 16
9 8 2 1
18 17 7 6 5 4 3 11 10
16 15 14 13 12

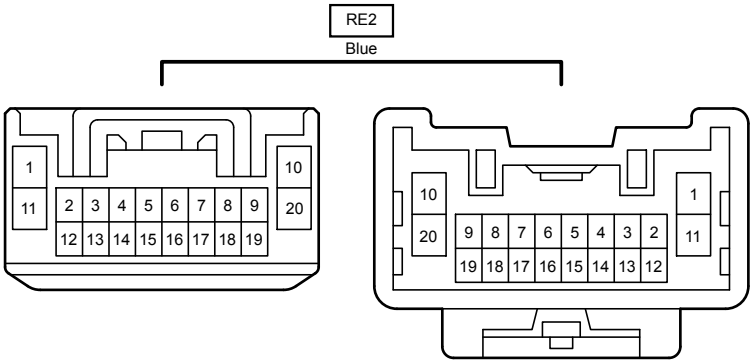
RE2
Blue
1 10
11 2 3 4 5 6 7 8 9 20
12 13 14 15 16 17 18 19
10 1
20 9 8 7 6 5 4 3 2 11
19 18 17 16 15 14 13 12

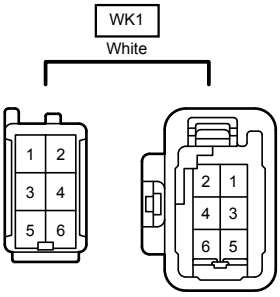
WK1
White
1 2
3 4
5 6
2 1
4 3
6 5

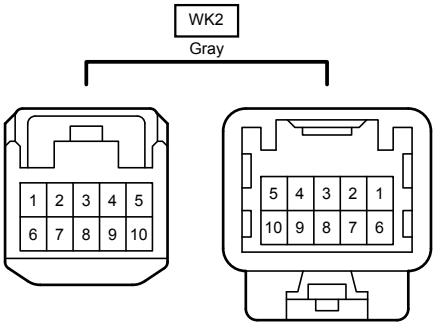
WK2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

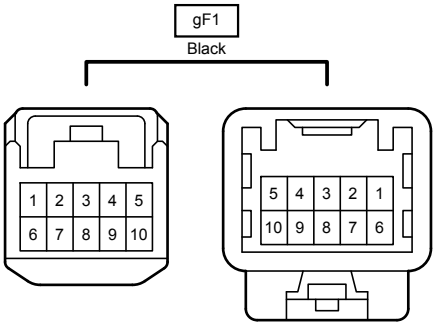
gF1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6