
D RELAY LOCATIONS

Fuse Block No. 1 (Europe)	LHD: Left Kick Panel (See Page 27, 28) RHD: Right Kick Panel (See Page 27, 28)

English

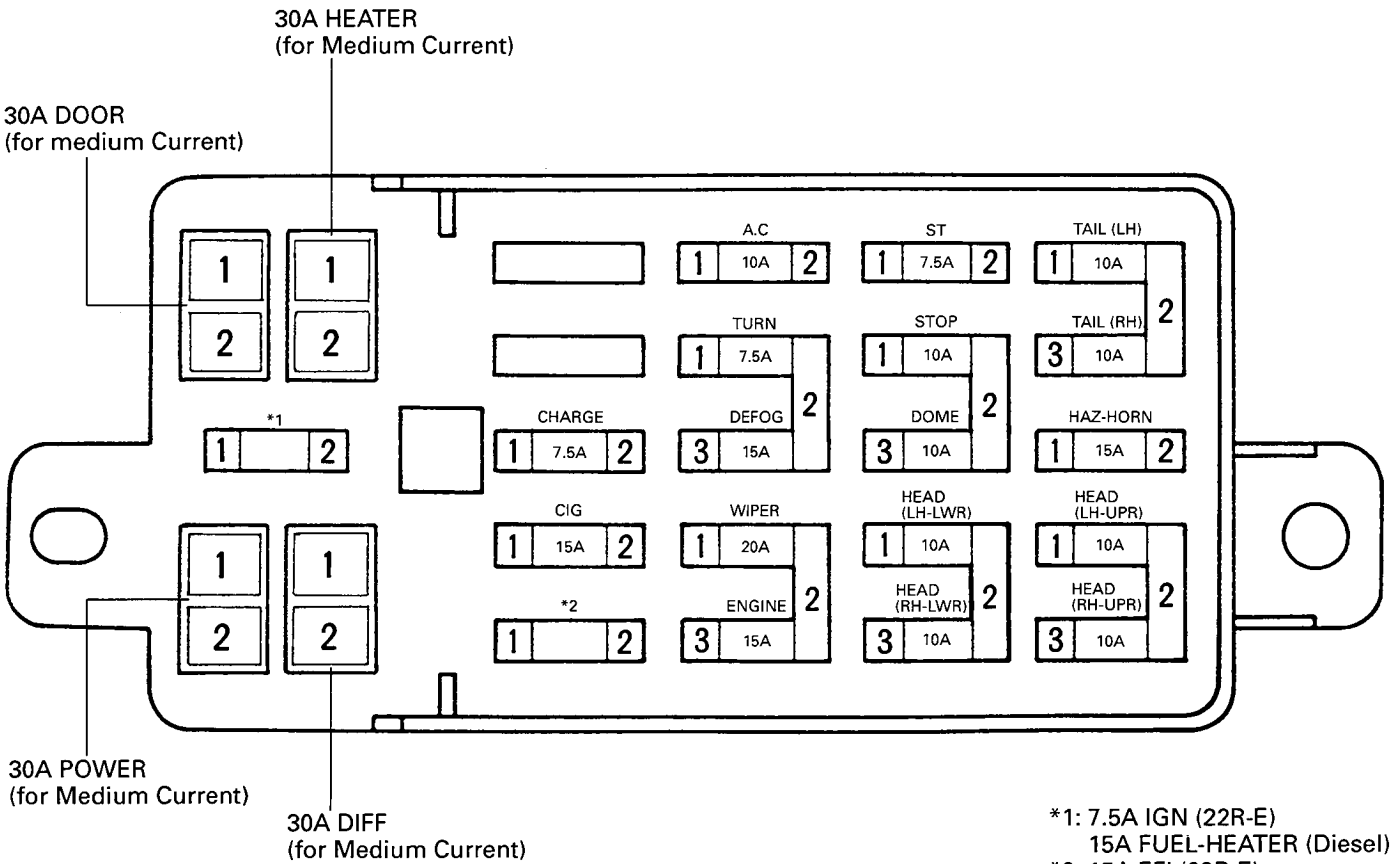

*1: 7.5A IGN (22R-E)
15A FUEL-HEATER (Diesel)
*2: 15A EFI (22R-E)
10A ECU-B (2L-T Austria)