
Fuse Block No. 1 (Ex. Europe)	LHD: Left Kick Panel (See Page 27, 28) RHD: Right Kick Panel (See Page 27, 28)

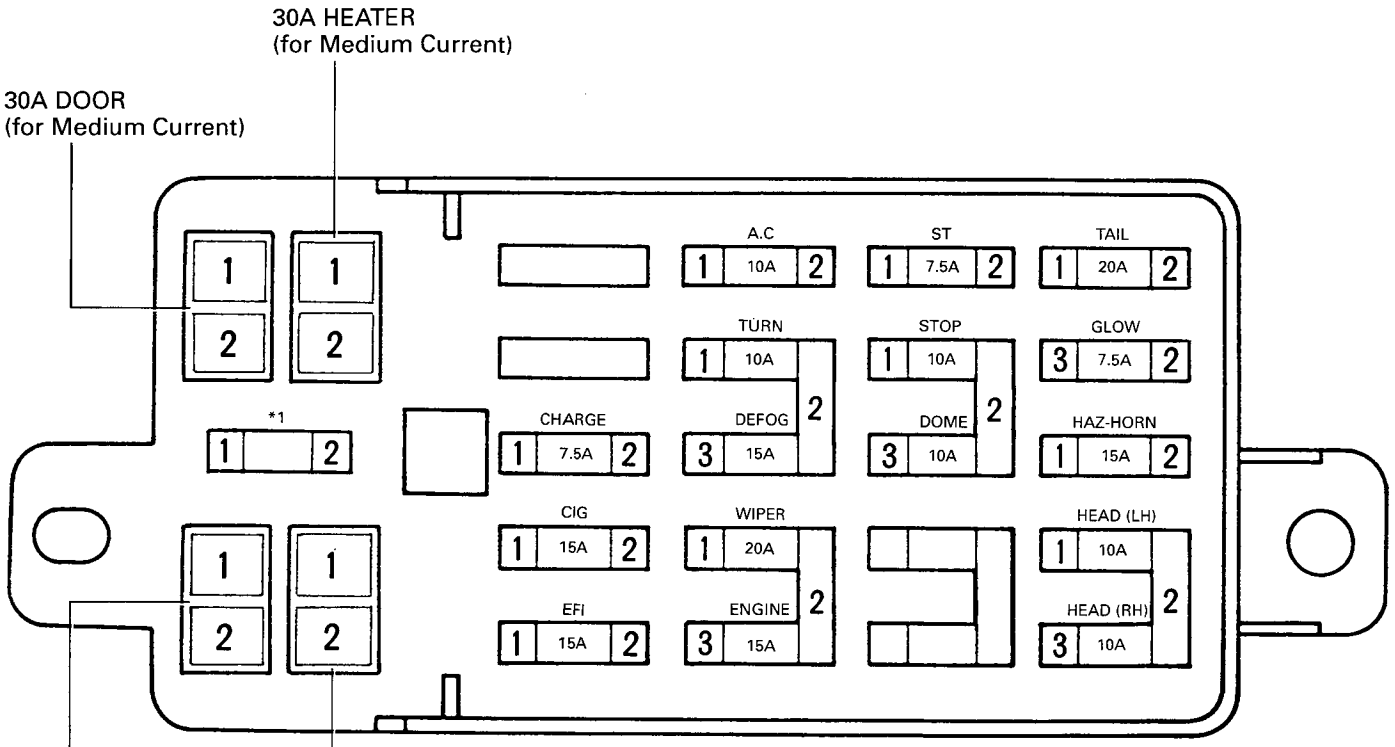

*1: 7.5A IGN (1FZ-FE)
15A FUEL-HEATER (Diesel)