
Connector Joining Wire Harness and Wire Harness

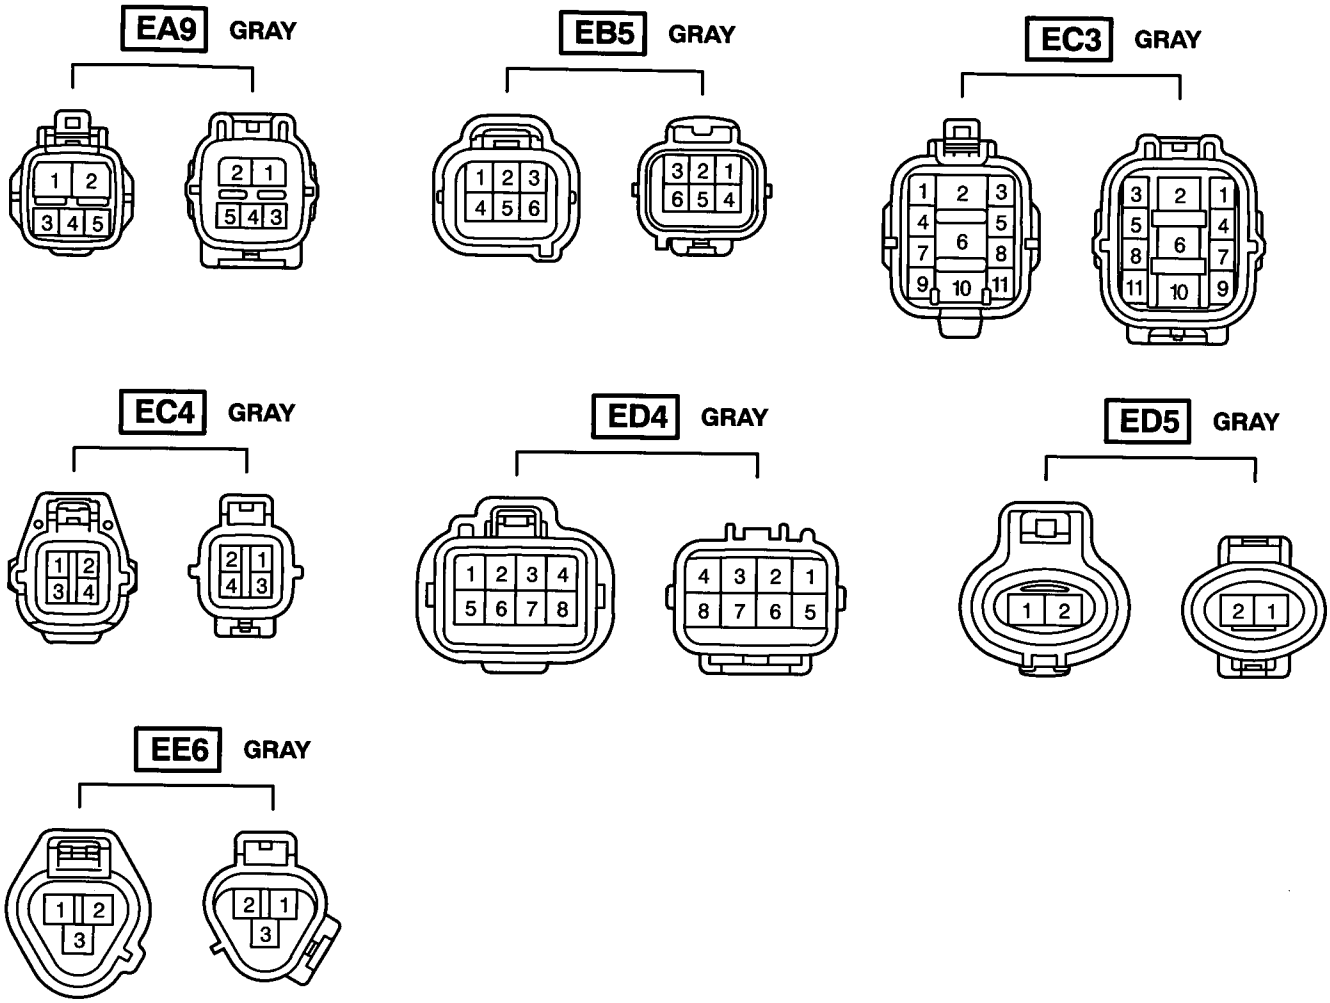

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA9	Cowl Wire and Engine Wire (Near the Alternator)
EB5	Cowl Wire and Engine Room No.2 Wire (Under the Air Cleaner)
EC3	Engine Wire and Cowl Wire (Near the Battery)
EC4	
ED4	Engine Wire and Transmission Wire (On the Transmission)
ED5	
EE6	Cowl Wire and Engine No.4 Wire (Under the Air Cleaner)