
Connector Joining Wire Harness and Wire Harness

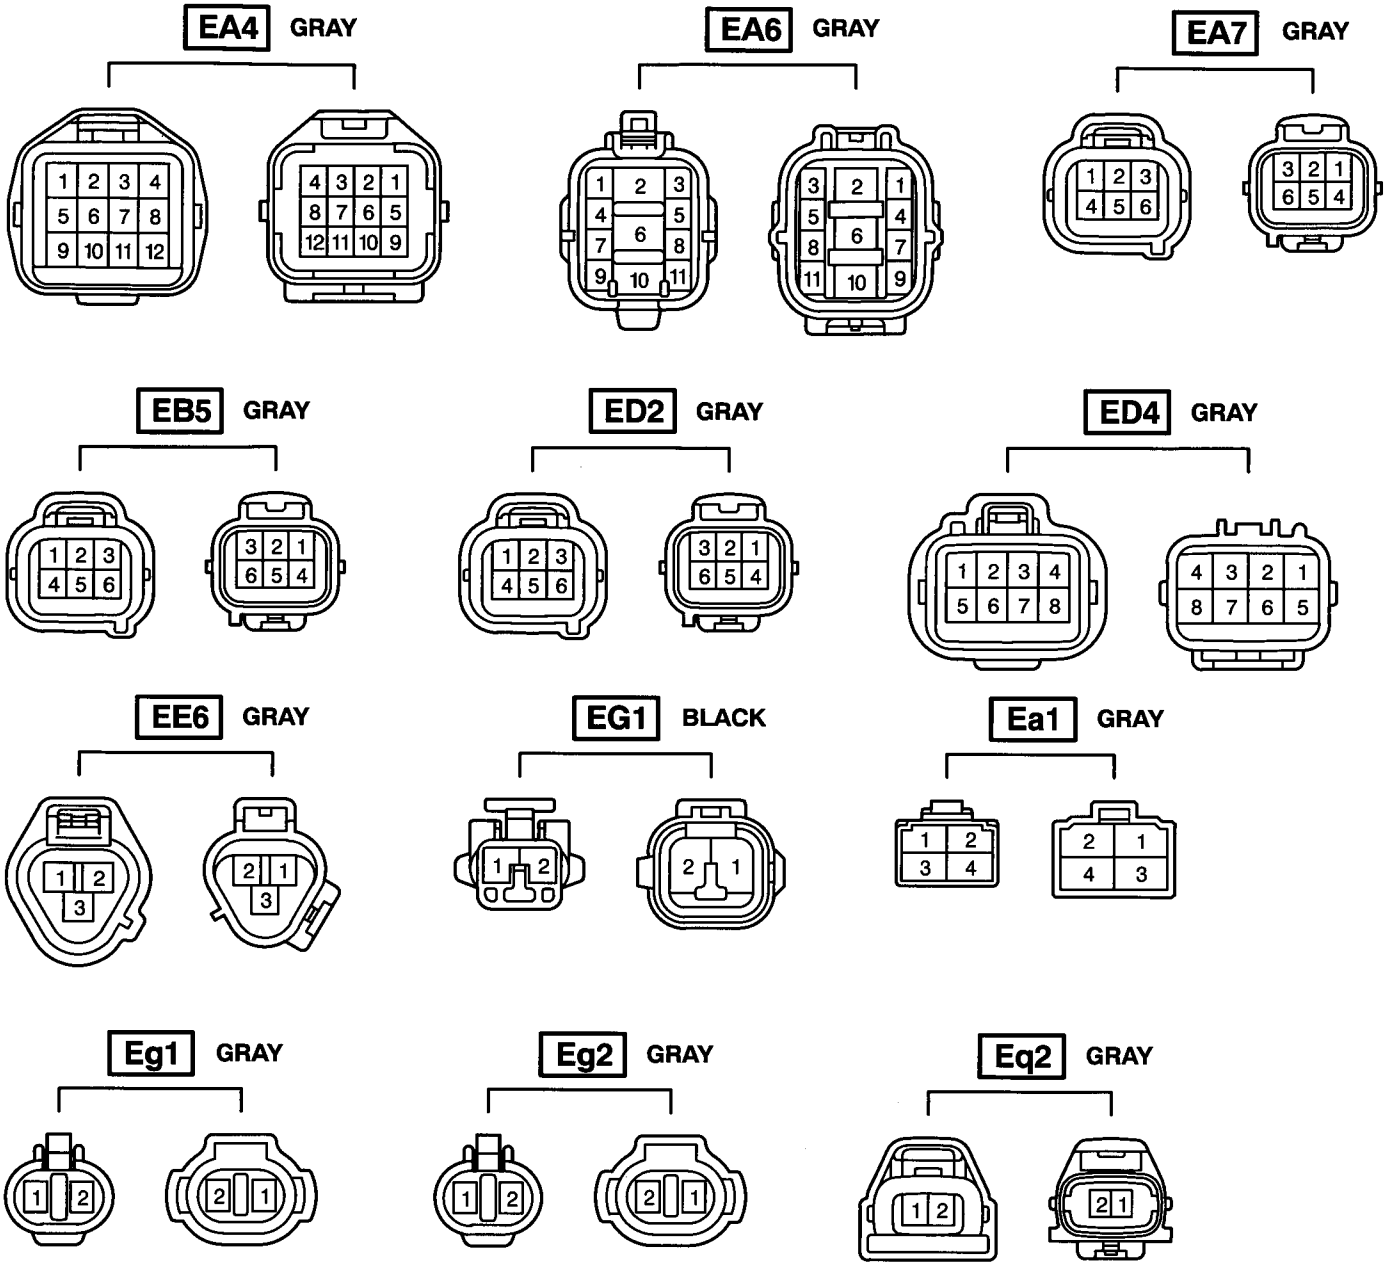

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA4	Cowl Wire and Engine Wire (Near the Battery)
EA6	
EA7	
EB5	Cowl Wire and Engine Room No.2 Wire (Under the Air Cleaner)
ED2	Engine Wire and Transmission Wire (On the Transmission)
ED4	
EE6	Cowl Wire and Engine No.4 Wire (Under the Air Cleaner)
EG1	Cowl Wire and Winch No.1 Wire (Left Side of Radiator)
Ea1	Cowl Wire and Thermo Sensor Wire (Right Side of Radiator)
Eg1	Cowl Wire and Cowl No.2 Wire (Left Side of Radiator)
Eg2	Cowl Wire and Cowl No.2 Wire (Right Side of Radiator)
Eq2	Transmission Wire and Frame No.2 Wire (On the Transmission)