




Connector Joining Wire Harness and Wire Harness

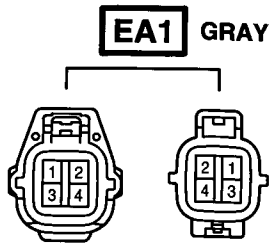


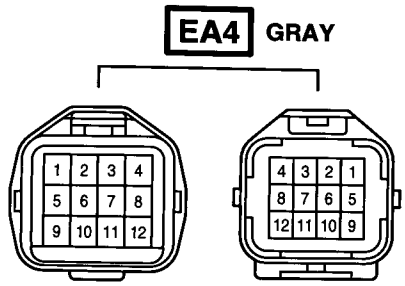


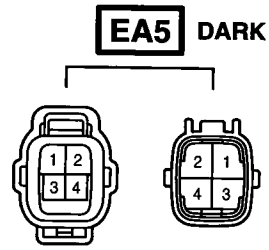


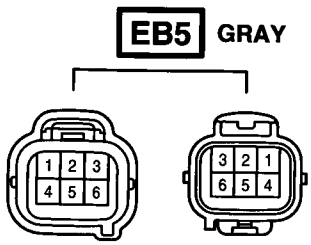


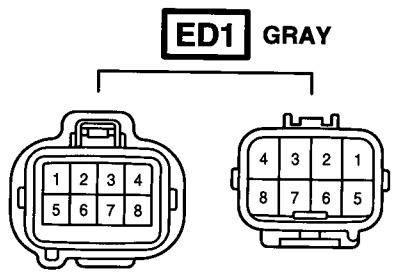


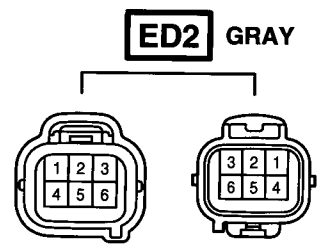


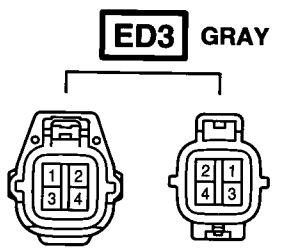


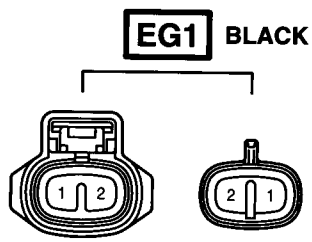


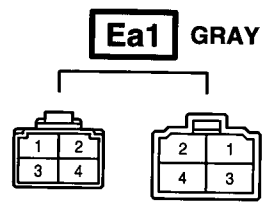


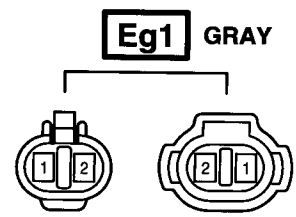

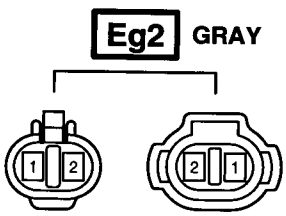

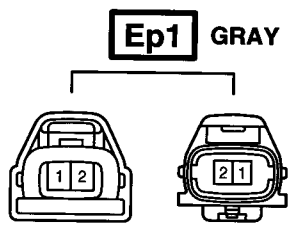

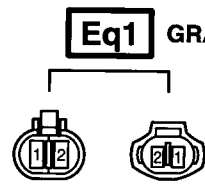

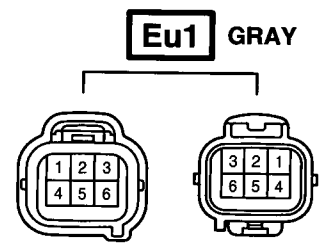

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Cowl Wire and Engine Wire (Near the Battery)
EA4	
EA5	
EB5	Cowl Wire and Engine Room No.2 Wire (Under the Air Cleaner)
ED1	Engine Wire and Transmission Wire (On the Transmission)
ED2	
ED3	
EG1	Cowl Wire and Winch No.1 Wire (Left Side of Radiator)
Ea1	Cowl Wire and Thermo Sensor Wire (Right Side of Radiator)
Eg1	Cowl Wire and Cowl No.2 Wire (Left Side of Radiator)
Eg2	Cowl Wire and Cowl No.2 Wire (Right Side of Radiator)
Ep1	Engine Wire and Engine Room No.2 Wire (Left side of Battery RH)
Eq1	Transmission Wire and Frame No.2 Wire (On the Transmission)
Eu1	Cowl Wire and Cowl No.2 Wire (Behind Headlight LH)