
Connector Joining Wire Harness and Wire Harness

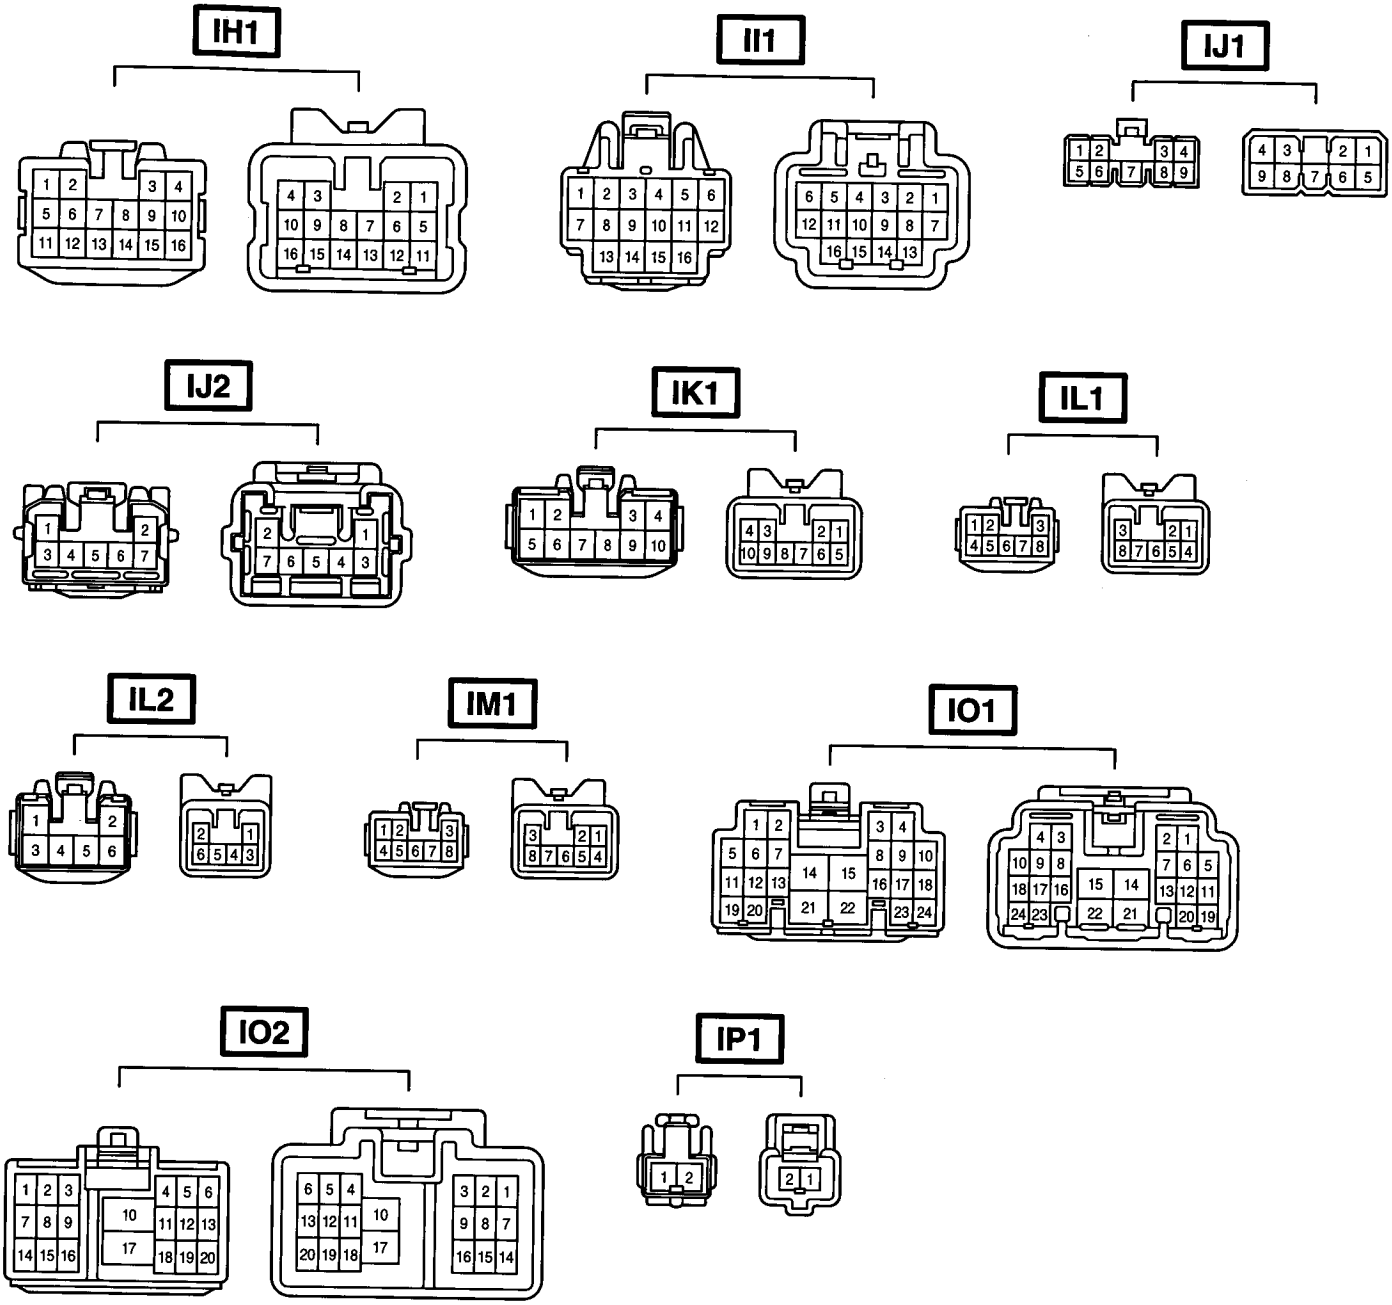

Code	Joining Wire Harness and Wire Harness (Connector Location)
IH1	Cowl Wire and Instrument Panel Wire (Instrument Panel Center)
II1	Instrument Panel No.2 Wire and Cowl Wire (Instrument Panel Center)
IJ1	Cowl Wire and A/C Sub Wire (Behind Glove Box)
IJ2	
IK1	Cowl No.2 Wire and Cowl Wire (Left Kick Panel)
IL1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IL2	
IM1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IO1	Cowl Wire and Floor Wire (Right Kick Panel)
IO2	
IP1	Cowl Wire and Floor No.3 Wire (Left Kick Panel)