
Connector Joining Wire Harness and Wire Harness

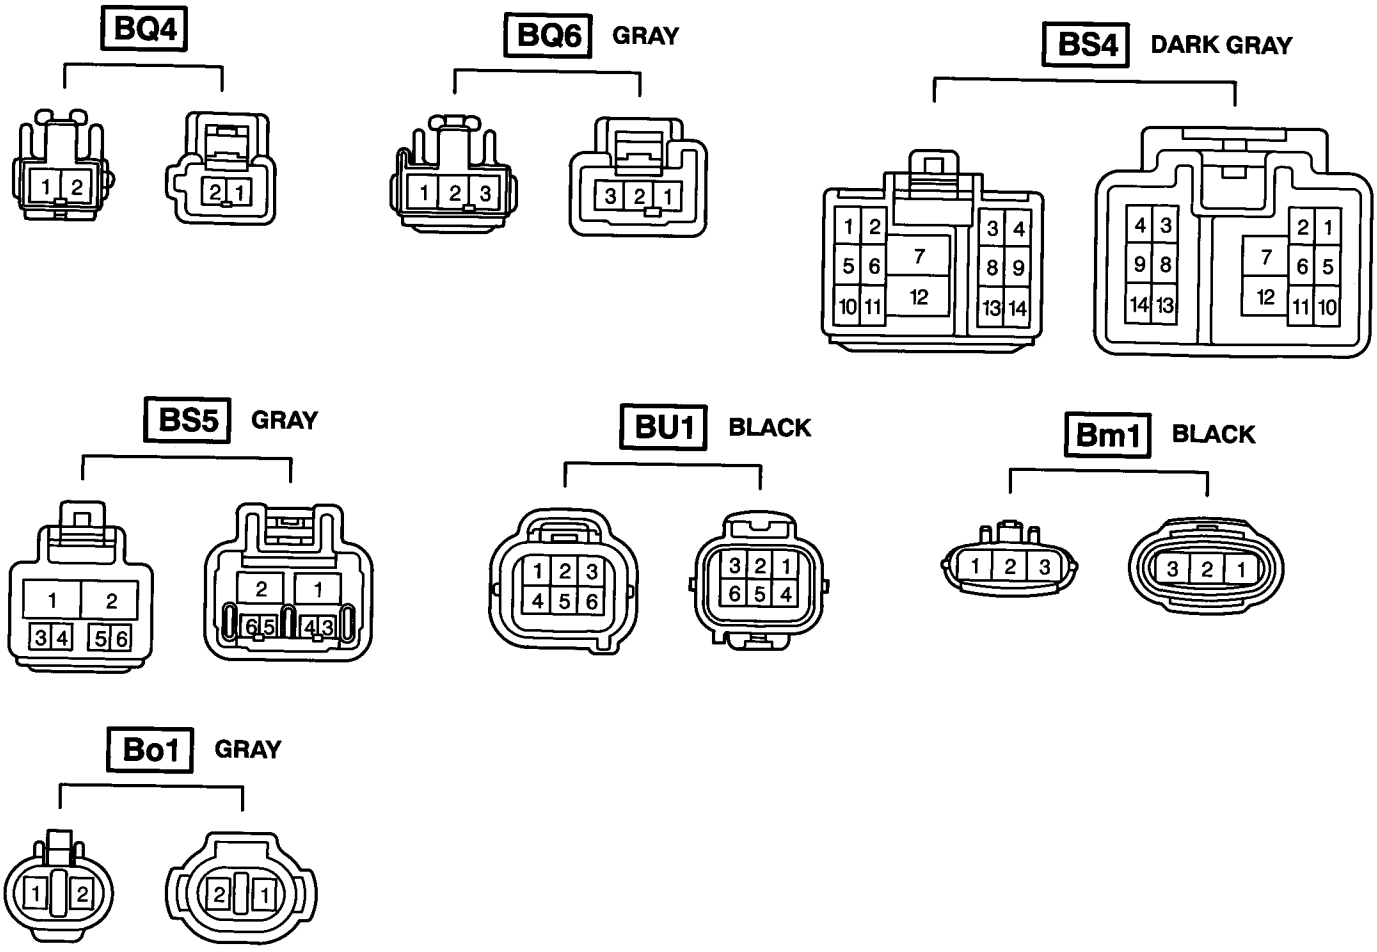

Code	Joining Wire Harness and Wire Harness (Connector Location)
BQ4	Roof Wire and Floor Wire (Under the Passenger's Seat)
BQ6	
BS4	Floor No.2 Wire and Floor Wire (Under the Passenger's Seat)
BS5	
BU1	Floor No.2 Wire and Frame Wire (Rear Side Member RH)
Bm1	Frame No.2 Wire and Floor No.2 Wire (Under the Lower Back Panel)
Bo1	Floor No.2 Wire and Frame No.2 Wire (Under the Lower Back Panel)