
Connector Joining Wire Harness and Wire Harness

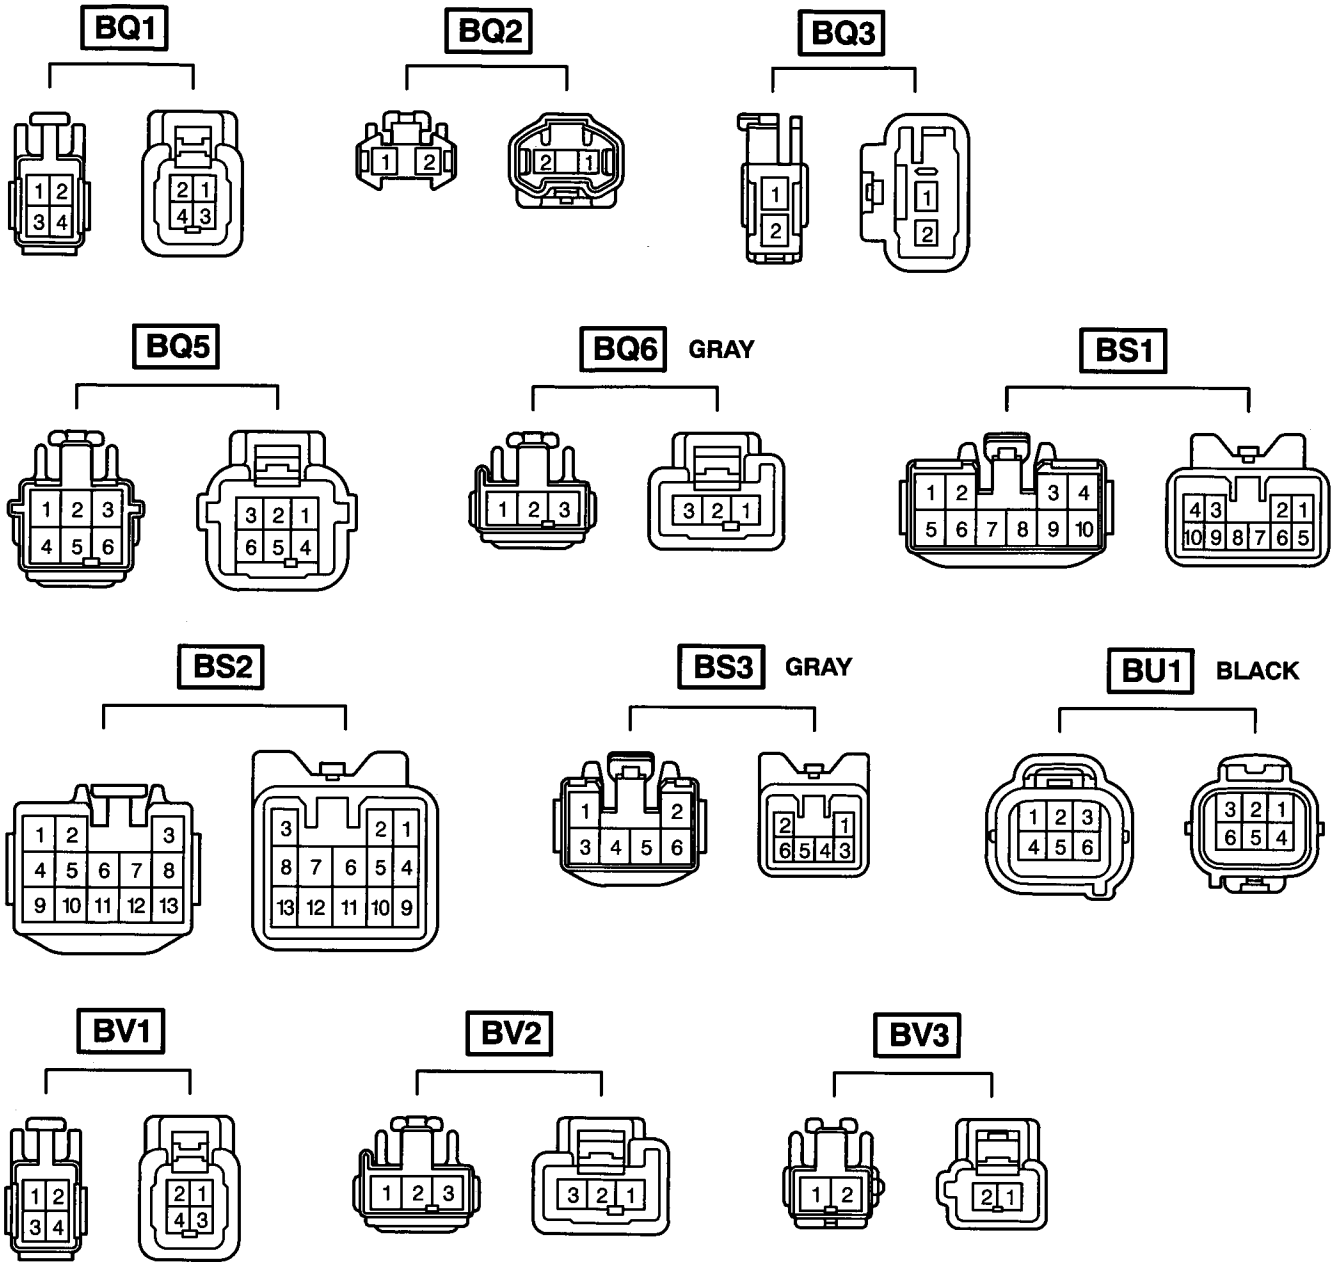

Code	Joining Wire Harness and Wire Harness (Connector Location)
BQ1	Roof Wire and Floor Wire (Near Right Center Pillar)
BQ2	
BQ3	
BQ5	
BQ6	
BS1	Floor No.2 Wire and Floor Wire (Right Quarter Panel Inner)
BS2	
BS3	
BU1	Floor No.2 Wire and Frame Wire (Under the Lower Back Panel)
BV1	Back Door No.1 Wire and Floor Wire (Right Quarter Panel Inner)
BV2	
BV3	