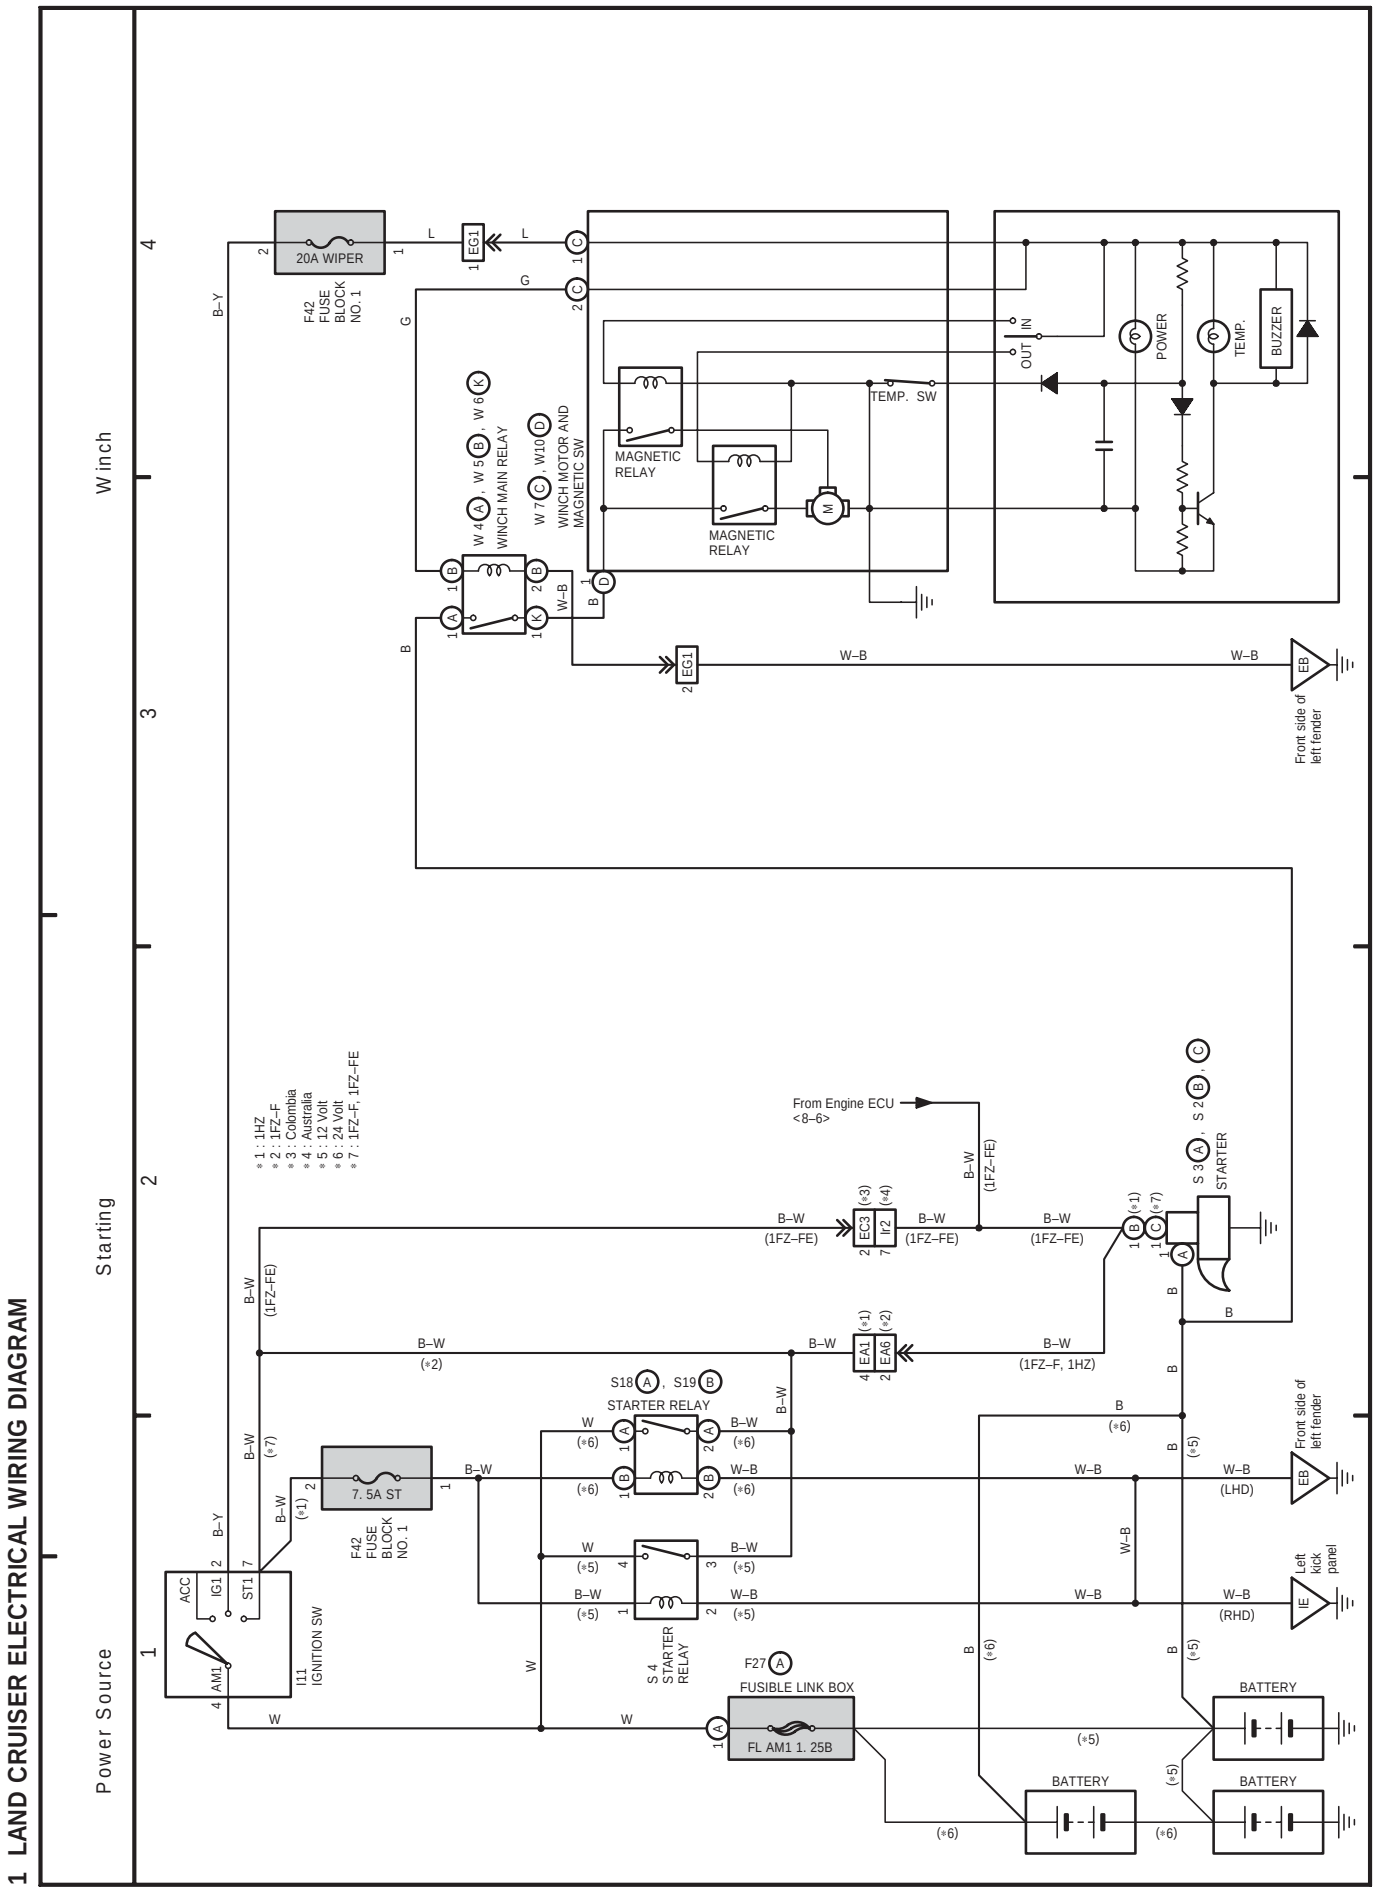

1 LAND CRUISER ELECTRICAL WIRING DIAGRAM
Power Source
Starting
Winch
1
2
3
4
20A WIPER
F42 FUSE BLOCK NO. 1
EG1
MAGNETIC RELAY
MAGNETIC RELAY
TEMP. SW
WINCH MAIN RELAY
WINCH MOTOR AND MAGNETIC SW
OUT
IN
POWER
TEMP.
BUZZER
EB
Front side of left fender
W–B
B–Y
G
L
B
* 1 : 1HZ
* 2 : 1FZ–F
* 3 : Colombia
* 4 : Australia
* 5 : 12 Volt
* 6 : 24 Volt
* 7 : 1FZ–F, 1FZ–FE
From Engine ECU <8–6>
B–W (1FZ–FE)
B–W (1FZ–F, 1HZ)
B–W (*2)
EC3
If2
EA1
EA6
S 3, S 2
STARTER
S18, S19
STARTER RELAY
7. 5A ST
F42 FUSE BLOCK NO. 1
ACC
IG1
ST1
AM1
I11 IGNITION SW
S 4 STARTER RELAY
F27
FUSIBLE LINK BOX
FL AM1 1. 25B
BATTERY
BATTERY
BATTERY
W–B (LHD)
W–B (RHD)
Left kick panel
IE