
Fuse Block No.1	LHD : Left Kick Panel (See Page 23)
	RHD : Right Kick Panel (See Page 23)

[Except Europe]

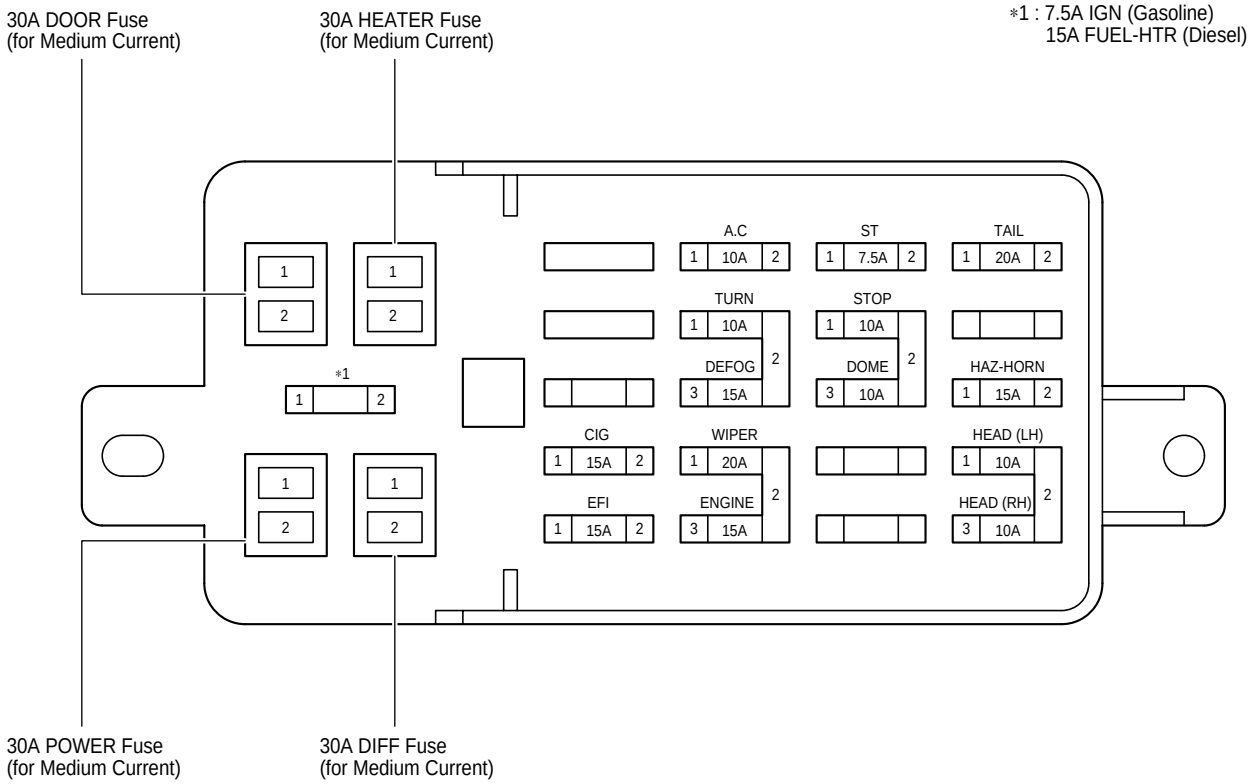

Fuse Block No.1	Left Kick Panel (See Page 23)

[Europe]

