
Connector Joining Wire Harness and Wire Harness

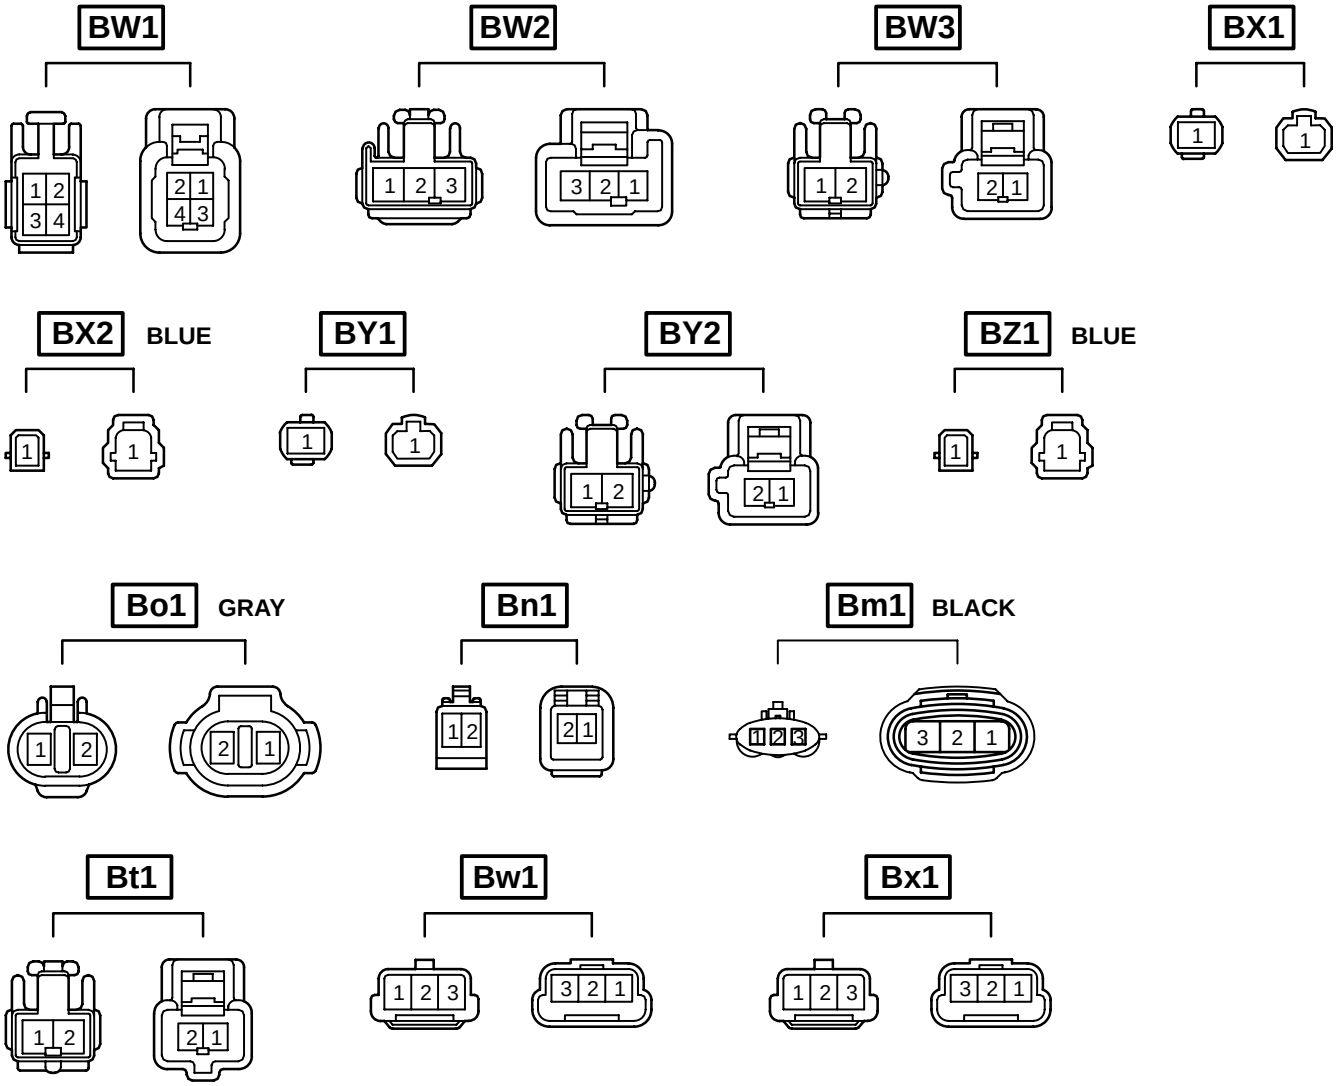

Code	Joining Wire Harness and Wire Harness (Connector Location)
BW1	Luggage Room No.3 Wire and Floor No.2 Wire (Left Quarter Panel Inner)
BW2	
BW3	
BX1	Rear Window No.1 Wire and Back Door No.1 Wire (Right Quarter Panel Inner)
BX2	
BY1	Back Door No.2 Wire and Luggage Room No.3 Wire (Back Door Left)
BY2	
BZ1	Rear Window No.2 Wire and Luggage Room No.3 Wire (Back Door Left)
Bo1	Floor No.2 Wire and Frame No.2 Wire (Under the Lower Back Panel)
Bn1	Roof No.2 Wire and Roof Wire (Rear Side of Roof)
Bm1	Frame No.2 Wire and Floor No.2 Wire (Under the Lower Back Panel)
Bt1	Floor Wire and Roof No.2 Wire (Right Quarter Panel Inner)
Bw1	Front Door LH Wire and Front Door LH No.2 Wire (Front Door LH Inner)
Bx1	Front Door RH Wire and Front Door RH No.2 Wire (Front Door RH Inner)