
Connector Joining Wire Harness and Wire Harness

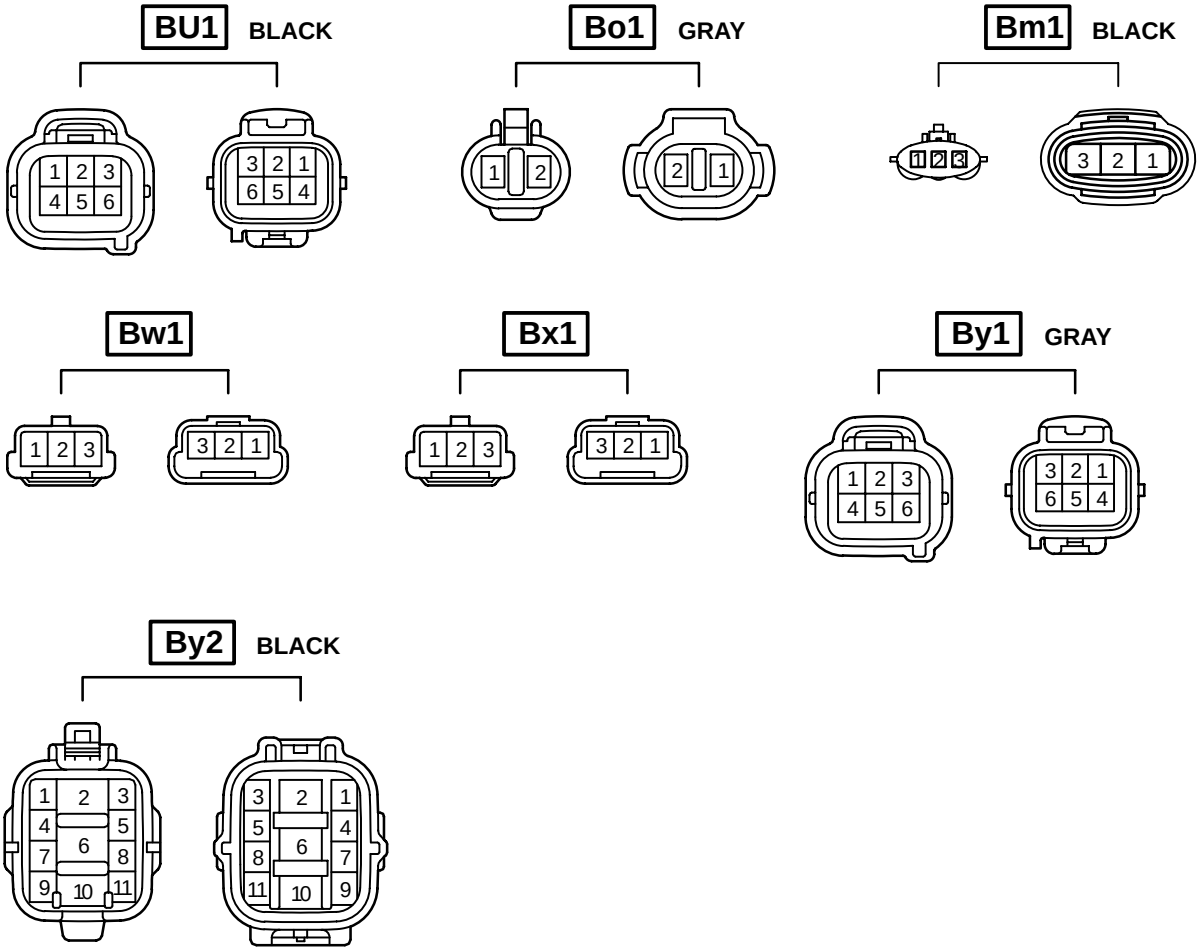

Code	Joining Wire Harness and Wire Harness (Connector Location)
BU1	Floor No.2 Wire and Frame Wire (Rear Side Member RH)
Bo1	Floor No.2 Wire and Frame No.2 Wire (Under the Lower Back Panel)
Bm1	Frame No.2 Wire and Floor No.2 Wire (Under the Lower Back Panel)
Bw1	Front Door LH Wire and Front Door LH No.2 Wire (Front Door LH Inner)
Bx1	Front Door RH Wire and Front Door RH No.2 Wire (Front Door RH Inner)
By1	Floor Wire and Floor No.2 Wire (Under the Passenger's Seat)
By2	