
Connector Joining Wire Harness and Wire Harness

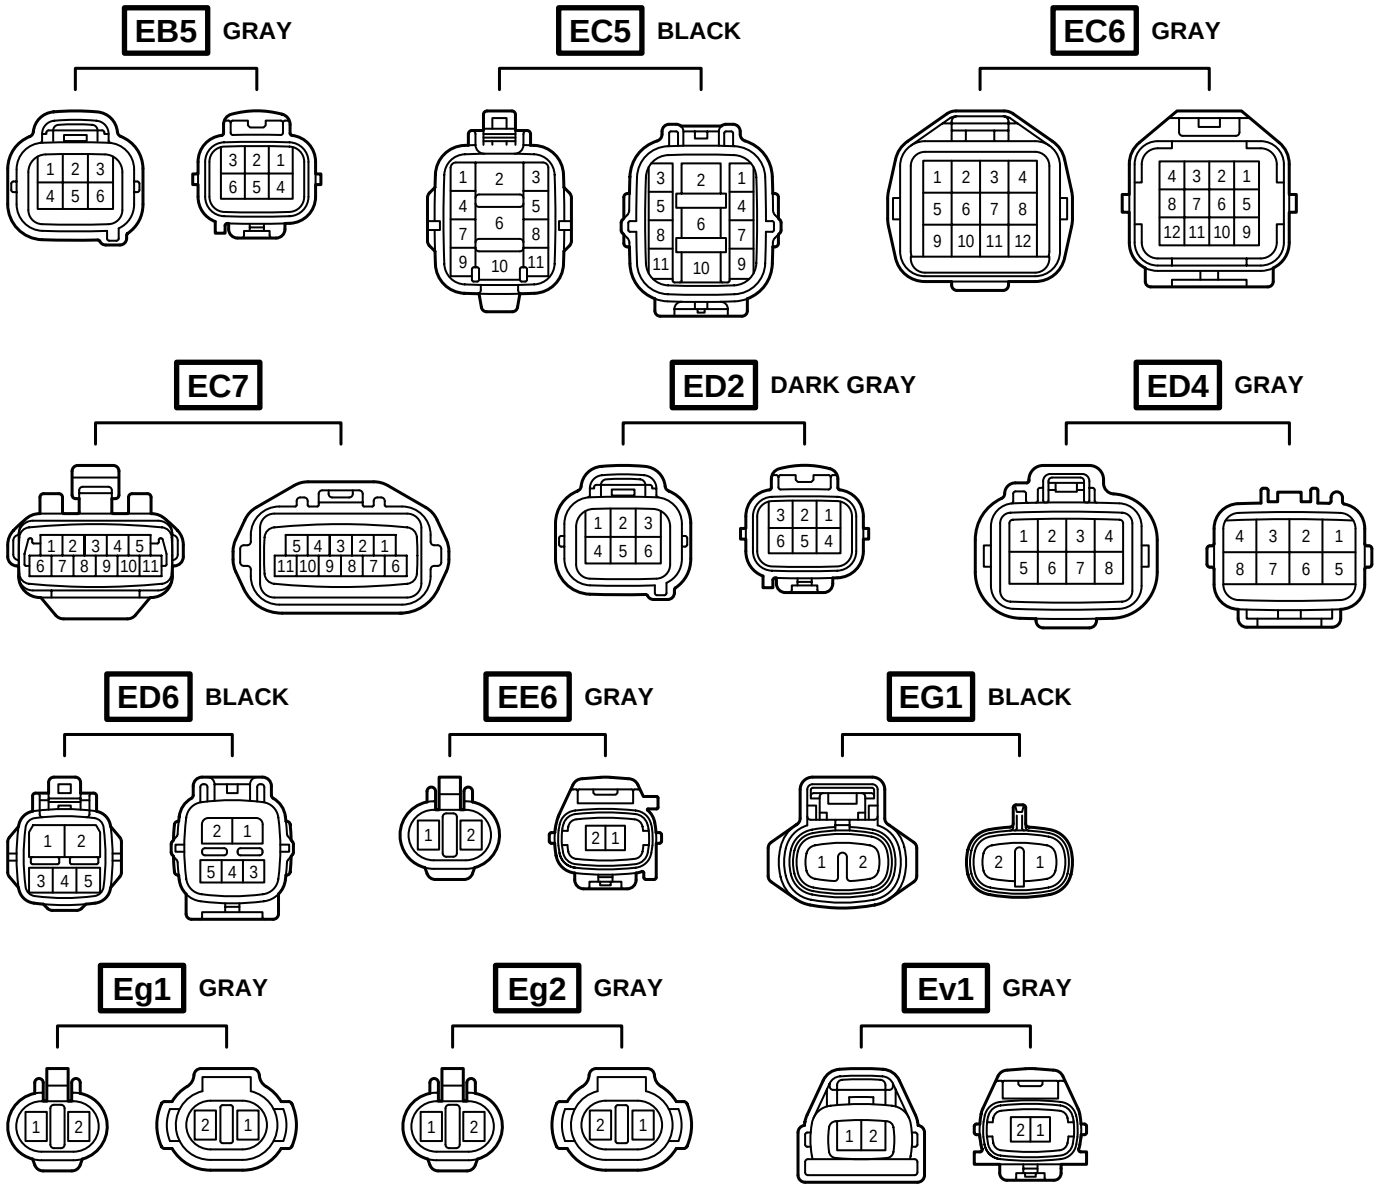

Code	Joining Wire Harness and Wire Harness (Connector Location)
EB5	Cowl Wire and Engine Room No.2 Wire (Under the Air Cleaner)
EC5	Engine Wire and Cowl Wire (Near the Battery)
EC6	
EC7	
ED2	Engine Wire and Transmission Wire (On the Transmission)
ED4	
ED6	
EE6	Cowl Wire and Engine No.4 Wire (Under the Air Cleaner)
EG1	Cowl Wire and Winch No.1 Wire (Left Side of Radiator)
Eg1	Cowl Wire and Cowl No.2 Wire (Left Side of Radiator)
Eg2	Cowl Wire and Cowl No.2 Wire (Right Side of Radiator)
Ev1	Frame No.2 Wire and Transmission Wire (Rear Side of Transmission)