
## Connector Joining Wire Harness and Wire Harness

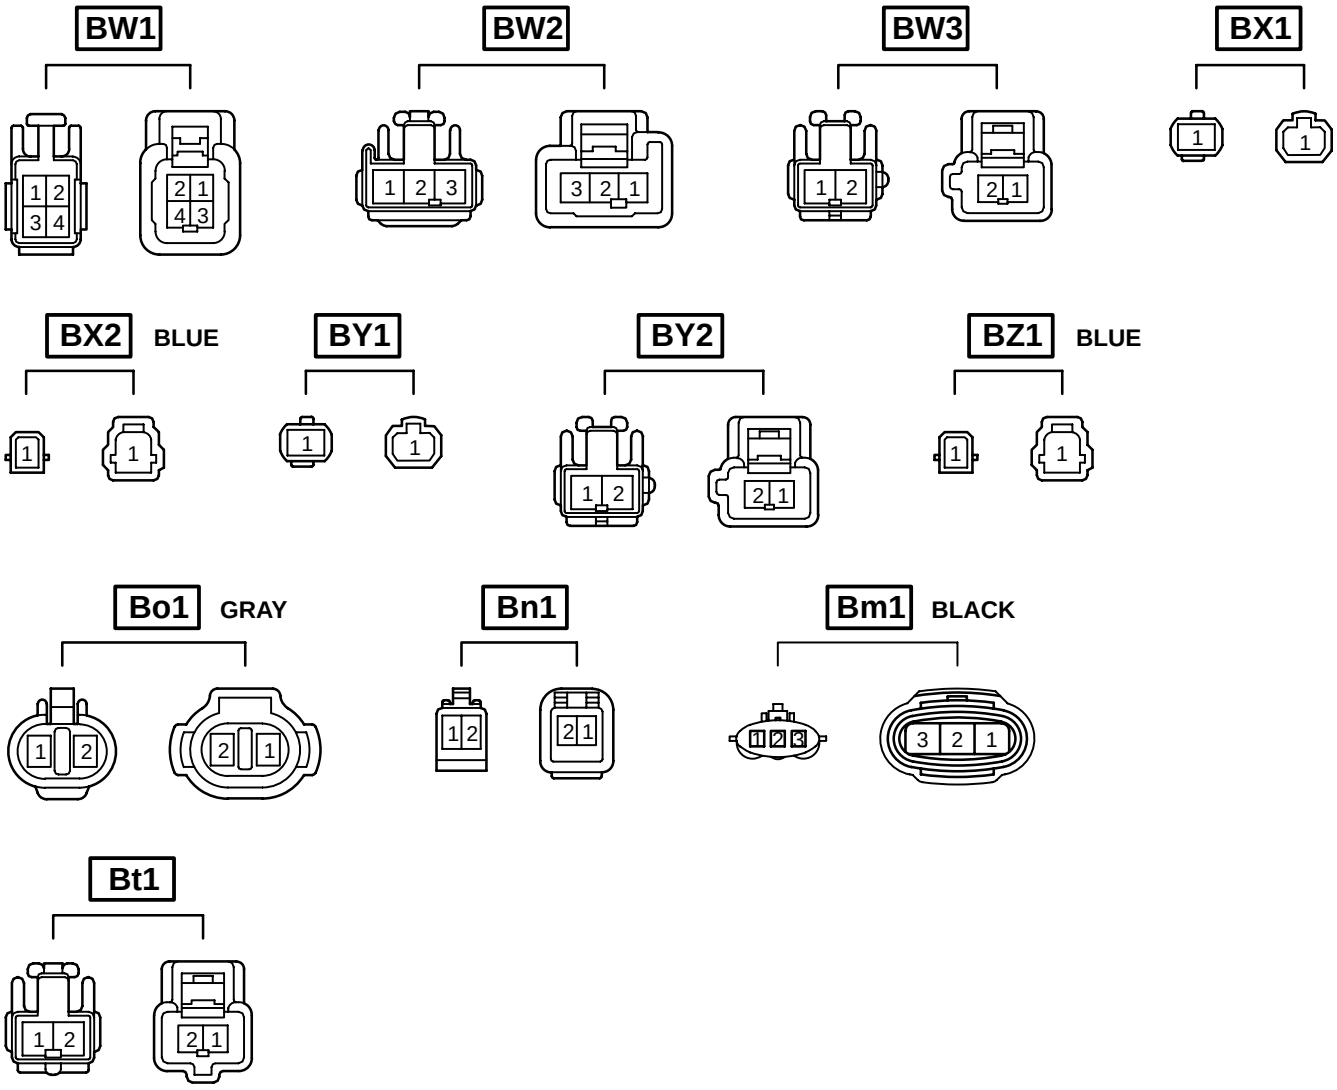


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| BW1 | Luggage Room No.3 Wire and Floor No.2 Wire (Left Quarter Panel Inner) |
| BW2 | |
| BW3 | |
| BX1 | Rear Window No.1 Wire and Back Door No.1 Wire (Right Quarter Panel Inner) |
| BX2 | |
| BY1 | Back Door No.2 Wire and Luggage Room No.3 Wire (Back Door Left) |
| BY2 | |
| BZ1 | Rear Window No.2 Wire and Luggage Room No.3 Wire (Back Door Left) |
| Bo1 | Floor No.2 Wire and Frame No.2 Wire (Under the Lower Back Panel) |
| Bn1 | Roof No.2 Wire and Roof Wire (Rear Side of Roof) |
| Bm1 | Frame No.2 Wire and Floor No.2 Wire (Under the Lower Back Panel) |
| Bt1 | Floor Wire and Roof No.2 Wire (Right Quarter Panel Inner) |