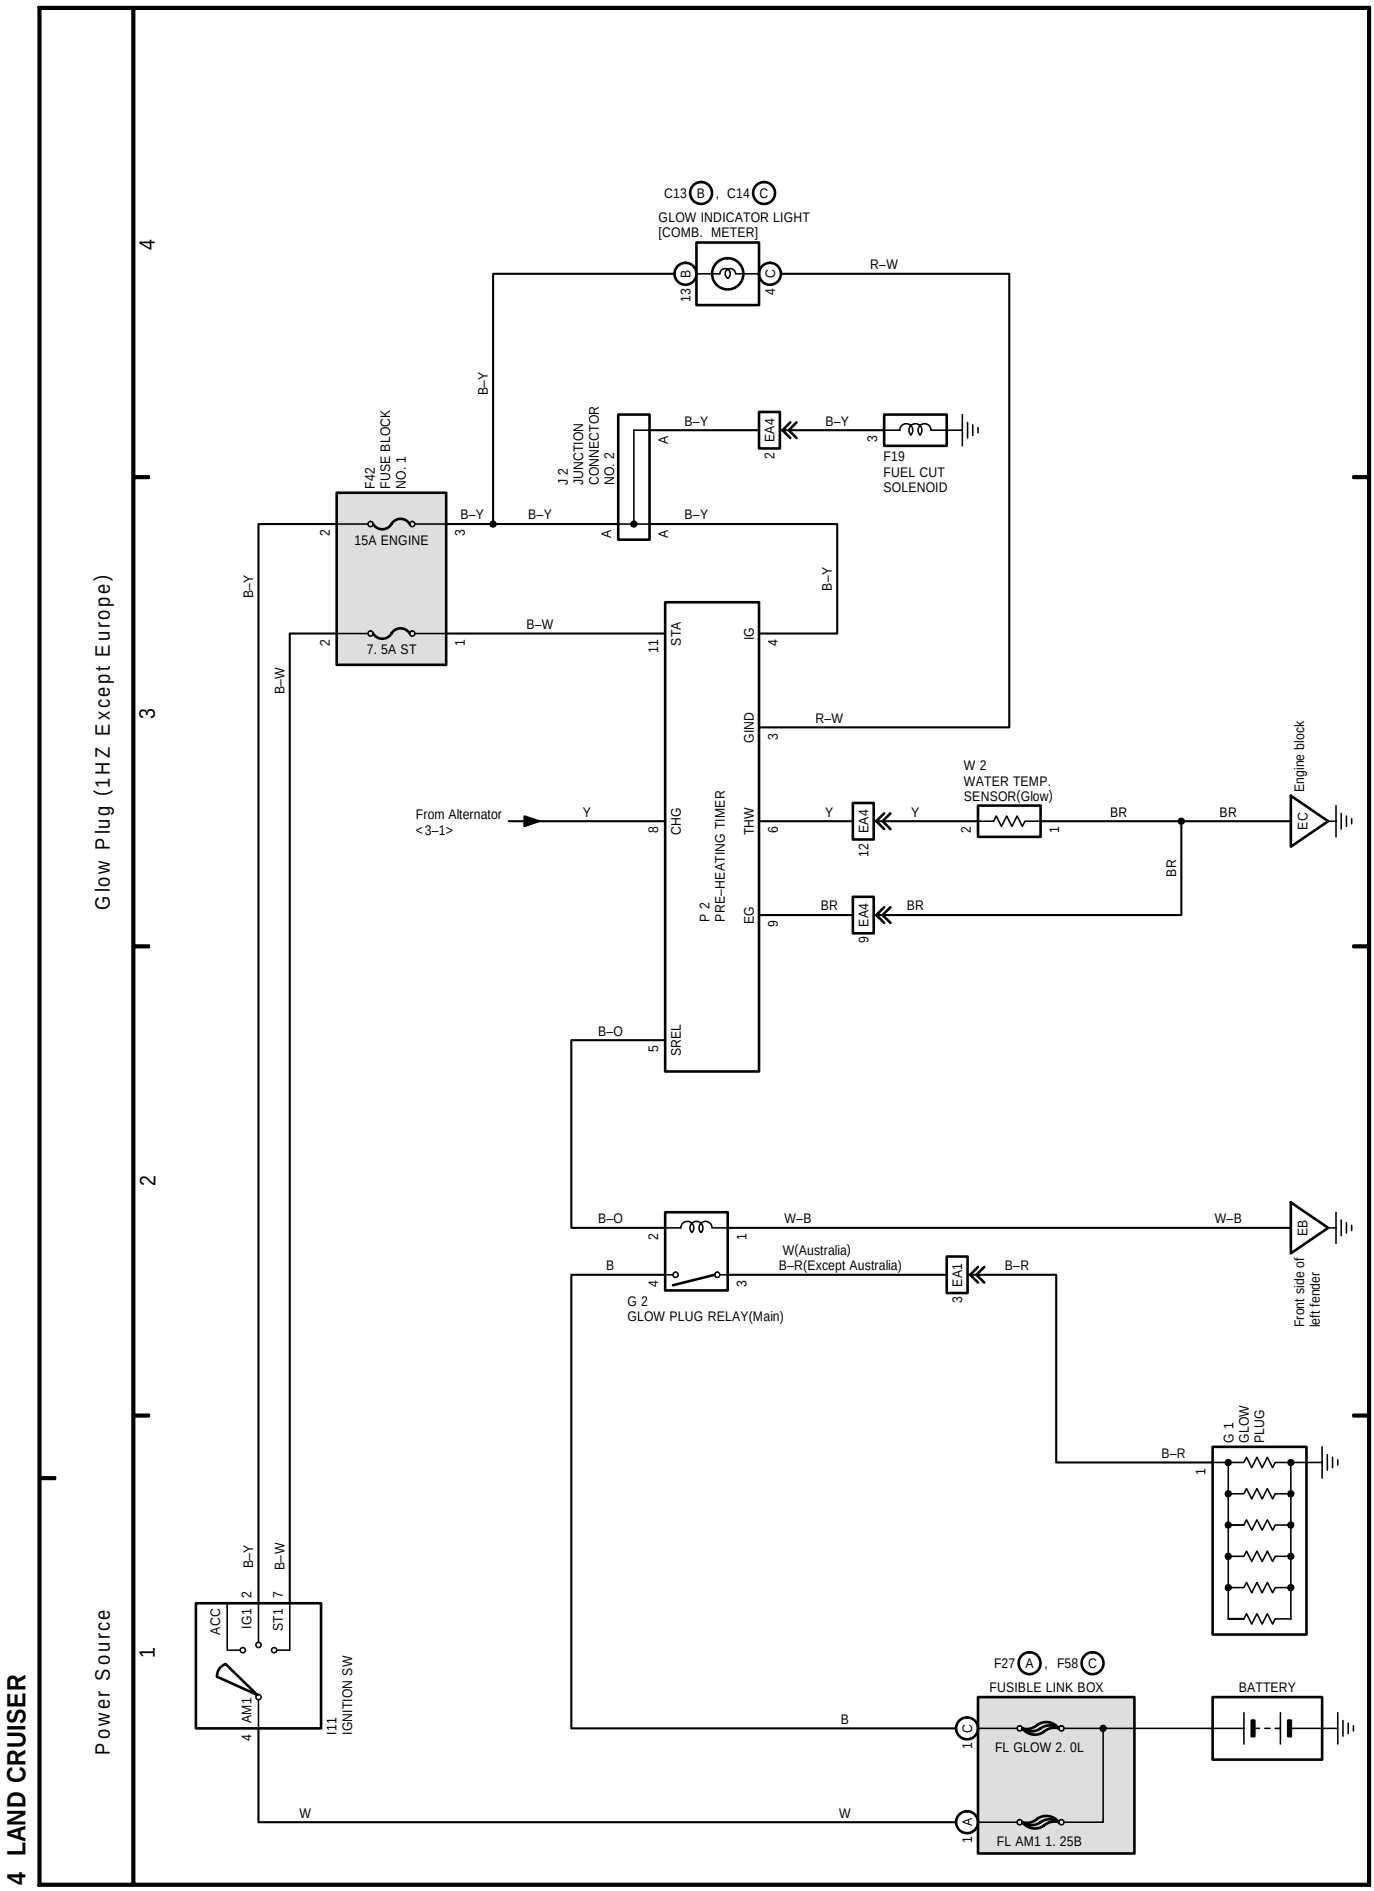

4 LAND CRUISER
Power Source
Glow Plug (1HZ Except Europe)
C13 B , C14 C
GLOW INDICATOR LIGHT
[COMB. METER]
R–W
B–Y
J 2
JUNCTION
CONNECTOR
NO. 2
EA4
F19
FUEL CUT
SOLENOID
F42
FUSE BLOCK
NO. 1
15A ENGINE
7. 5A ST
B–W
STA
IG
GND
R–W
From Alternator
<3–1>
Y
CHG
THW
W 2
WATER TEMP.
SENSOR(Glow)
BR
EC
Engine block
P 2
PRE–HEATING TIMER
EG
SREL
B–O
W–B
W(Australia)
B–R(Except Australia)
EA1
G 2
GLOW PLUG RELAY(Main)
EB
Front side of
left fender
G 1
GLOW
PLUG
ACC
IG1
ST1
AM1
I11
IGNITION SW
F27 A , F58 C
FUSIBLE LINK BOX
FL GLOW 2. 0L
FL AM1 1. 25B
BATTERY
W