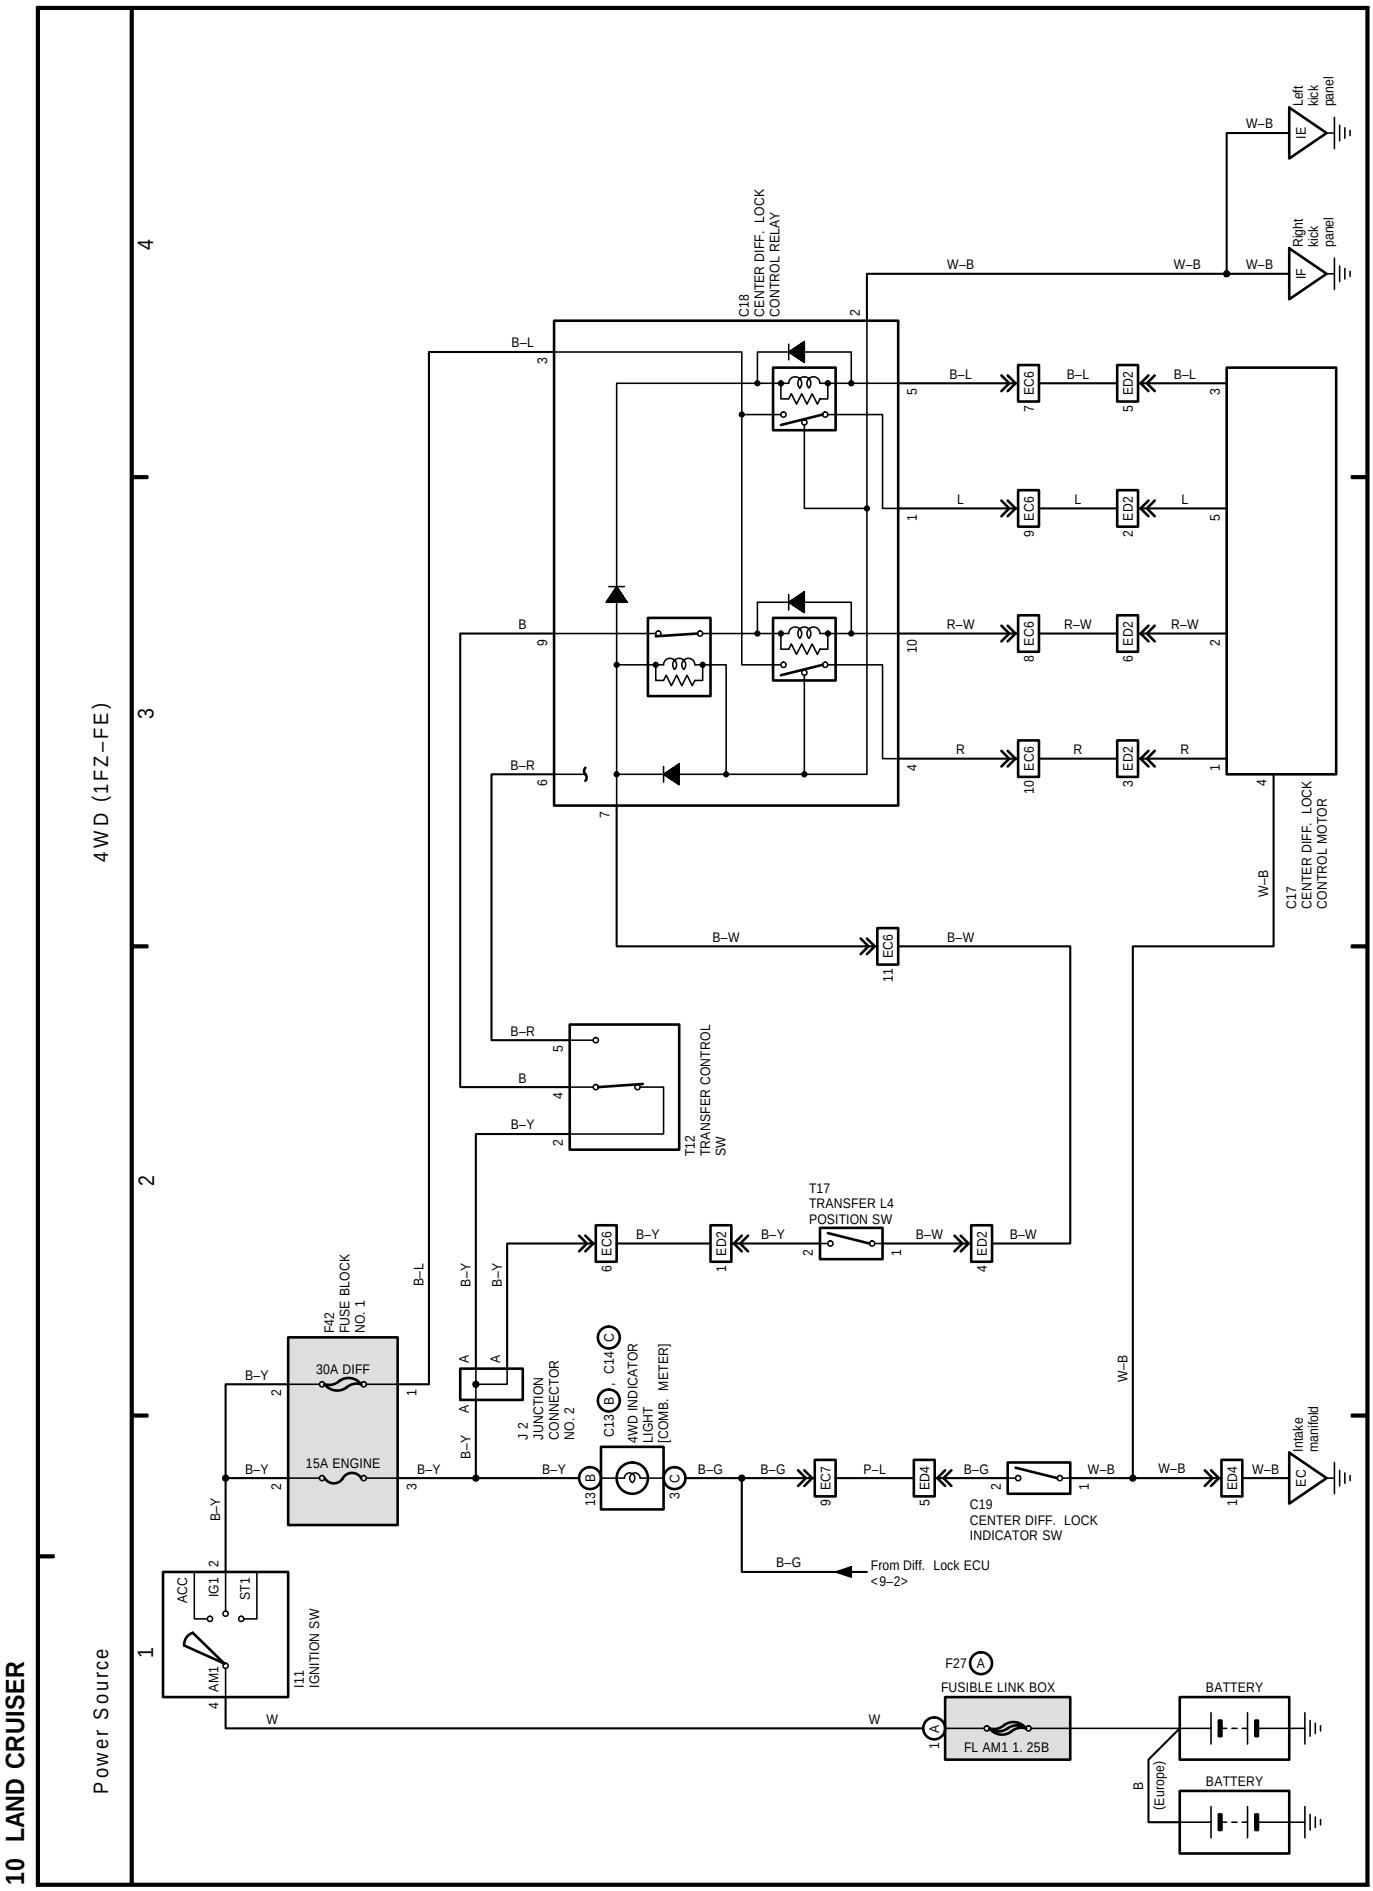

10 LAND CRUISER
Power Source
4WD (1FZ–FE)
1
2
3
4
C18
CENTER DIFF. LOCK
CONTROL RELAY
C17
CENTER DIFF. LOCK
CONTROL MOTOR
T12
TRANSFER CONTROL
SW
T17
TRANSFER L4
POSITION SW
C19
CENTER DIFF. LOCK
INDICATOR SW
F42
FUSE BLOCK
NO. 1
30A DIFF
15A ENGINE
J 2
JUNCTION
CONNECTOR
NO. 2
C13 , C14
4WD INDICATOR
LIGHT
[COMB. METER]
I11
IGNITION SW
ACC
IG1
ST1
AM1
F27
FUSIBLE LINK BOX
FL AM1 1. 25B
BATTERY
BATTERY
(Europe)
From Diff. Lock ECU
<9–2>
Left
kick
panel
Right
kick
panel
Intake
manifold
EC6
ED2
EC7
ED4
IE
IF
EC