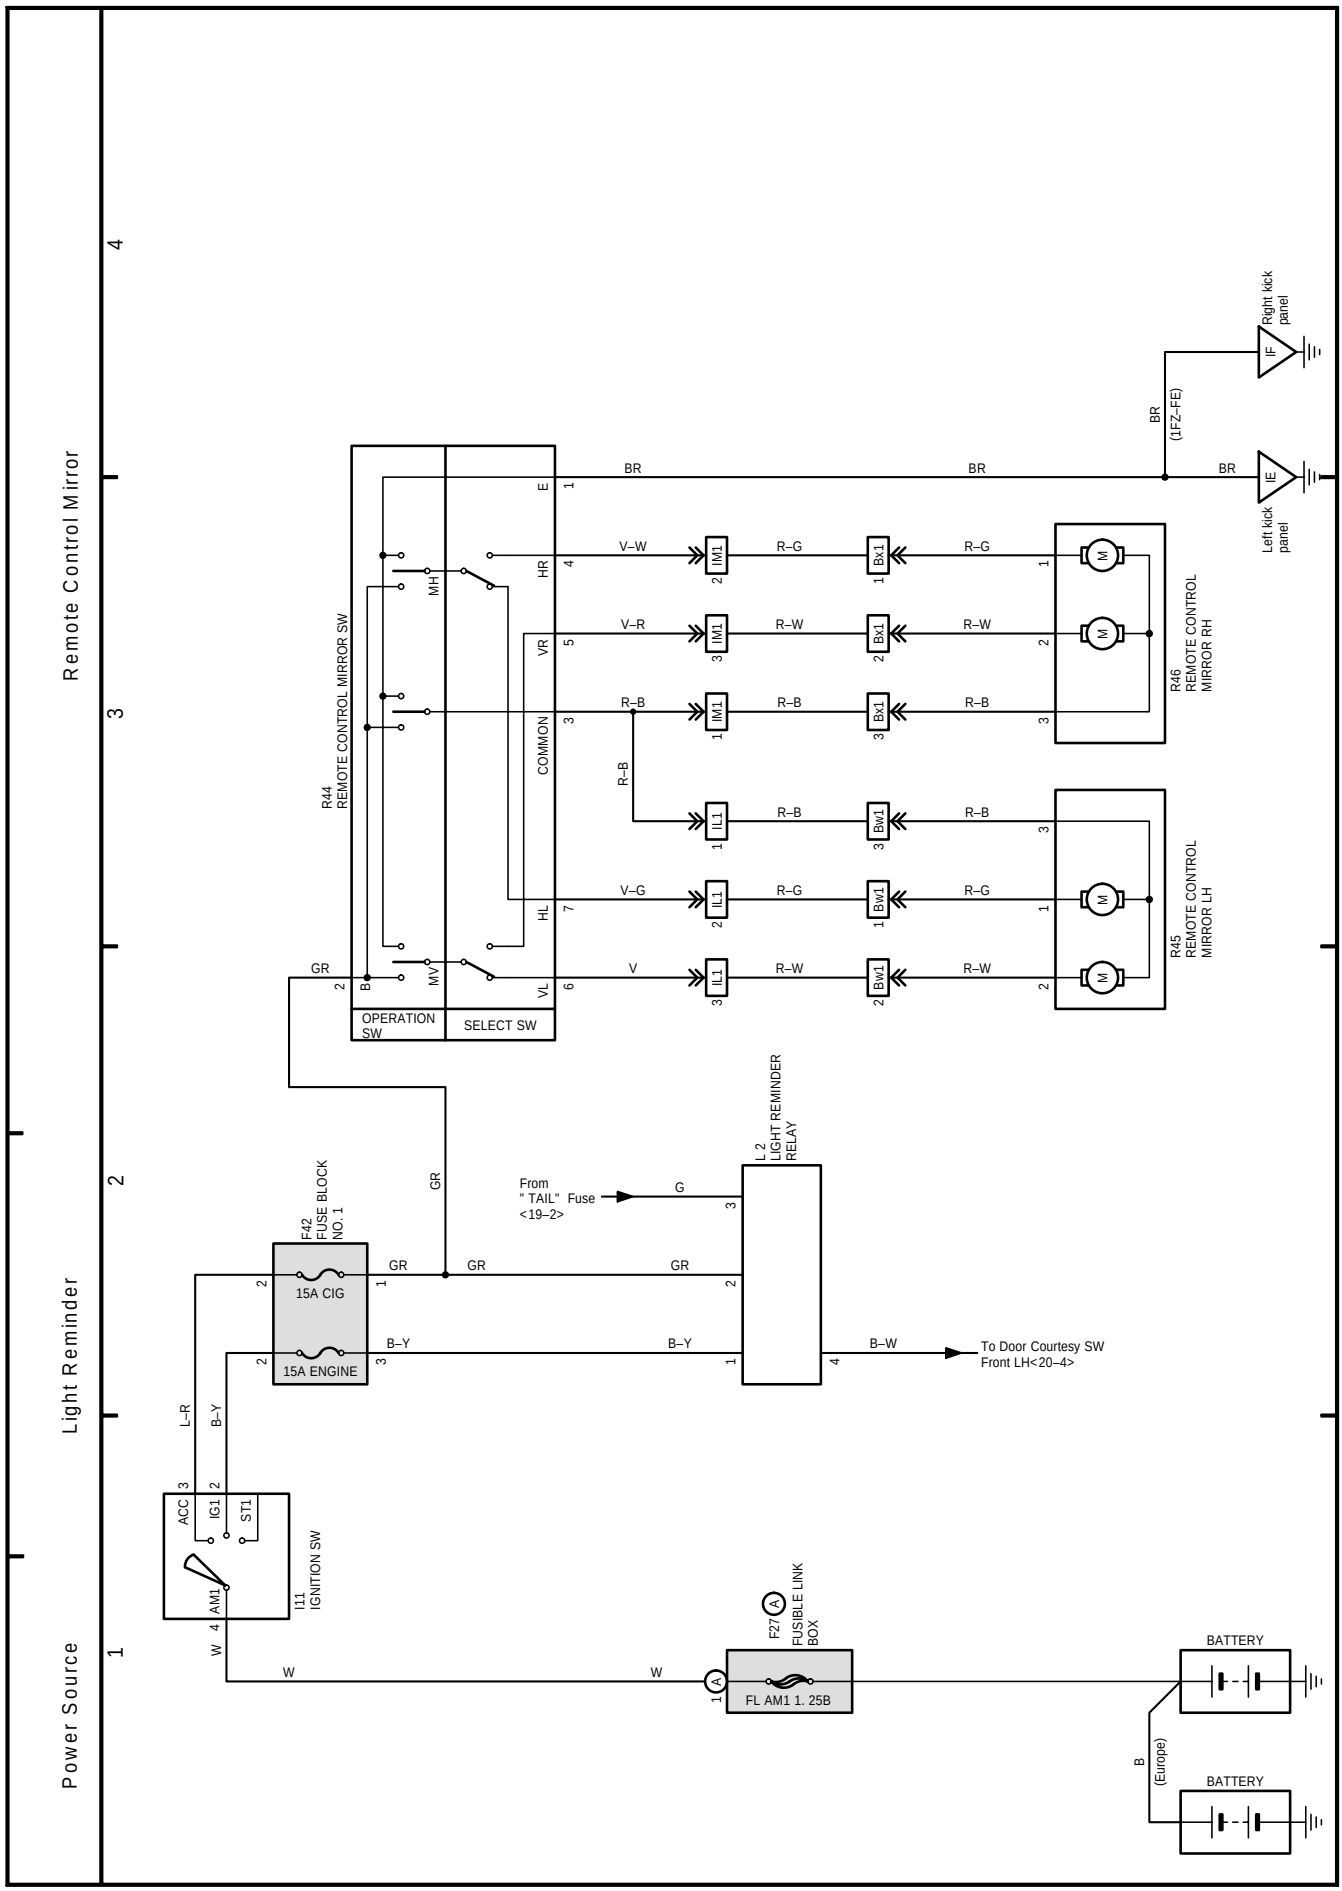

Power Source
Light Reminder
Remote Control Mirror
1
2
3
4
R44
REMOTE CONTROL MIRROR SW
OPERATION SW
SELECT SW
E
HR
VR
COMMON
HL
VL
MH
MV
B
R46
REMOTE CONTROL
MIRROR RH
R45
REMOTE CONTROL
MIRROR LH
IM1
IL1
Bx1
Bw1
M
BR
(1FZ-FE)
Right kick
panel
Left kick
panel
IF
IE
GR
L 2
LIGHT REMINDER
RELAY
From
" TAIL" Fuse
<19–2>
G
F42
FUSE BLOCK
NO. 1
15A CIG
15A ENGINE
B–Y
B–W
To Door Courtesy SW
Front LH<20–4>
L–R
ACC
IG1
ST1
AM1
I11
IGNITION SW
F27
FUSIBLE LINK
BOX
FL AM1 1. 25B
W
BATTERY
B
(Europe)