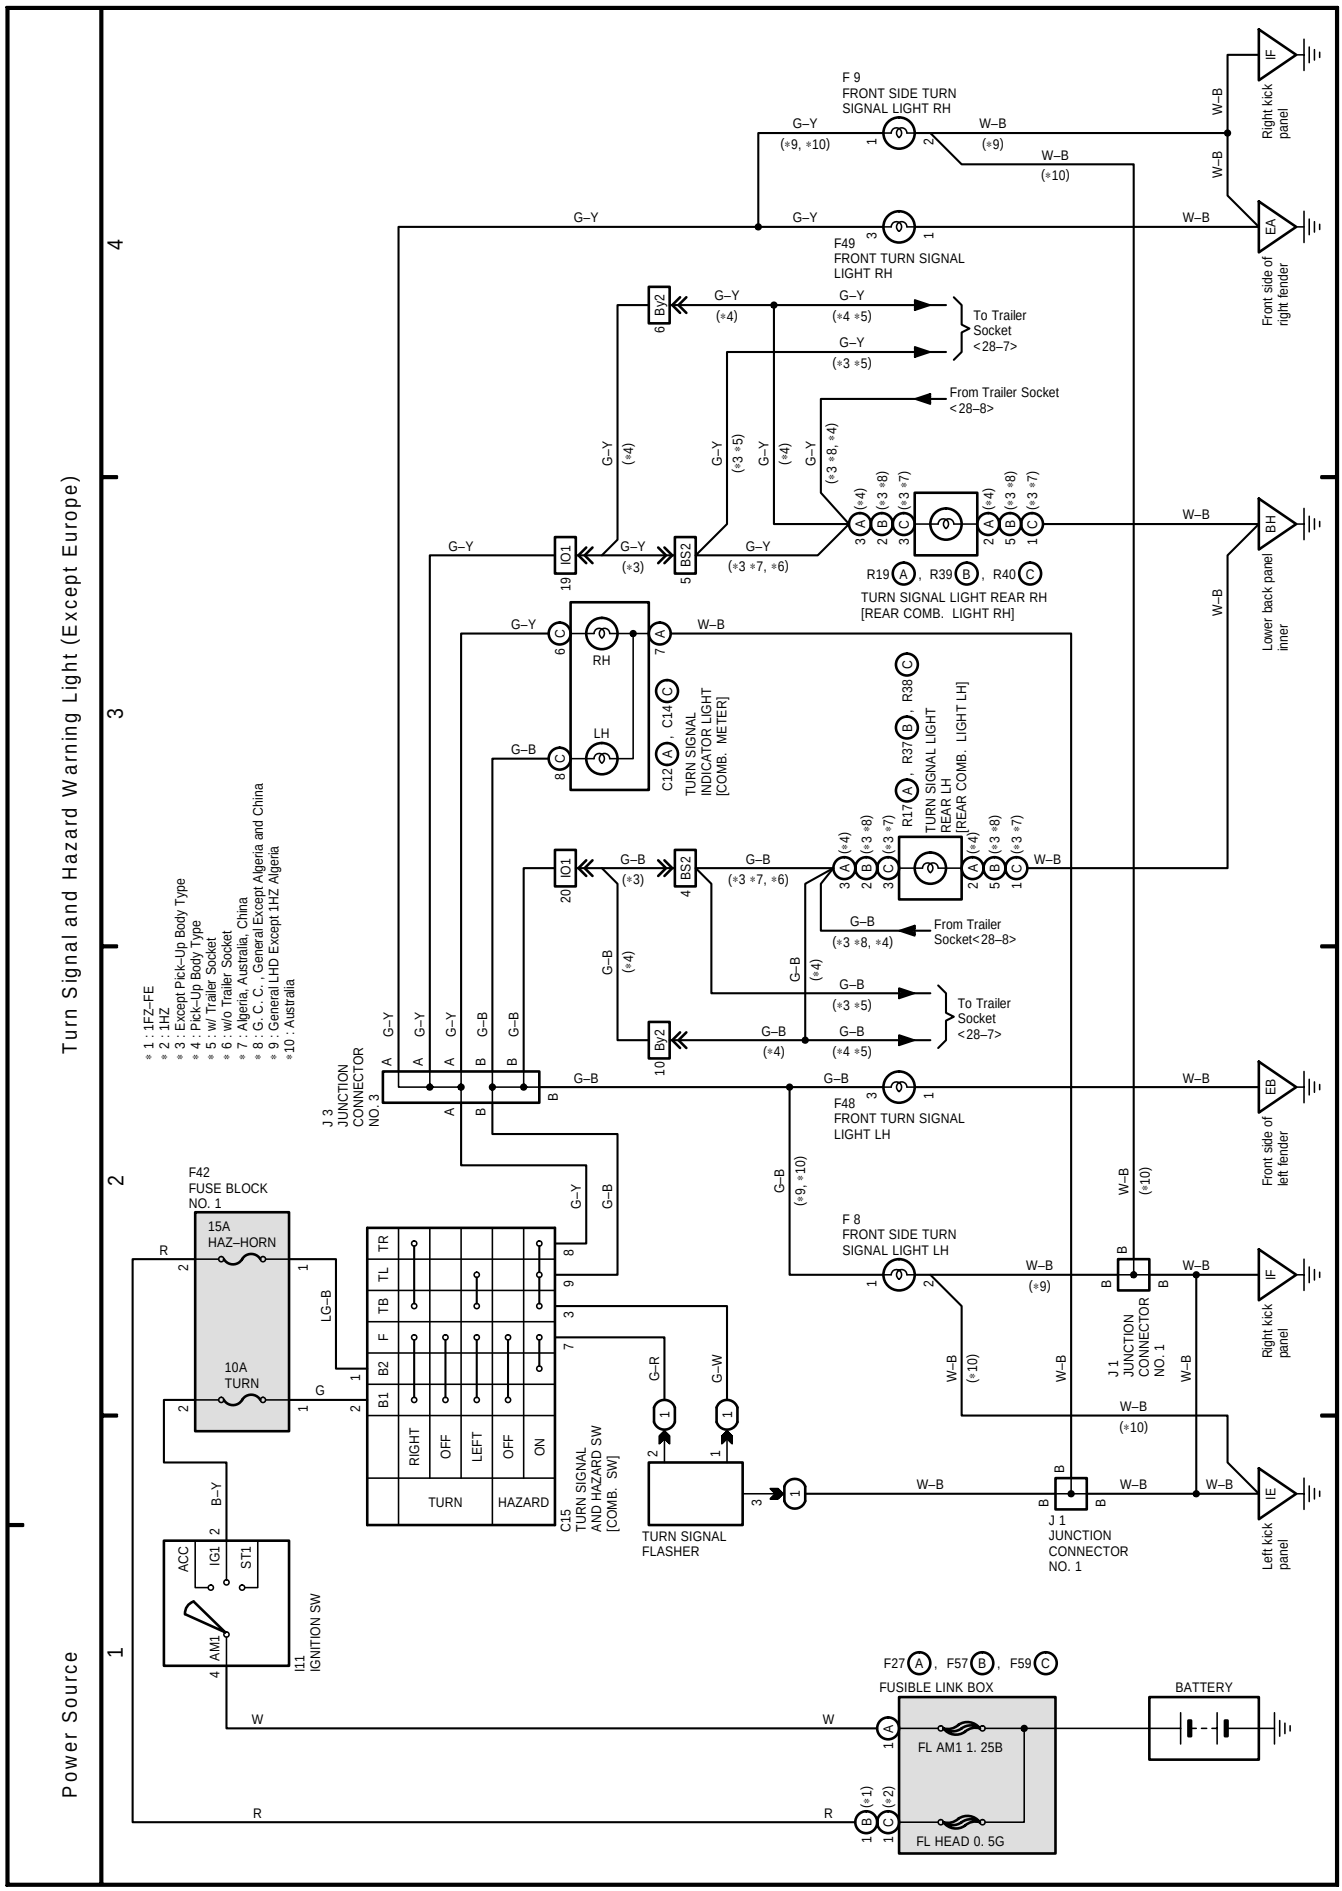

Turn Signal and Hazard Warning Light (Except Europe)
Power Source
* 1 : 1FZ–FE
* 2 : 1HZ
* 3 : Except Pick–Up Body Type
* 4 : Pick–Up Body Type
* 5 : w/ Trailer Socket
* 6 : w/o Trailer Socket
* 7 : Algeria, Australia, China
* 8 : G, C, C, , General Except Algeria and China
* 9 : General LHD Except 1HZ Algeria
* 10 : Australia
F 9
FRONT SIDE TURN SIGNAL LIGHT RH
F49
FRONT TURN SIGNAL LIGHT RH
F48
FRONT TURN SIGNAL LIGHT LH
F 8
FRONT SIDE TURN SIGNAL LIGHT LH
F42
FUSE BLOCK NO. 1
15A HAZ–HORN
10A TURN
I11
IGNITION SW
ACC
IG1
ST1
AM1
C15
TURN SIGNAL AND HAZARD SW [COMB. SW]
TURN
HAZARD
RIGHT
OFF
LEFT
OFF
ON
TR
TL
TB
F
B2
B1
TURN SIGNAL FLASHER
J 3
JUNCTION CONNECTOR NO. 3
J 1
JUNCTION CONNECTOR NO. 1
J 1
JUNCTION CONNECTOR NO. 1
C12 , C14
TURN SIGNAL INDICATOR LIGHT [COMB. METER]
R19 , R39 , R40
TURN SIGNAL LIGHT REAR RH [REAR COMB. LIGHT RH]
R17 , R37 , R38
TURN SIGNAL LIGHT REAR LH [REAR COMB. LIGHT LH]
To Trailer Socket <28–7>
From Trailer Socket <28–8>
From Trailer Socket<28–8>
To Trailer Socket <28–7>
F27 , F57 , F59
FUSIBLE LINK BOX
FL AM1 1. 25B
FL HEAD 0. 5G
BATTERY
Right kick panel
Front side of right fender
Lower back panel inner
Front side of left fender
Right kick panel
Left kick panel