
Position of Parts in Engine Compartment

[RHD : 1HD–FTE]

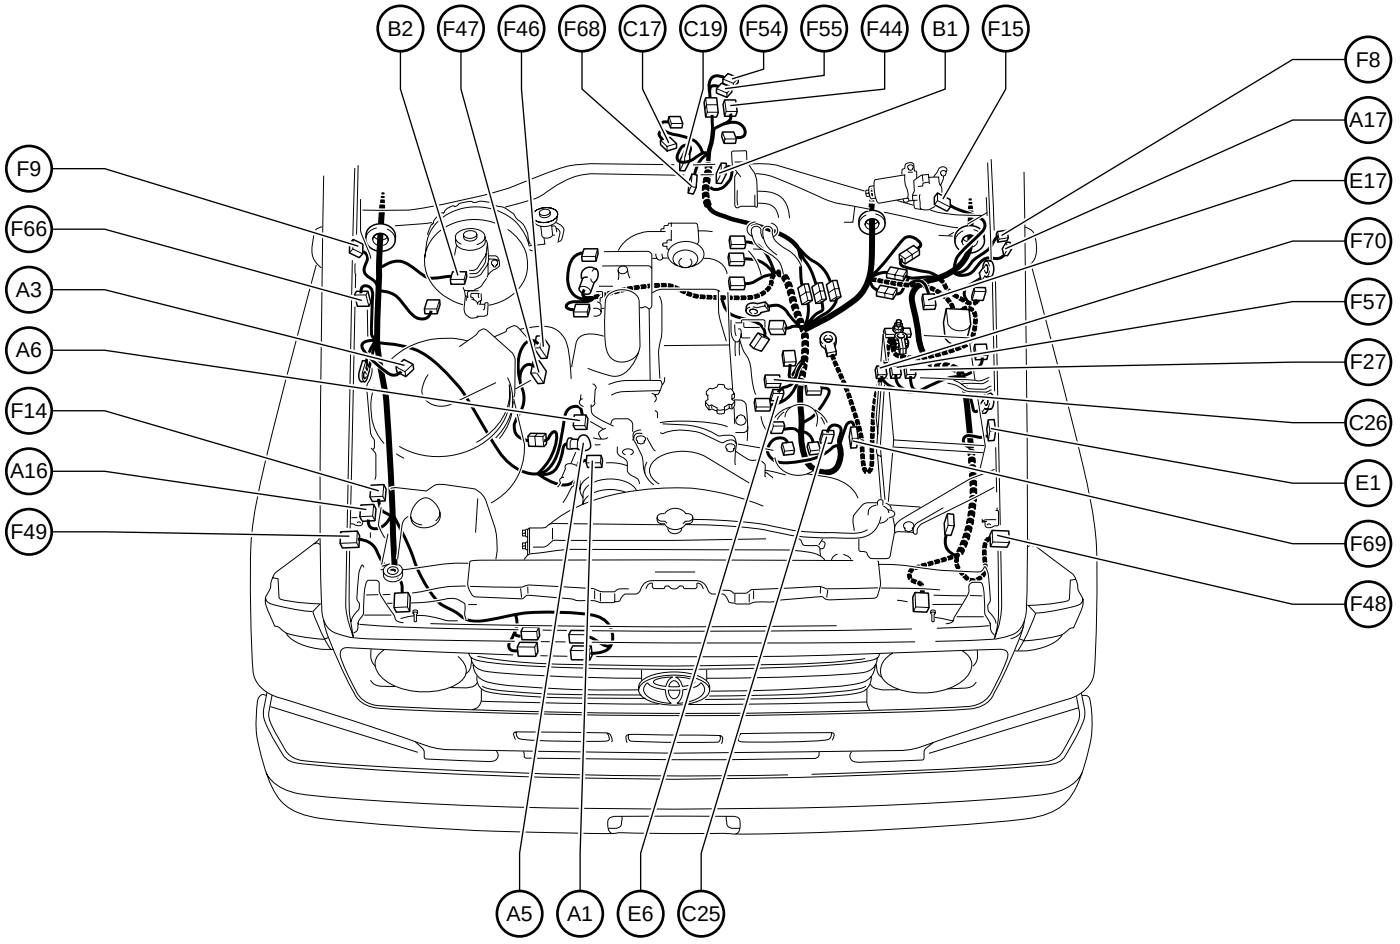

A 1 A/C Magnetic Clutch
A 3 Air Cleaner Warning SW
A 5 Alternator
A 6 Alternator
A16 Air Cleaner Warning SW
A17 Auto Antenna Motor

B 1 Back–Up Light SW
B 2 Brake Fluid Level SW

C17 Center Diff. Lock Control Motor
C19 Center Diff. Lock Indicator SW
C25 Crankshaft Position Sensor
C26 Crankshaft Position Sensor

E 1 EFI Main Relay
E 6 Engine Oil Level Sensor
E17 EDU

F 8 Front Side Turn Signal Light LH
F 9 Front Side Turn Signal Light RH
F14 Front Washer Motor
F15 Front Wiper Motor
F27 Fusible Link Box
F44 Fuel Sender (Front)
F46 Front Diff. Lock Control Motor
F47 Front Diff. Lock Position SW
F48 Front Turn Signal Light and Clearance Light LH
F49 Front Turn Signal Light and Clearance Light RH
F54 Fuel Solenoid Valve 1
F55 Fuel Solenoid Valve 2
F57 Fusible Link Box
F66 Fuel Sediment SW 2
F68 First Position SW
F69 Fuel Temp. Sensor
F70 Fusible Link Box