
Position of Parts in Engine Compartment

[RHD : 1HD–FTE]

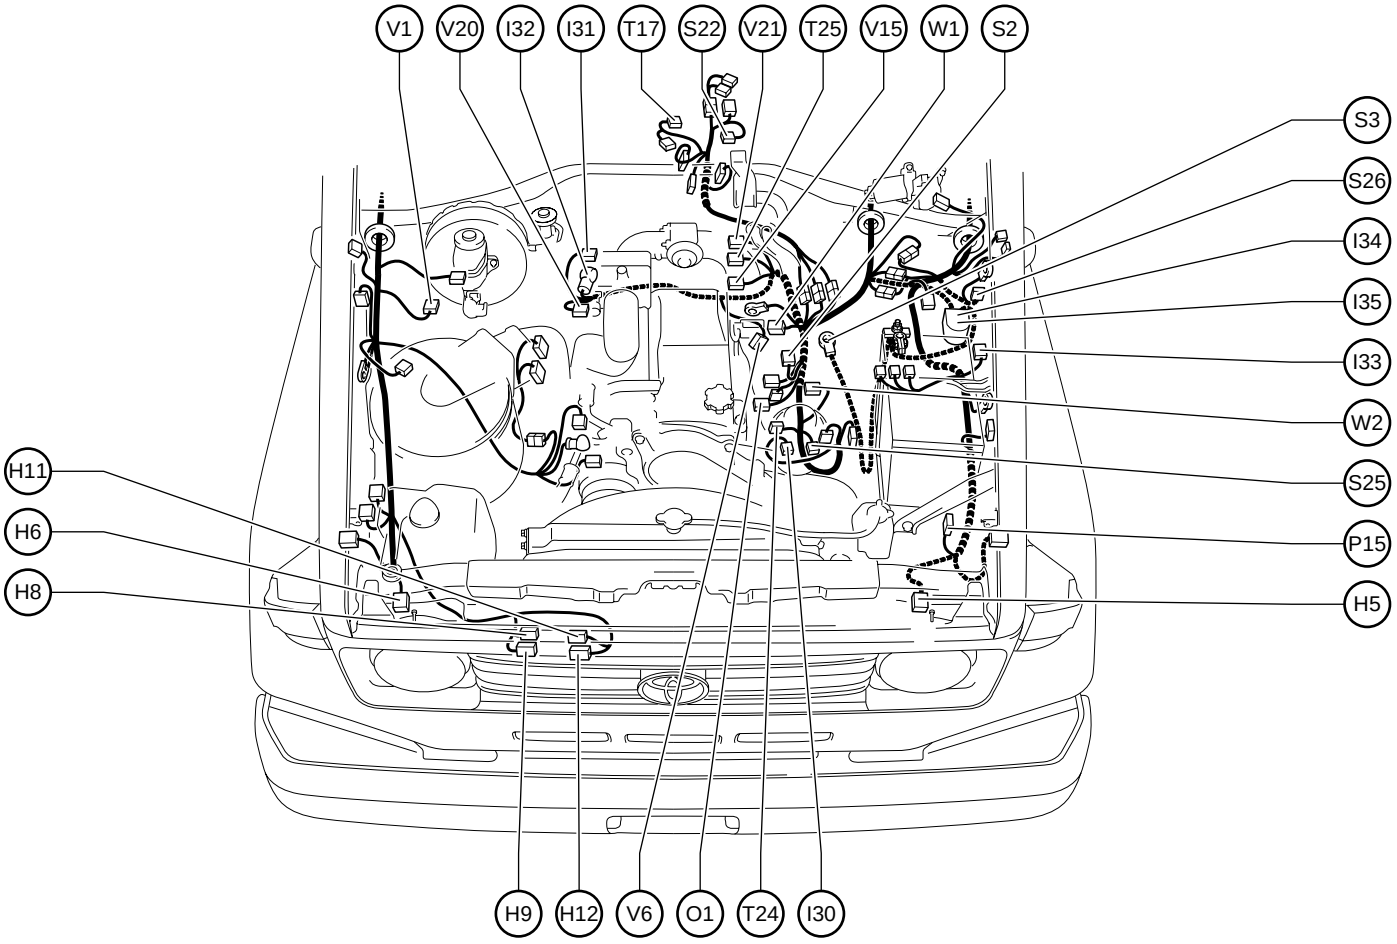

H 5 Headlight LH
H 6 Headlight RH
H 8 Horn (High)
H 9 Horn (High)
H11 Horn (Low)
H12 Horn (Low)

I 30 Injection Pump
I 31 Intake Air Temp. Sensor
I 32 Intake Heater
I 33 Intake Heater Relay
I 34 Intake Heater Relay
I 35 Intake Heater Relay

O 1 Oil Pressure Sender

P15 Power Outlet

S 2 Starter
S 3 Starter
S22 Speed Sensor (Combination Meter)
S25 Spill Valve
S26 Spill Valve Relay

T17 Transfer L4 Position SW
T24 Timing Control Valve
T25 Turbo Pressure Sensor

V 1 Vacuum SW (Brake)
V 6 VRV (EGR)
V15 VSV (EGR Cut)
V20 VSV (Fully Closed)
V21 VSV (Turbo Pressure Sensor)

W 1 Water Temp. Sender
W 2 Water Temp. Sensor (Glow)