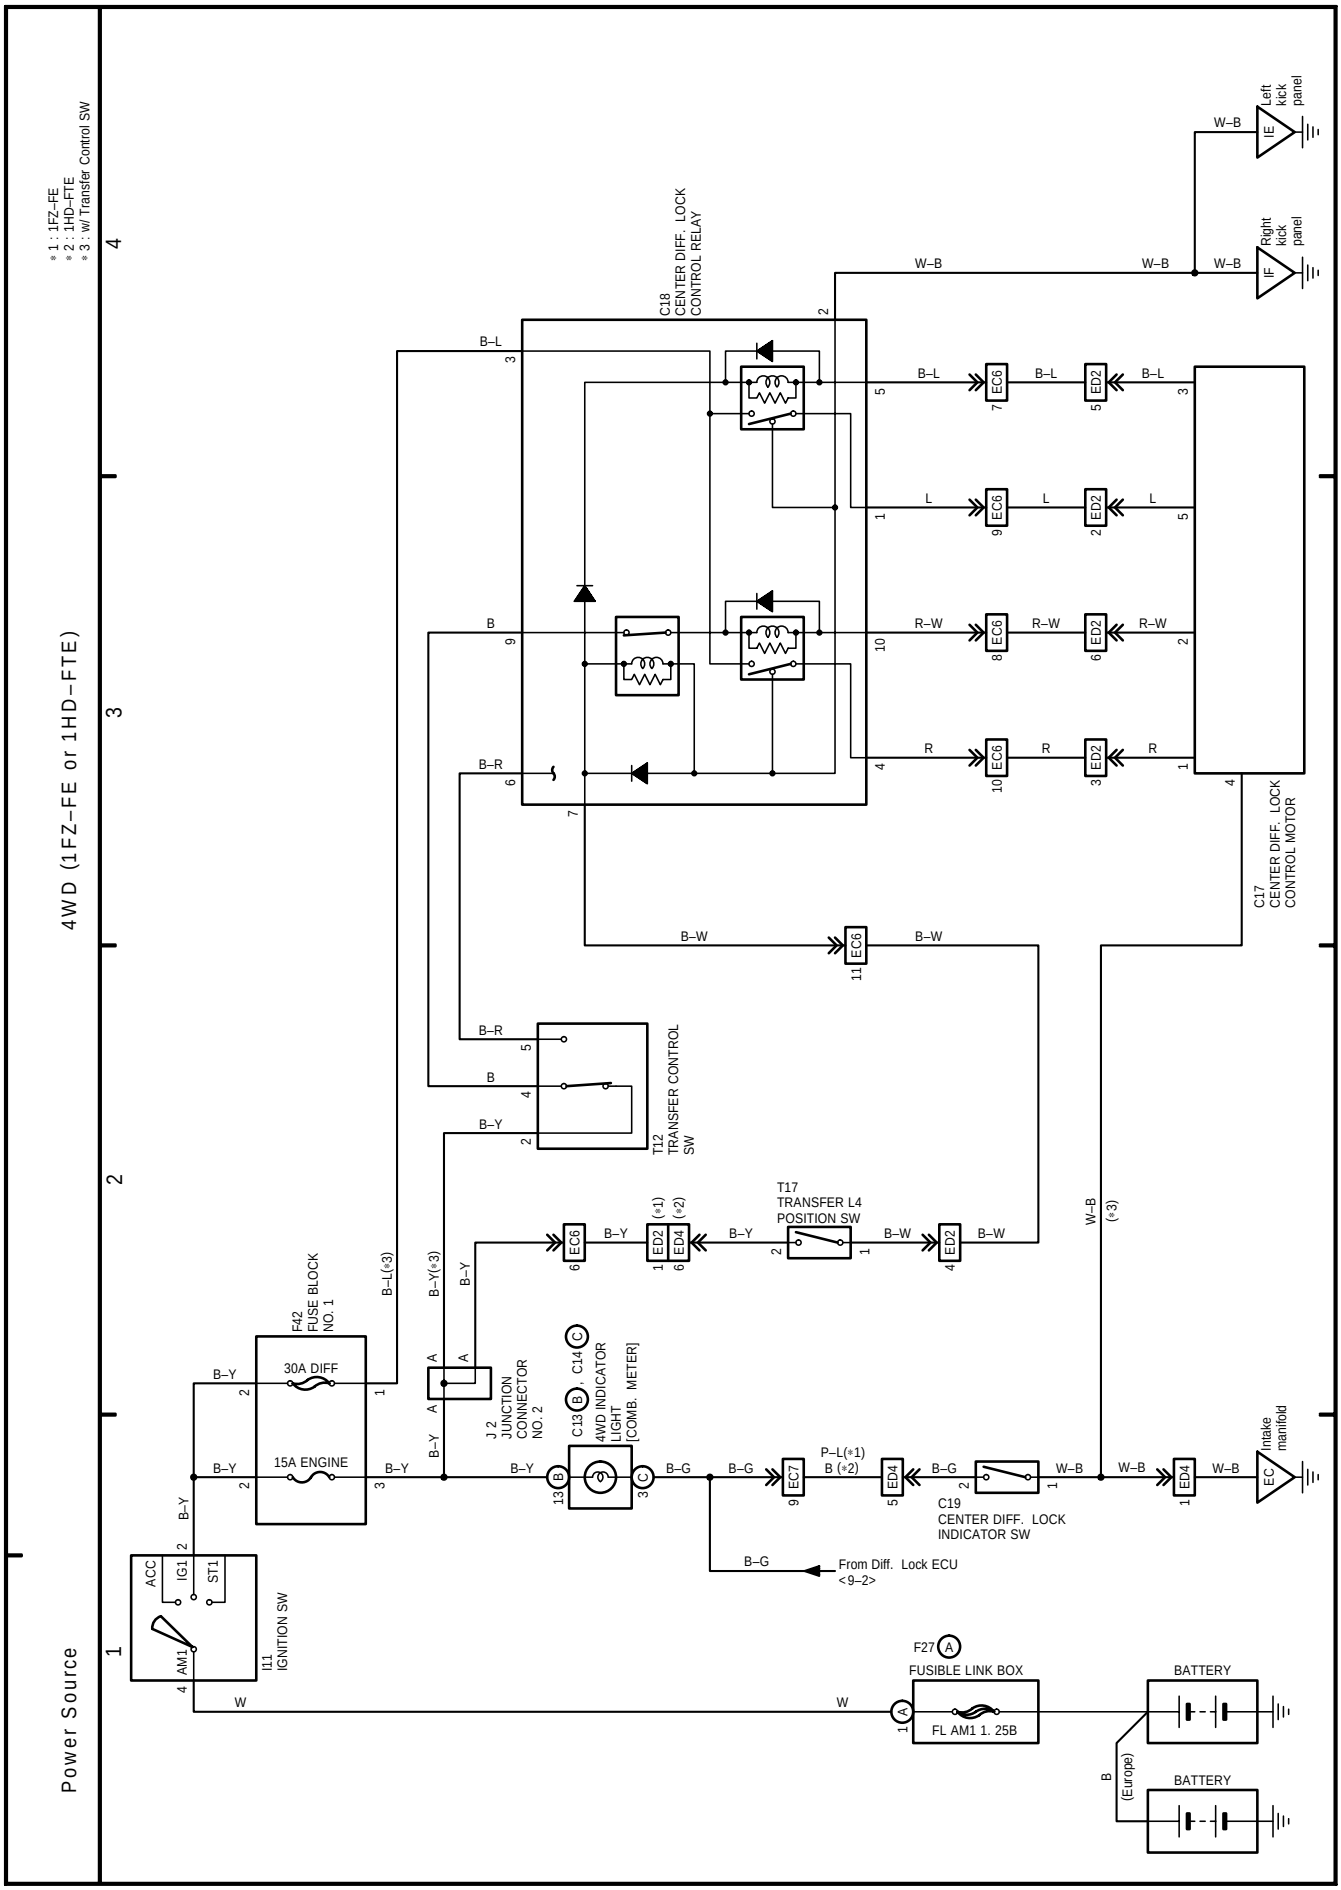

Power Source
4WD (1FZ–FE or 1HD–FTE)
* 1 : 1FZ–FE
* 2 : 1HD–FTE
* 3 : w/ Transfer Control SW
C18 CENTER DIFF. LOCK CONTROL RELAY
C17 CENTER DIFF. LOCK CONTROL MOTOR
C19 CENTER DIFF. LOCK INDICATOR SW
T12 TRANSFER CONTROL SW
T17 TRANSFER L4 POSITION SW
F42 FUSE BLOCK NO. 1
30A DIFF
15A ENGINE
J 2 JUNCTION CONNECTOR NO. 2
C13 , C14 4WD INDICATOR LIGHT [COMB. METER]
I11 IGNITION SW
ACC
IG1
ST1
AM1
F27 FUSIBLE LINK BOX
FL AM1 1. 25B
BATTERY
BATTERY
B (Europe)
From Diff. Lock ECU <9–2>
Left kick panel
Right kick panel
Intake manifold
EC
IE
IF
EC6
ED2
ED4
EC7
B–L
L
R–W
R
B–R
B
B–W
B–Y
B–L(*3)
B–Y(*3)
W–B
W
B–G
P–L(*1) B (*2)