
Position of Parts in Instrument Panel

[RHD]

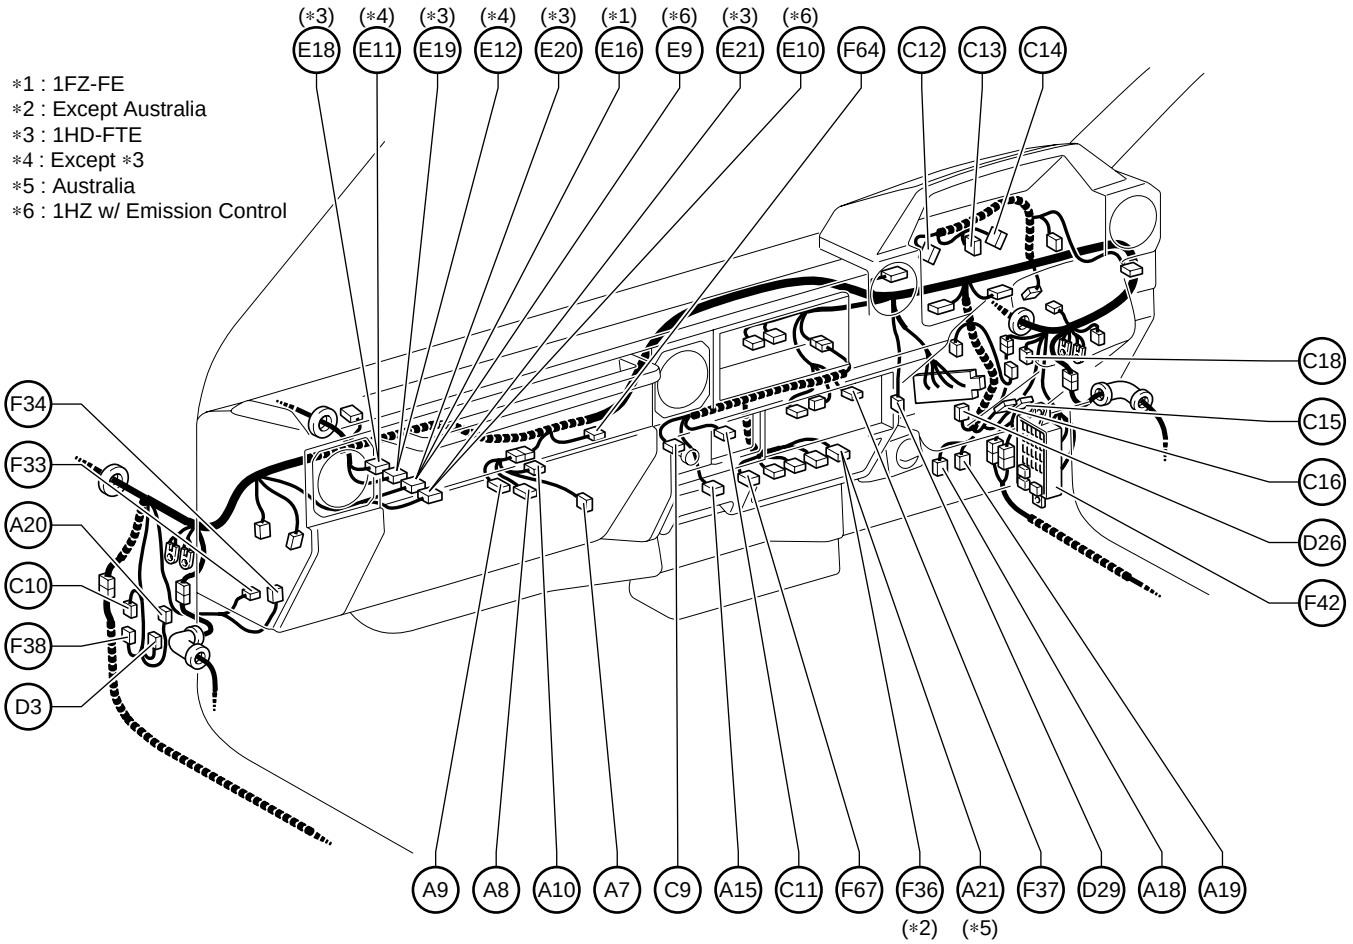

A 7 A/C Amplifier
A 8 A/C Cut Relay (Water Temp.)
A 9 A/C Dual Pressure SW
A10 A/C Thermistor
A15 Ashtray Illumination
A18 Accel Position Sensor
A19 Accelerator Pedal SW
A20 Auto Antenna ECU
A21 Auto Antenna SW

C 9 Cigarette Lighter
C10 Circuit Opening Relay
C11 Clock
C12 Combination Meter
C13 Combination Meter
C14 Combination Meter
C15 Combination SW
C16 Combination SW
C18 Center Diff. Lock Control Relay

D 3 Diff. Lock ECU
D26 Diff. Lock Control SW
D29 DLC3

E 9 Emission ECU
E10 Emission ECU
E11 Engine ECU
E12 Engine ECU
E16 Engine ECU
E18 Engine ECU
E19 Engine ECU
E20 Engine ECU
E21 Engine ECU

F33 Front Blower Motor
F34 Front Blower Resistor
F36 Front Fog Light SW
F37 Front Heater Blower SW
F38 Front Wiper Relay
F42 Fuse Block No.1
F64 Fuel Pump Select Relay
F67 Fuel Tank Changeover SW