
Position of Parts in Engine Compartment

[RHD : 1FZ–FE]

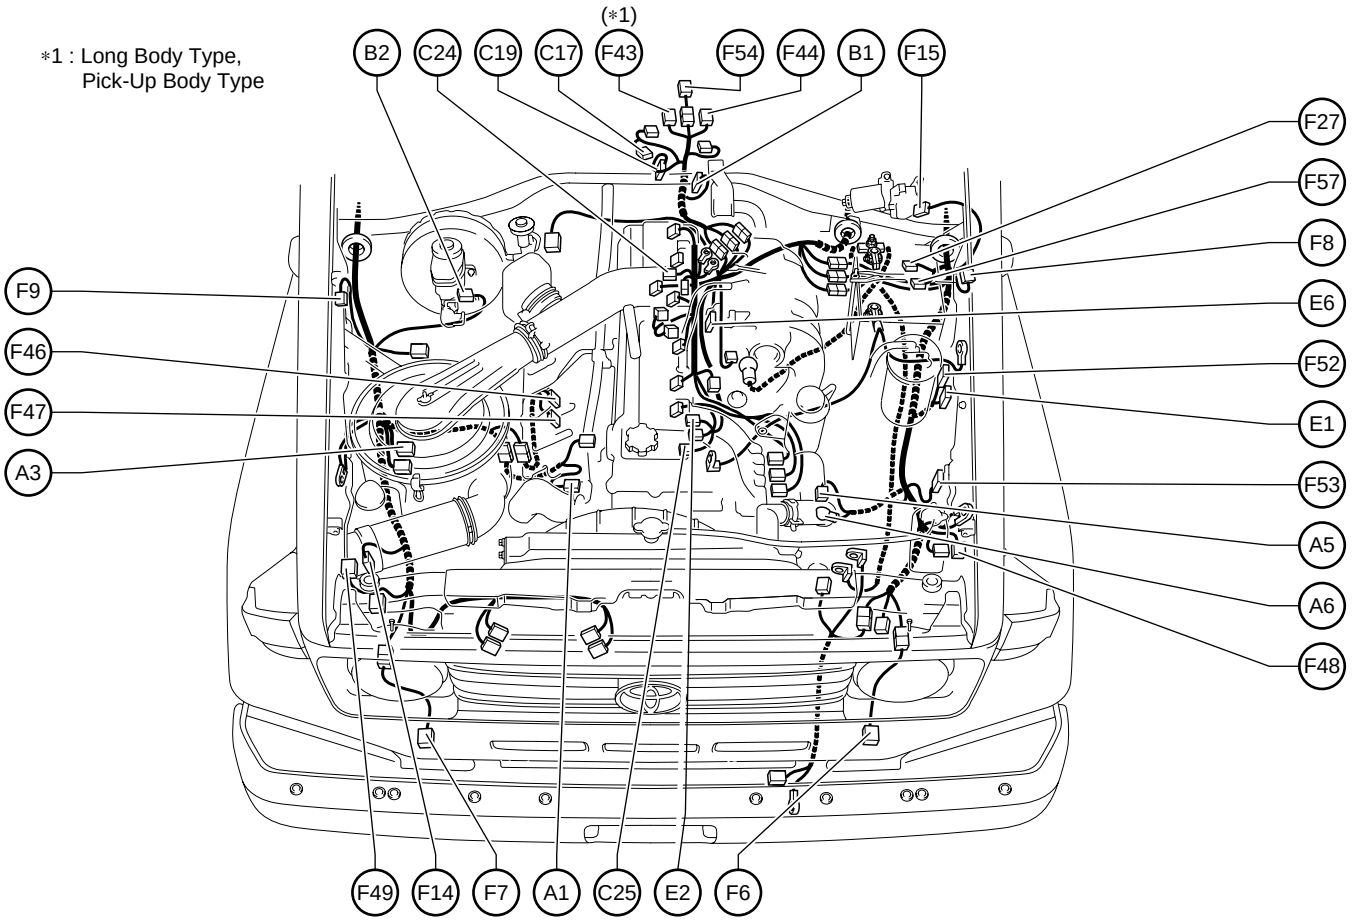

A 1 A/C Magnetic Clutch
A 3 Air Cleaner Warning SW
A 5 Alternator
A 6 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level SW

C17 Center Diff. Lock Control Motor
C19 Center Diff. Lock Indicator SW
C24 Camshaft Position Sensor
C25 Crankshaft Position Sensor

E 1 EFI Main Relay
E 2 EFI Water Temp. Sensor
E 6 Engine Oil Level Sensor

F 6 Front Fog Light LH
F 7 Front Fog Light RH
F 8 Front Side Turn Signal Light LH
F 9 Front Side Turn Signal Light RH
F 14 Front Washer Motor
F 15 Front Wiper Motor
F 27 Fusible Link Box
F 43 Fuel Pump
F 44 Fuel Sender (Front)
F 46 Front Diff. Lock Control Motor
F 47 Front Diff. Lock Position SW
F 48 Front Turn Signal Light and Clearance Light LH
F 49 Front Turn Signal Light and Clearance Light RH
F 52 Fuel Pump Relay
F 53 Fuel Pump Resistor
F 54 Fuel Solenoid Valve 1
F 57 Fusible Link Box