
Position of Parts in Engine Compartment

[LHD : 1FZ–FE]

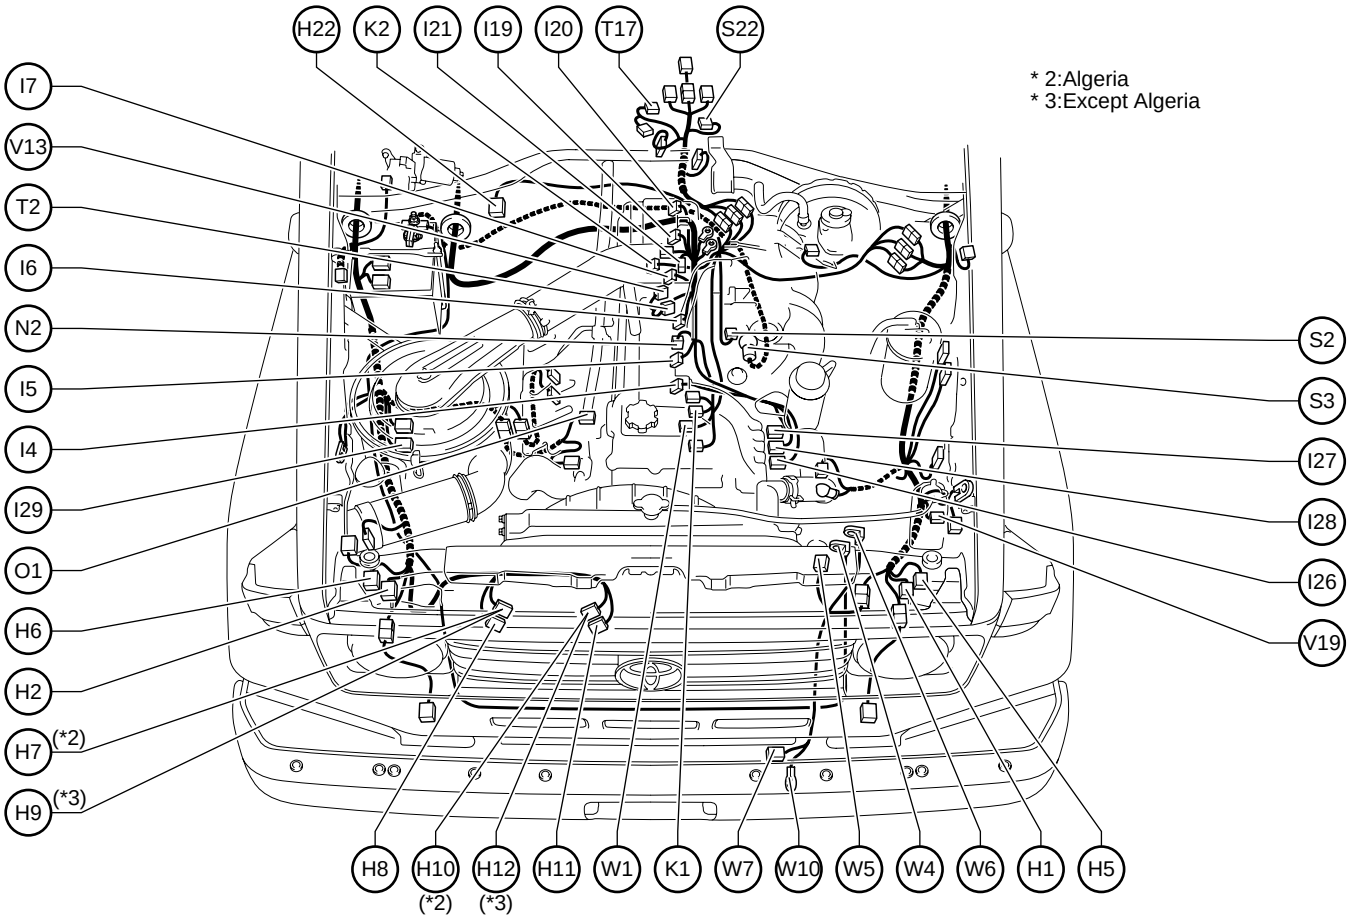

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 5 Headlight LH
H 6 Headlight RH
H 7 Horn (High)
H 8 Horn (High)
H 9 Horn (High)
H10 Horn (Low)
H11 Horn (Low)
H12 Horn (Low)
H22 Heated Oxygen Sensor

I 4 Injector No.1
I 5 Injector No.2
I 6 Injector No.3
I 7 Injector No.4
I 19 Injector No.5
I 20 Injector No.6
I 21 ISC Valve
I 26 Ignition Coil and Igniter No.1
I 27 Ignition Coil and Igniter No.2
I 28 Ignition Coil and Igniter No.3
I 29 Intake Air Temp. Sensor

K 1 Knock Sensor 1
K 2 Knock Sensor 2

N 2 Noise Filter (Ignition)

O 1 Oil Pressure Sender

S 2 Starter
S 3 Starter
S22 Speed Sensor (Combination Meter)

T 2 Throttle Position Sensor
T17 Transfer L4 Position SW

V13 Vacuum Sensor
V19 Variable Resistor

W 1 Water Temp. Sender
W 4 Winch Main Relay
W 5 Winch Main Relay
W 6 Winch Main Relay
W 7 Winch Motor and Magnetic SW
W10 Winch Motor and Magnetic SW